



Alfa Romeo 156 2003 – 2006 fuse box diagram

Fuse and relays in the main fusebox

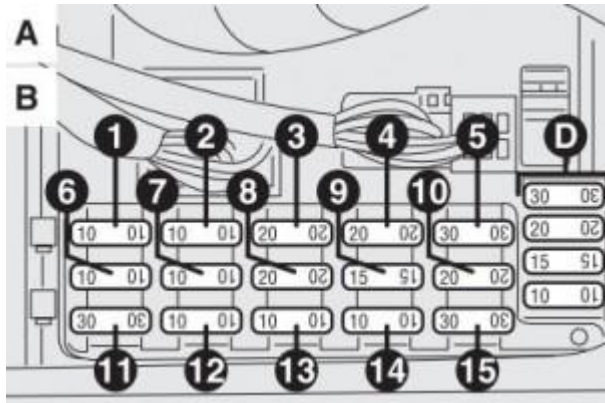


Alfa Romeo 156 FL – main fuse box

Relay	Description
A	Dipped beam light relay
B	Relay for sunroof , seat heater, rear window power control, seat electric adjustment

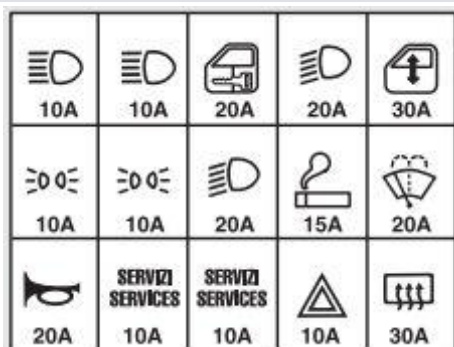


Alfa Romeo 156 FL – main fuse box – symbols

Fuses above the main fusebox

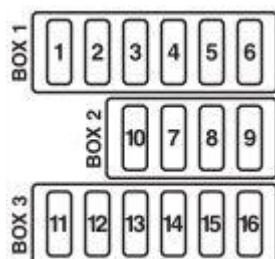


Alfa Romeo 156 FL – above main fuse box

Fuses and relays accessible from the glovebox

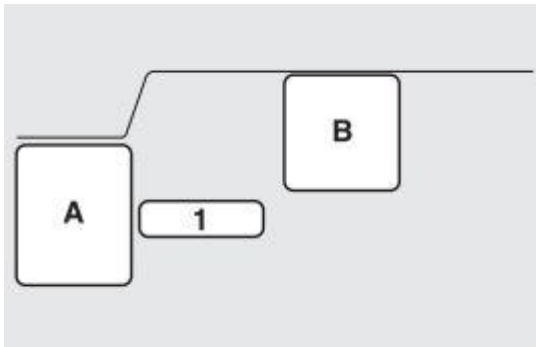


Alfa Romeo 156 FL – fuse box – glovebox

Fuse and relays in engine bay

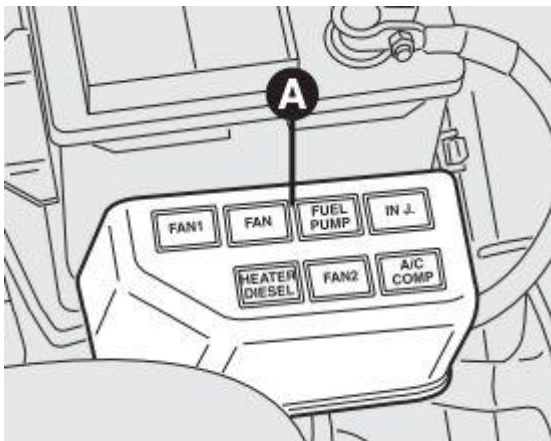

Alfa Romeo 156 FL – fuse box – engine bay

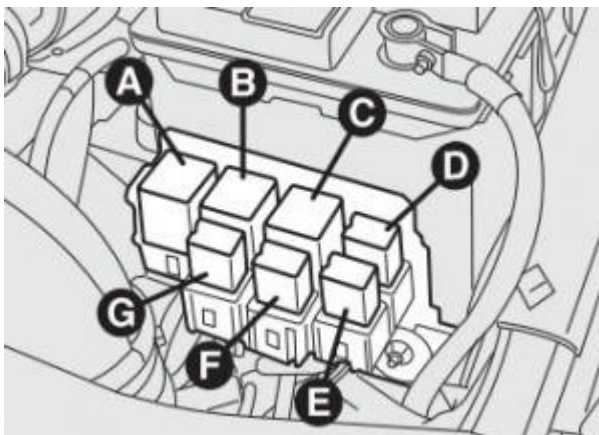


– relay
engine bay relay

Alfa Romeo 156 FL – fuse box –

Relay	Description
A	Engine radiator cooling fan 2nd speed relay (T.SPARK versions)
B	Engine radiator cooling fan 1st speed relay

C	Fuel pump relay
D	Electronic injection relay
E	Climate control compressor relay
F	Timing variator relay (1.6 T.SPARK only) or engine radiator fan 2nd speed relay (only 2.5 V6 24V, JTD and JTD 16V Multijet versions)
G	Fuel oil heater relay (only Diesel versions)


For JTD 20v Multijet version

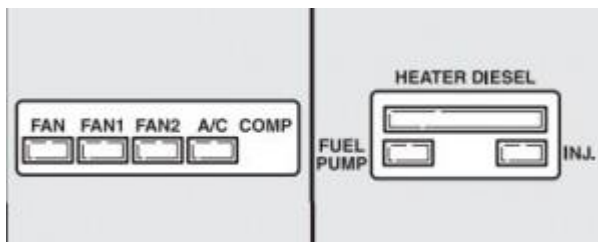

Alfa Romeo 156 FL – fuse box – engine

bay – relay (JTD version)

For Diesel versions, depending on the options installed, there is a second bracket fastened to the engine compartment rear bulkhead for the following fuses.

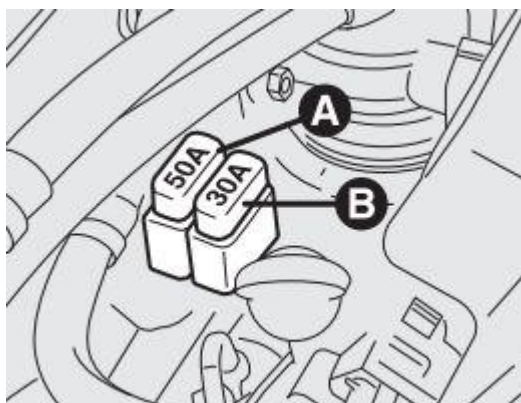

Alfa Romeo 156 FL – fuse box – engine bay –

relay (diesel)

Relay	Description

A	MAXI-FUSE	30A	Additional passenger compartment heater 2nd level relay
B	MAXI-FUSE	30A	Additional passenger compartment heater 1st level relay

Fuse summary table

Lights	Fuse	Ampere rating [A]	Location
Left front side light	7	10	Main fusebox
Right front side light	6	10	Main fusebox
Left rear side light	6	10	Main fusebox
Right rear side light	7	10	Main fusebox
Left dipped-beam headlamp/Xenon lamps (optional)	8	20	Main fusebox
Right dipped-beam headlamp/Xenon lamps (optional)	4	20	Main fusebox
Left main-beam headlamp	2	20	Main fusebox
Right main-beam headlamp	1	10	Main fusebox
Cruise Control (optional)	13	10	Main fusebox
Left number plate light	7	10	Main fusebox

Right number plate light	6	10	Main fusebox
Reversing lights/Sound system	13	10	Main fusebox
Left rear fog guard	7	10	Main fusebox
Right rear fog guard	6	10	Main fusebox
Direction indicators – Hazard warning lights	14	10	Main fusebox
Fog lamps	16	15	Above main fusebox
Car interior and glovebox lights	12 – 13	10	Main fusebox
HI-FI BOSE system	9	25	Above main fusebox

Services	Fuse	Ampere rating [A]	Location
Windscreen wiper, windscreen washer/Rearscreen wiper/Rain sensor (optional)	10	20	69
Horns	11	20	69
GSM Box for Connect/Navigator-electronic warning system	13	10	69
Front power windows	5	30	69

Left rear power window	4	20	71
Right rear power window	5	20	71
Door locking system – Boot light	3	20	69
Boot electric opening	7	30	71
Rearscreen heating	15	30	69
Wing mirror adjustment	13	10	69
Wing mirror defrosting	15	30	69
Cigar lighter/Odour sensor	9	15	69
Headlamp washer	1	20	72
Headlamp aiming device	4	10	69
Instrument cluster	12	10	69
Main-beam headlamp warning light	2	10	69
Rearscreen heating warning light	15	30	69
Sound system/Diagnosis socket	12	10	69
Electronic alarm system	12	10	69

Supplementary electrical socket in the boot (Sportwagon versions)	10	20	71
Remote control	13	10	69
Controls lighting/Stop lights	3	10	71
Rear control lighting from sidelights	6	10	71
Seat heating/Sunroof/Seat electrical adjustment	8	30	71
Air bag system	2(*)	10(*)	71
ABS system	9	60	68
	11(*)	10(*)	71
Alfa Romeo CODE system	13	7,5	71
Climate control system	9	15	69
Engine cooling radiator fan:			
First speed:			
– T.SPARK and JTS versions	6	50	68
– diesel versions	6	60	68
– 2.5 V6 24V versions	6	40	68

Second speed			
– T.SPARK and JTS versions	7	30	68
– diesel versions	7	40	68
– 2.5 V6 24V versions	7	40	68
Passenger compartment fan (petrol versions)	1	40	68
Passenger compartment fan (diesel versions)	4	40	68
Electronic ignition and injection system	13	7,5	71
	14	15	71
	15	15	71
	5	30	68
Glow plugs and resistances on fuel oil filter (diesel versions)	8	70	68
Fuel oil heater (JTD versions, JTD 16V Multijet)	H	25	74
Services switched off with starting	1	7,5	71
Battery power supply for Alfa Romeo CODE/Injection system	12	7,5	71
(+15) key-controlled service supply (ignition switch)	2	30	68

General service supply (petrol versions)	4	80	68
General service supply (diesel versions)	1	80	68
General service supply	3	70	68
Additional heater (diesel version only)	10	70	68
Oil pump supply (Selespeed versions only)	10	30	68
Selespeed gearbox (2.0 JTS version)	7	30	68
	8	20	68
Automatic gearbox (2.5 V6 24V version)	7	40	68
	8	20	68