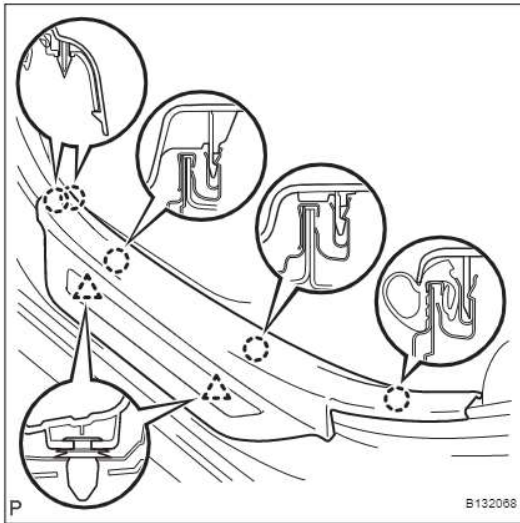


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL** (for Manual Seat)
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent airbag deployment (See page [RS-1](#)).
2. **REMOVE FRONT SEAT HEADREST ASSEMBLY** (for Power Seat)
3. **REMOVE SEAT TRACK COVER LH** (for Power Seat) (See page [SE-29](#))
4. **REMOVE INNER SEAT TRACK BRACKET COVER LH** (for Power Seat) (See page [SE-29](#))
5. **REMOVE FRONT SEAT ASSEMBLY LH** (for Power Seat) (See page [SE-29](#))
6. **REMOVE FRONT SEAT HEADREST ASSEMBLY** (for Power Seat)
HINT:
Use the same procedure for the RH side and the LH side.
7. **REMOVE SEAT TRACK COVER RH** (for Power Seat)
HINT:
Use the same procedure for the RH side and the LH side.
8. **REMOVE INNER SEAT TRACK BRACKET COVER RH** (for Power Seat)
HINT:
Use the same procedure for the RH side and the LH side.
9. **REMOVE FRONT SEAT ASSEMBLY RH** (for Power Seat)
HINT:
Use the same procedure for the RH side and the LH side.
10. **REMOVE FRONT SEAT HEADREST ASSEMBLY** (for Manual Seat)
11. **REMOVE SEAT TRACK COVER RH** (for Manual Seat) (See page [SE-16](#))
12. **REMOVE INNER SEAT TRACK BRACKET COVER RH** (for Manual Seat) (See page [SE-16](#))
13. **REMOVE FRONT SEAT ASSEMBLY RH** (for Manual Seat) (See page [SE-16](#))

INTERIOR – ROOF HEADLINING

IR-13

**14. REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Disengage the 5 claws and 2 clips, and remove the rear door scuff plate LH.


15. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**16. REMOVE REAR DOOR SCUFF PLATE RH**

HINT:

Use the same procedure for the RH side and the LH side.

17. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**18. REMOVE REAR SEAT CUSHION ASSEMBLY (See page [SE-44](#))****19. REMOVE REAR SEAT HEADREST ASSEMBLY****20. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY****21. REMOVE SEPARATE TYPE REAR SEATBACK ASSEMBLY LH (See page [SE-44](#))****22. REMOVE SEPARATE TYPE REAR SEATBACK ASSEMBLY RH (See page [SE-44](#))****23. REMOVE REAR SIDE SEATBACK ASSEMBLY LH (See page [SE-45](#))****24. REMOVE REAR SIDE SEATBACK ASSEMBLY RH (See page [SE-45](#))****25. REMOVE REAR DOOR INSIDE HANDLE BEZEL PLUG LH (See page [ED-64](#))****26. REMOVE DOOR ASSIST GRIP COVER LH (See page [ED-64](#))****27. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-65](#))****28. REMOVE REAR DOOR INNER GLASS WEATHERSTRIP LH (See page [ED-66](#))****29. REMOVE FRONT DOOR SCUFF PLATE LH**


- (a) Disengage the 7 claws and 3 clips, and remove the front door scuff plate LH.

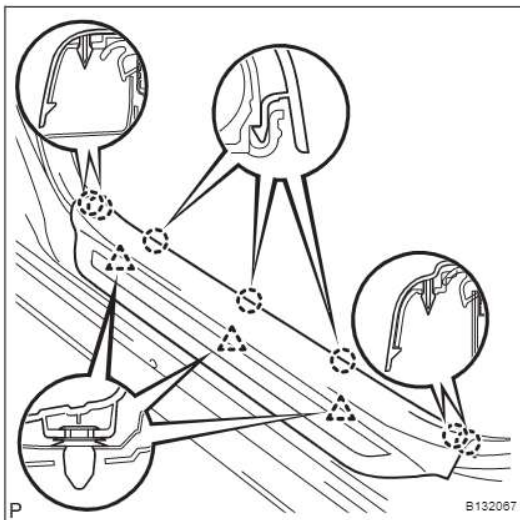


IR

IR-14


INTERIOR – ROOF HEADLINING

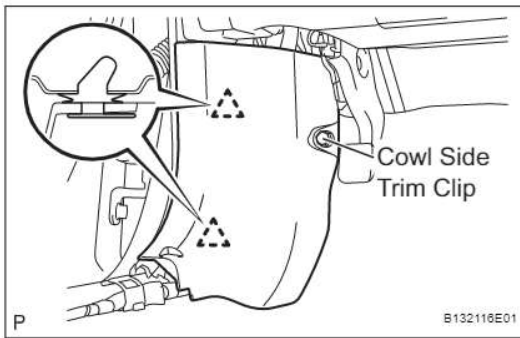**30. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH**


- (a) Remove the cowl side trim clip.
- (b) Disengage the 2 clips and remove the cowl side trim sub-assembly LH.

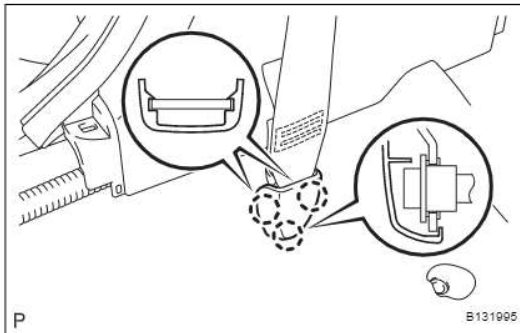31. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**32. REMOVE LAP BELT OUTER ANCHOR COVER (for LH Side)**

- (a) Disengage the 3 claws and remove the lap belt outer anchor cover.

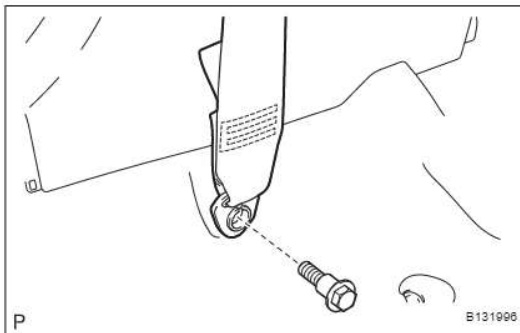**33. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY LH**


- (a) Remove the bolt and disconnect the floor end of the front seat outer belt assembly LH.

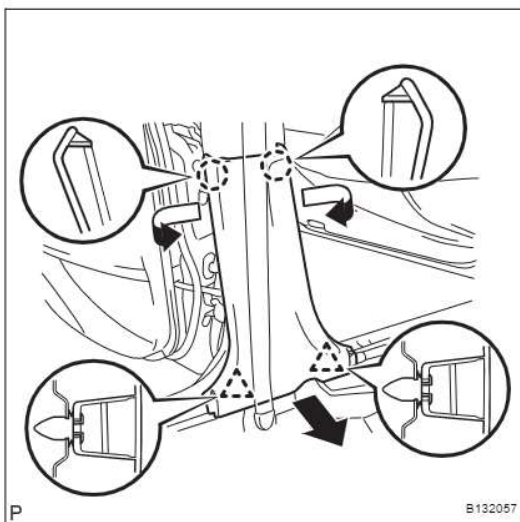**34. REMOVE LOWER CENTER PILLAR GARNISH LH**

- (a) Disengage the 2 claws and 2 clips, and remove the lower center pillar garnish LH.

INTERIOR – ROOF HEADLINING

IR-15

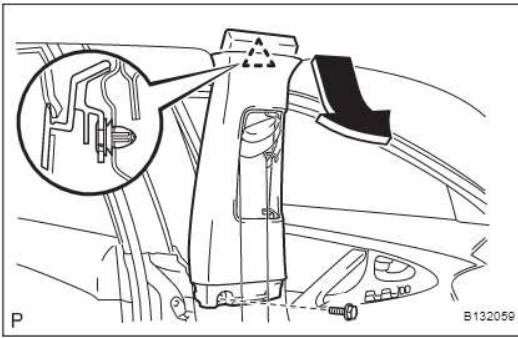

- 35. REMOVE UPPER CENTER PILLAR GARNISH LH**
 (a) Remove the bolt.
 (b) Disengage the clip and remove the upper center pillar garnish LH.

36. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure for the RH side and the LH side.

37. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

38. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**39. REMOVE LAP BELT OUTER ANCHOR COVER (for RH Side)**

HINT:

Use the same procedure for the RH side and the LH side.

40. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

41. REMOVE LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

42. REMOVE UPPER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.


43. REMOVE ROOF SIDE INNER GARNISH LH

- (a) Disengage the 5 clips and 2 claws, and remove the roof side inner garnish LH.

44. REMOVE ROOF SIDE INNER GARNISH RH

HINT:


Use the same procedure for the RH side and the LH side.

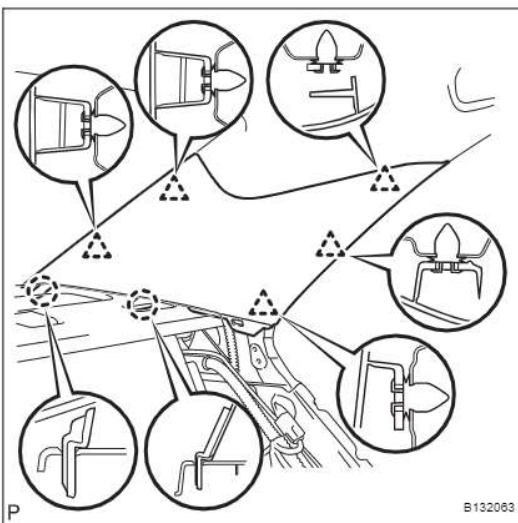


IR

IR-16

INTERIOR – ROOF HEADLINING

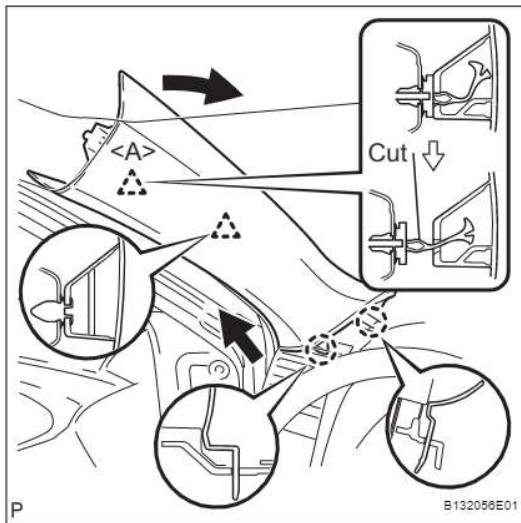**45. REMOVE FRONT PILLAR GARNISH LH**

- (a) Pull the upper part of the garnish toward the inside of the cabin and disengage the 2 clips.
- (b) Cut off the clip <A>.
- (c) Disengage the 2 claws and remove the front pillar garnish LH.
- (d) Remove the clip <A> from the vehicle body.

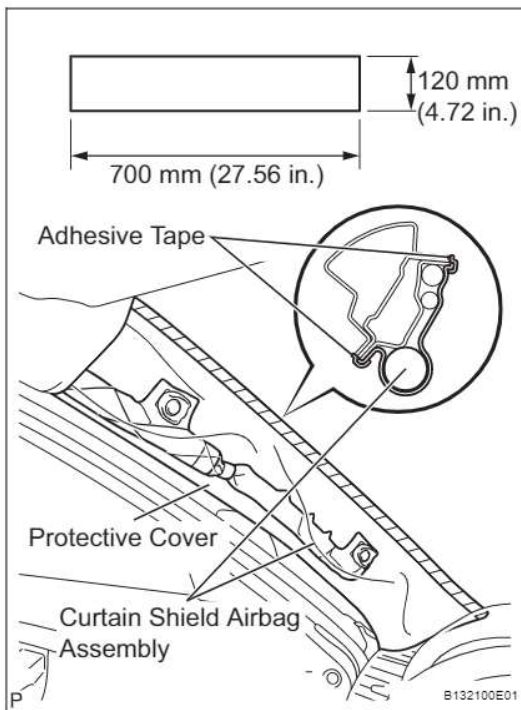


- (e) Protect the curtain shield airbag assembly.
 - (1) Cover the airbag with a piece of nylon cloth of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.


IR

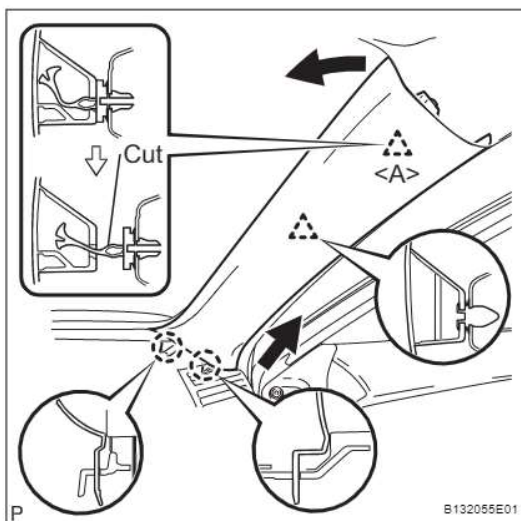**46. REMOVE FRONT PILLAR GARNISH RH**

- (a) Pull the upper of the garnish towards the inside of the cabin and disengage the 2 clips.
- (b) Cut off the clip <A>.
- (c) Disengage the 2 claws and remove the front pillar garnish RH.
- (d) Remove the clip <A> from the vehicle body.

INTERIOR – ROOF HEADLINING

IR-17

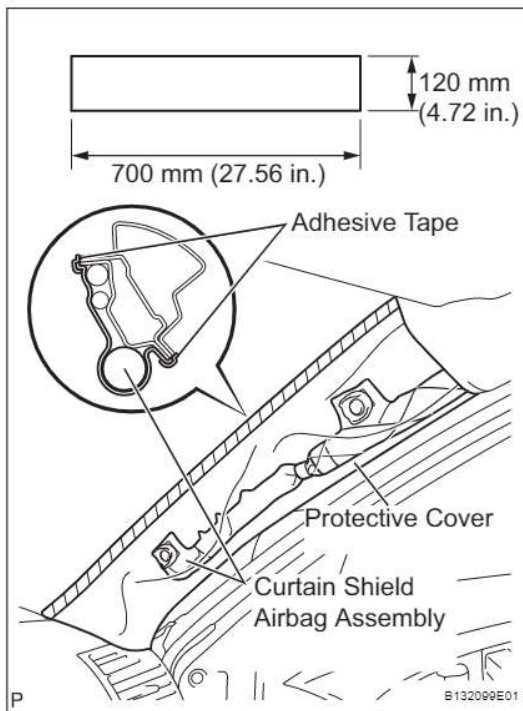


(e) Protect the curtain shield airbag assembly.


- (1) Cover the airbag with a piece of nylon cloth of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

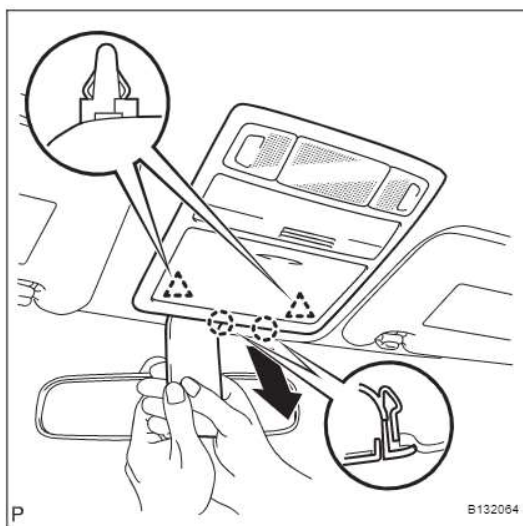**47. REMOVE ROOF CONSOLE BOX ASSEMBLY**

- (a) Using a moulding remover, disengage the 2 clips and 2 claws.
- (b) Disconnect the connectors and remove the roof console box assembly.

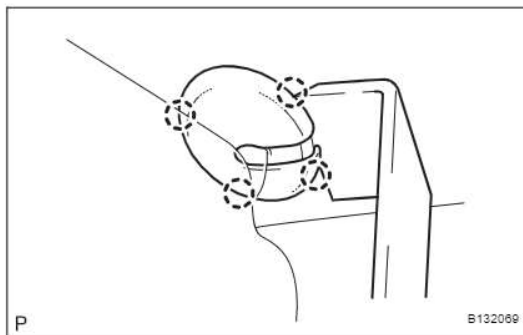
**48. REMOVE VISOR ASSEMBLY LH**

- (a) Using a moulding remover, disengage the 4 claws and remove the visor bracket cover.

IR

IR-18

INTERIOR – ROOF HEADLINING

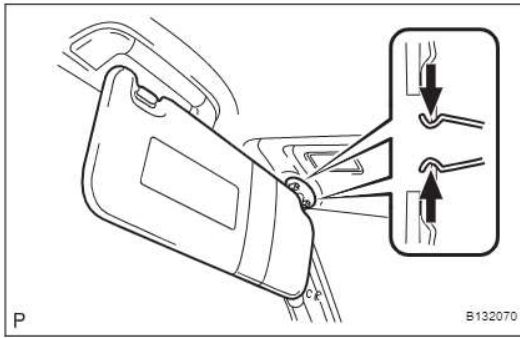

- (b) Disengage the 2 clips and remove the visor assembly LH.


49. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.


50. REMOVE VISOR HOLDER

- (a) Turn the visor holder approximately 45° and pull it out as shown in the illustration.
 (b) Disengage the 2 claws and remove the visor holder.

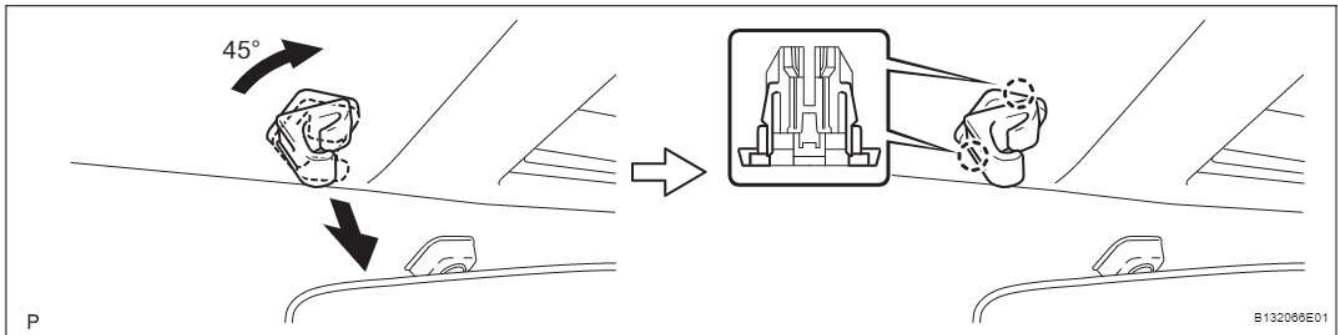

HINT:

Use the same procedure for the RH side and the LH side.

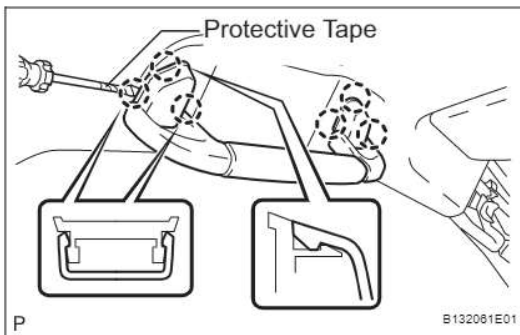
**51. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY**

- (a) Using a screwdriver, disengage the 6 claws and remove the 2 assist grip covers.

HINT:

Tape the screwdriver tip before use.

IR

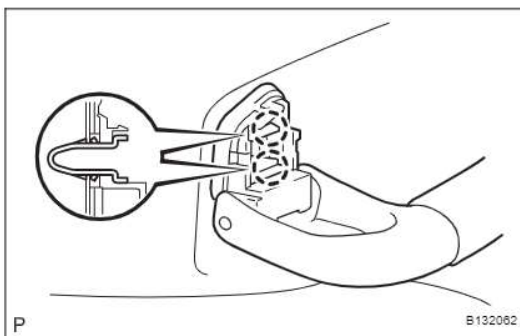

- (b) Disengage the 2 clips and remove the front assist grip sub-assembly.

HINT:

Use the same procedure for the RH side and the LH side.


52. REMOVE REAR ASSIST GRIP SUB-ASSEMBLY

HINT:

Use the same procedure for the rear side and the front side.

INTERIOR – ROOF HEADLINING


IR-19

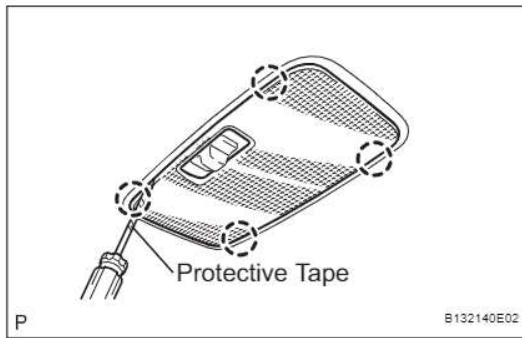**53. REMOVE NO. 1 ROOM LIGHT ASSEMBLY (w/o Sliding Roof)**

- (a) Using a screwdriver, disengage the 4 claws and remove the lens cover.

HINT:

Tape the screwdriver tip before use.

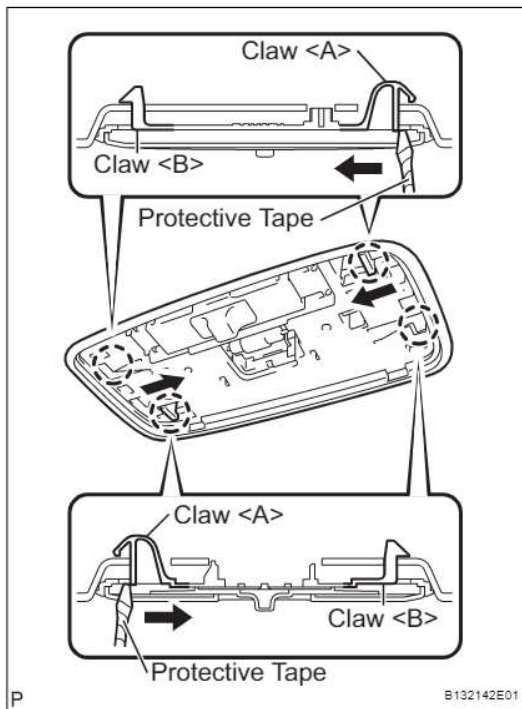


- (b) Using a screwdriver, disengage the 2 claws <A> as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (c) Disengage the 2 claws and remove the No. 1 room light assembly.

- (d) Disconnect the room light connector.

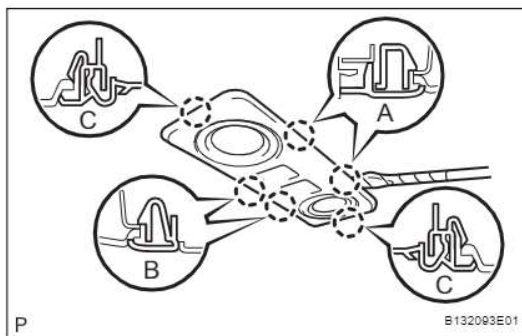**54. REMOVE SPOT LIGHT ASSEMBLY (w/ Sliding Roof)**

- (a) Using a screwdriver, disengage the 2 claws labeled A and 2 claws labeled B from the vehicle body.

HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, disengage the 2 claws labeled C and remove the spot light assembly from the headlining.


HINT:

Tape the screwdriver tip before use.

IR

IR-20

INTERIOR – ROOF HEADLINING

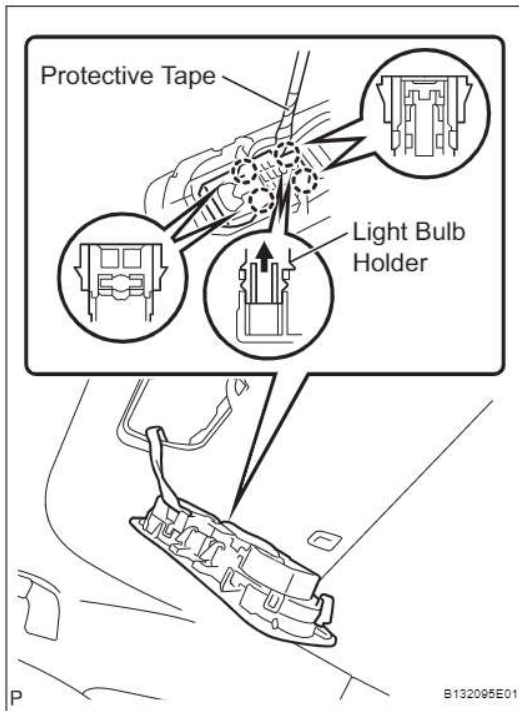

- (c) Using a screwdriver, disengage the 4 claws.

HINT:

Tape the screwdriver tip before use.

- (d) Pull the light bulb holder in the direction indicated by the arrow in the illustration to detach the claw. Then remove the spot light assembly from the light bulb holder.

55. REMOVE SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof)

- (a) Remove the sun roof opening trim moulding.


56. REMOVE ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

- (a) Disconnect the No. 1 roof wire connector and disengage each clamp from the front pillar LH.
 (b) Remove the bolt and disconnect the radio setting condenser from the front pillar RH.
 (c) Disconnect the antenna cord sub-assembly connector and disengage each clamp from the front pillar RH.
 (d) Disconnect the antenna cord sub-assembly connector and disengage the clamp from the rear pillar RH.


INTERIOR – ROOF HEADLINING

IR-21

(e) Disengage the 4 clips.

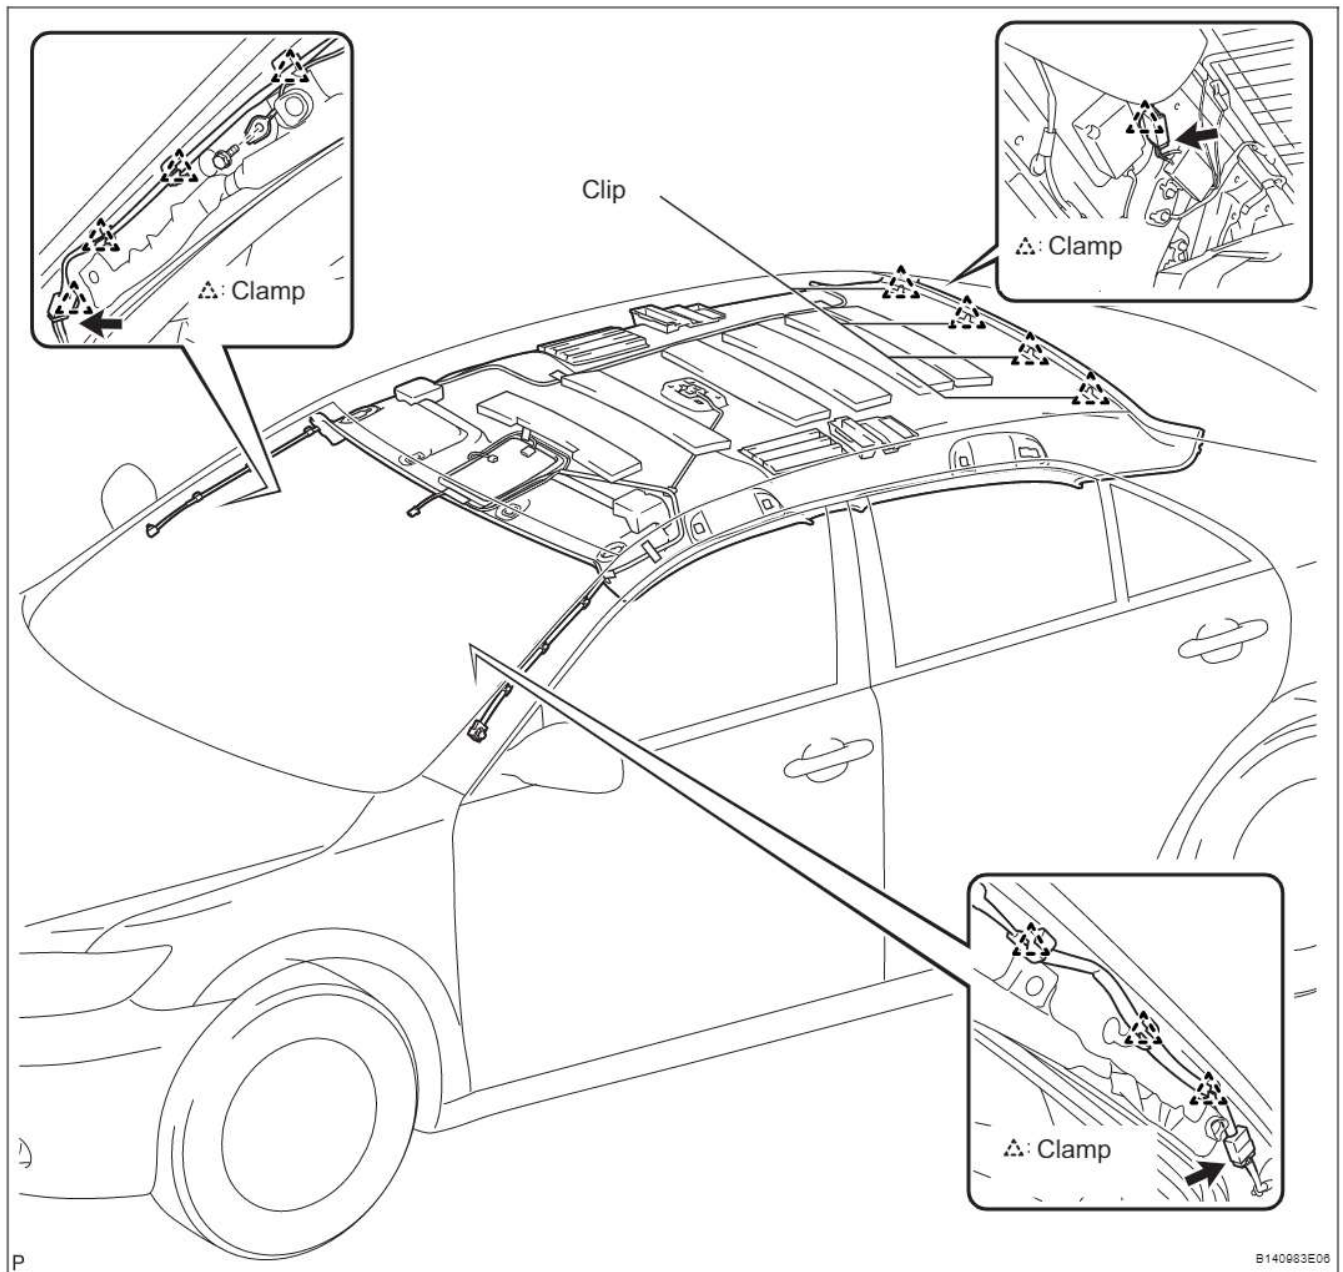

IR

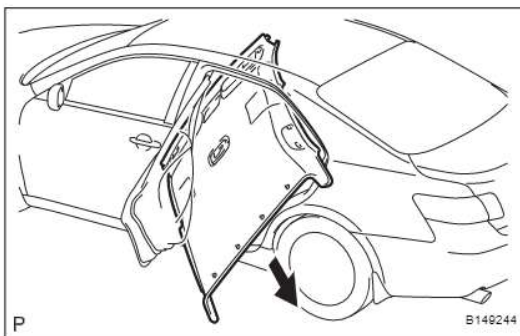

(f) Remove the roof headlining assembly from the vehicle through the rear left door.


57. REMOVE ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

- Disconnect the No. 1 roof wire connector and disengage each clamp from the front pillar LH.
- Remove the bolt and disconnect the radio setting condenser from the front pillar RH.
- Disconnect the antenna cord sub-assembly connector and disengage each clamp from the front pillar RH.
- Disconnect the antenna cord sub-assembly connector and disengage the clamp from the rear pillar RH.


IR-22

INTERIOR – ROOF HEADLINING

- (e) Disconnect the sliding roof drive gear connector.
- (f) Disengage the hook, 4 clips, and 2 fasteners.

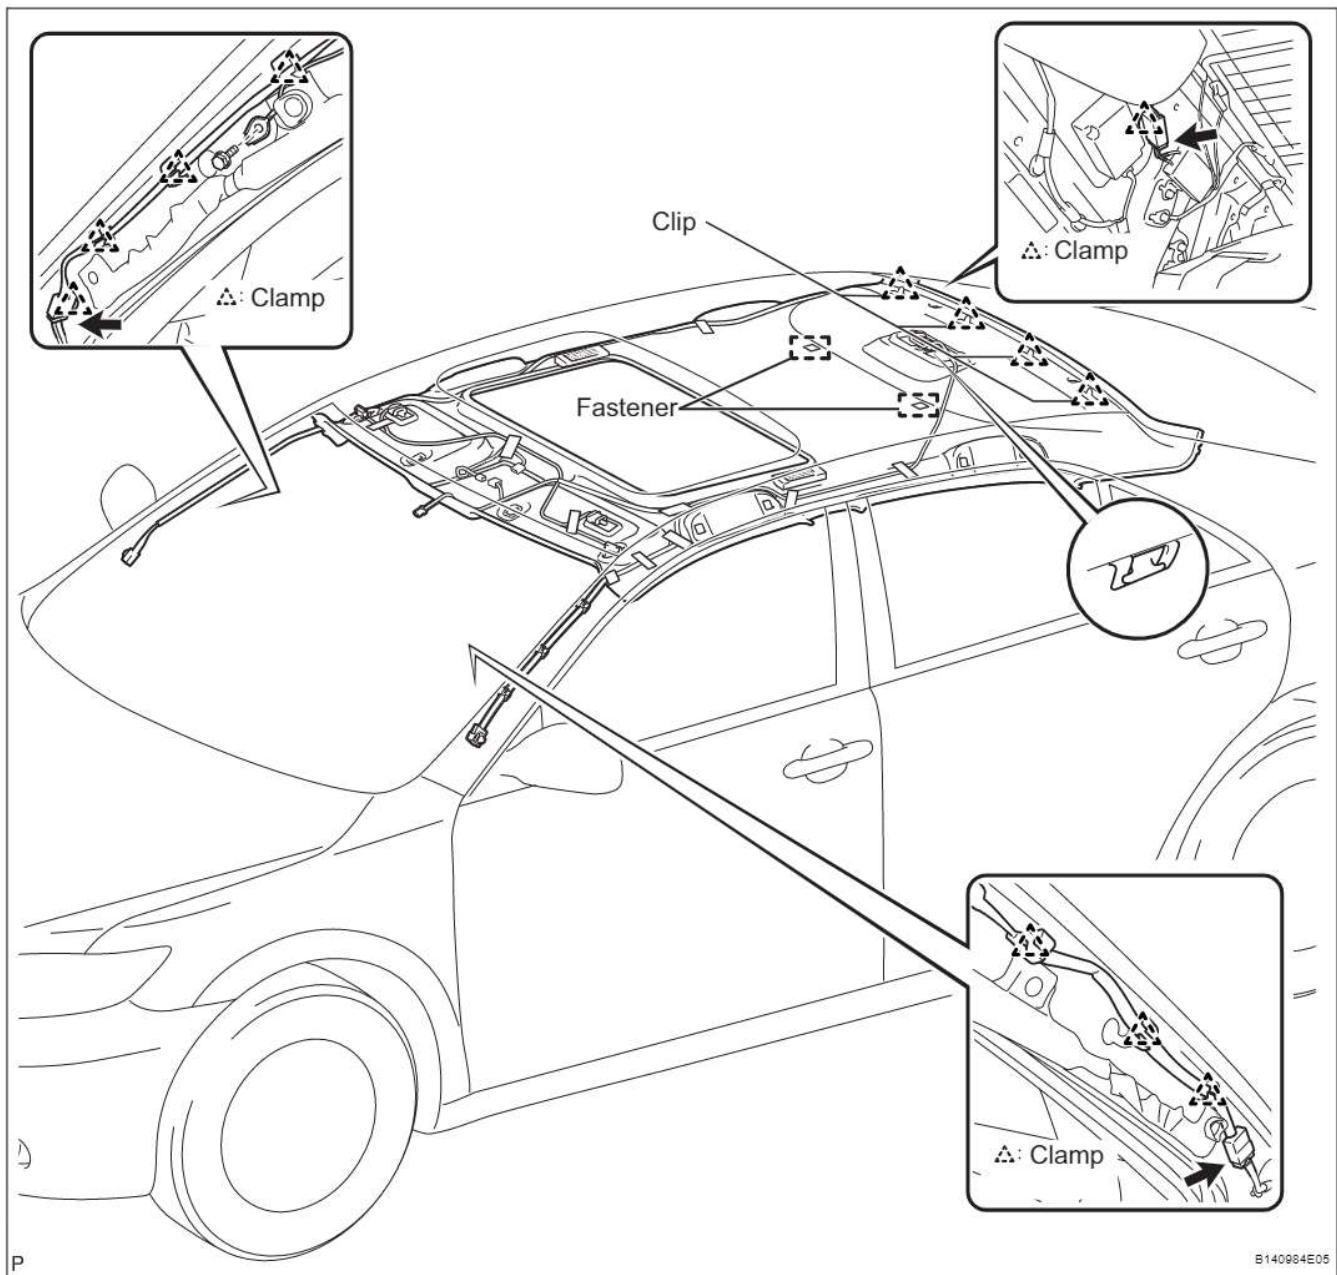


IR

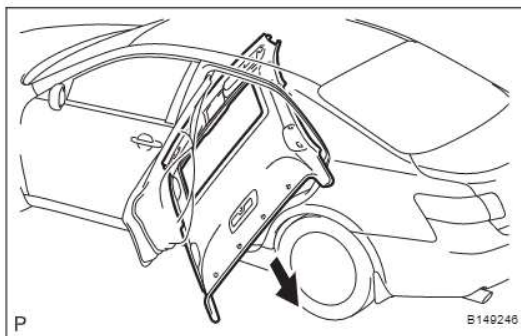


- (g) Remove the roof headlining assembly from the vehicle through the rear left door.

INTERIOR – ROOF HEADLINING

IR-23

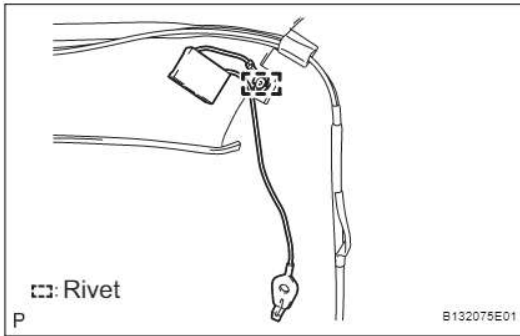**58. REMOVE RADIO SETTING CONDENSER**

- (a) Remove the rivet and radio setting condenser.

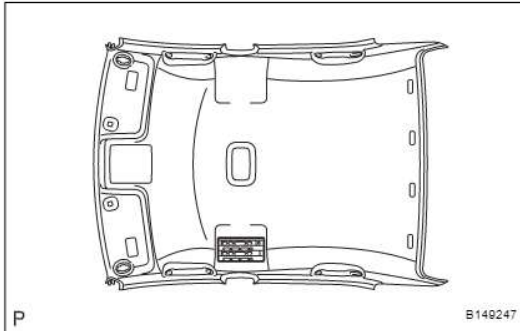
**59. REMOVE NO. 2 REAR SIDE RAIL SPACER LH (w/o Sliding Roof)**

- (a) Remove the No. 2 rear side rail spacer LH.

60. REMOVE NO. 2 REAR SIDE RAIL SPACER RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

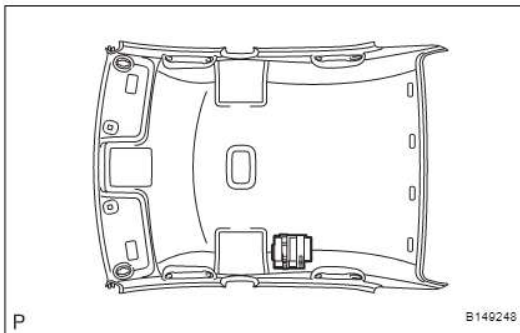
**61. REMOVE NO. 3 REAR SIDE RAIL SPACER LH (w/o Sliding Roof)**

- (a) Remove the No. 3 rear side rail spacer LH.

62. REMOVE NO. 3 REAR SIDE RAIL SPACER RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

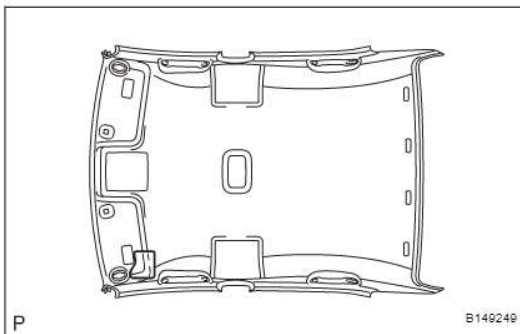
**63. REMOVE ROOF SIDE RAIL SILENCER PAD LH (w/o Sliding Roof)**

- (a) Remove the roof side rail silencer pad LH.

64. REMOVE ROOF SIDE RAIL SILENCER PAD RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

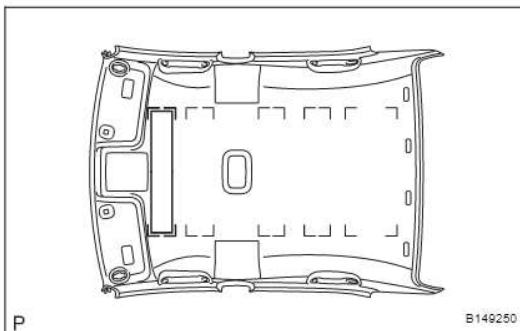
**65. REMOVE NO. 2 ROOF SILENCER PAD (w/o Sliding Roof)**

- (a) Remove the No. 2 roof silencer pad.


IR

IR-24

INTERIOR – ROOF HEADLINING

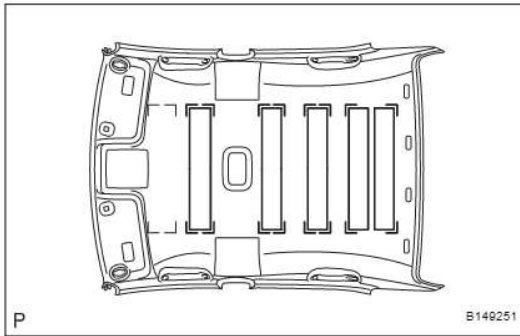**66. REMOVE NO. 4 ROOF SILENCER PAD (w/o Sliding Roof)**

- (a) Remove the No. 4 roof silencer pads.

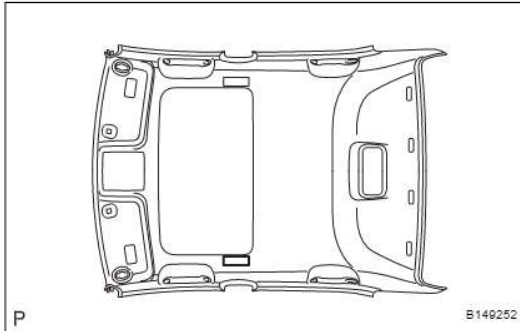
**67. REMOVE NO. 2 REAR SIDE RAIL SPACER LH (w/ Sliding Roof)**

- (a) Remove the No. 2 rear side rail spacer LH.


68. REMOVE NO. 2 REAR SIDE RAIL SPACER RH (w/ Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

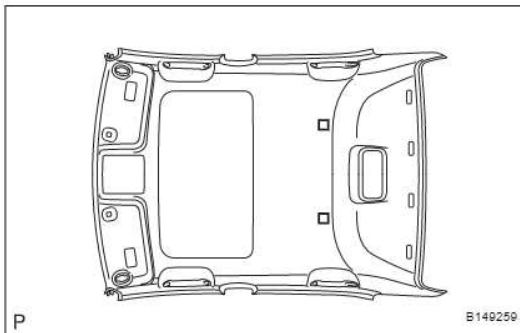**69. REMOVE FASTENER HOOK (w/ Sliding Roof)**

- (a) Remove the fastener hook.

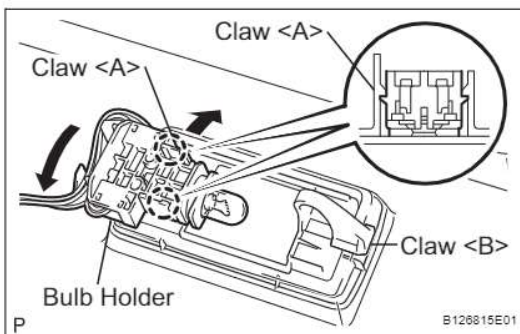70. REMOVE ANTENNA CORD SUB-ASSEMBLY (See page [AV-176](#))**71. REMOVE VANITY LIGHT ASSEMBLY (w/ Sliding Roof)**

- (a) Disengage the 2 claws <A> and separate the bulb holder from the vanity light assembly as shown in the illustration.
(b) Disengage the claw and remove the vanity light assembly.

HINT:

Use the same procedure to remove the light on the other side.


72. REMOVE NO. 1 ROOF WIRE (w/o Sliding Roof)

- (a) Remove the adhesive tape from the roof headlining assembly.
(b) Remove the No. 1 roof wire from the roof headlining assembly.


INTERIOR – ROOF HEADLINING

IR-25

- (c) Remove the double-sided tape from the roof headlining assembly.

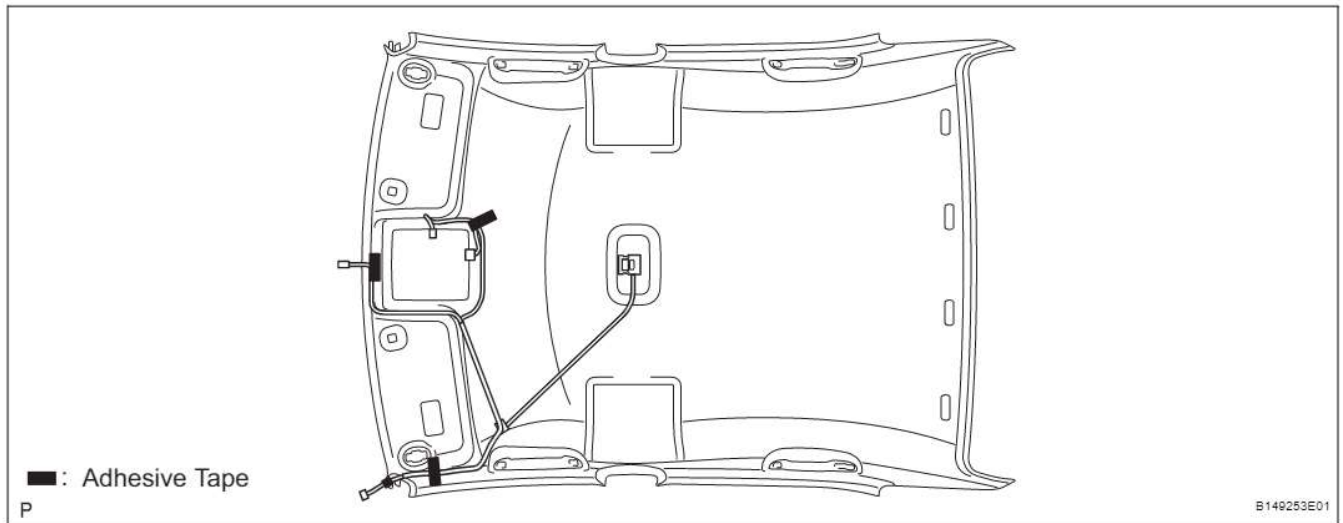**73. REMOVE NO. 1 ROOF WIRE (w/ Sliding Roof)**

- Turn the visor connectors counterclockwise approximately 90° and separate the connectors from the roof headlining assembly.
- Remove the adhesive tape from the roof headlining assembly.
- Remove the No. 1 roof wire from the roof headlining assembly.
- Remove the double-sided tape from the roof headlining assembly.

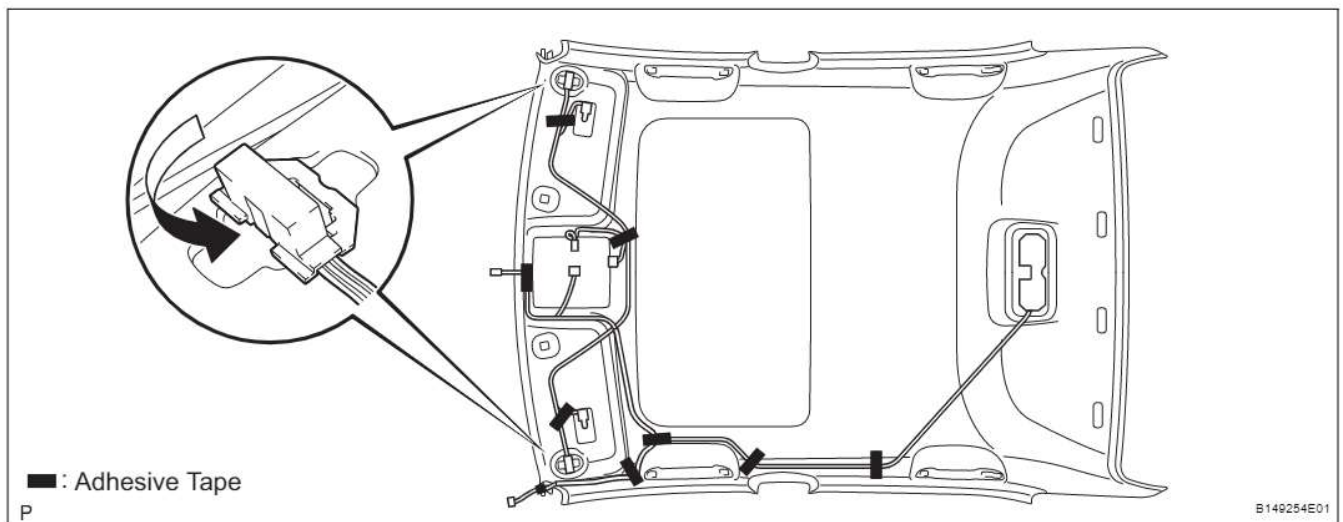


IR

IR-26

INTERIOR – ROOF HEADLINING

INSTALLATION**1. INSTALL NO. 1 ROOF WIRE (w/o Sliding Roof)**

- (a) Apply new double-sided tape to locations shown in the illustration while aligning the tape with the markings on the roof headlining.

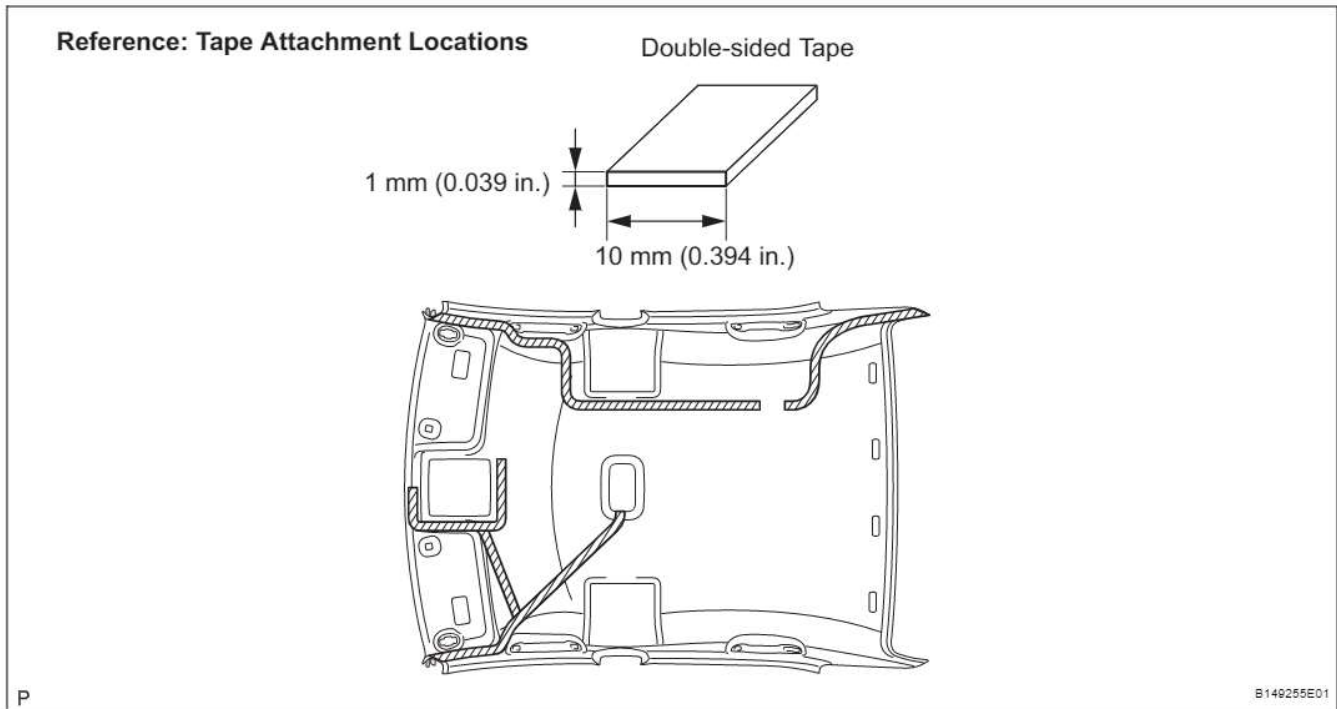**NOTICE:**

Securely apply the double-sided tape to prevent it from being out of alignment and peeling off.

- (b) Peel off the release paper from the double-sided tape.
- (c) Attach the No. 1 roof wire along the double-sided tape so that the marking surface of the wire harness faces downward.

NOTICE:


- **Securely attach the No. 1 roof wire.**
- **Failure to do so may cause abnormal noise.**

INTERIOR – ROOF HEADLINING



IR-27

- (d) Apply adhesive tape to locations shown in the illustration.

Reference: Tape Attachment Locations

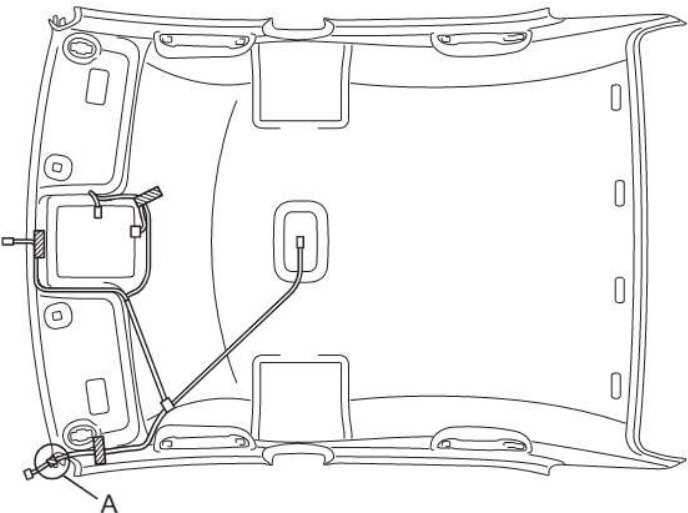

Adhesive Tape

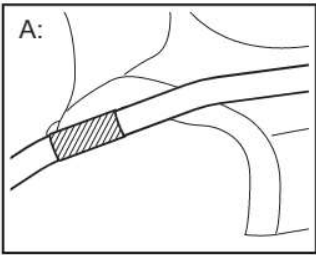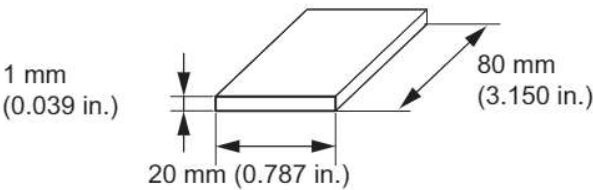

P

B149256E01

HINT:
As shown in illustration A, line up and secure the reference tape of the wire harness to the tip of the roof headlining assembly.


IR

IR-28

INTERIOR – ROOF HEADLINING

2. INSTALL NO. 1 ROOF WIRE (w/ Sliding Roof)

- (a) Apply new double-sided tape to locations shown in the illustration while aligning the tape with the markings on the roof headlining.

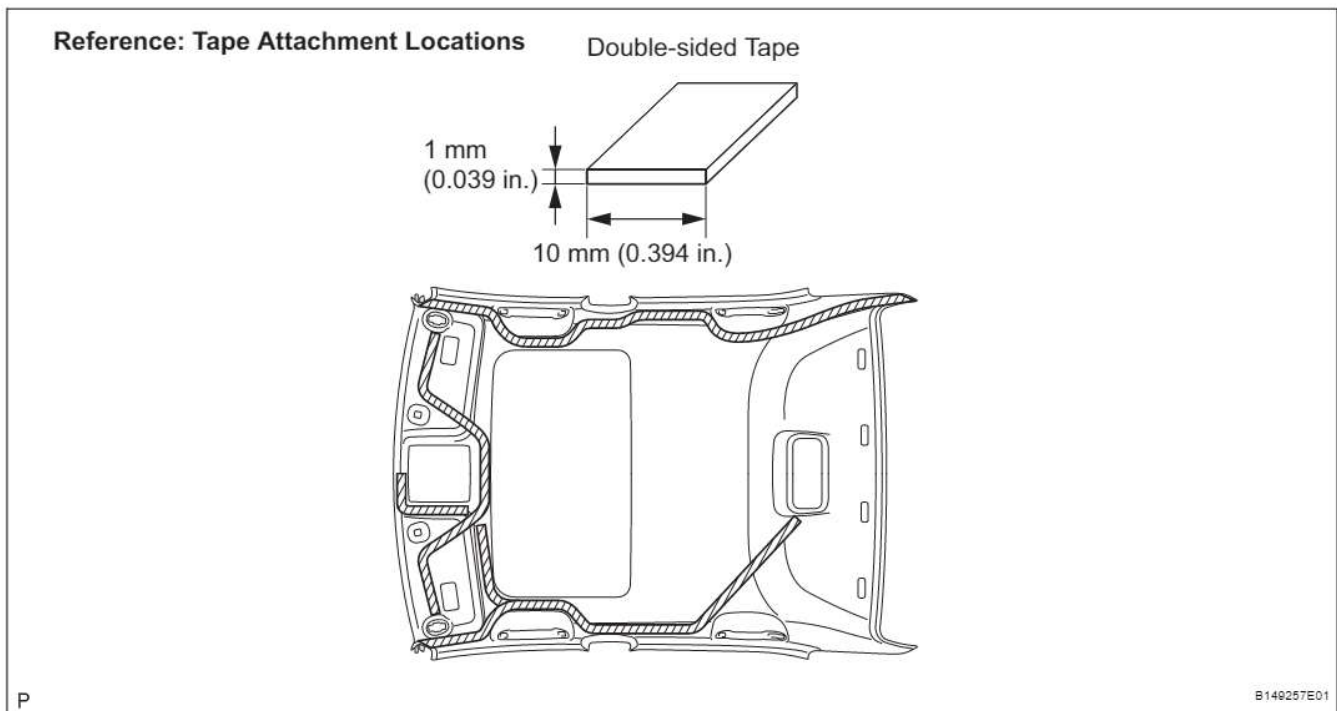**NOTICE:**

Securely apply the double-sided tape to prevent it from being out of alignment and peeling off.

- (b) Peel off the release paper from the double-sided tape.
- (c) Turn the visor connectors clockwise approximately 90° to install the connectors to the roof headlining.
- (d) Attach the No. 1 roof wire along the double-sided tape so that the marking surface of the wire harness faces downward.

NOTICE:




- **Securely attach the No. 1 roof wire.**
- **Failure to do so may cause abnormal noise.**

INTERIOR – ROOF HEADLINING

IR-29

- (e) Apply adhesive tape to locations shown in the illustration.

Reference: Tape Attachment Locations

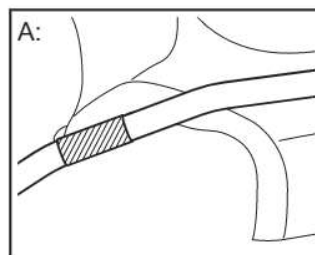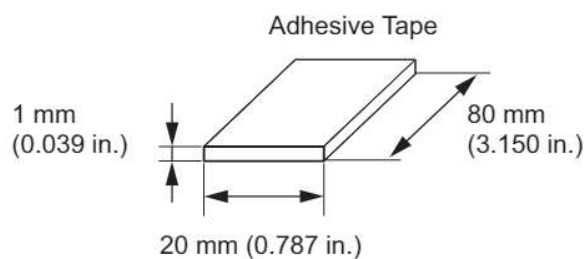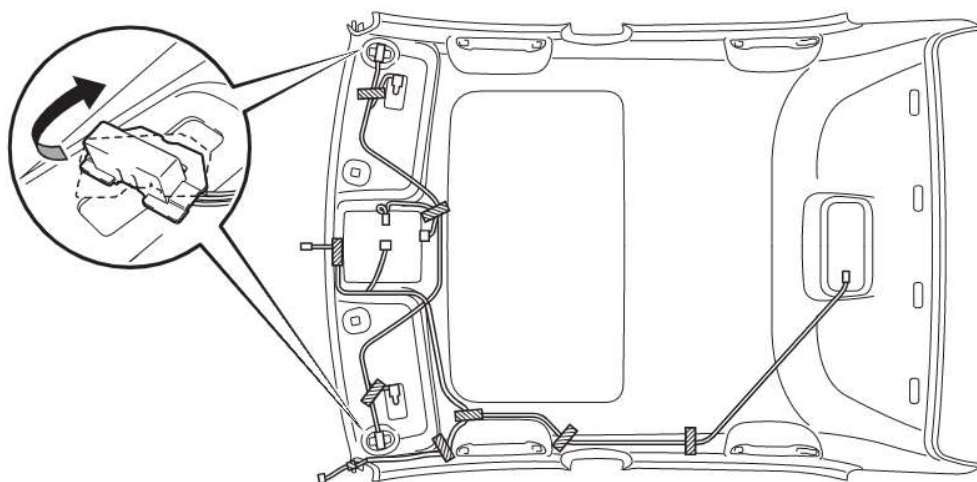


B149258E01

HINT:

As shown in illustration A, line up and secure the reference tape of the wire harness to the tip of the roof headlining assembly.


3. **INSTALL ANTENNA CORD SUB-ASSEMBLY** (See page [AV-178](#))
4. **INSTALL VANITY LIGHT ASSEMBLY**
 - (a) Engage the 3 claws and install the vanity light assembly.

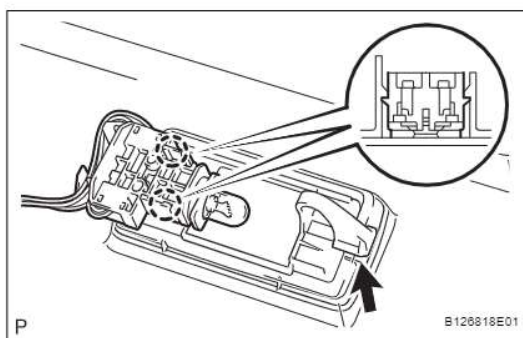


IR

IR-30

INTERIOR – ROOF HEADLINING

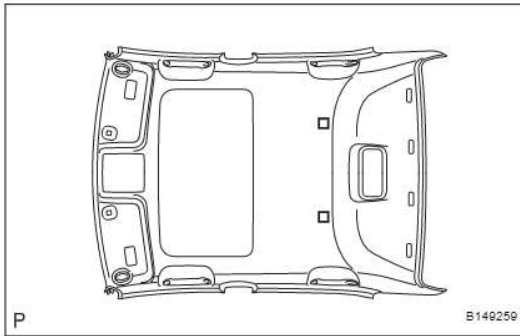**5. INSTALL FASTENER HOOK (w/ Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the fastener hooks and install the fastener hooks using hot melt glue as shown in the illustration.

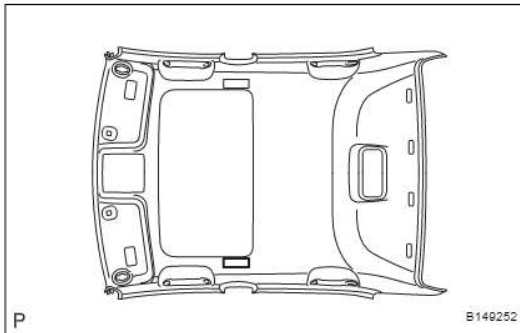
**6. INSTALL NO. 2 REAR SIDE RAIL SPACER LH (w/ Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the No. 2 rear side rail spacer LH and install the spacer using hot melt glue as shown in the illustration.


7. INSTALL NO. 2 REAR SIDE RAIL SPACER RH (w/ Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

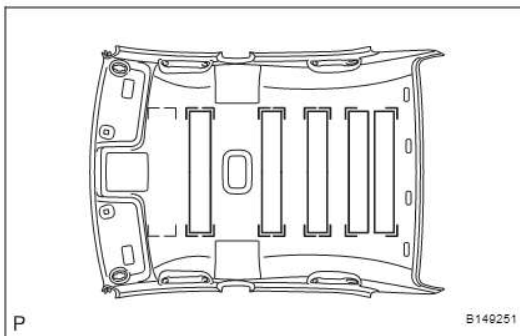**8. INSTALL NO. 4 ROOF SILENCER PAD (w/o Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the No. 4 roof silencer pads and install the silencer pads using hot melt glue or double-sided tape as shown in the illustration.

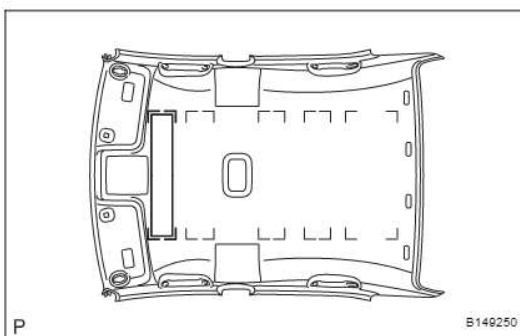
**9. INSTALL NO. 2 ROOF SILENCER PAD (w/o Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the No. 2 roof silencer pad and install the silencer pad using hot melt glue or double-sided tape as shown in the illustration.

IR

INTERIOR – ROOF HEADLINING

IR-31

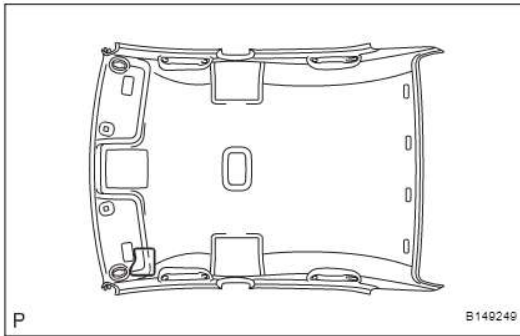
**10. INSTALL ROOF SIDE RAIL SILENCER PAD LH (w/o Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the roof side rail silencer pad LH and install the silencer pad using hot melt glue as shown in the illustration.

11. INSTALL ROOF SIDE RAIL SILENCER PAD RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

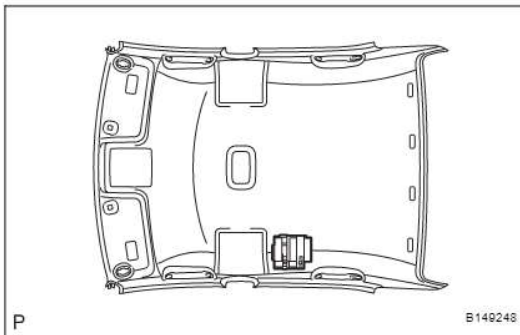
**12. INSTALL NO. 3 REAR SIDE RAIL SPACER LH (w/o Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the No. 3 rear side rail spacer LH and install the spacer using hot melt glue as shown in the illustration.

13. INSTALL NO. 3 REAR SIDE RAIL SPACER RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.

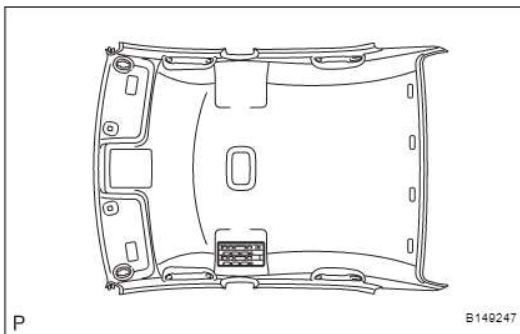**14. INSTALL NO. 2 REAR SIDE RAIL SPACER LH (w/o Sliding Roof)**

- (a) Align the markings on the roof headlining assembly with the No. 2 rear side rail spacer LH and install the spacer using hot melt glue as shown in the illustration.

15. INSTALL NO. 2 REAR SIDE RAIL SPACER RH (w/o Sliding Roof)

HINT:

Use the same procedure for the RH side and the LH side.


IR

IR-32

INTERIOR – ROOF HEADLINING

16. INSTALL RADIO SETTING CONDENSER

- (a) Using an air riveter or hand riveter with a nose piece, install the radio setting condenser with a new rivet.

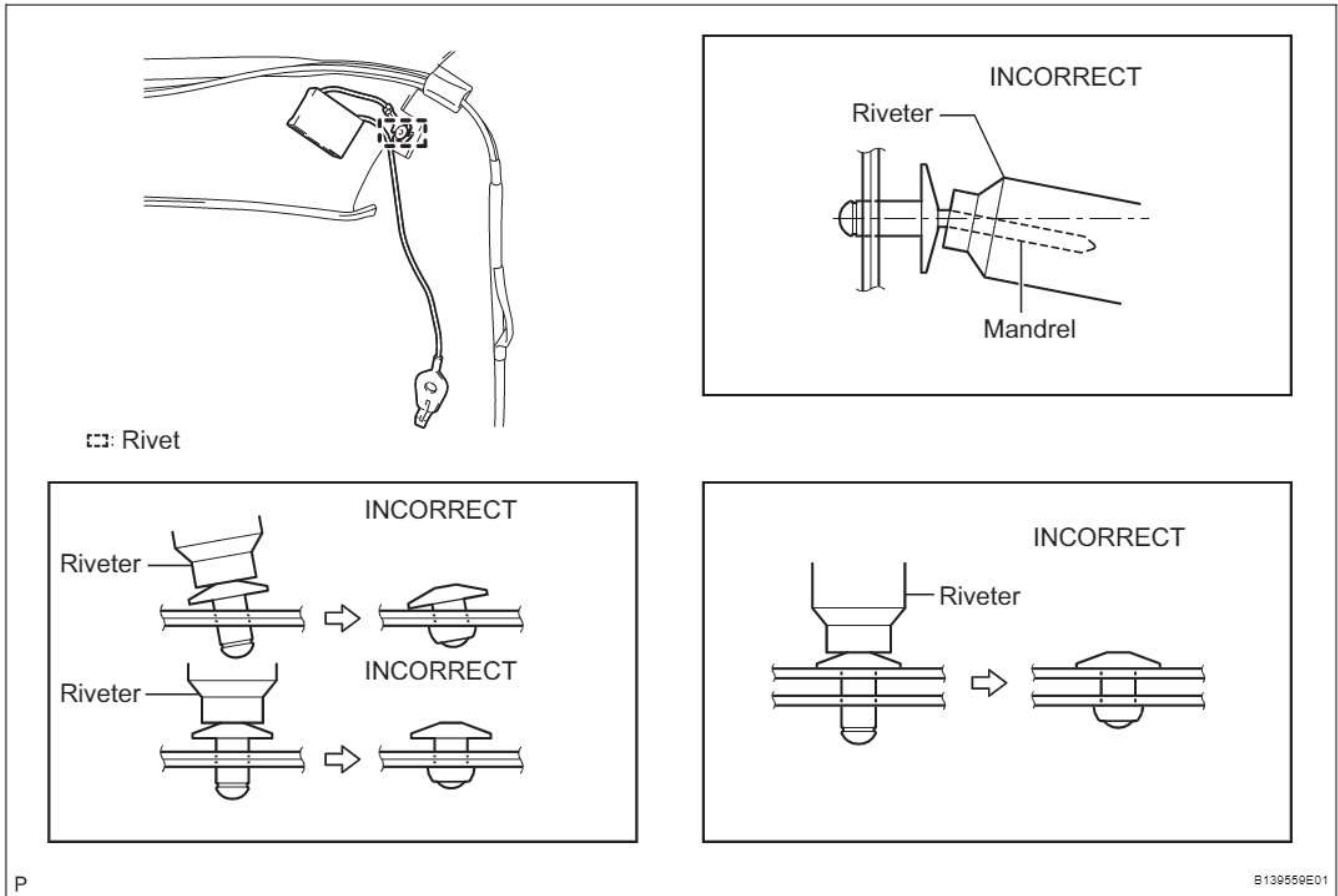**NOTICE:**


- Do not pry the rivet with the riveter, as this will cause damage to the riveter and mandrel.
- Confirm that the rivet is seated properly against the moulding. Do not tilt the riveter when installing the rivet to the moulding. Do not leave any space between the rivet head and moulding.
- Do not leave any space between the moulding and door frame. Firmly hold the 2 items together while installing the rivet.

HINT:


If the rivet cannot be cut, pull it once and cut it.

INTERIOR – ROOF HEADLINING

IR-33

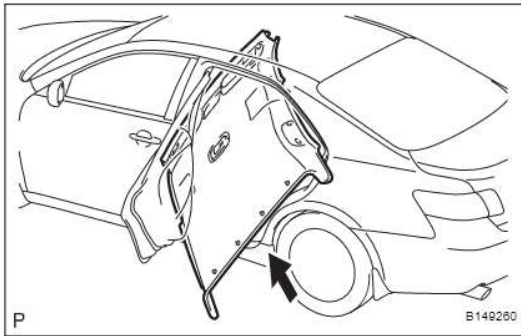**17. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)**


- Pull the roof headlining assembly into the vehicle through the rear left door.
- Engage the 4 clips.
- Connect the antenna cord sub-assembly connector and engage the clamp to the rear pillar RH.
- Connect the antenna cord sub-assembly connector and engage each clamp to the front pillar RH.
- Install the radio setting condenser to the front pillar RH with the bolt.
- Connect the No. 1 roof wire connector and engage each clamp to the front pillar LH.

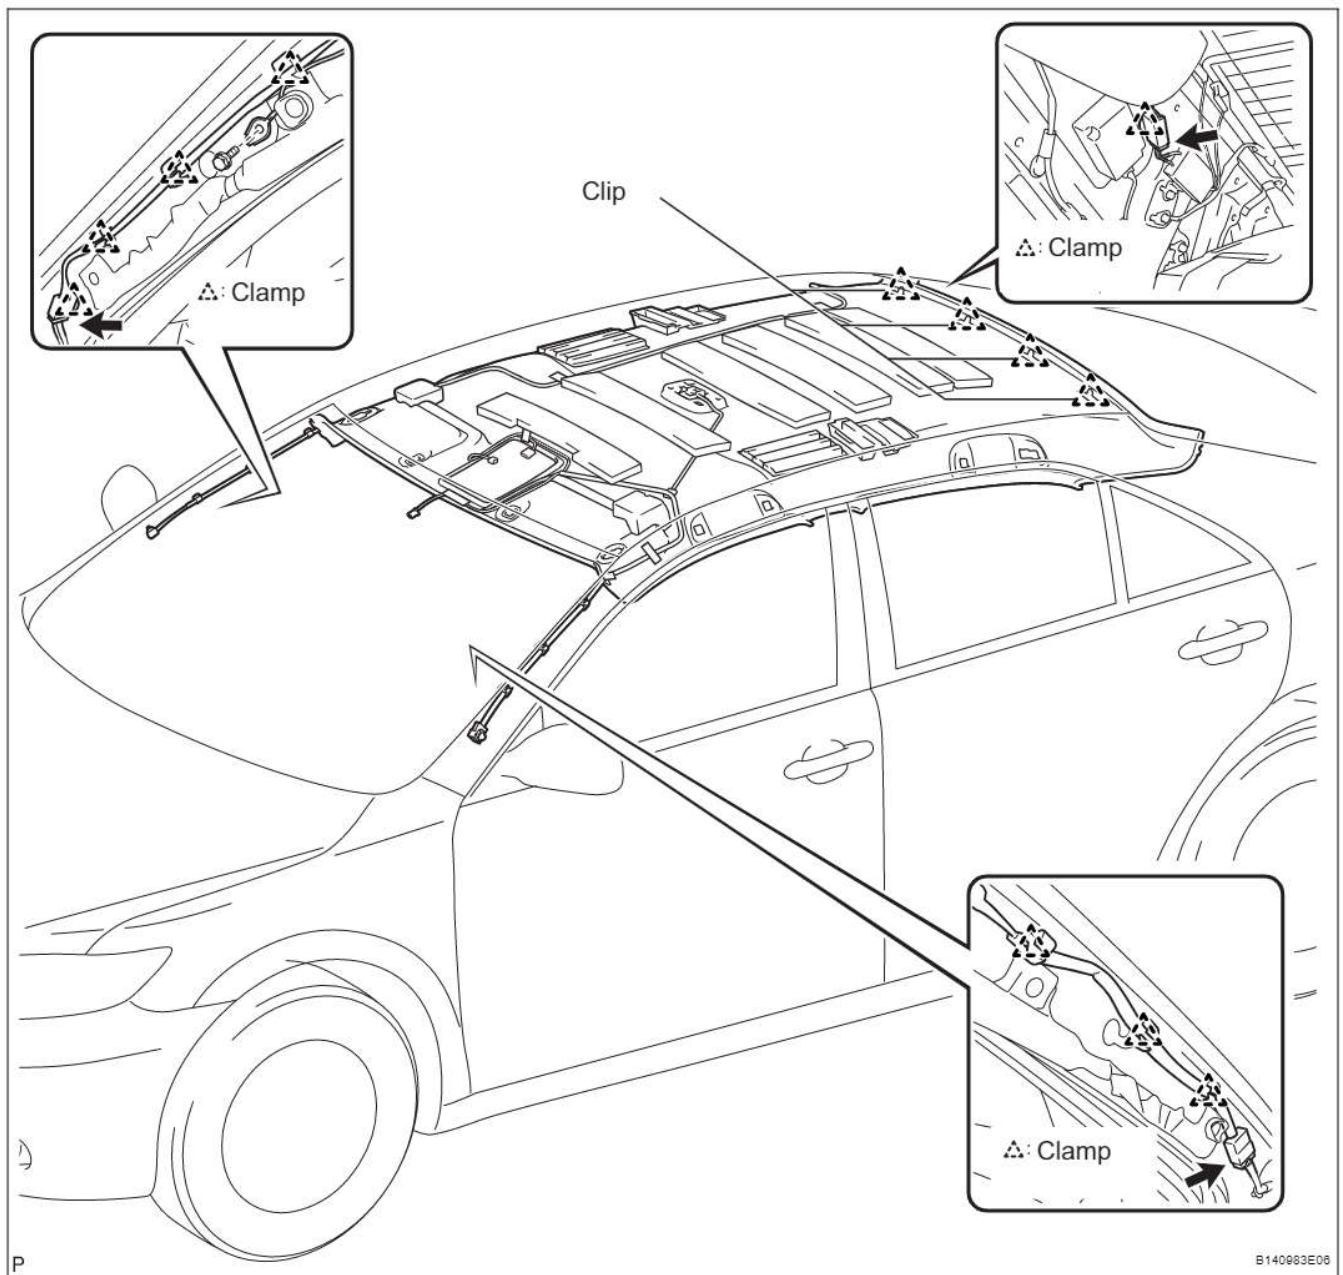


IR

IR-34

INTERIOR – ROOF HEADLINING

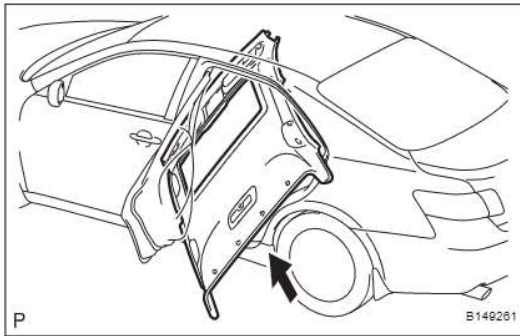**18. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)**


- (a) Pull the roof headlining assembly into the vehicle through the rear left door.
- (b) Engage the hook, 4 clips, and 2 fasteners.
- (c) Connect the sliding roof drive gear connector.
- (d) Connect the antenna cord sub-assembly connector and engage the clamp to the rear pillar RH.
- (e) Connect the antenna cord sub-assembly connector and engage each clamp to the front pillar RH.
- (f) Install the radio setting condenser to the front pillar RH with the bolt.
- (g) Connect the No. 1 roof wire connector and engage each clamp to the front pillar LH.

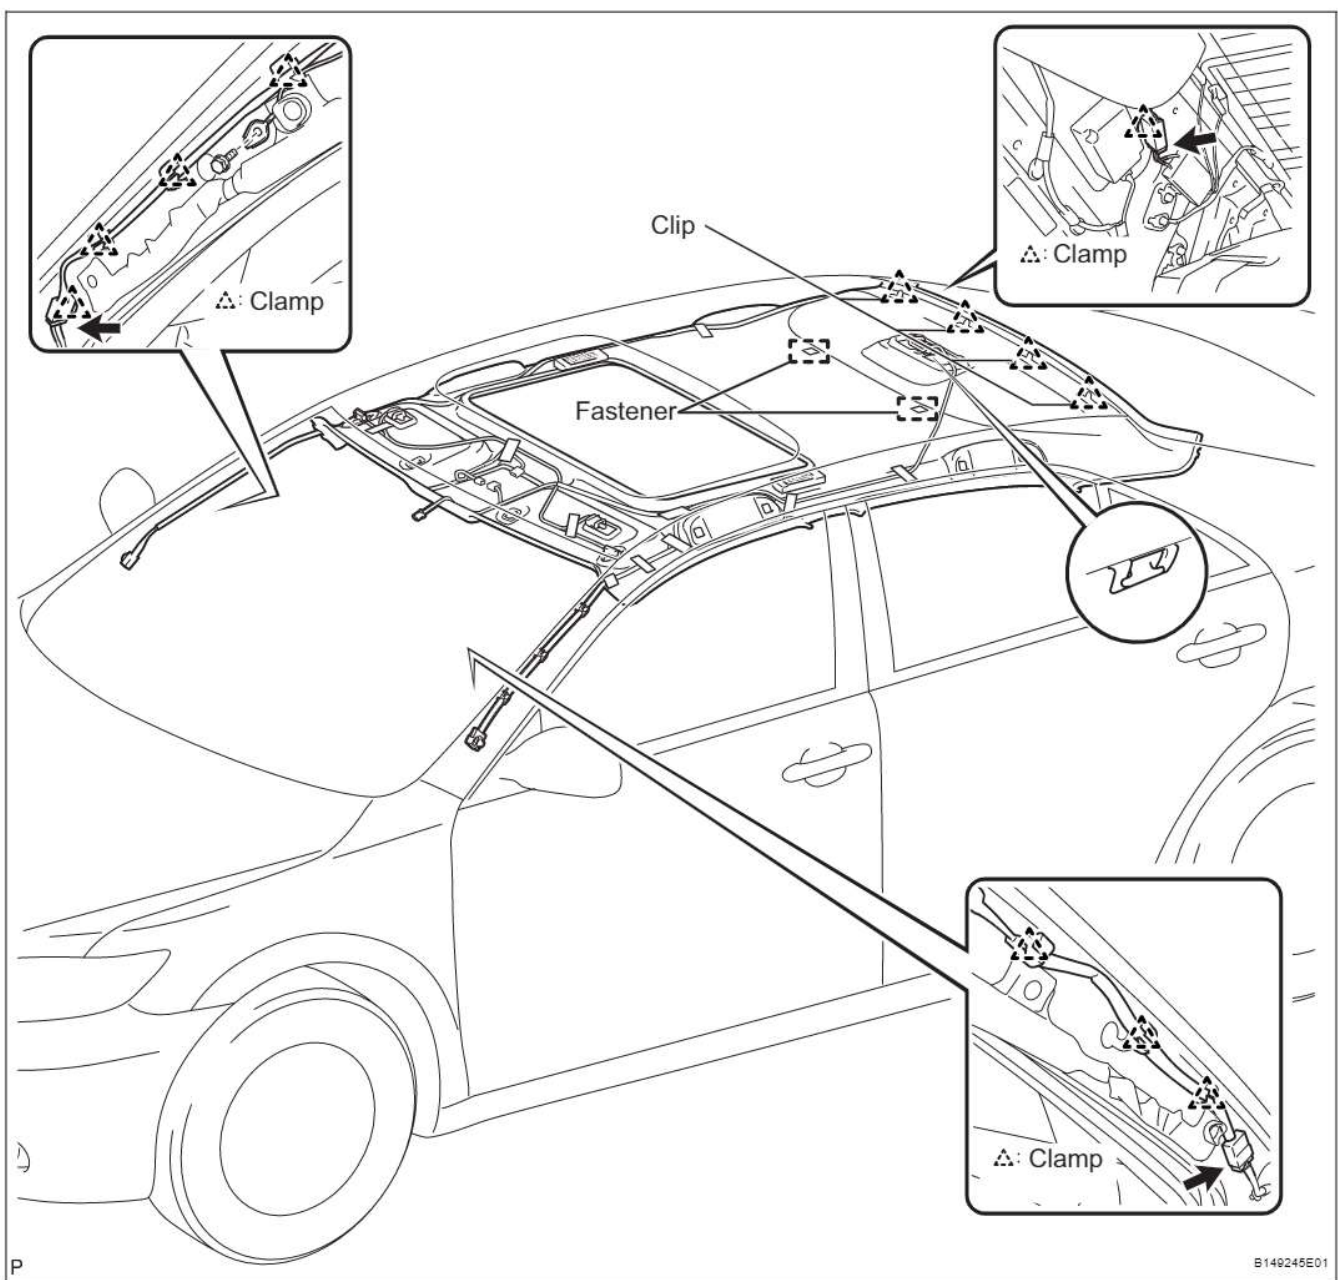

IR

INTERIOR – ROOF HEADLINING


IR-35

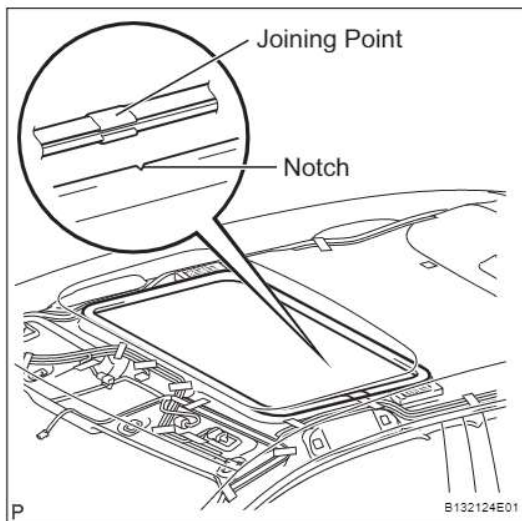**19. INSTALL SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof)**


- (a) Align the joining point of the moulding with the notch of the roof headlining assembly, and install the sun roof opening trim moulding.

NOTICE:

After installation, check that the corners fit correctly.

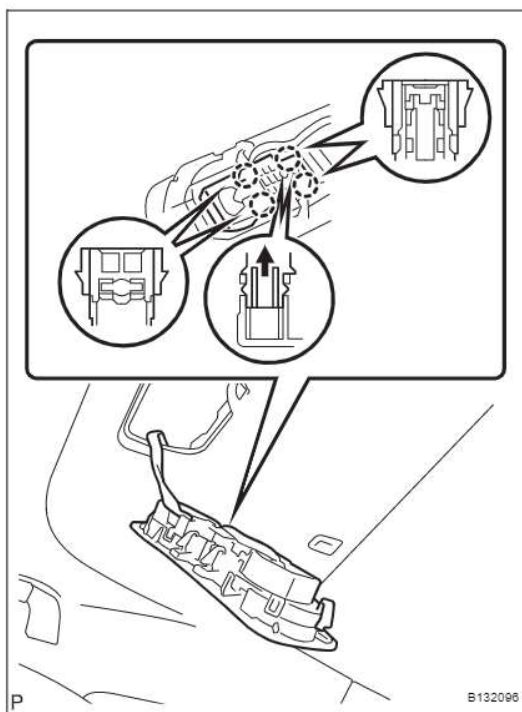**20. INSTALL SPOT LIGHT ASSEMBLY (w/ Sliding Roof)**

- (a) Push the light bulb holder in the direction indicated by the arrow in the illustration to engage the claw.
- (b) Engage the 4 claws.

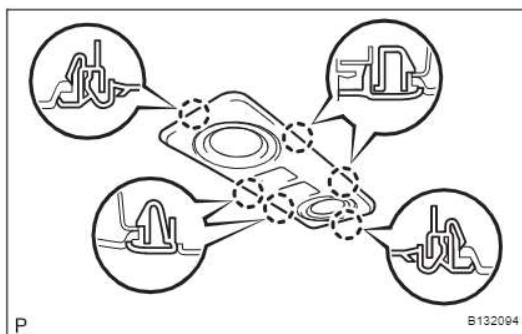


- (c) Engage the 6 claws and install the spot light assembly.


IR

IR-36


INTERIOR – ROOF HEADLINING

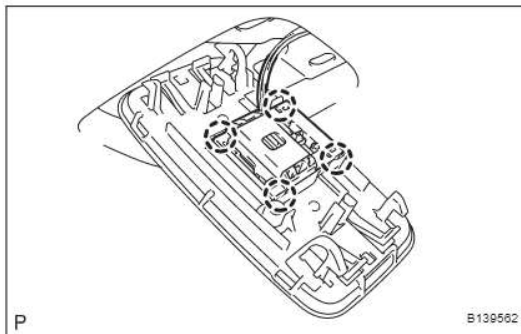**21. INSTALL NO. 1 ROOM LIGHT ASSEMBLY (w/o Sliding Roof)**

- (a) Engage the 4 claws and install the room light switch base to the No. 1 room light assembly.

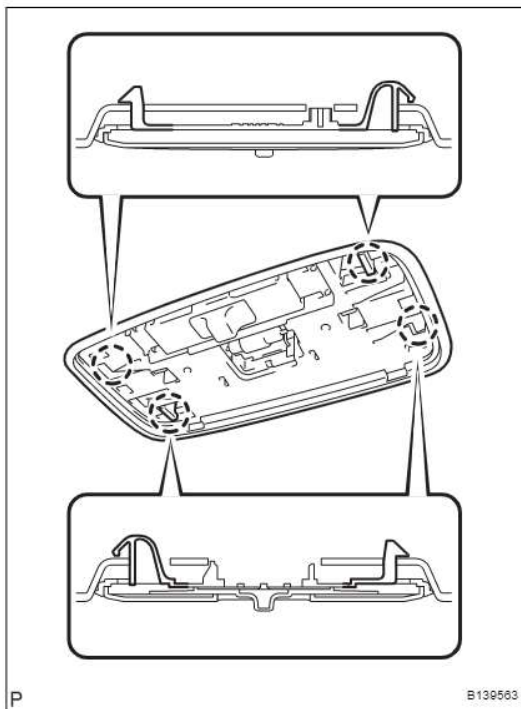


- (b) Engage the 4 claws.

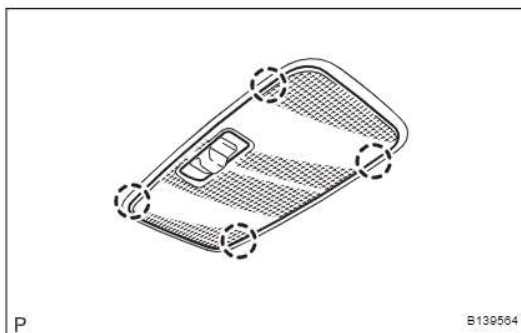

- (c) Engage the 4 claws and install the lens cover.


IR

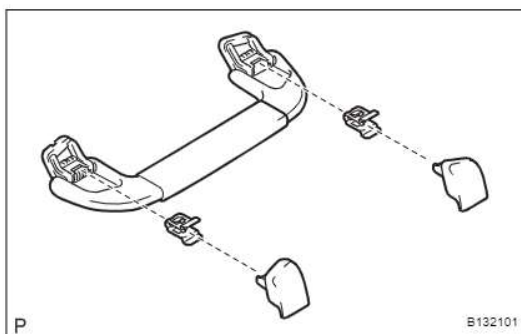**22. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY**

- (a) Assemble the front assist grip sub-assembly as shown in the illustration.

INTERIOR – ROOF HEADLINING

IR-37

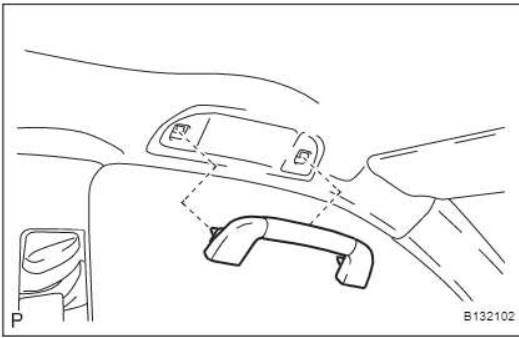

- (b) Install the front assist grip sub-assembly.

HINT:

Use the same procedure for the RH side and the LH side.

23. INSTALL REAR ASSIST GRIP SUB-ASSEMBLY


HINT:

Use the same procedure for the rear side and the front side.

24. INSTALL VISOR HOLDER


- (a) Engage the 2 claws.

- (b) Push in the visor holder as shown in the illustration.

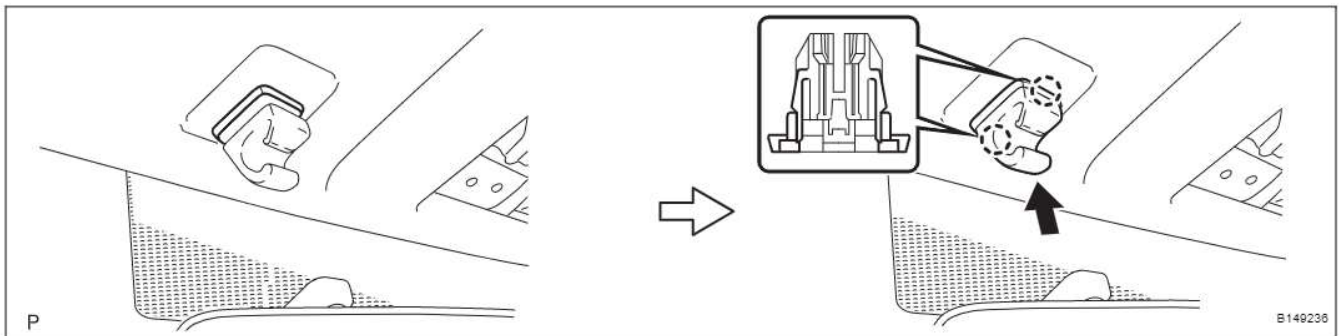

25. INSTALL VISOR ASSEMBLY LH

- (a) Engage the 2 clips and install the visor assembly LH.

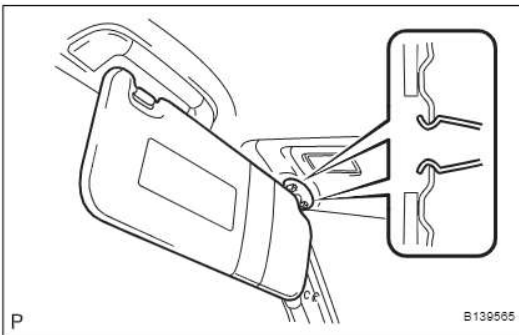


- (b) Engage the 4 claws and install the visor bracket cover.

26. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedure for the RH side and the LH side.

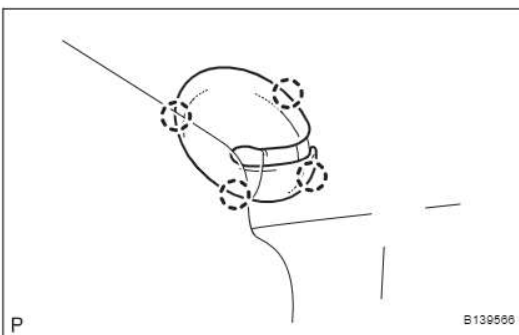


IR

IR-38

INTERIOR – ROOF HEADLINING

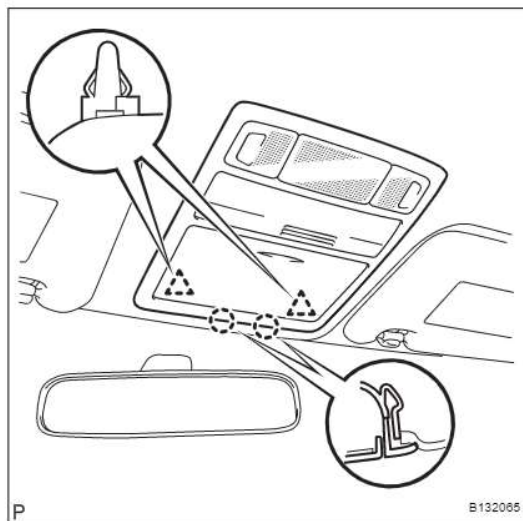
**27. INSTALL ROOF CONSOLE BOX ASSEMBLY**

- (a) Connect the connectors.
- (b) Engage the 2 claws and 2 clips, and then install the roof console box assembly.

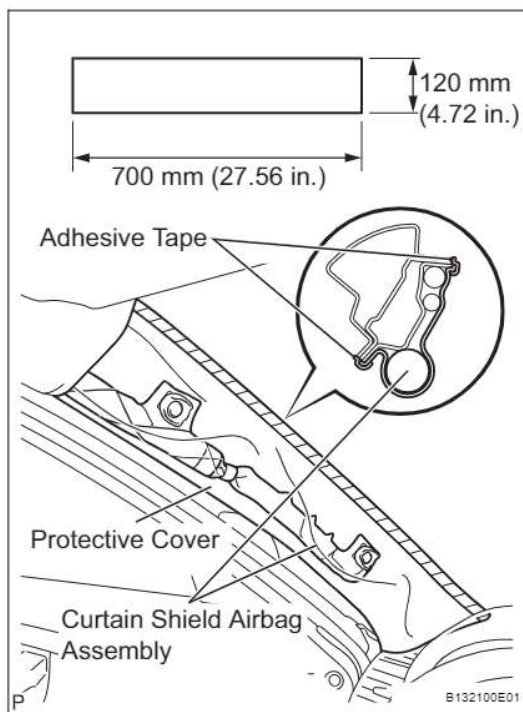**28. INSTALL FRONT PILLAR GARNISH LH**

- (a) Remove the protective cover.

IR

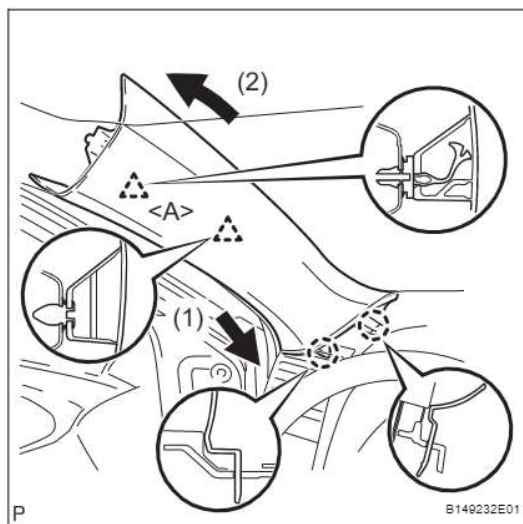


- (b) Install a new clip <A> on the front pillar garnish LH.
- (c) Engage the 2 claws and 2 clips, then install the front pillar garnish LH.

INTERIOR – ROOF HEADLINING


IR-39

29. INSTALL FRONT PILLAR GARNISH RH

(a) Remove the protective cover.

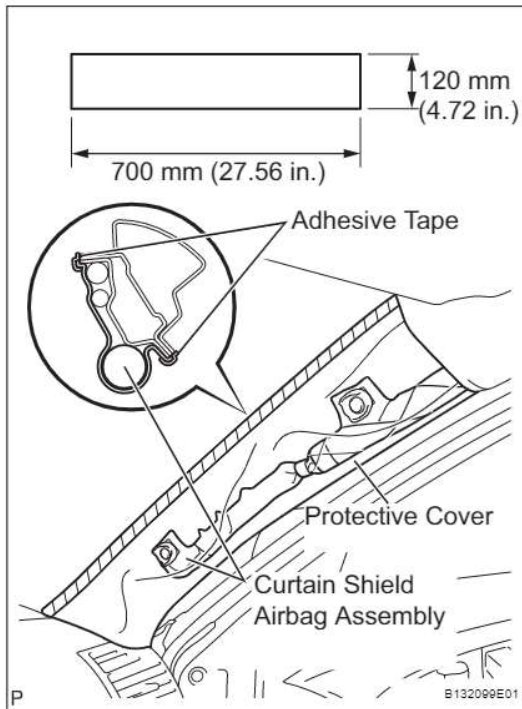

- (b) Install a new clip <A> on the front pillar garnish RH.
 (c) Engage the 2 claws and 2 clips, then install the front pillar garnish RH.

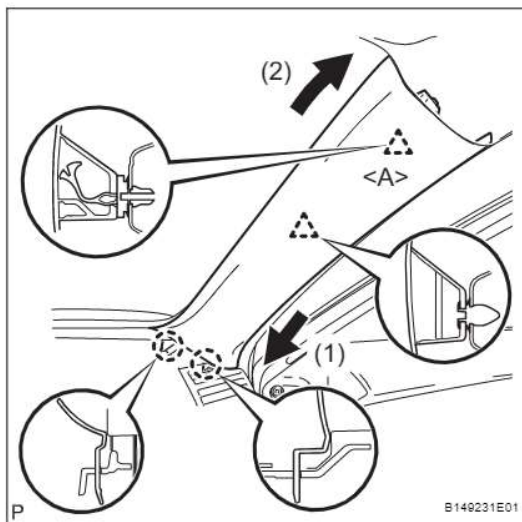
**30. INSTALL ROOF SIDE INNER GARNISH LH**

(a) Engage the 5 clips and 2 claws, then install the roof side inner garnish LH.

31. INSTALL ROOF SIDE INNER GARNISH RH

HINT:


Use the same procedure for the RH side and the LH side.

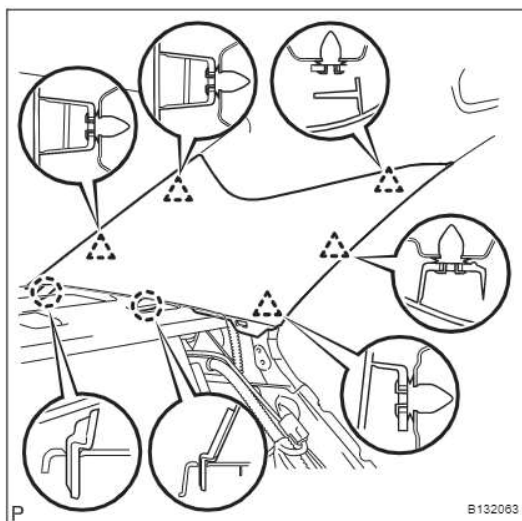


IR

IR-40


INTERIOR – ROOF HEADLINING

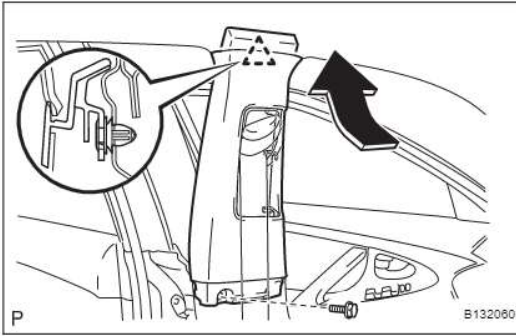**32. INSTALL UPPER CENTER PILLAR GARNISH LH**

- (a) Engage the clip.
- (b) Install the upper center pillar garnish LH with the bolt.

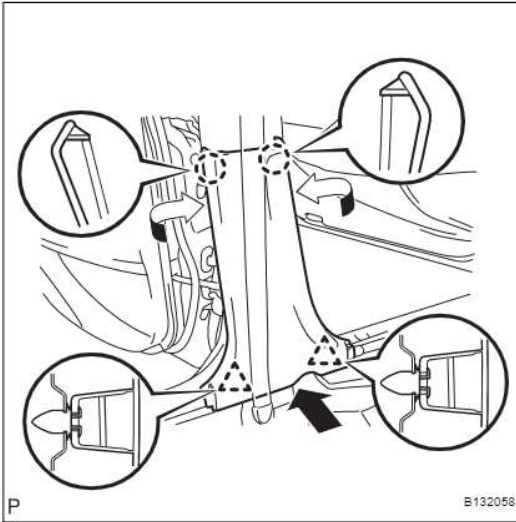**33. INSTALL LOWER CENTER PILLAR GARNISH LH**


- (a) Engage the 2 claws and 2 clips, then install the lower center pillar garnish LH.

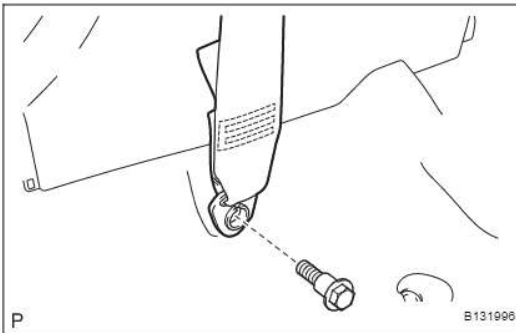**34. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH**

- (a) Install the floor end of the front seat outer belt assembly with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)


IR

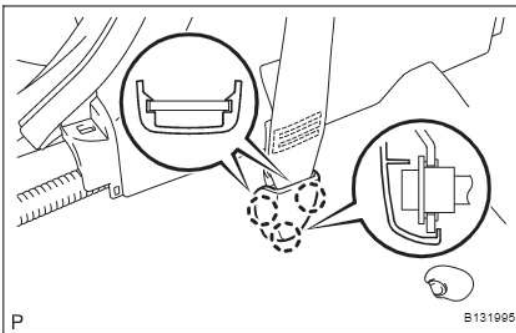**35. INSTALL LAP BELT OUTER ANCHOR COVER (for LH Side)**

- (a) Engage the 3 claws and install the lap belt outer anchor cover.

INTERIOR – ROOF HEADLINING

IR-41

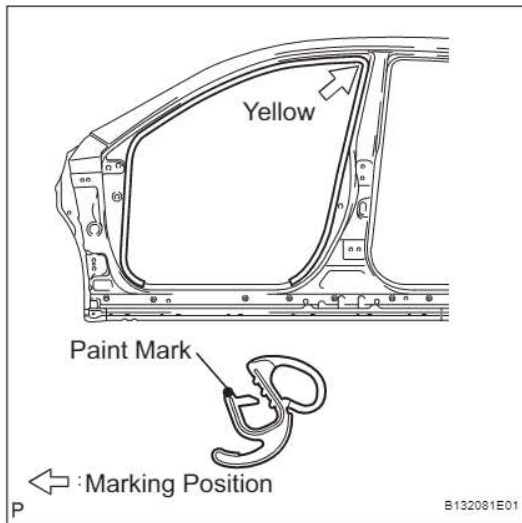


36. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Install the front door opening trim weatherstrip LH as shown in the illustration.


NOTICE:

After installation, check that the corners fit correctly.

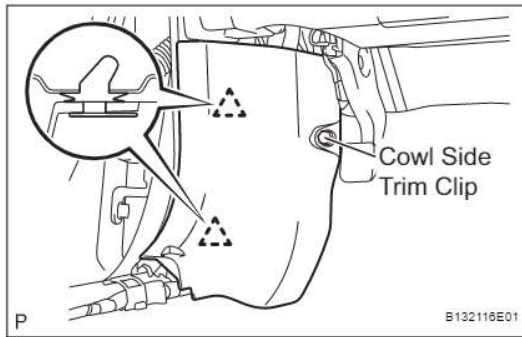

37. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH

- (a) Engage the 2 clips.
(b) Install the cowl side trim sub-assembly LH with the cowl side trim clip.

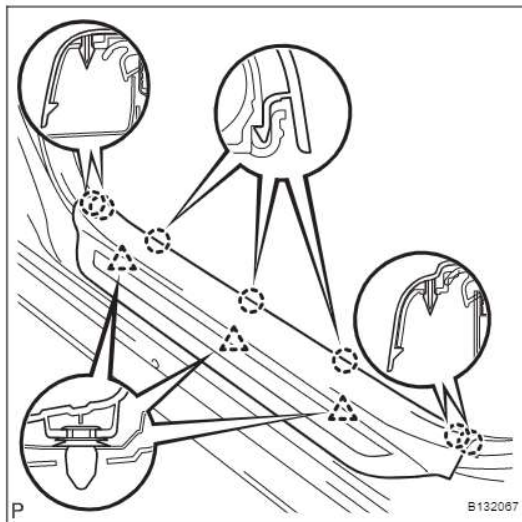

38. INSTALL FRONT DOOR SCUFF PLATE LH

- (a) Engage the 7 claws and 3 clips, then install the front door scuff plate LH.

39. INSTALL UPPER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

40. INSTALL LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

41. CONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

42. INSTALL LAP BELT OUTER ANCHOR COVER (for RH Side)


HINT:

Use the same procedure for the RH side and the LH side.

IR

IR-42

INTERIOR – ROOF HEADLINING

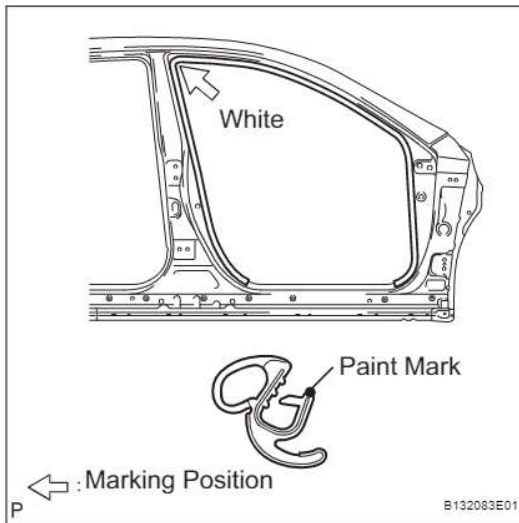

43. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

- (a) Install the front door opening trim weatherstrip RH as shown in the illustration.

NOTICE:

After installation, check that the corners fit correctly.

44. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

45. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure for the RH side and the LH side.

46. INSTALL REAR DOOR INNER GLASS WEATHERSTRIP LH (See page [ED-80](#))

47. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-81](#))

48. INSTALL DOOR ASSIST GRIP COVER LH (See page [ED-82](#))

49. INSTALL REAR DOOR INSIDE HANDLE BEZEL PLUG LH (See page [ED-82](#))

50. INSTALL REAR SIDE SEATBACK ASSEMBLY LH (See page [SE-54](#))

51. INSTALL REAR SIDE SEATBACK ASSEMBLY RH

52. INSTALL SEPARATE TYPE REAR SEATBACK ASSEMBLY LH (See page [SE-54](#))

53. INSTALL SEPARATE TYPE REAR SEATBACK ASSEMBLY RH (See page [SE-54](#))


54. INSTALL REAR SEAT CUSHION ASSEMBLY (See page [SE-55](#))

55. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY

56. INSTALL REAR SEAT HEADREST ASSEMBLY

INTERIOR – ROOF HEADLINING

IR-43

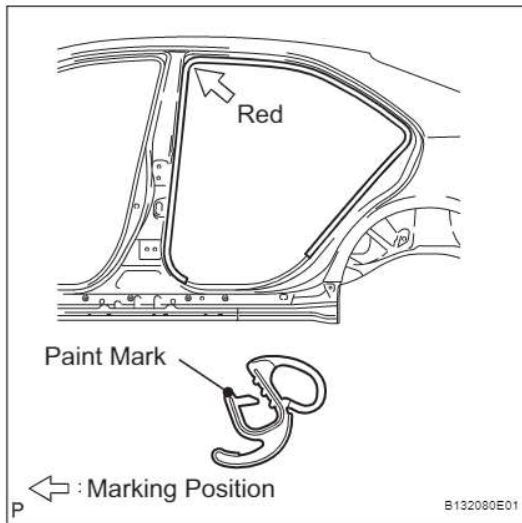


57. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Install the rear door opening trim weatherstrip LH as shown in the illustration.


NOTICE:

After installation, check that the corners fit correctly.

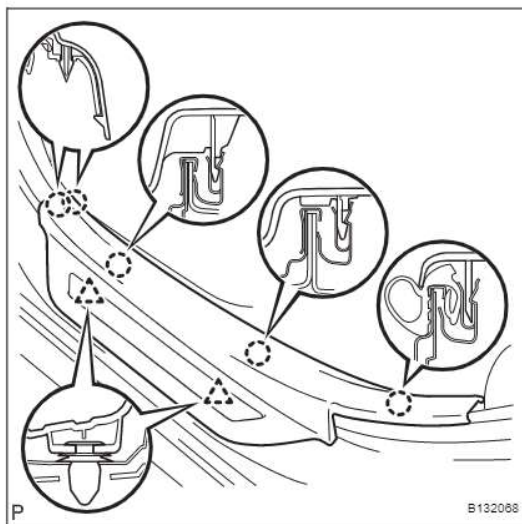

58. INSTALL REAR DOOR SCUFF PLATE LH

- (a) Engage the 5 claws and 2 clips, then install the rear door scuff plate LH.

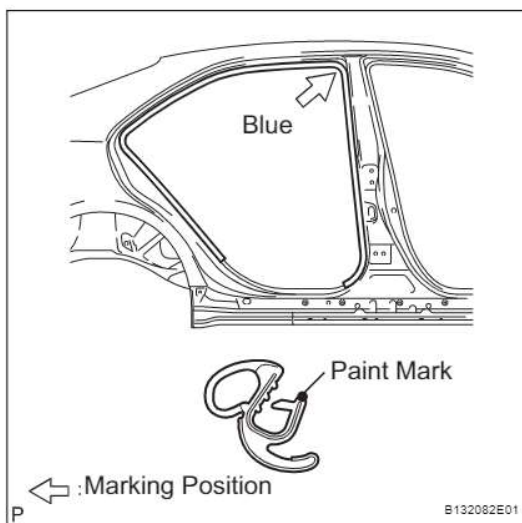

59. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

- (a) Install the rear door opening trim weatherstrip RH as shown in the illustration.

NOTICE:

After installation, check that the corners fit correctly.

60. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure for the RH side and the LH side.

61. INSTALL FRONT SEAT ASSEMBLY LH (for Power Seat) (See page SE-38)

62. INSTALL INNER SEAT TRACK BRACKET COVER LH (for Power Seat) (See page SE-39)

63. INSTALL SEAT TRACK COVER LH (for Power Seat) (See page SE-39)

64. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Power Seat)

IR

IR-44



INTERIOR – ROOF HEADLINING

- 65. INSTALL FRONT SEAT ASSEMBLY RH (for Power Seat)**
HINT:
Use the same procedure for the RH side and the LH side.
- 66. INSTALL INNER SEAT TRACK BRACKET COVER RH (for Power Seat)**
HINT:
Use the same procedure for the RH side and the LH side.
- 67. INSTALL SEAT TRACK COVER RH (for Power Seat)**
HINT:
Use the same procedure for the RH side and the LH side.
- 68. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Power Seat)**
HINT:
Use the same procedure for the RH side and the LH side.
- 69. INSTALL FRONT SEAT ASSEMBLY RH (for Manual Seat) (See page [SE-23](#))**
- 70. INSTALL INNER SEAT TRACK BRACKET COVER RH (for Manual Seat) (See page [SE-24](#))**
- 71. INSTALL SEAT TRACK COVER RH (for Manual Seat) (See page [SE-24](#))**
- 72. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Manual Seat)**
- 73. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (for Manual Seat)**
- 74. PERFORM INITIALIZATION**
NOTICE:
Some systems need initialization after reconnecting the cable to the negative battery terminal (See page [IN-43](#))
- 75. PERFORM ZERO POINT CALIBRATION AND SENSITIVITY CHECK (for Front Passenger Seat) (See page [RS-239](#))**
- 76. INSPECT SRS WARNING LIGHT (See page [RS-33](#))**
- 77. INSPECT FRONT SEAT ASSEMBLY (for Power Seat) (See page [SE-39](#))**
- 78. INSPECT SLIDE ADJUSTER LOCK (for Manual Seat)**

ROOF HEADLINING

COMPONENTS

for Power Seat:

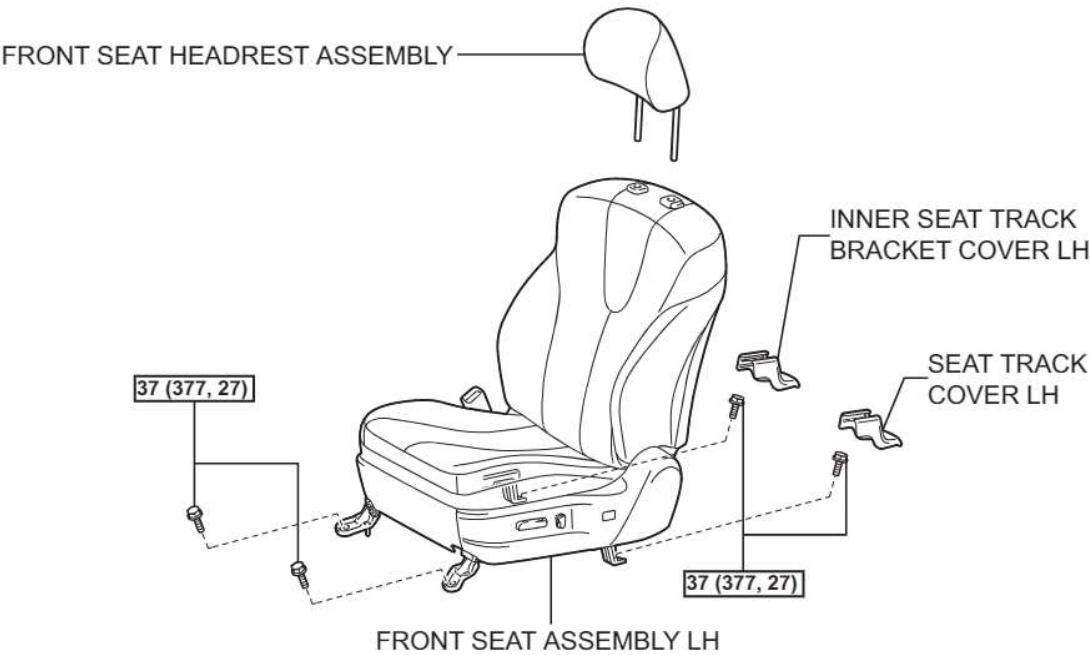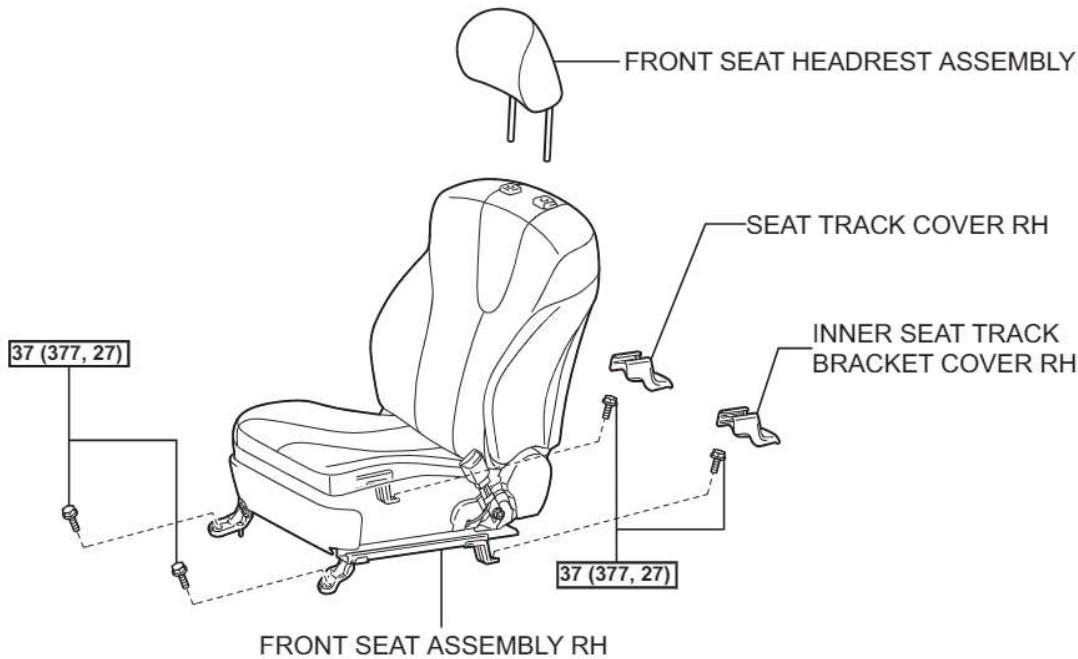


N*m (kgf*cm, ft.*lbf) : Specified torque

IR

IR-2

INTERIOR – ROOF HEADLINING

for Manual Seat:

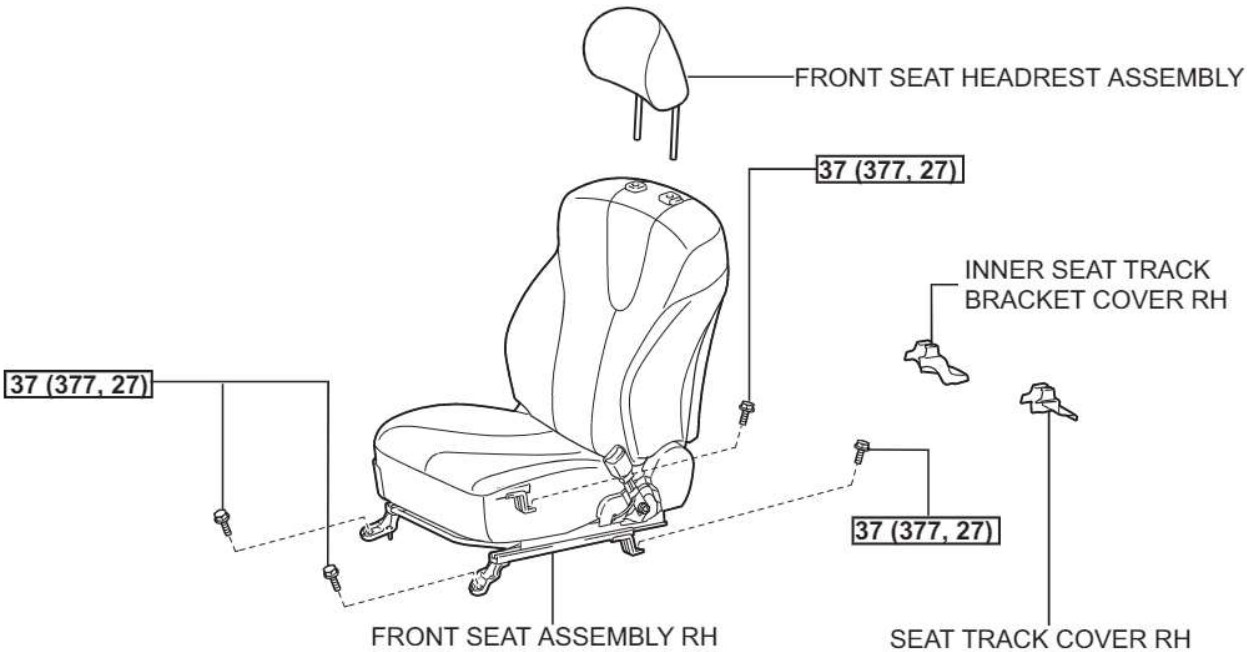


N*m (kgf*cm, ft.*lbf) : Specified torque

IR

P

B146208E01


INTERIOR – ROOF HEADLINING

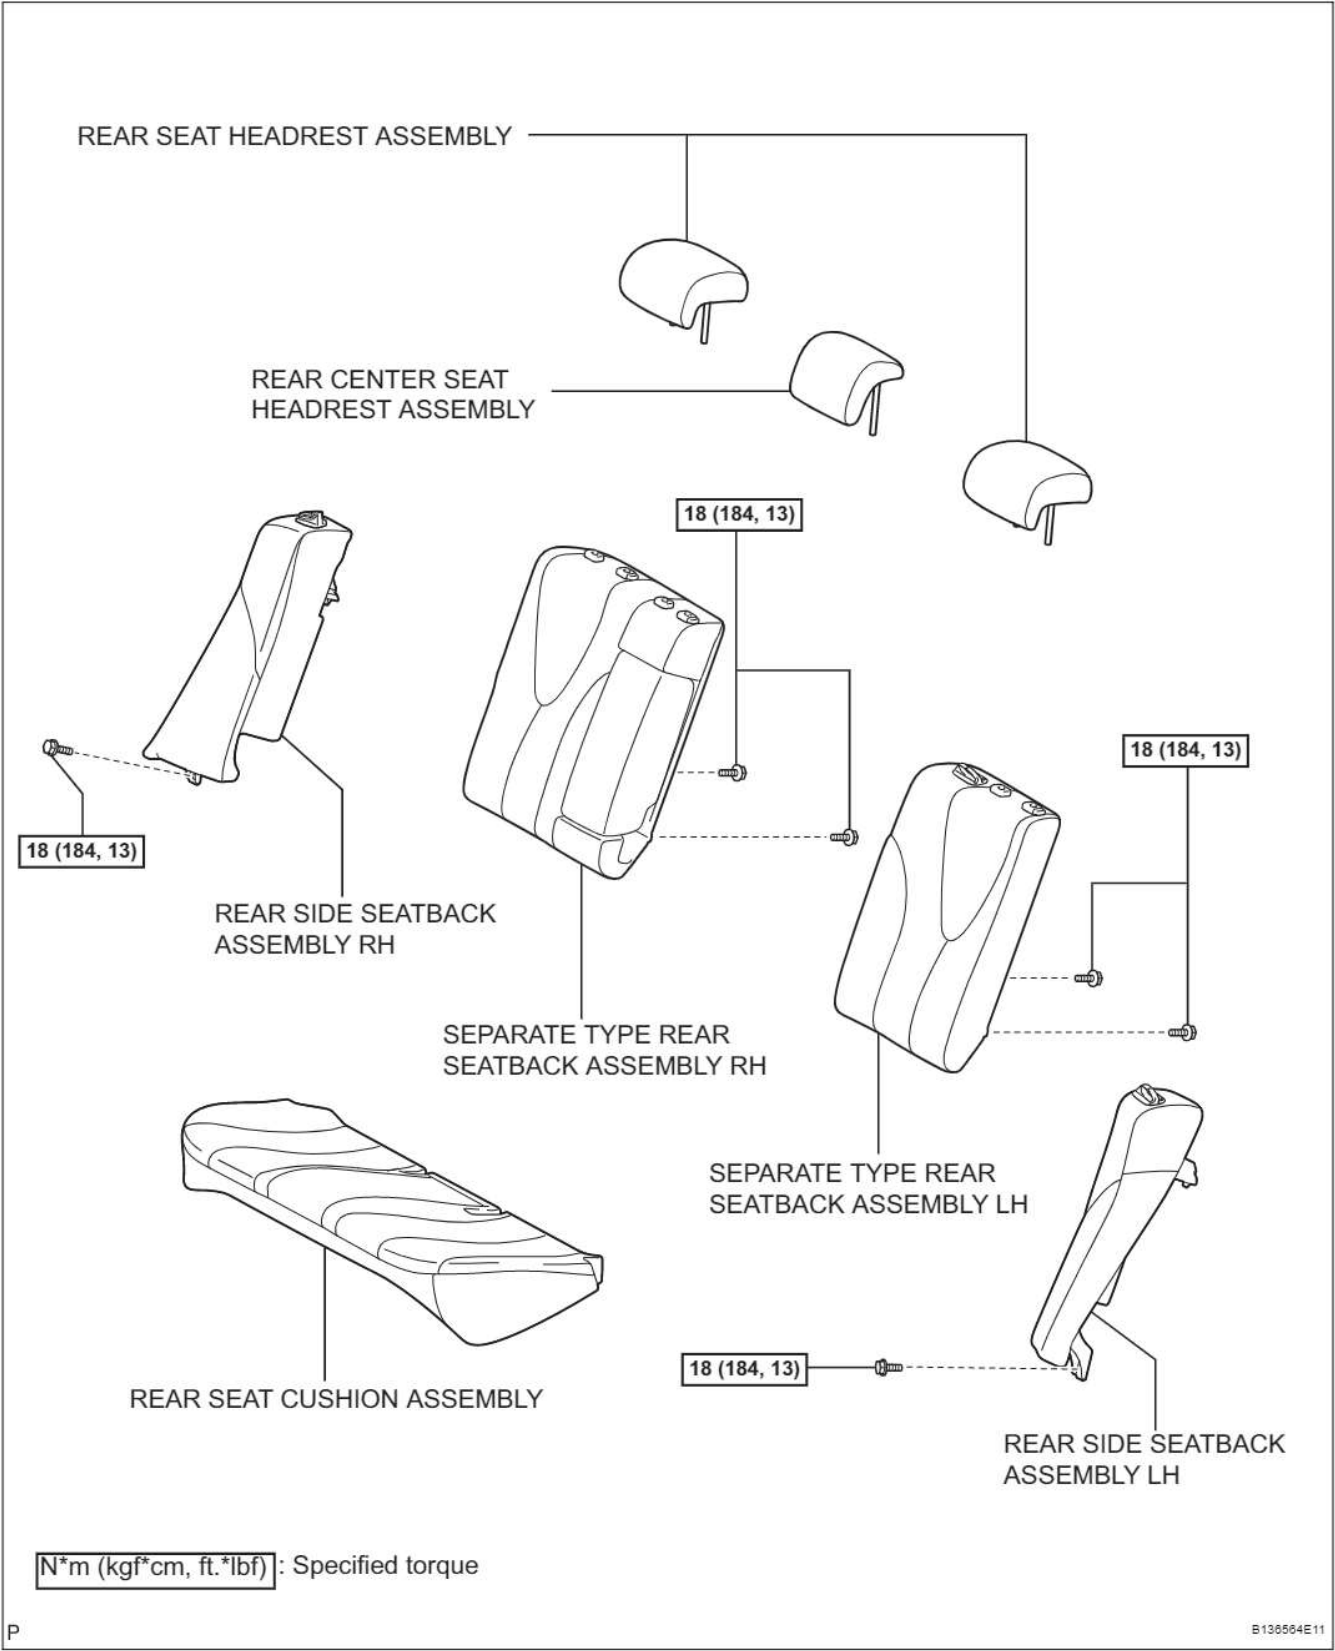


IR

IR-4

INTERIOR – ROOF HEADLINING

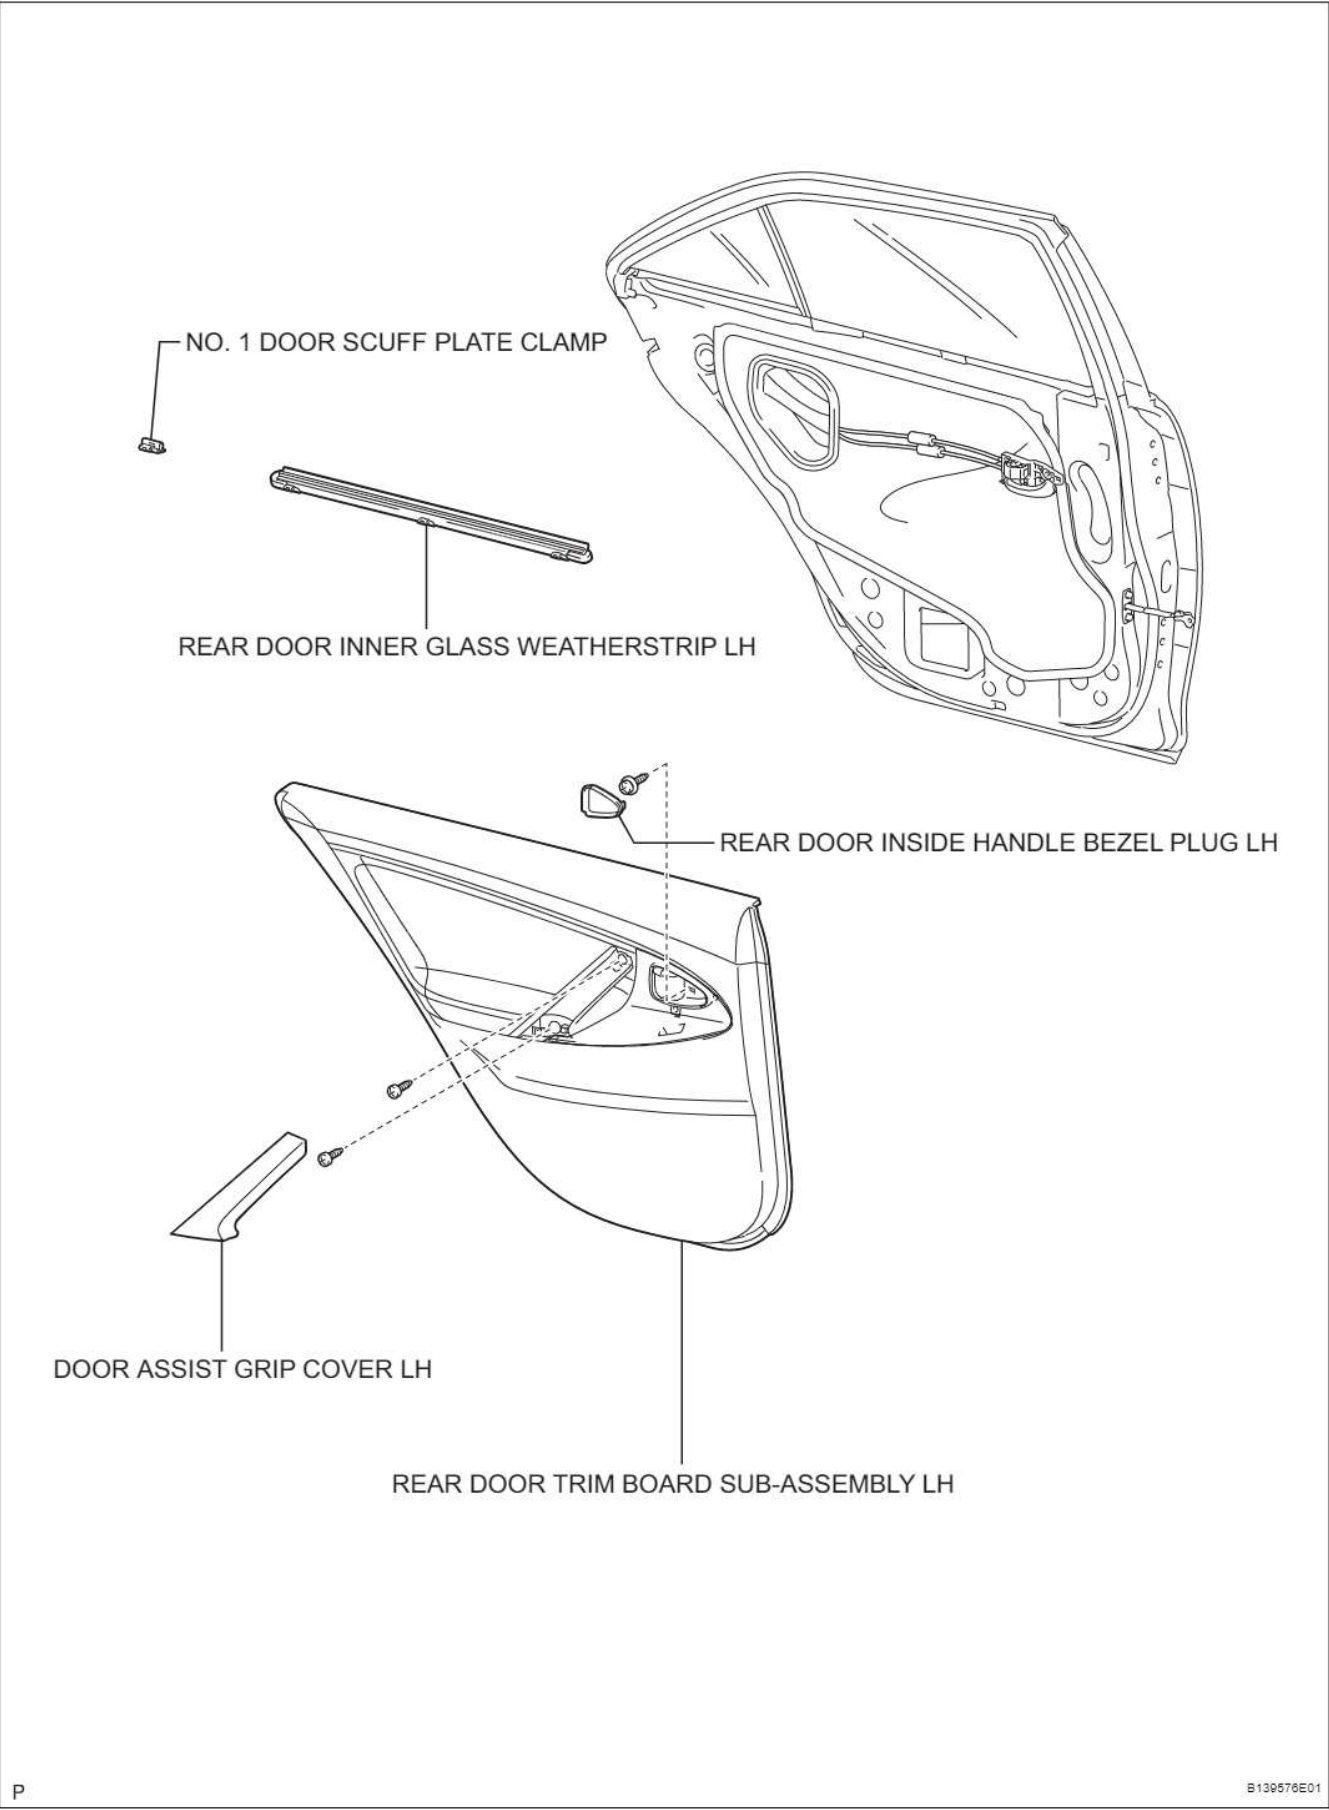

INTERIOR – ROOF HEADLINING

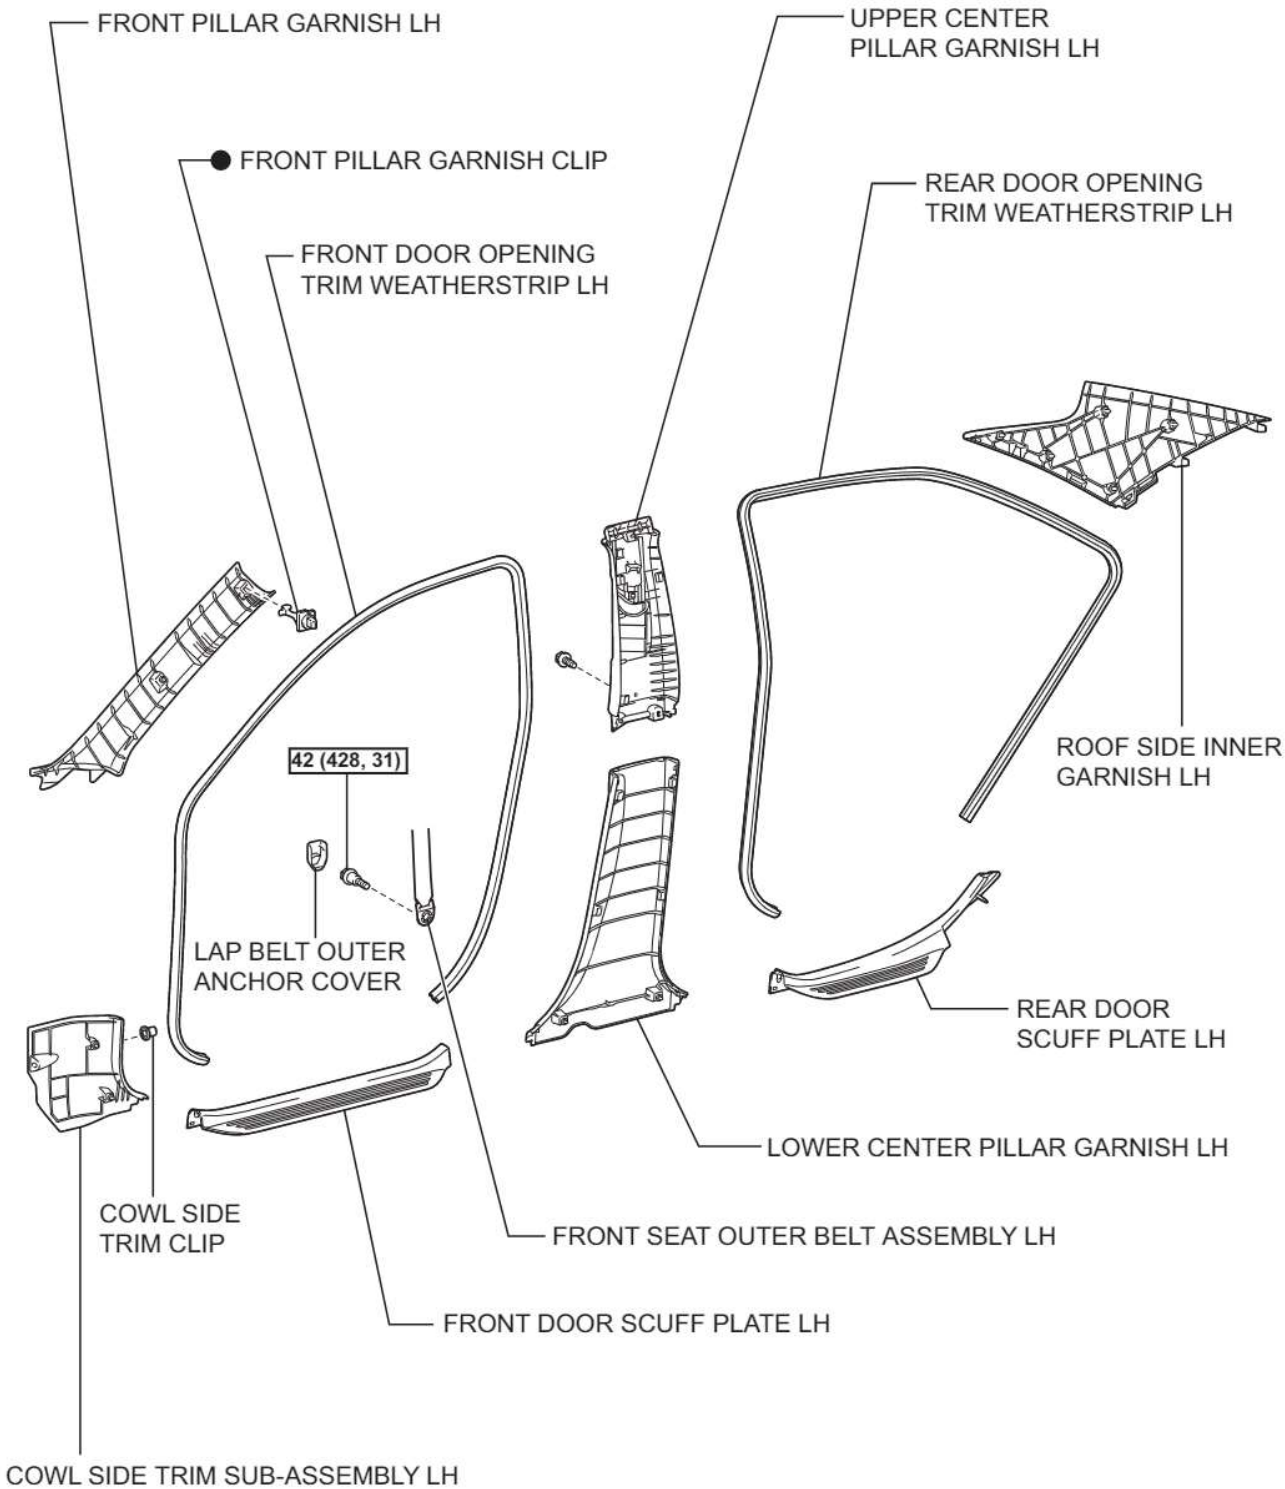


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

IR


IR-6

INTERIOR – ROOF HEADLINING

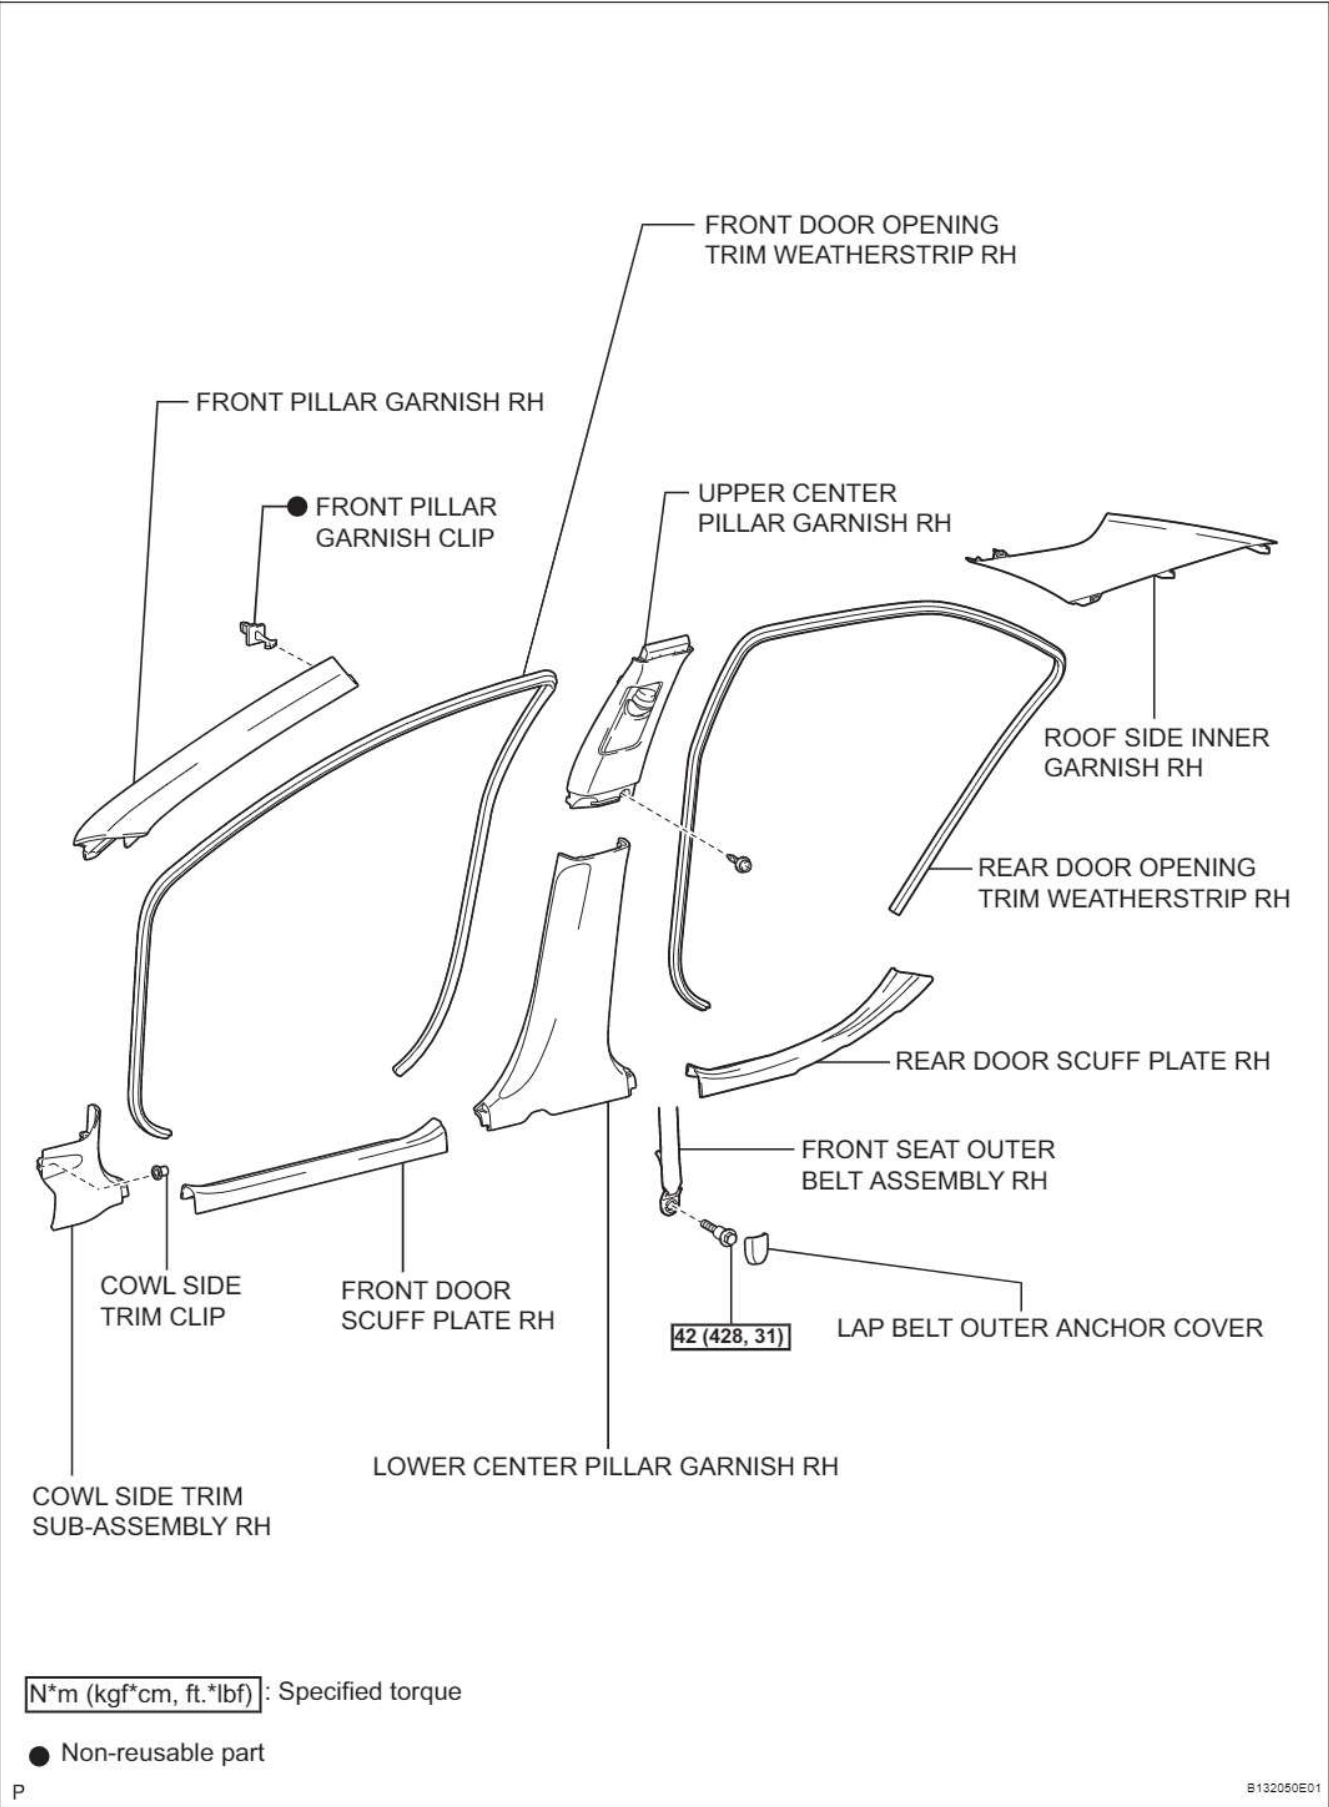

INTERIOR – ROOF HEADLINING


without Sliding Roof:

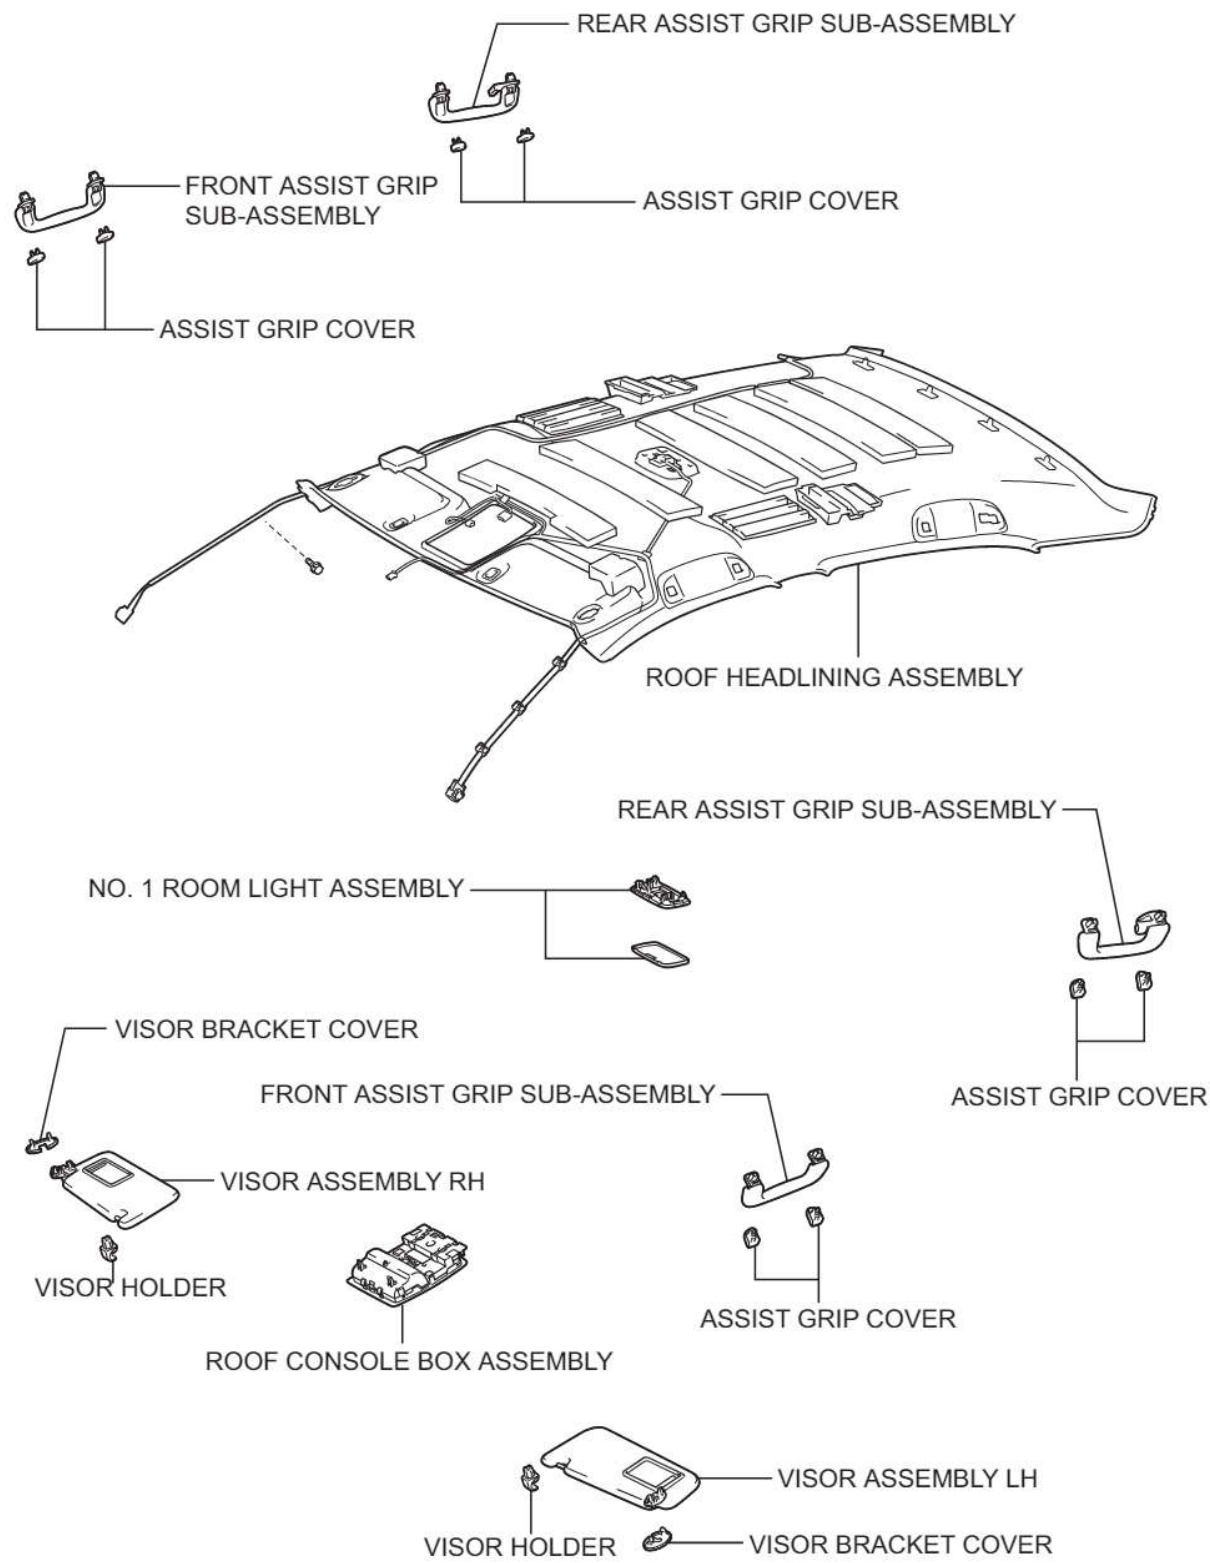

IR

IR-8


INTERIOR – ROOF HEADLINING

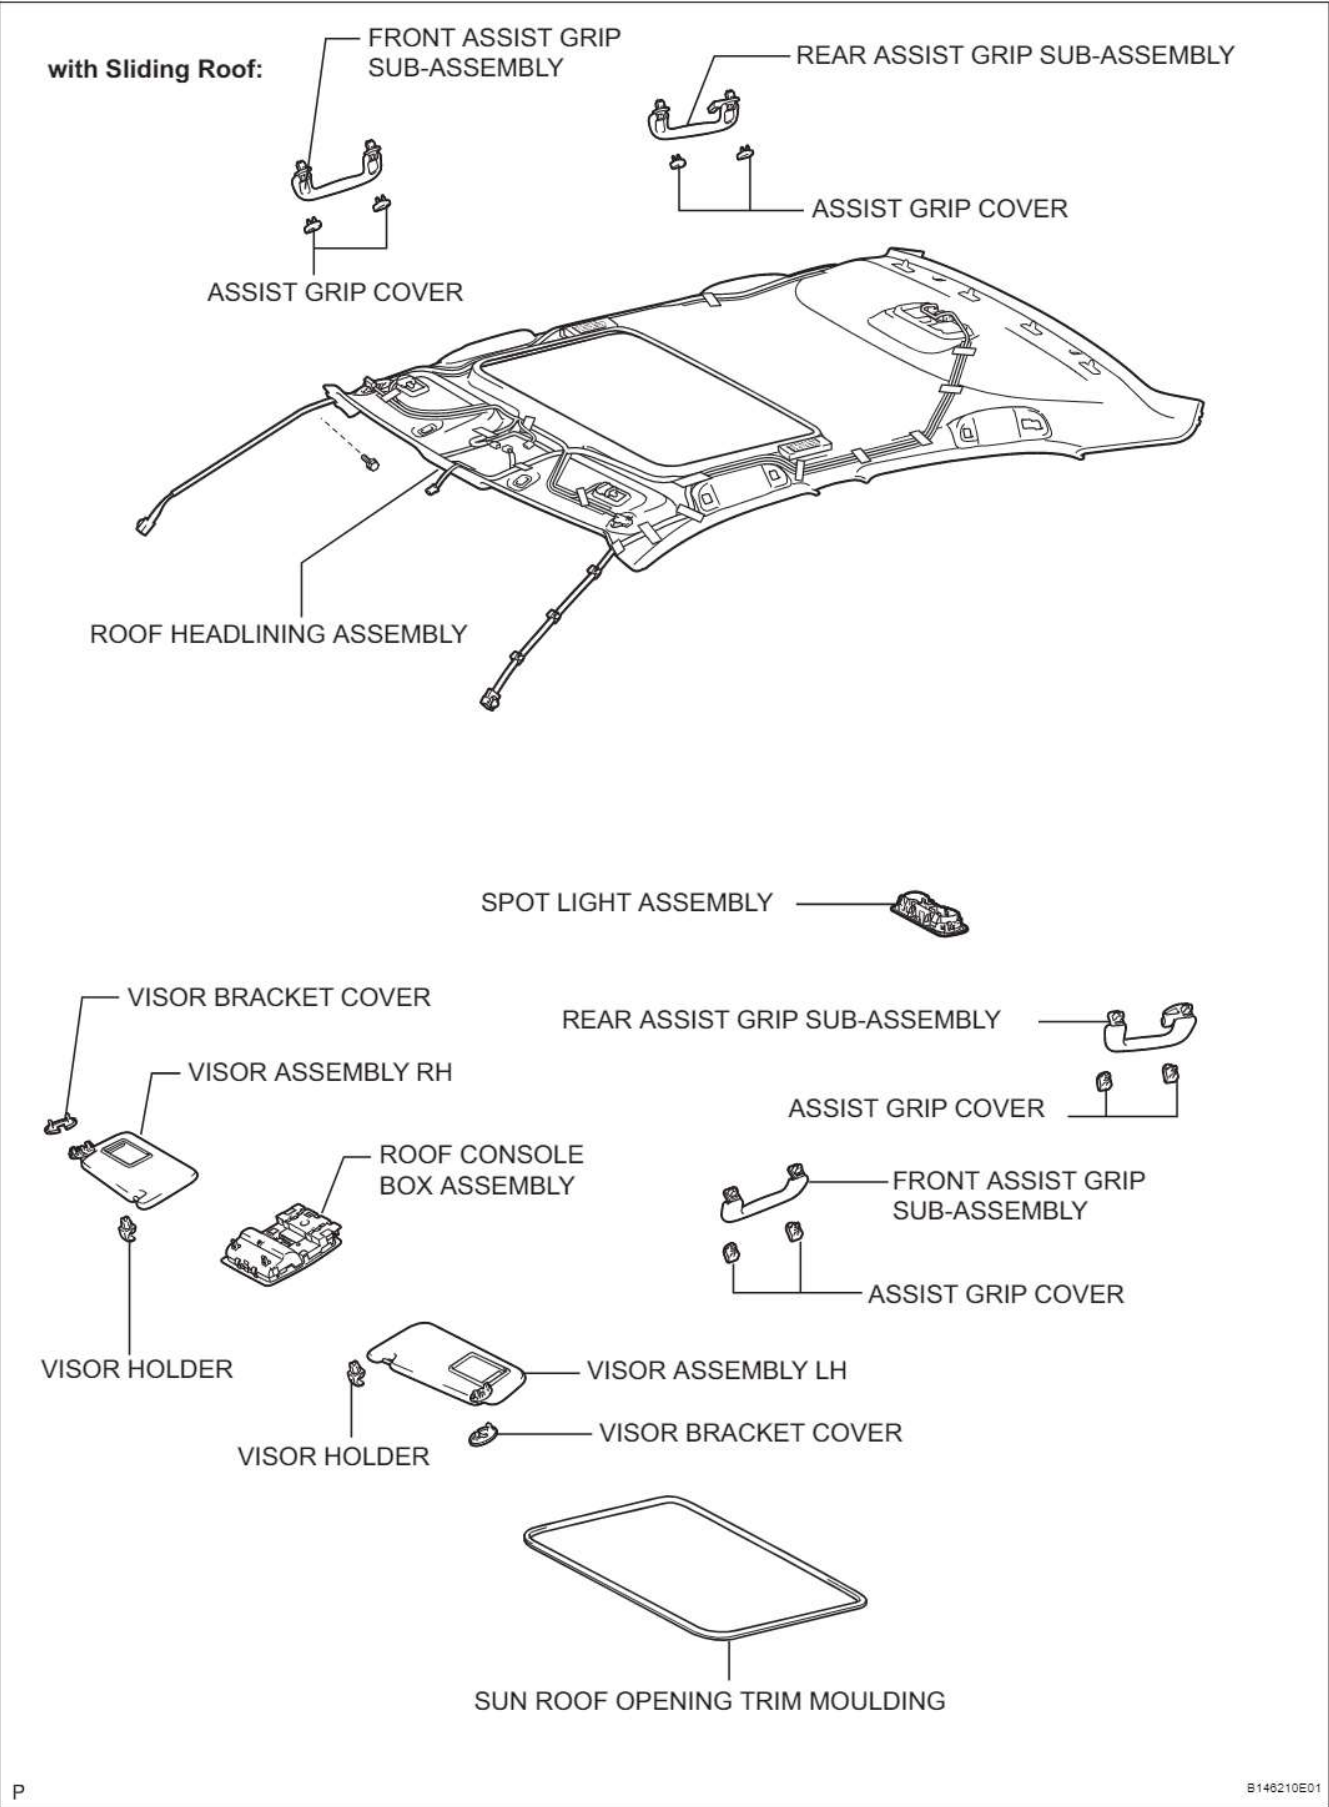

INTERIOR – ROOF HEADLINING

IR-9

without Sliding Roof:

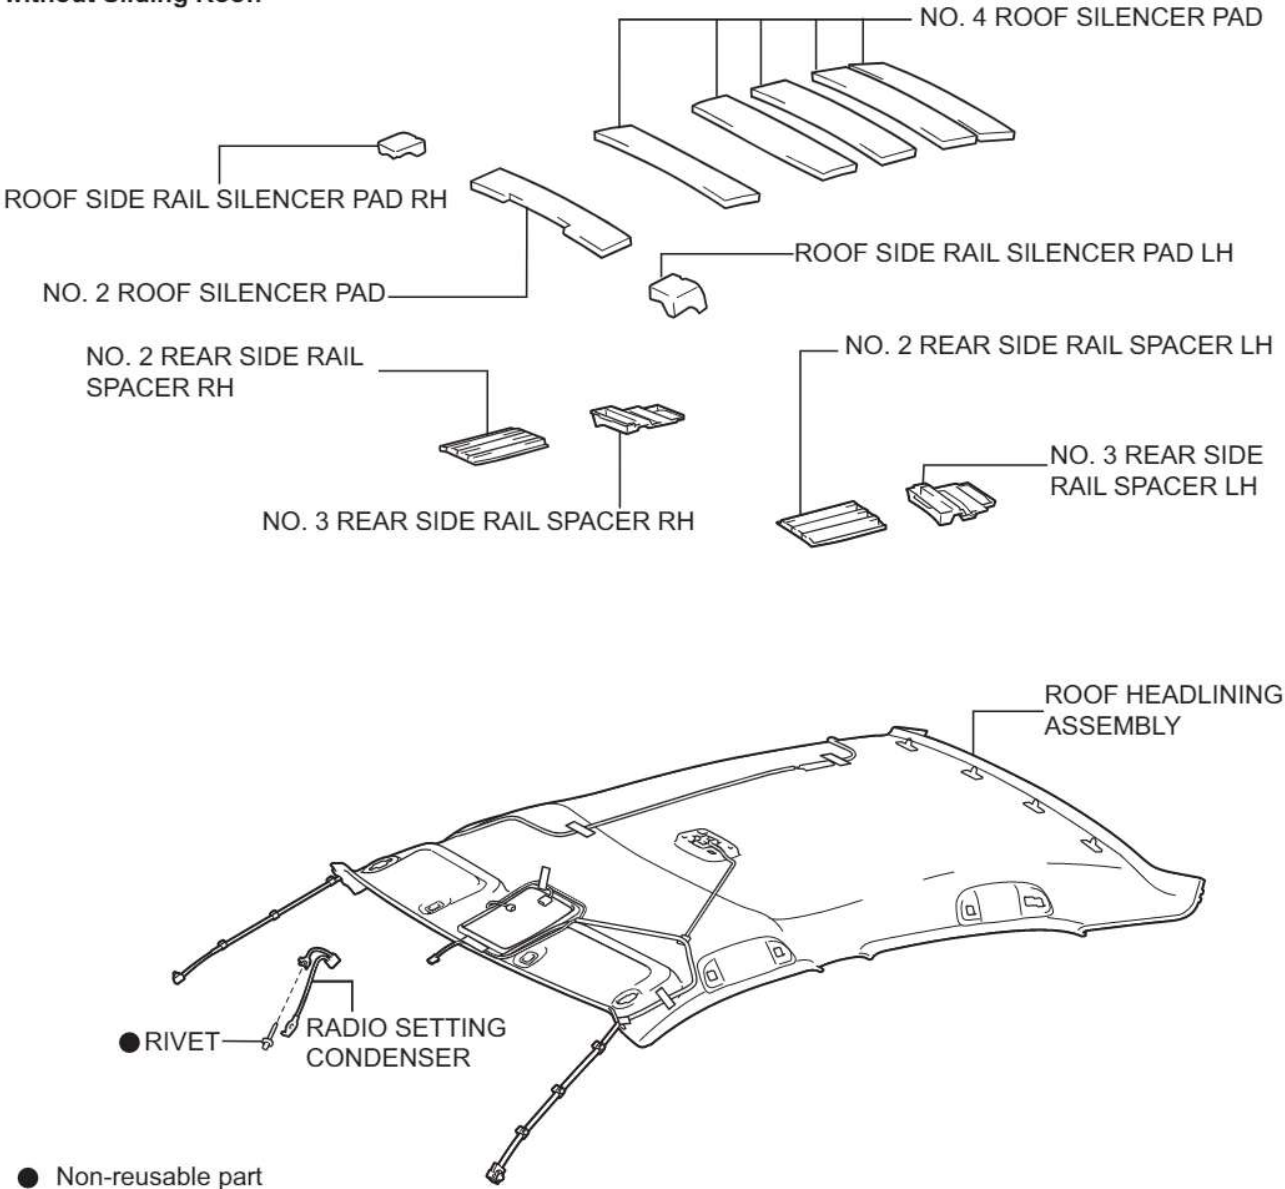

P


B148212E01

IR

IR-10

INTERIOR – ROOF HEADLINING

with Sliding Roof:

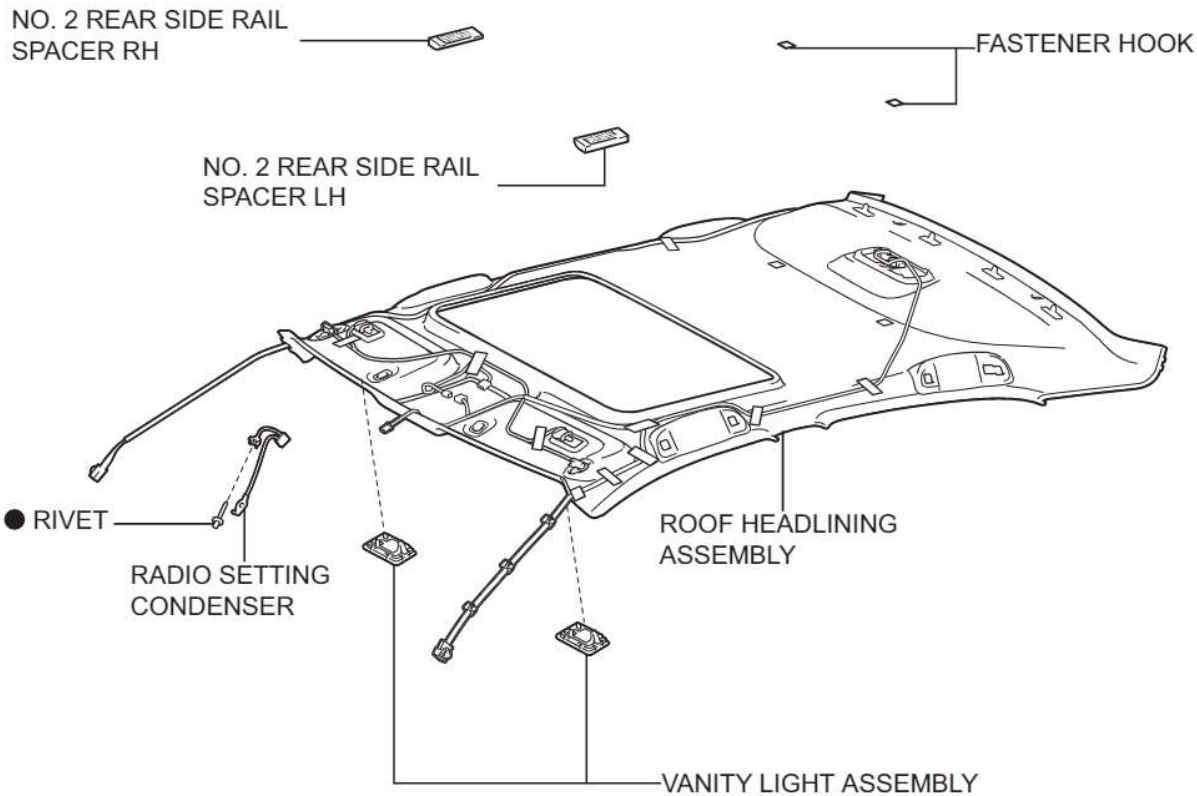

● Non-reusable part

IR


P

B146213E01


INTERIOR – ROOF HEADLINING

IR-11

without Sliding Roof:

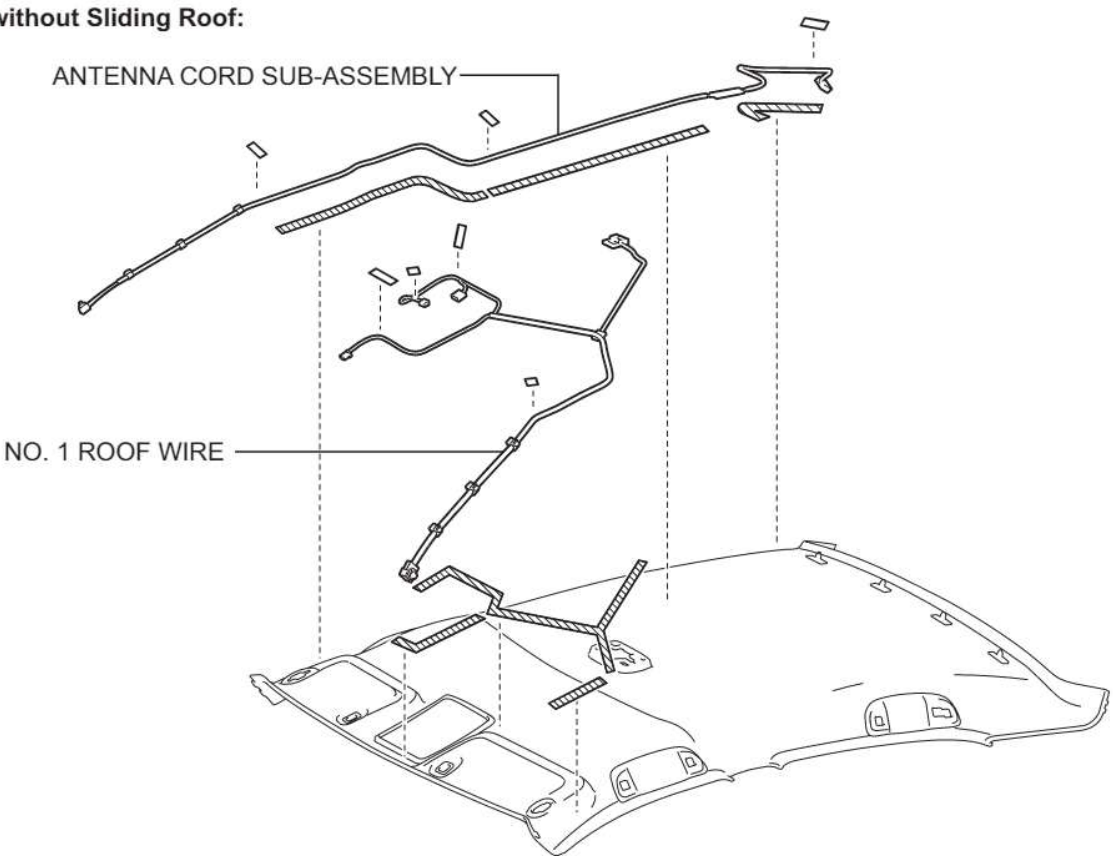

with Sliding Roof:

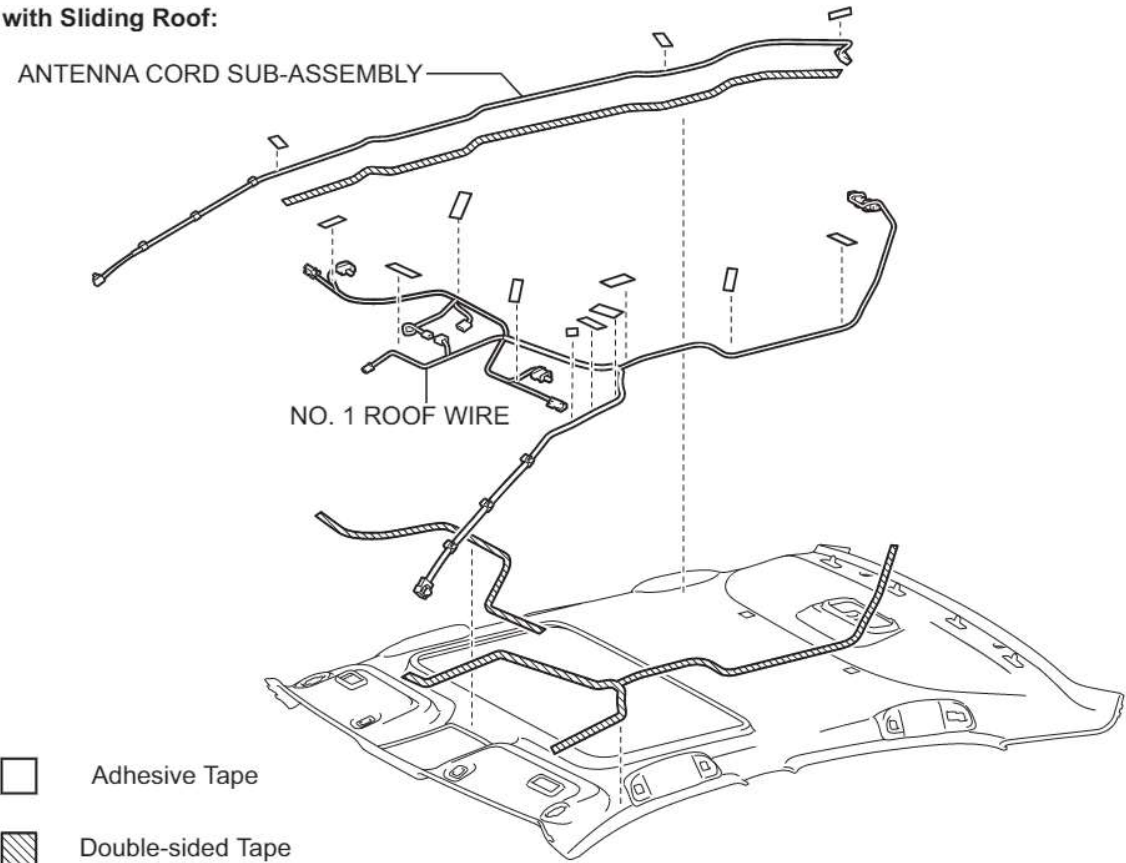

- Adhesive Tape
- ▨ Double-sided Tape

IR

P

B141015E01