



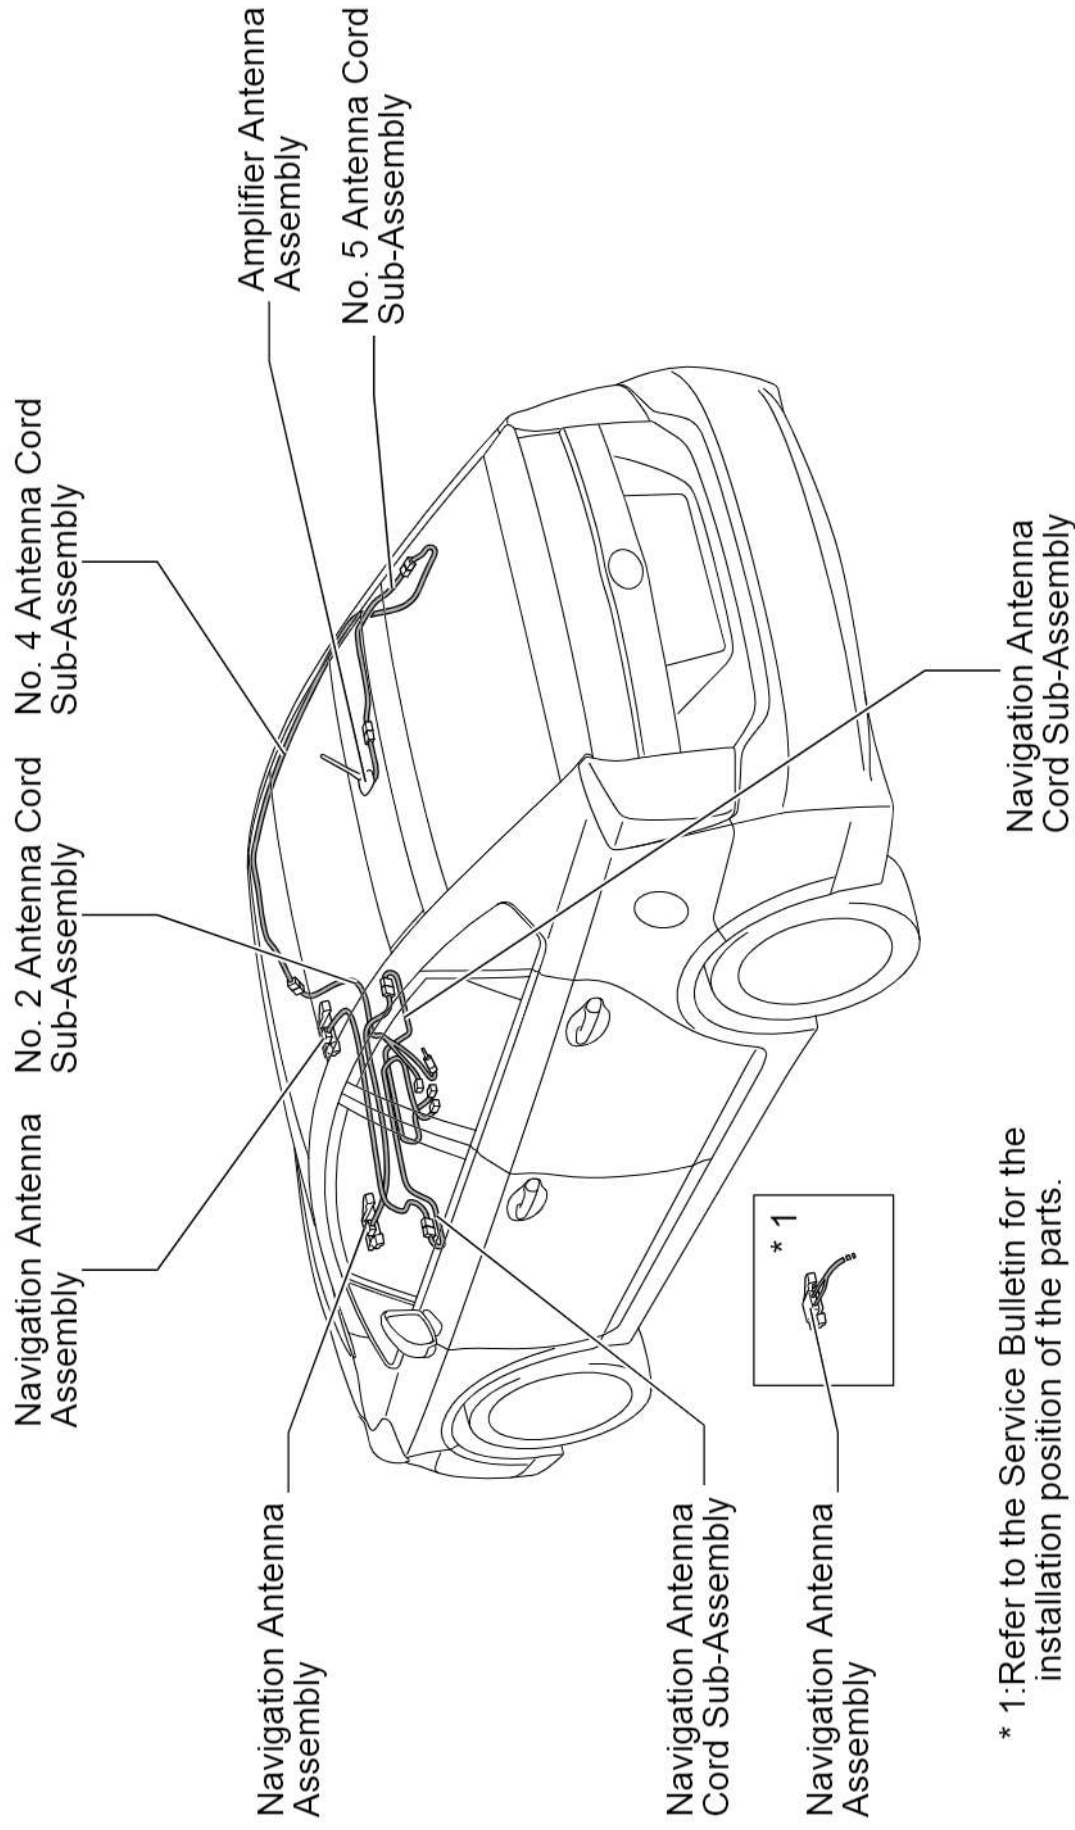


* 1: Refer to the Service Bulletin for the installation position of the parts.

Ground Points in Body <LHD>

















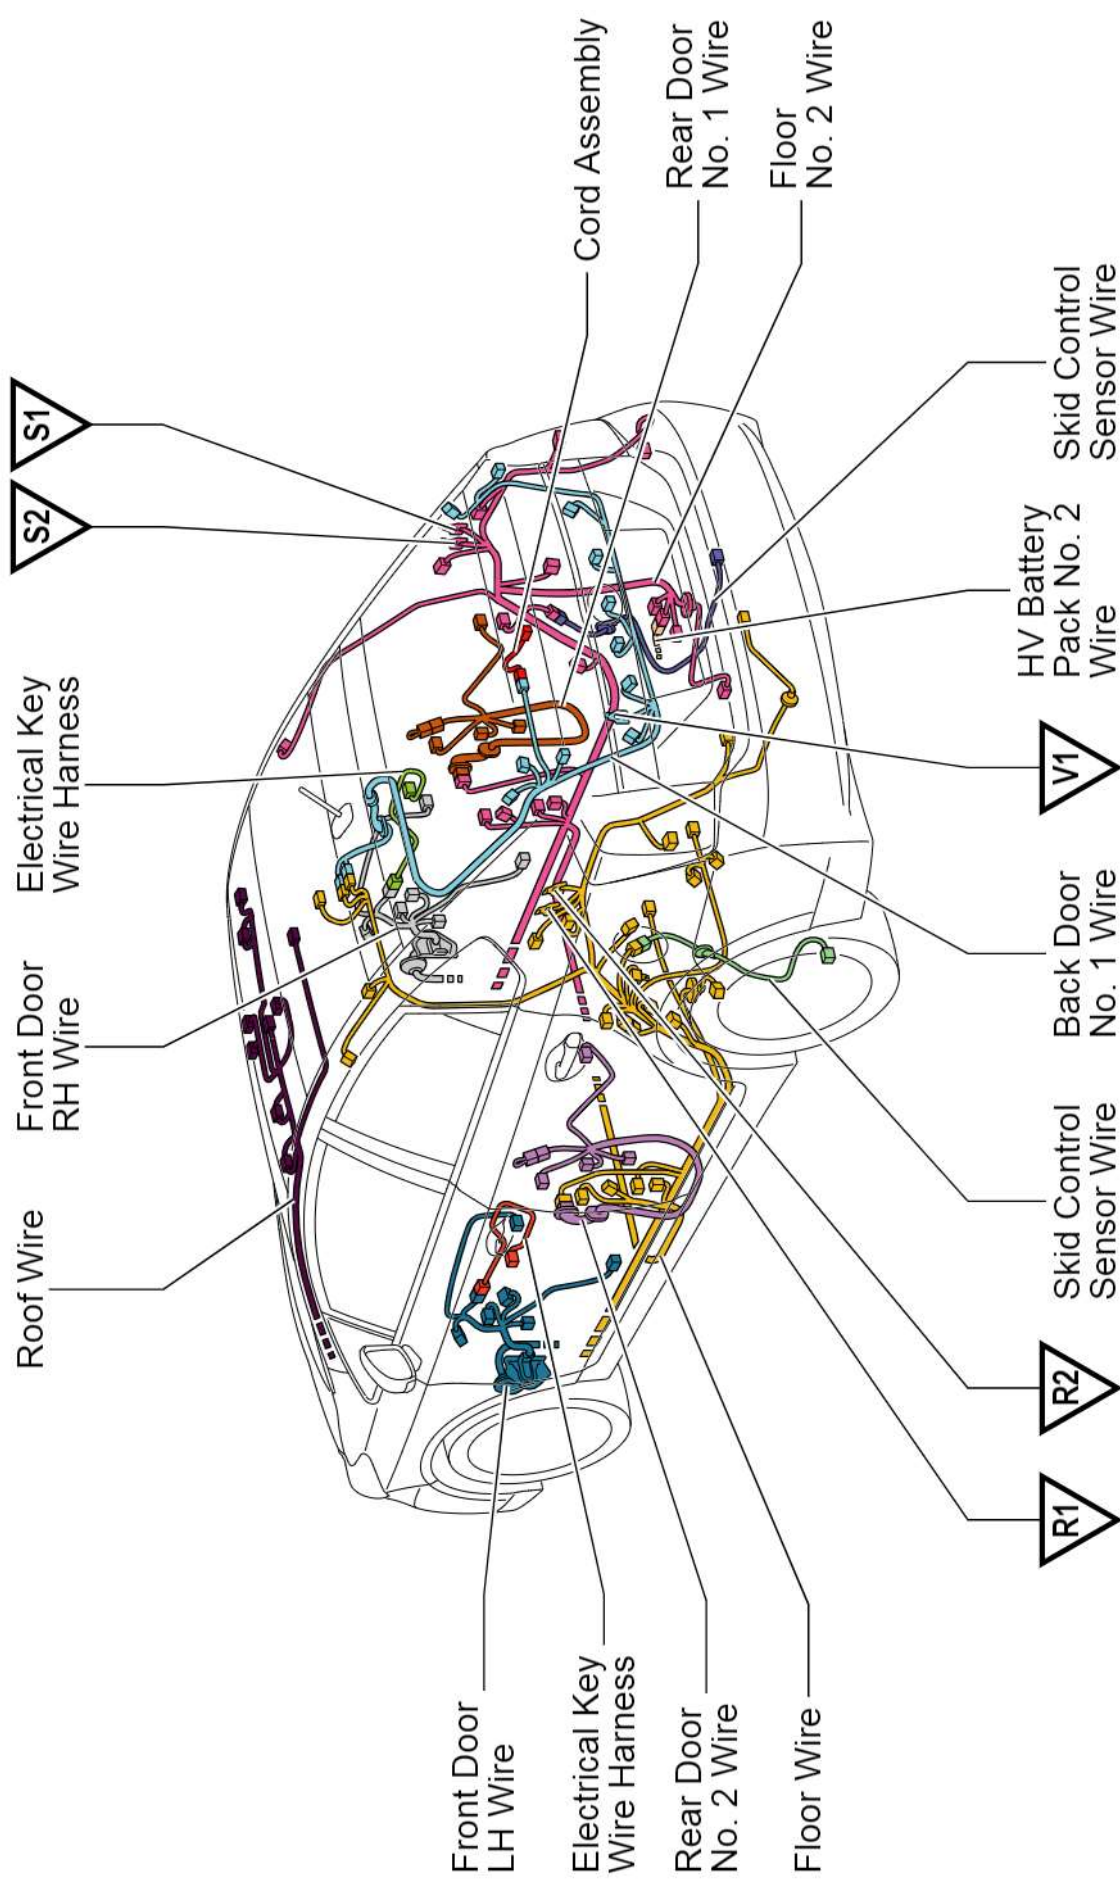






Position of Parts in Body <LHD>

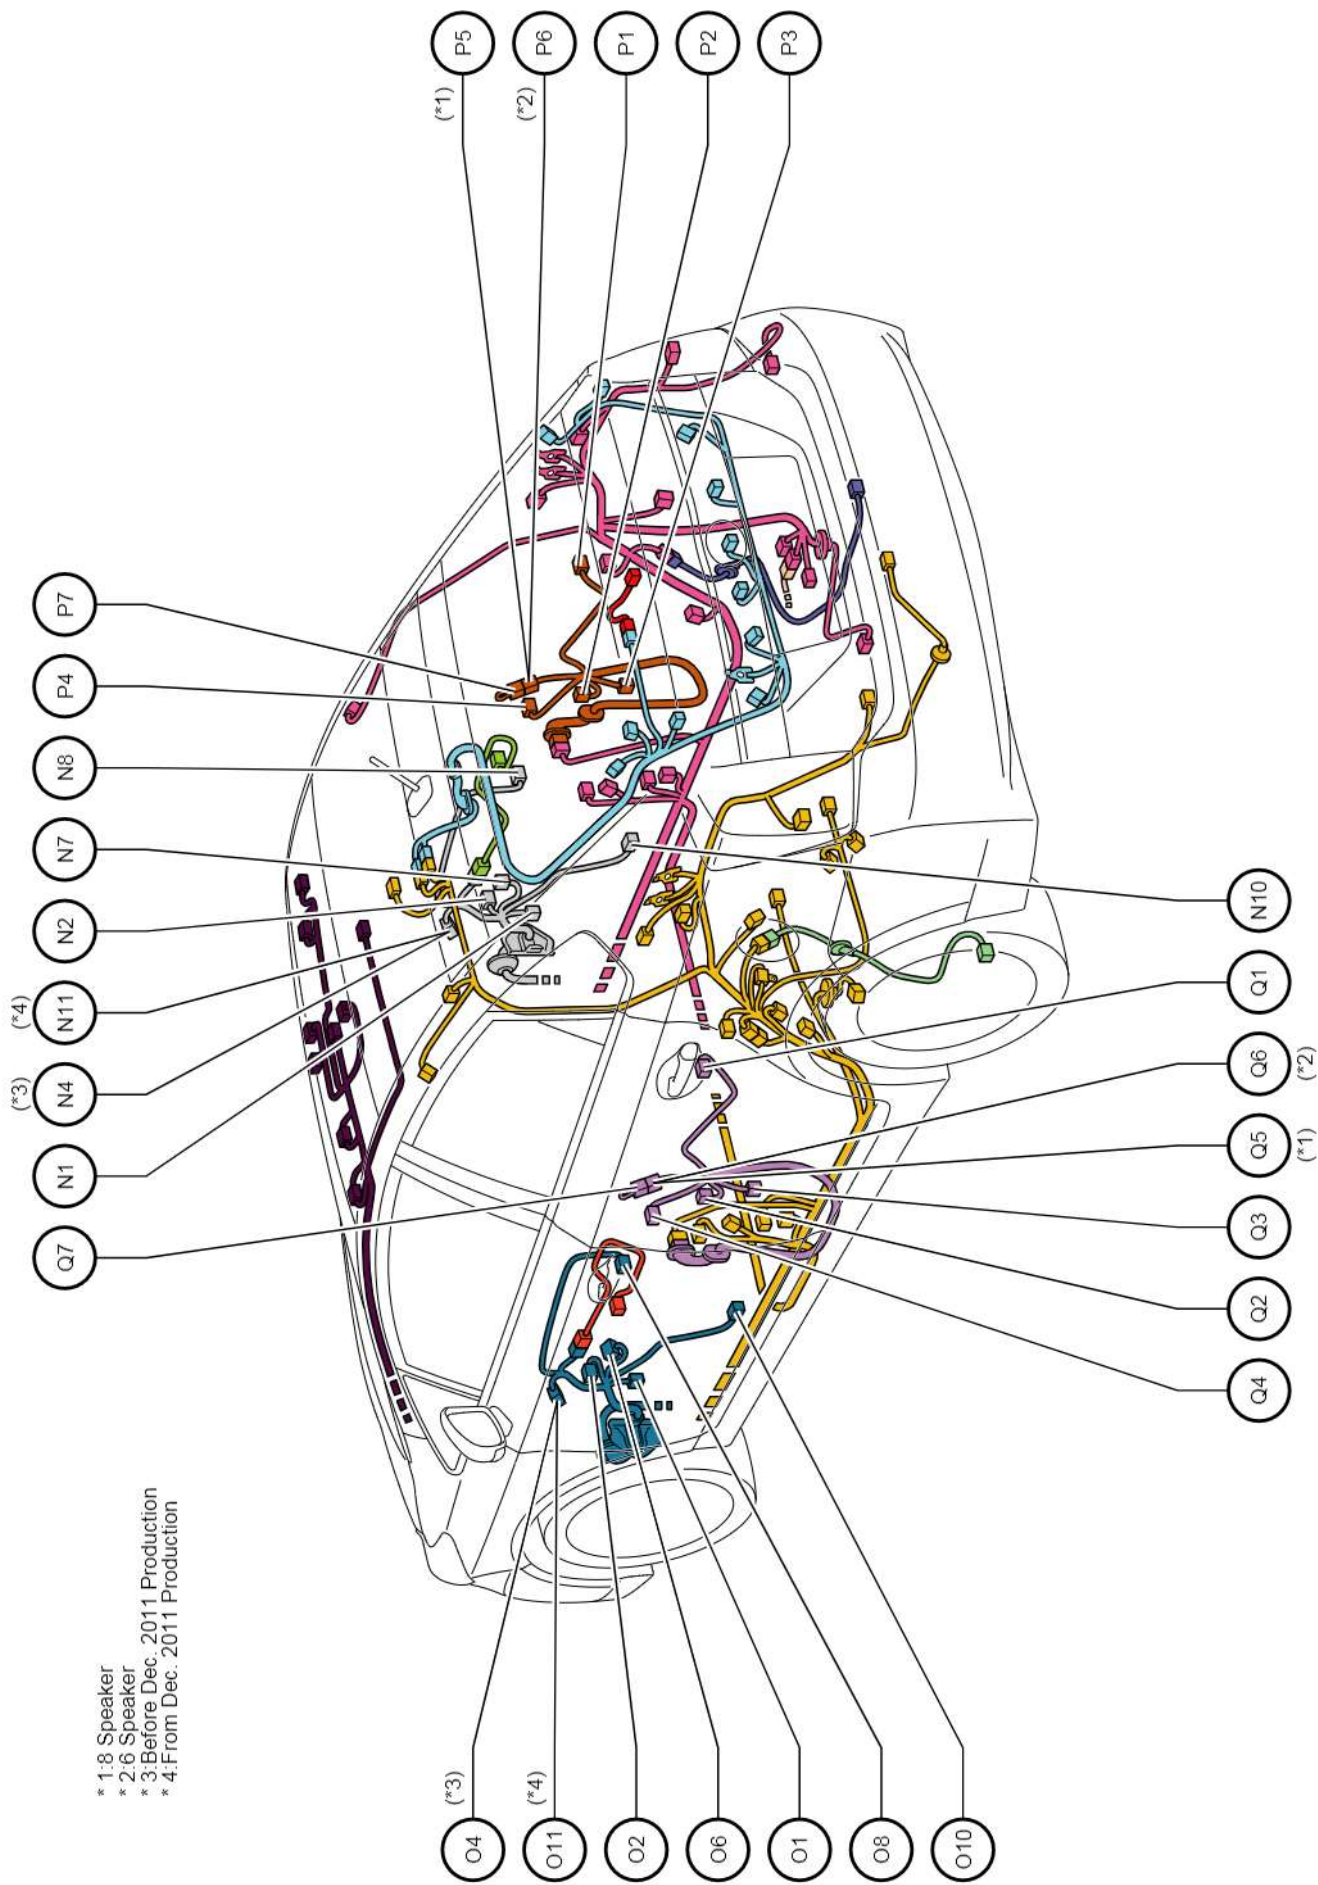


N	1	Front No. 1 Speaker Assembly RH
N	2	Front Power Window Regulator Motor Assembly RH
N	4	Outer Rear View Mirror Assembly RH
N	7	Front Power Window Regulator Switch Assembly RH
N	8	Front Door Lock Assembly RH
N	10	Front Door Courtesy Light Assembly RH
N	11	Outer Rear View Mirror Assembly RH
O	1	Front No. 1 Speaker Assembly LH
O	2	Front Power Window Regulator Motor Assembly LH
O	4	Outer Rear View Mirror Assembly LH
O	6	Multiplex Network Master Switch Assembly LH
O	8	Front Door Lock Assembly LH
O	10	Front Door Courtesy Light Assembly LH
O	11	Outer Rear View Mirror Assembly LH
P	1	Rear Door with Motor Lock Assembly RH
P	2	Rear Power Window Regulator Switch Assembly RH
P	3	Rear Speaker Assembly RH
P	4	Rear Power Window Regulator Motor Assembly RH
P	5	Rear No. 2 Speaker Assembly RH
P	6	Short Connector
P	7	Short Connector
Q	1	Rear Door with Motor Lock Assembly LH
Q	2	Rear Power Window Regulator Switch Assembly LH
Q	3	Rear Speaker Assembly LH
Q	4	Rear Power Window Regulator Motor Assembly LH
Q	5	Rear No. 2 Speaker Assembly LH
Q	6	Short Connector
Q	7	Short Connector

       Position of Parts in Body <LHD>

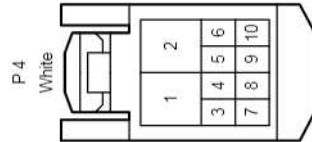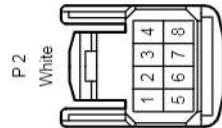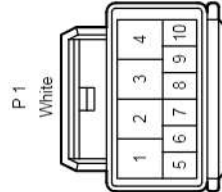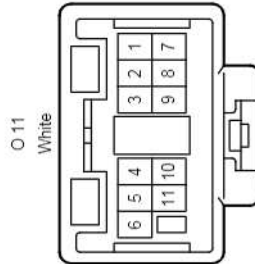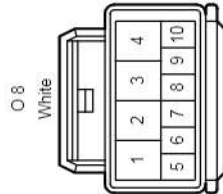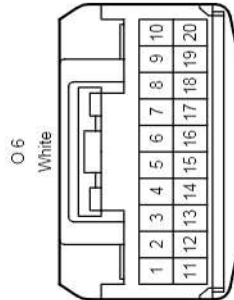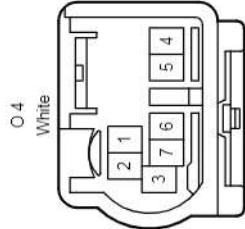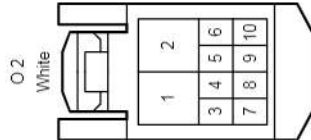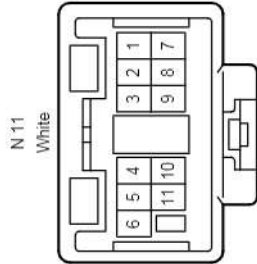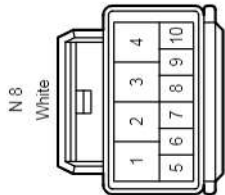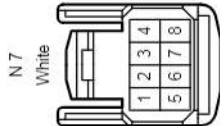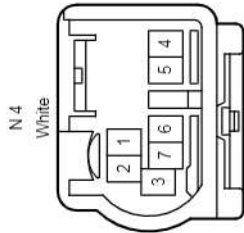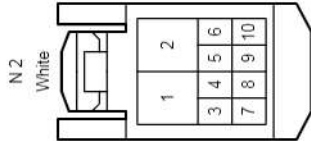

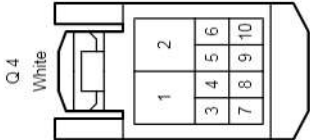


Position of Parts in Body <LHD>

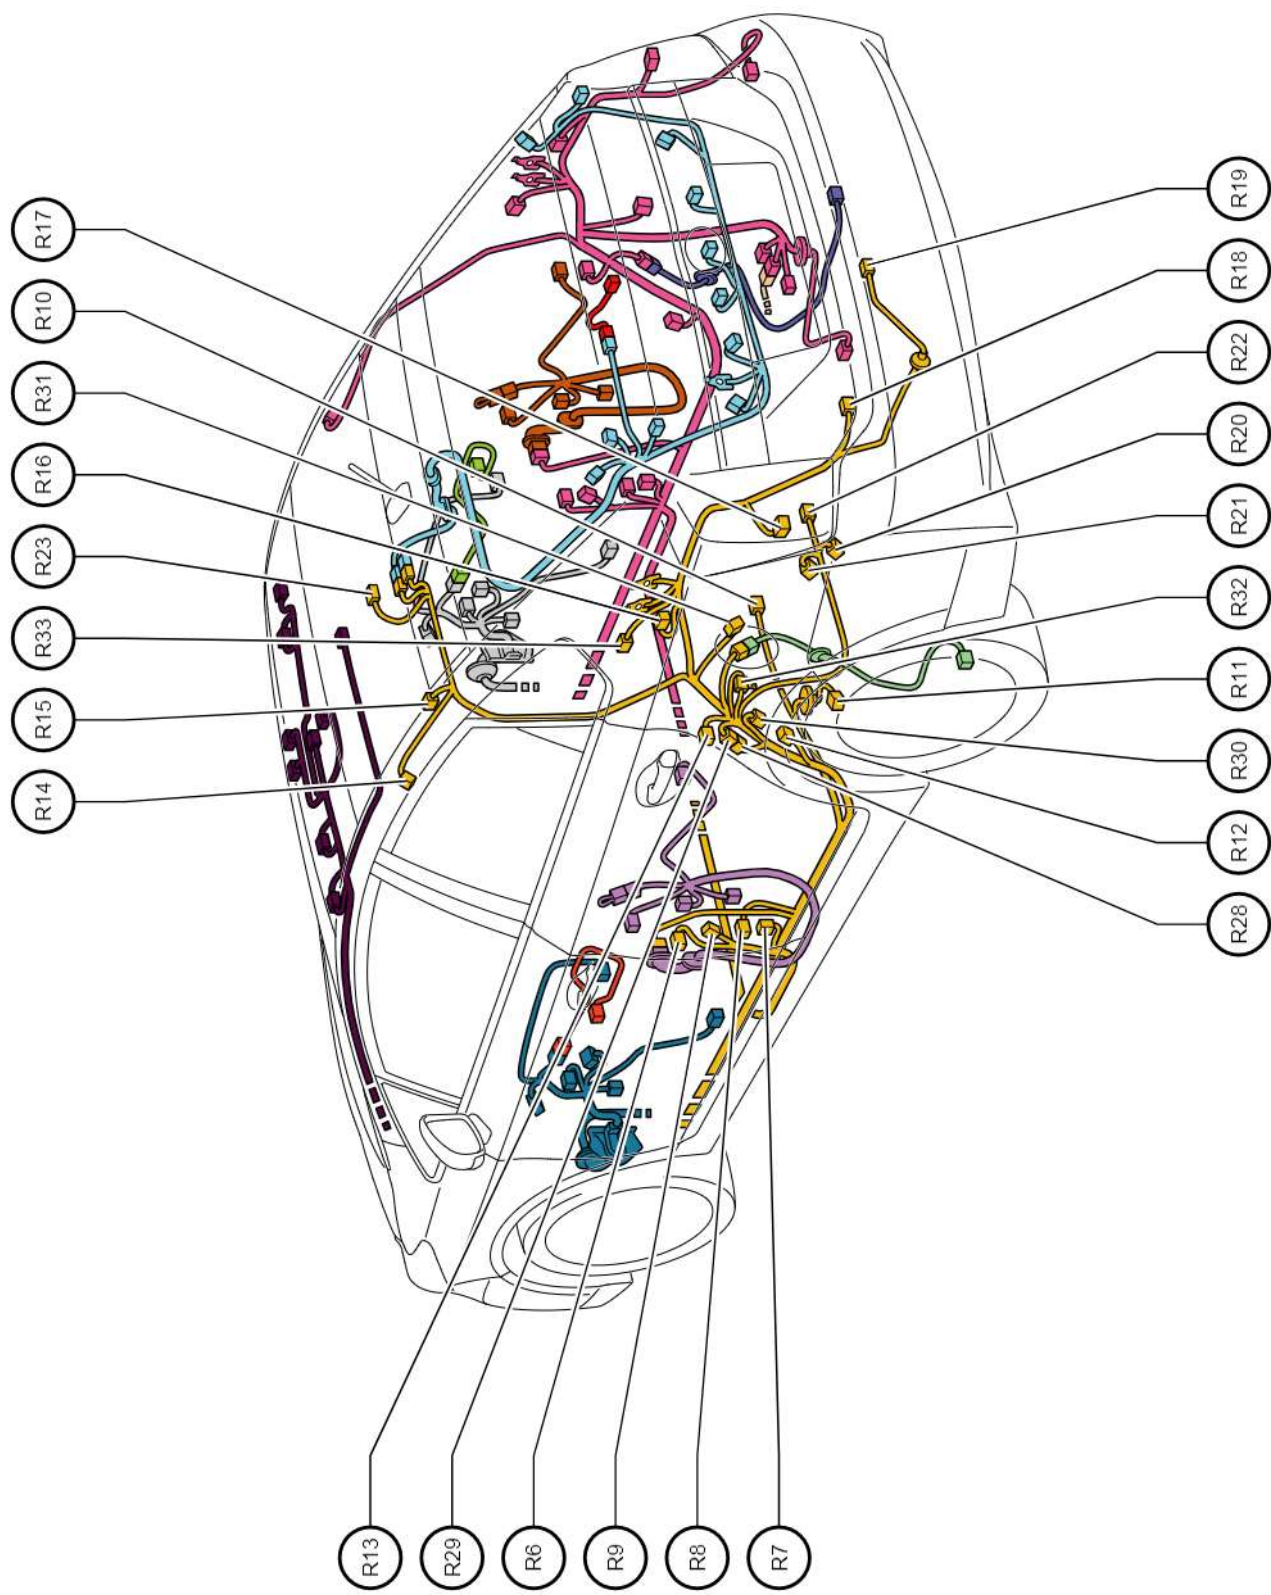


R	6	Front Door Courtesy Light Switch Assembly LH
R	7	Front Pretensioner LH
R	8	Front Pre-Crash Seat Belt Motor LH
R	9	Front Side Airbag Sensor Assembly LH
R	10	Rear Indoor Electrical Key Oscillator
R	11	Fuel Sender Gage Assembly
R	12	Rear Side Airbag Sensor Assembly LH
R	13	Rear Door Courtesy Light Switch Assembly LH
R	14	Curtain Shield Airbag Assembly Circuit LH
R	15	Noise Filter (Solar Ventilation System)
R	16	No. 2 Room Light Assembly
R	17	Rear Combination Light Assembly LH
R	18	Back Door Lock Assembly
R	19	Outside Luggage Electrical Key Antenna
R	20	Rear Seat Inner with Center Belt Assembly LH
R	21	Rear Seat Inner with Center Belt Assembly LH
R	22	Rear Seat Belt Assembly Inner RH
R	23	Sliding Roof Control ECU
R	28	Junction Connector
R	29	Junction Connector
R	30	Diode (Back Door Courtesy Light)
R	31	Junction Connector
R	32	Noise Filter (Rear Window Defogger)
R	33	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

Position of Parts in Body <LHD>

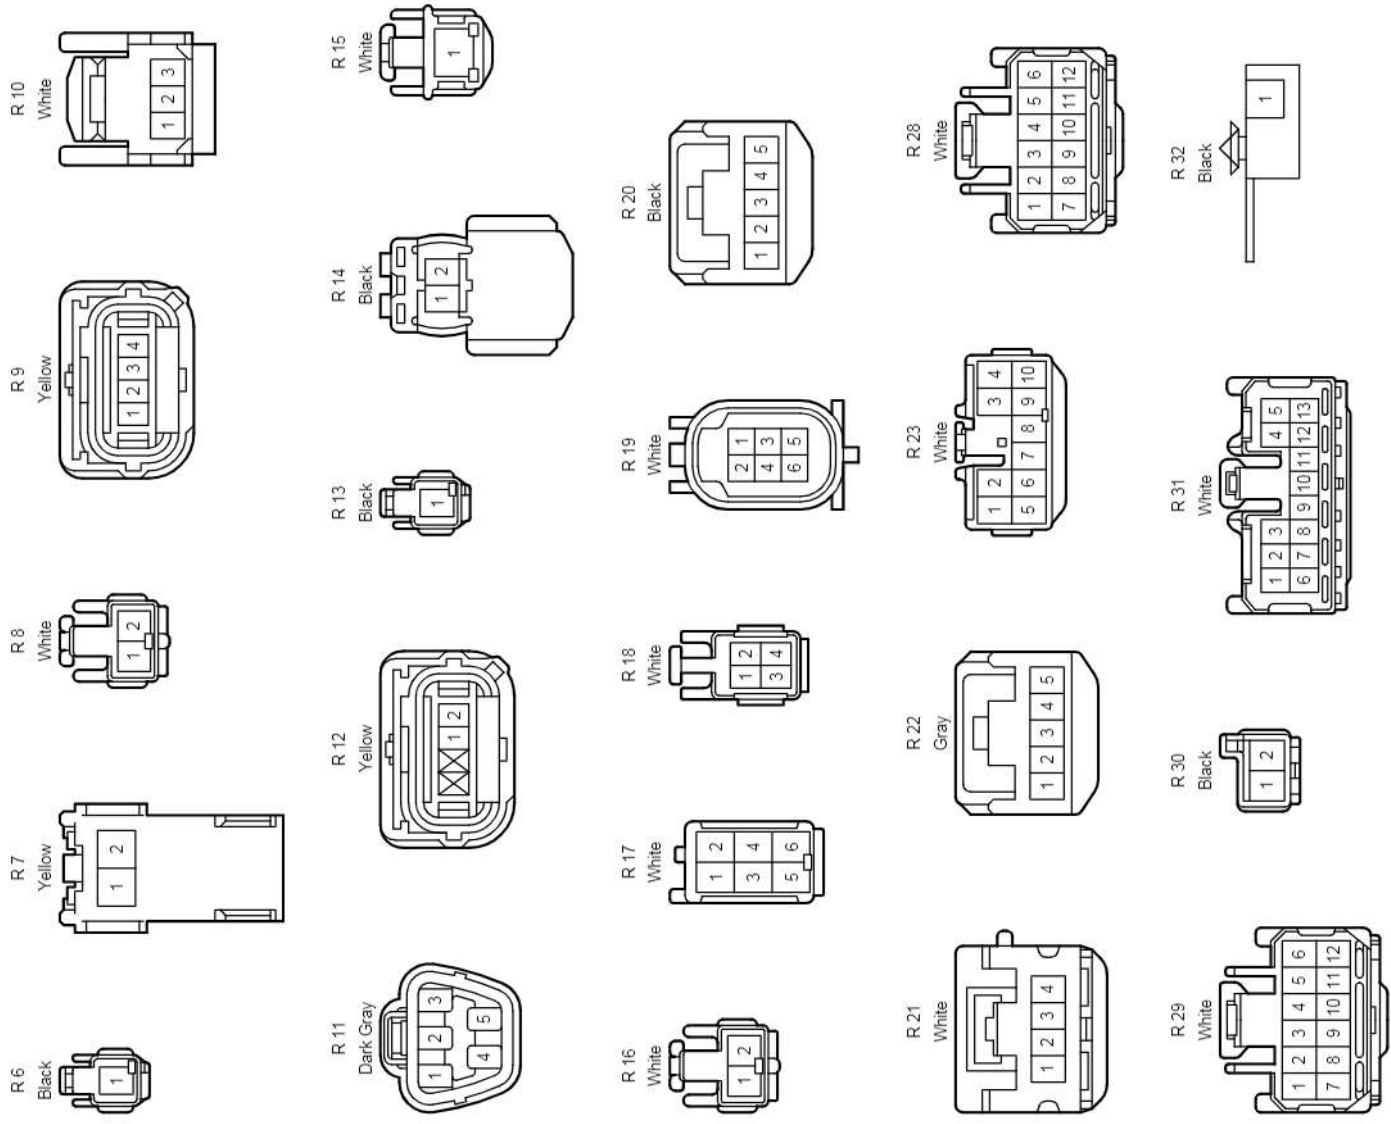


Position of Parts in Body <LHD>

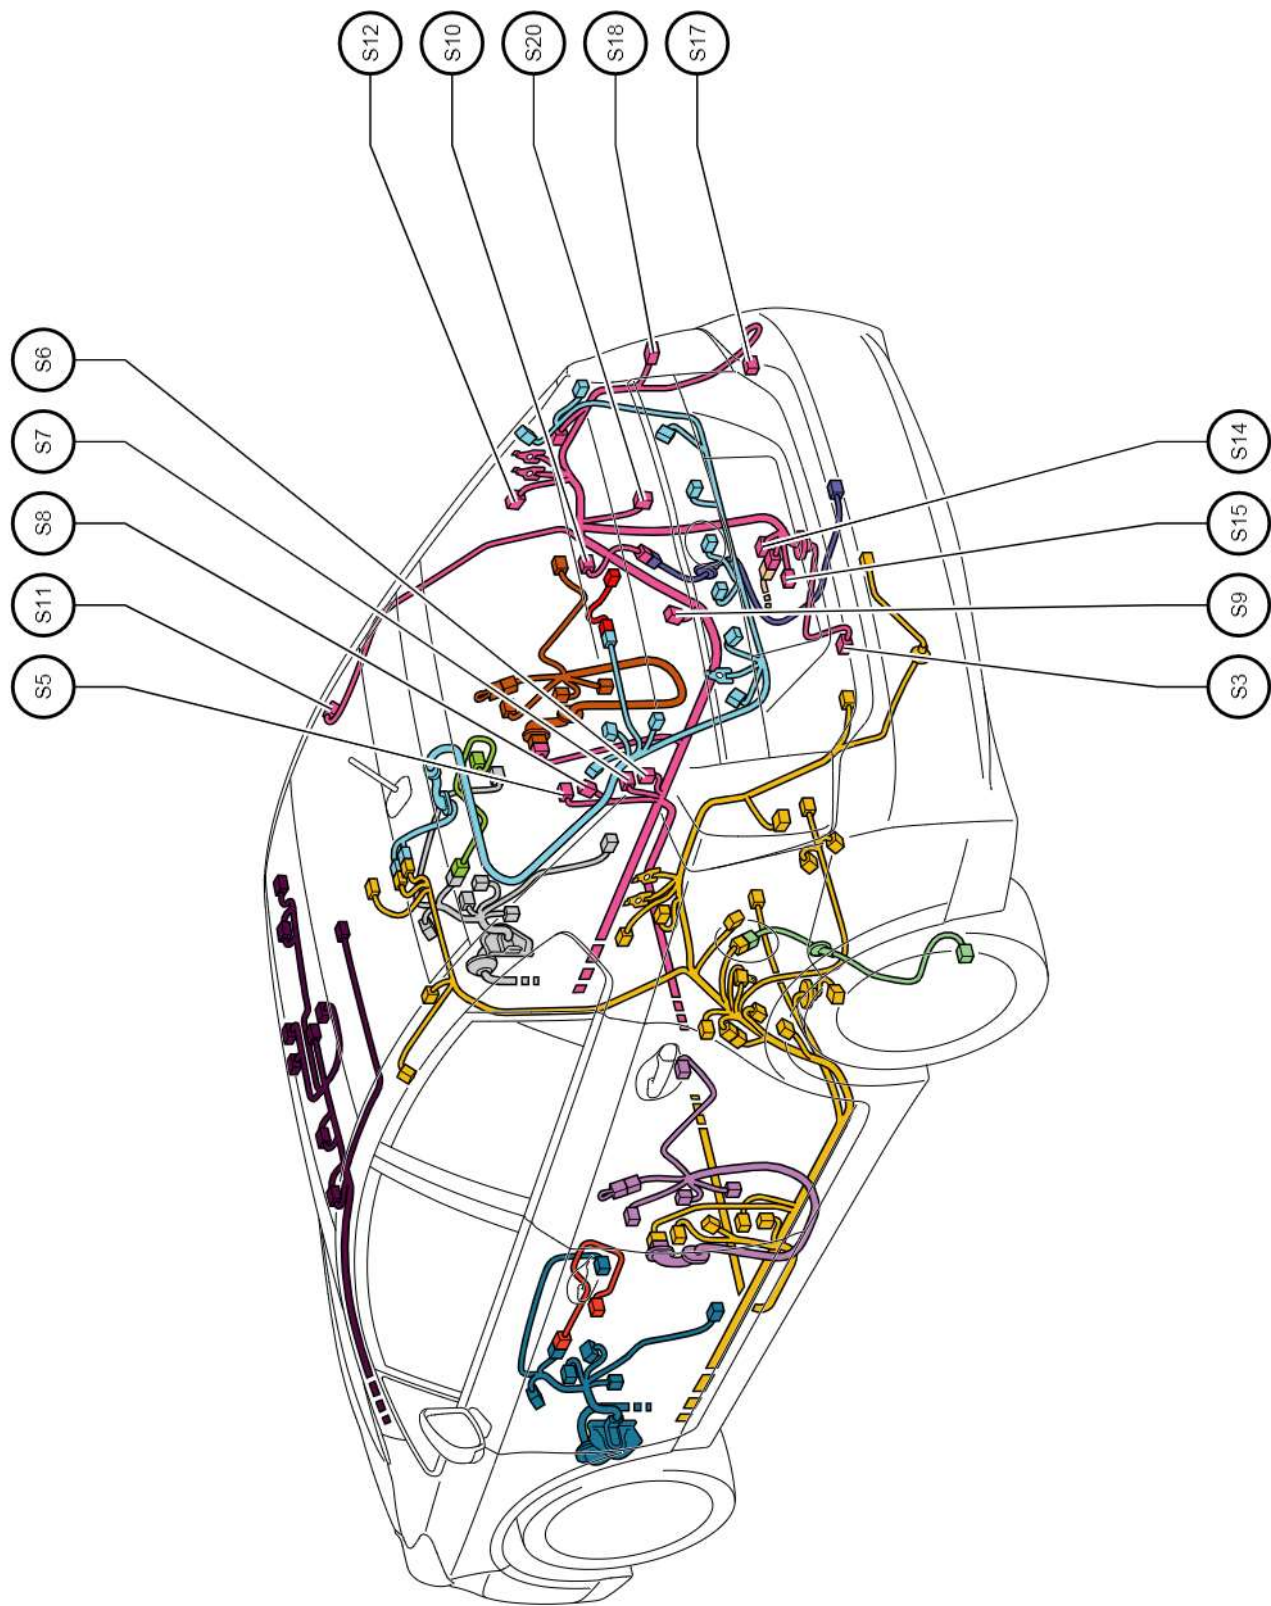


S	3	Rear Height Control Sensor Sub-Assembly RH
S	5	Front Door Courtesy Light Switch Assembly RH
S	6	Front Pretensioner RH
S	7	Front Pre-Crash Seat Belt Motor RH
S	8	Front Side Airbag Sensor Assembly RH
S	9	Rear Side Airbag Sensor Assembly RH
S	10	Rear Door Courtesy Light Switch Assembly RH
S	11	Curtain Shield Airbag Assembly Circuit RH
S	12	Door Control Receiver
S	14	Battery Cooling Blower Assembly
S	15	Indoor Luggage Compartment Electrical Key Oscillator
S	17	HV Battery Thermometer
S	18	Rear Combination Light Assembly RH
S	20	Junction Connector

Position of Parts in Body <LHD>
















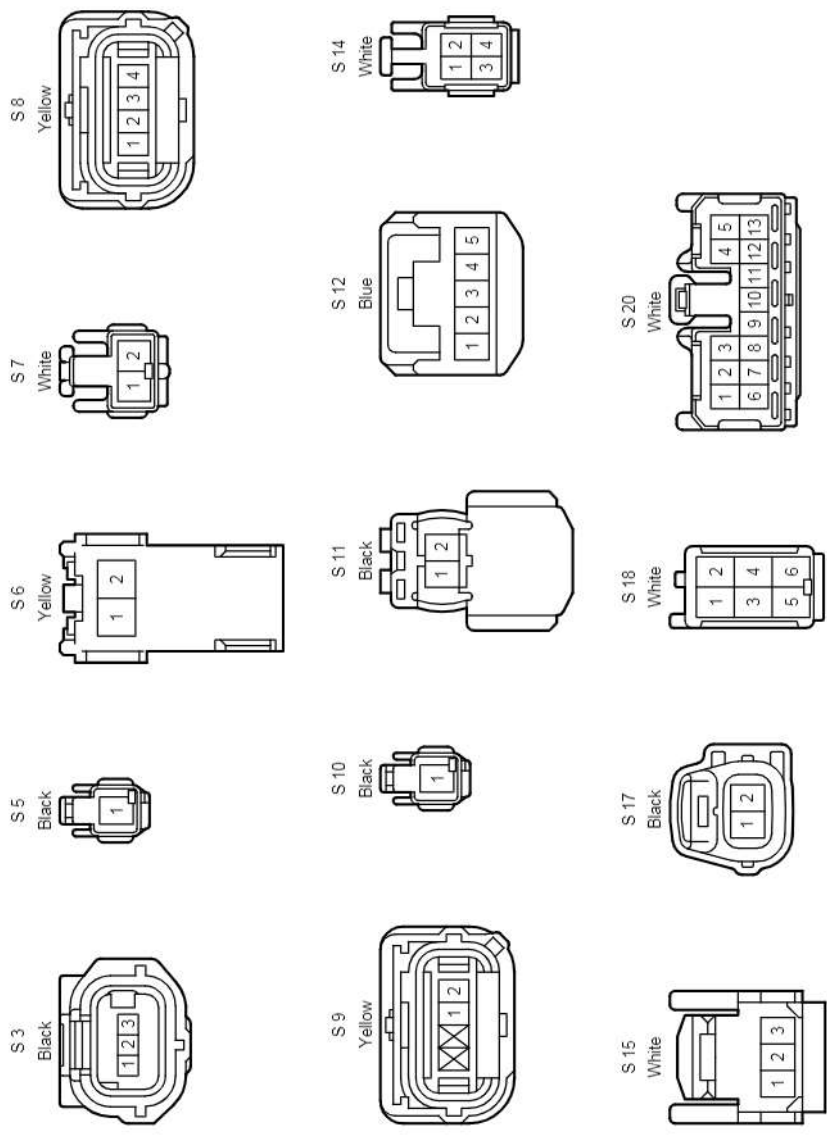



Position of Parts in Body <LHD>

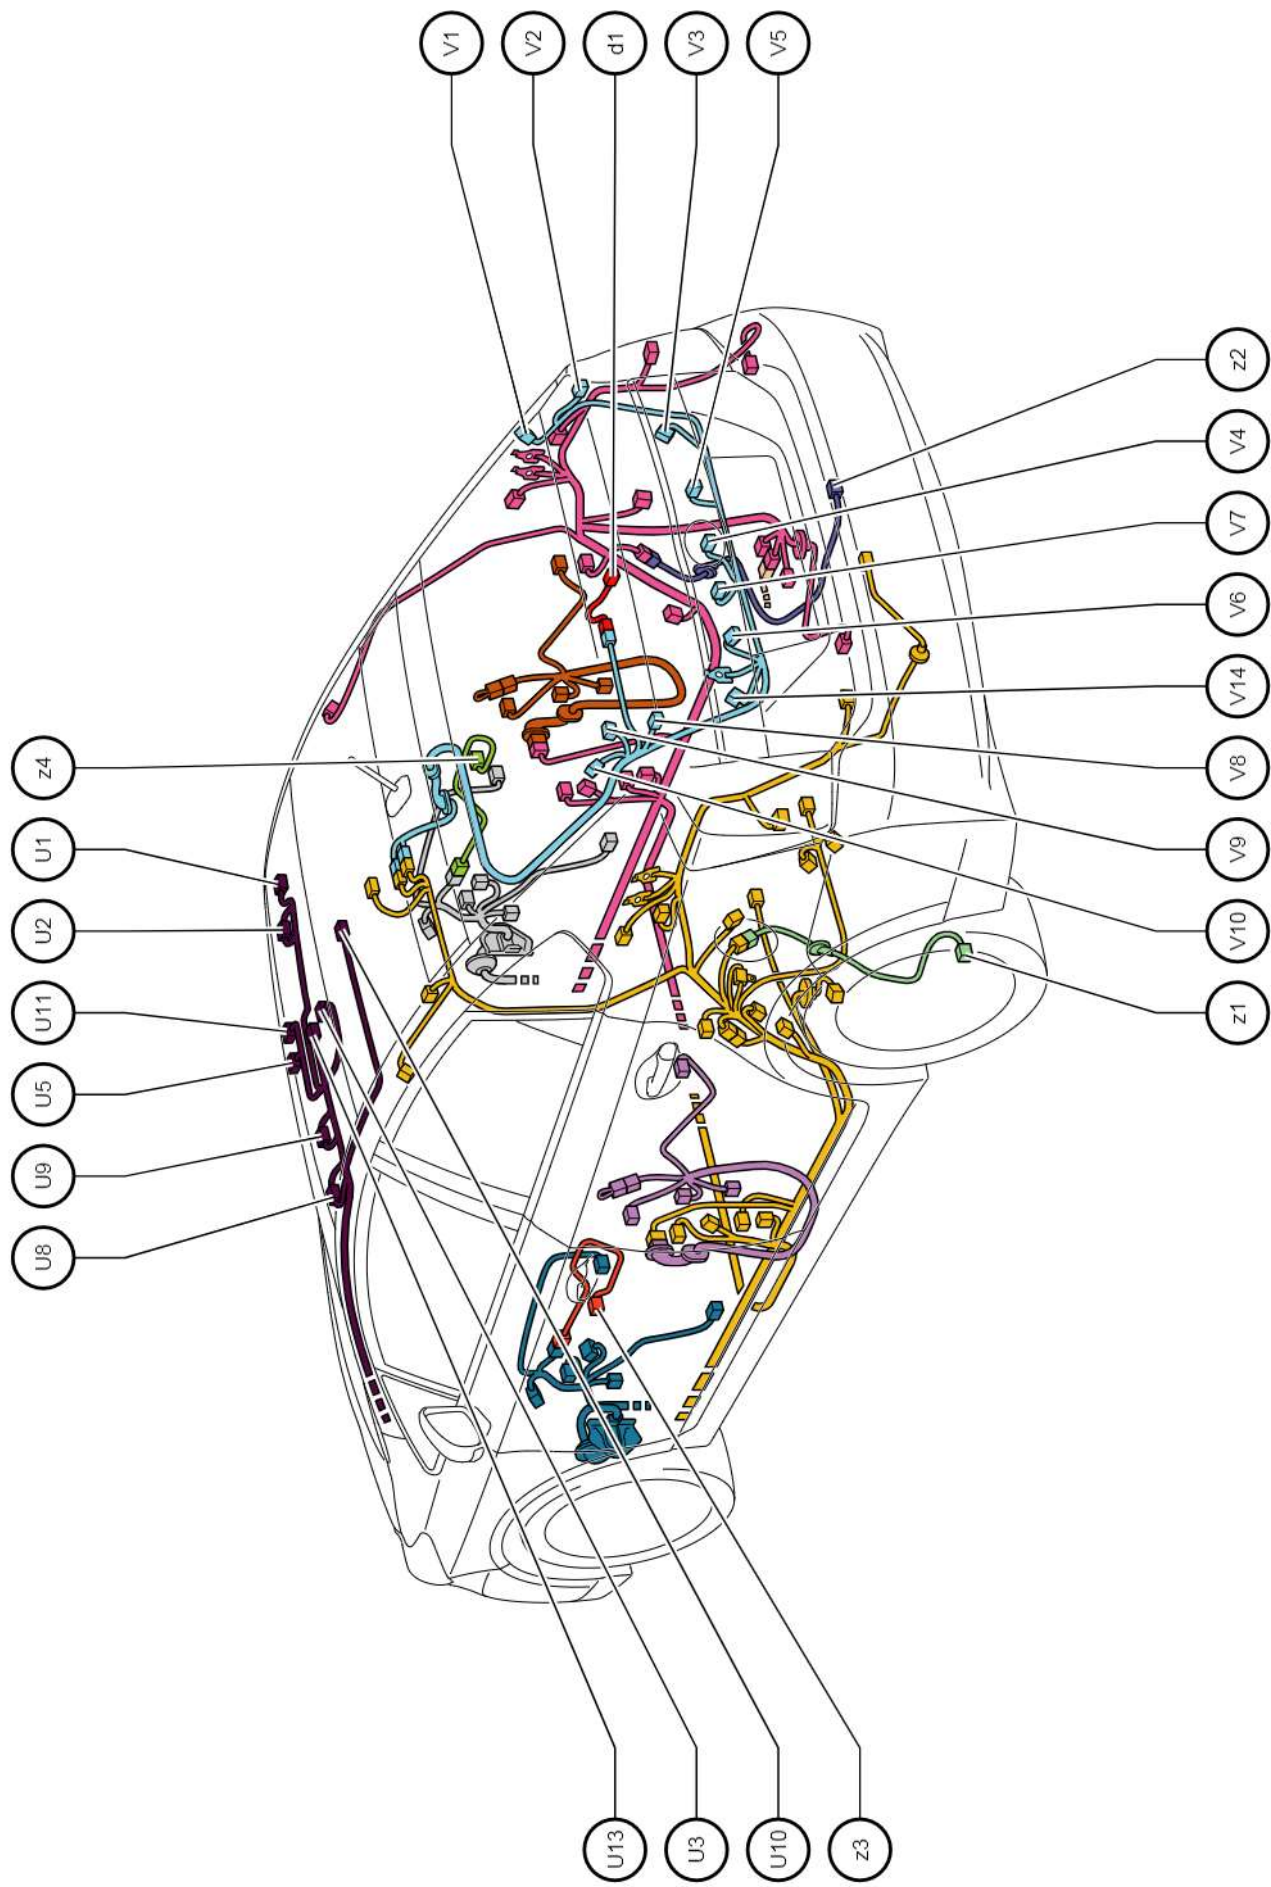


U	1	Visor Assembly RH
U	2	Vanity Light Assembly RH
U	3	Map Light Assembly
U	5	Inner Rear View Mirror Assembly
U	8	Visor Assembly LH
U	9	Vanity Light Assembly LH
U	10	No. 1 Room Light Assembly
U	11	Rain Sensor
U	13	Map Light Assembly
V	1	Rear Window Defogger (Back Door Glass)
V	2	Rear Window Defogger (Back Window Fix Glass)
V	3	Noise Filter (Rear Window Defogger)
V	4	Back Door Opener Switch Assembly
V	5	License Plate Light Assembly RH
V	6	Rear Television Camera Assembly
V	7	License Plate Light Assembly LH
V	8	Rear Window Defogger (Back Window Fix Glass)
V	9	Rear Wiper Motor Assembly
V	10	Rear Window Defogger (Back Door Glass)
V	14	Noise Filter (Stop Light)
d	1	Center Stop Light Assembly
z	1	Rear Speed Sensor LH
z	2	Rear Speed Sensor RH
z	3	Front Door Outside Handle Assembly LH
z	4	Front Door Outside Handle Assembly RH

    Position of Parts in Body <LHD>

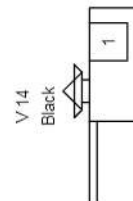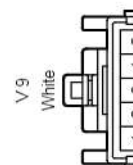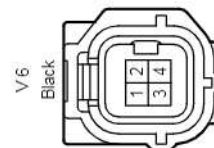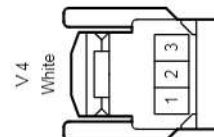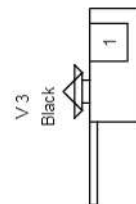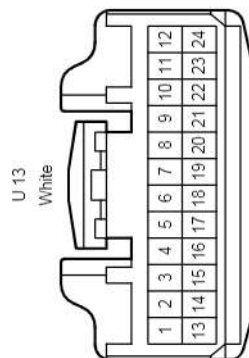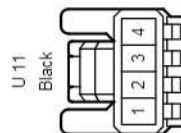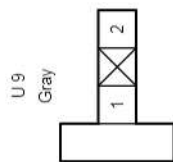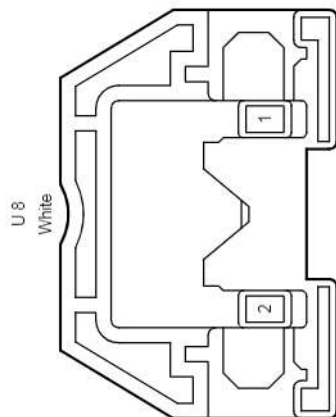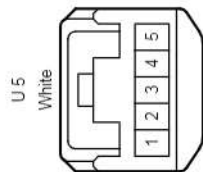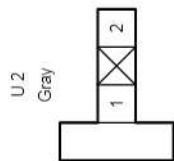
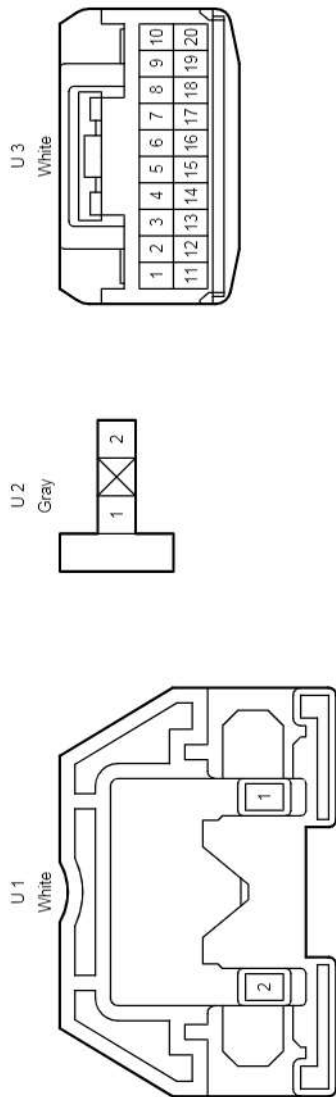


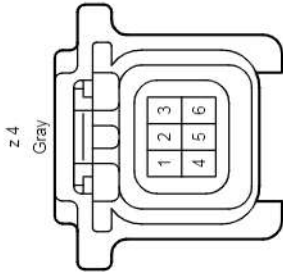



- * 1: Before Dec. 2011 Production
- * 2: From Dec. 2011 Production

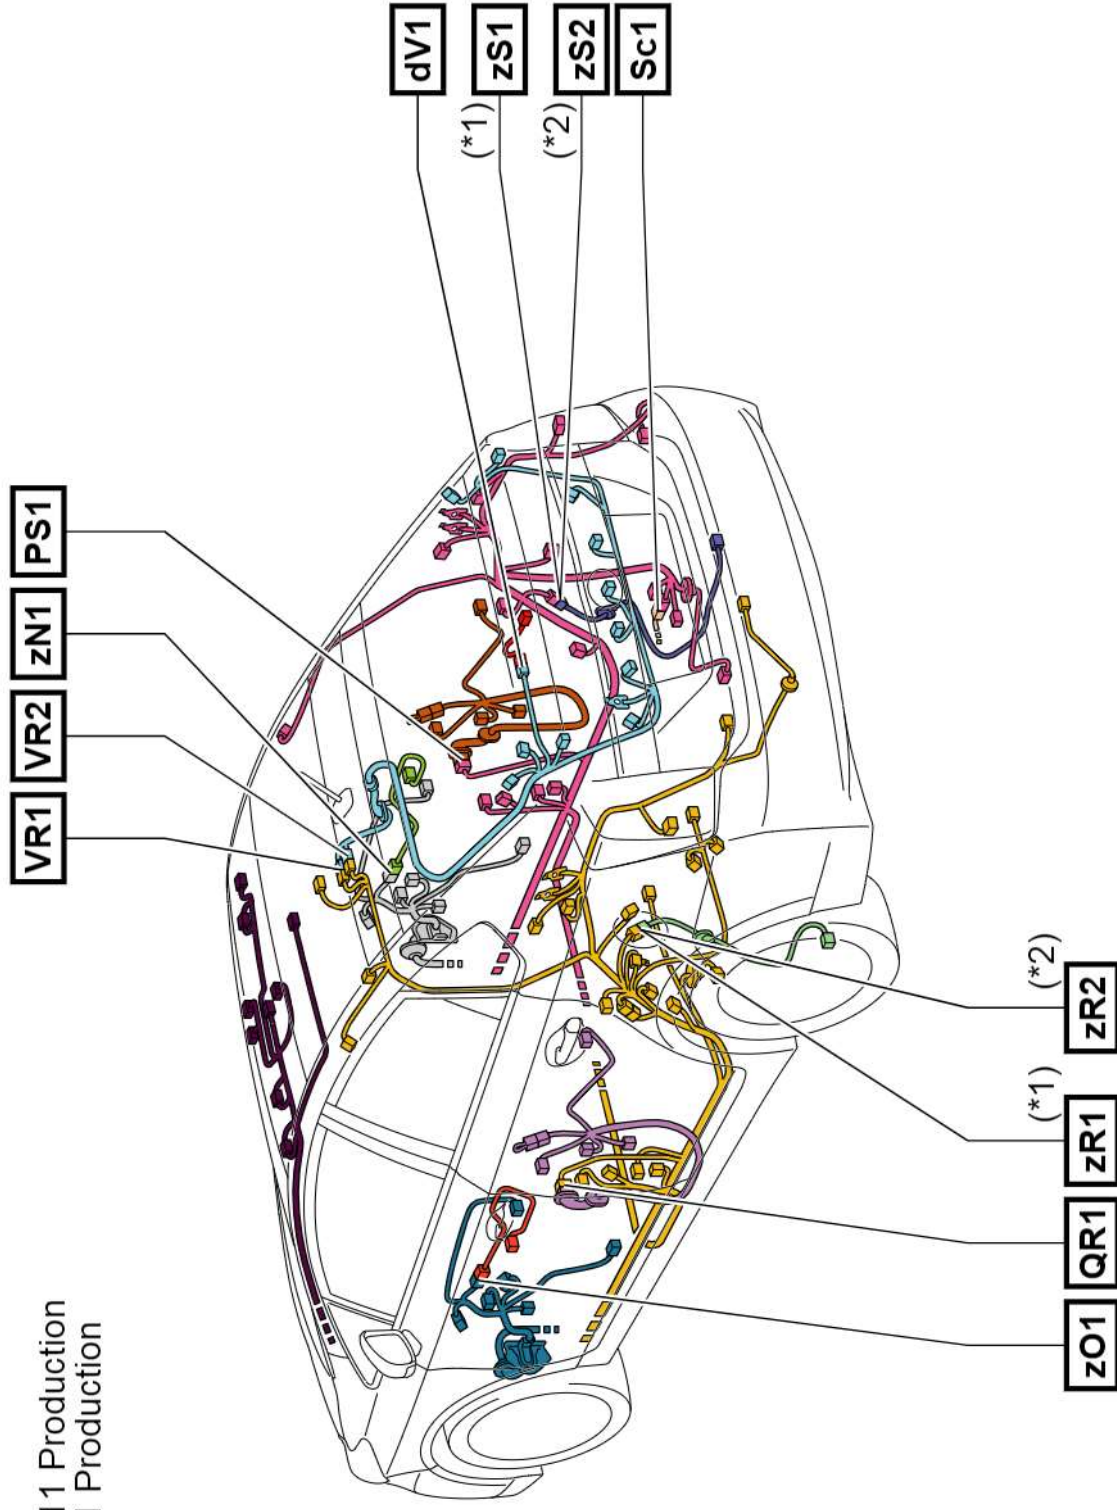



PS1
White

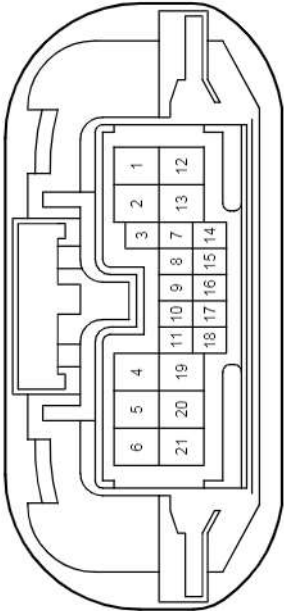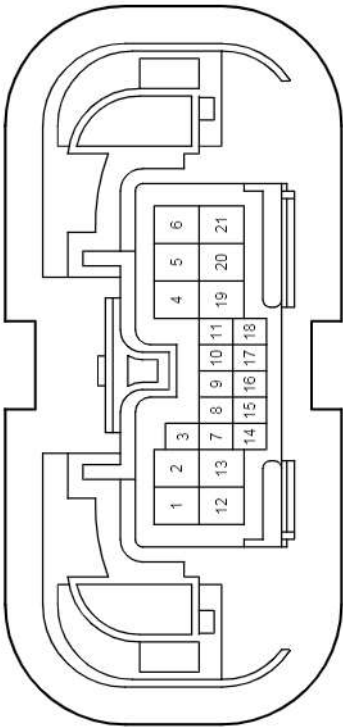

QR1
White

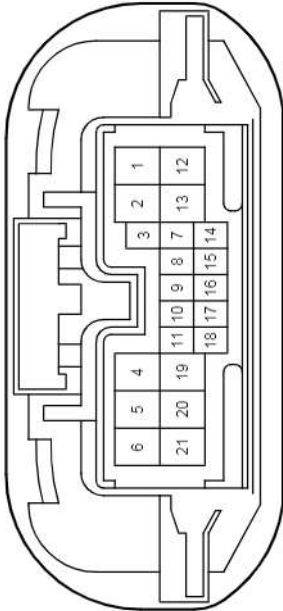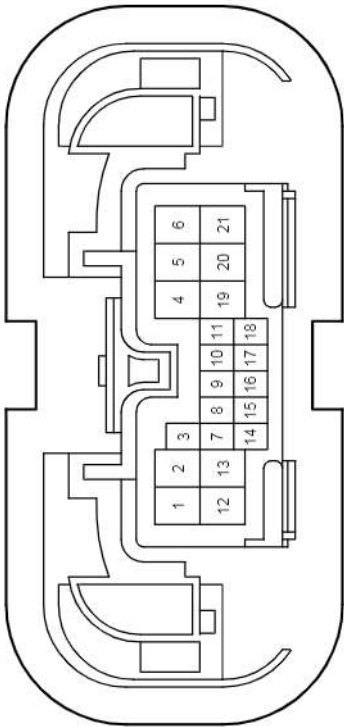



Sc1
White

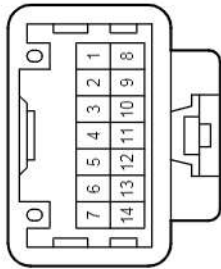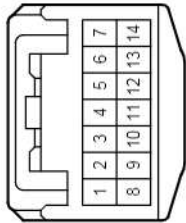


VR1
White

VR2
White

















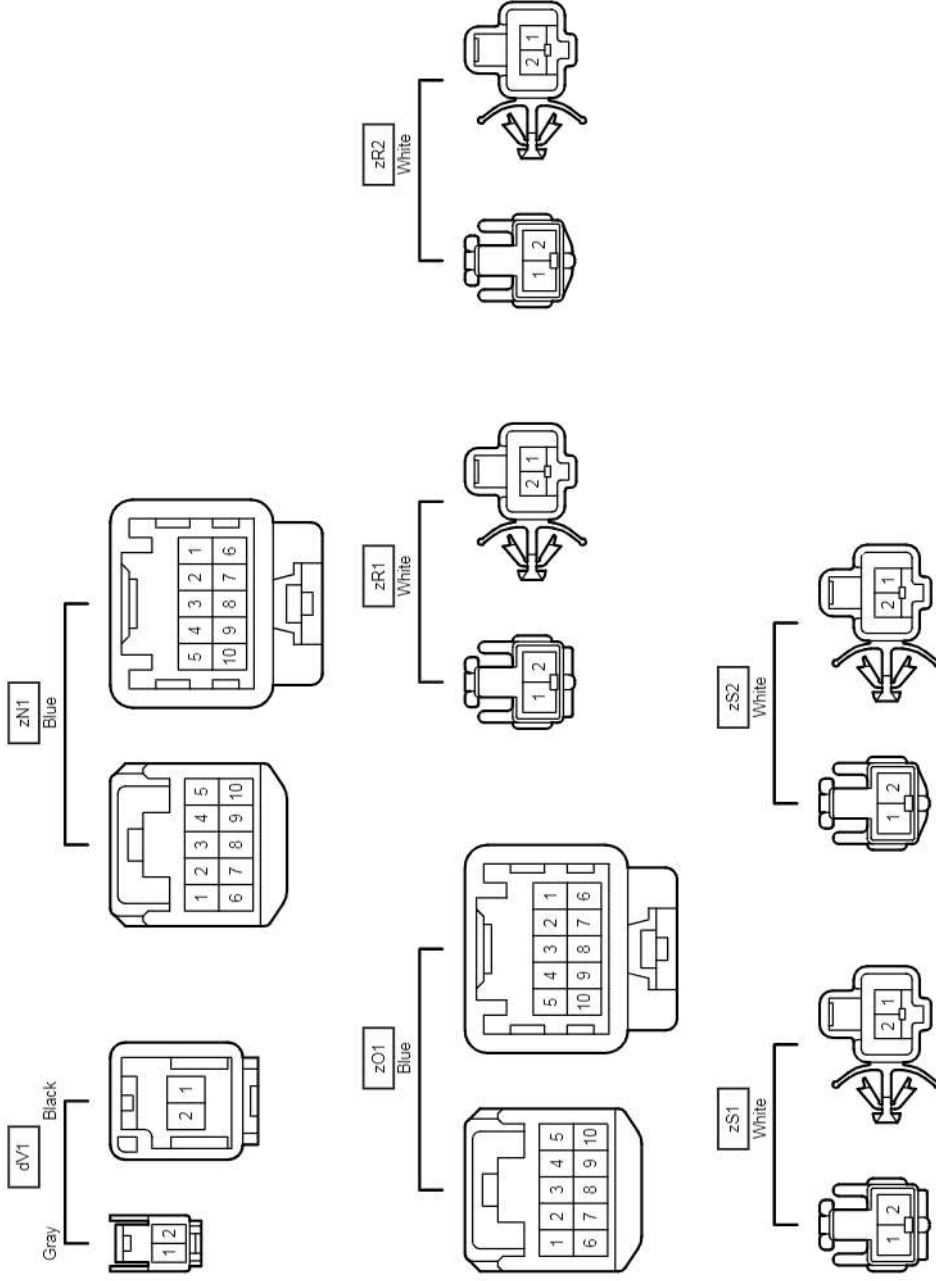





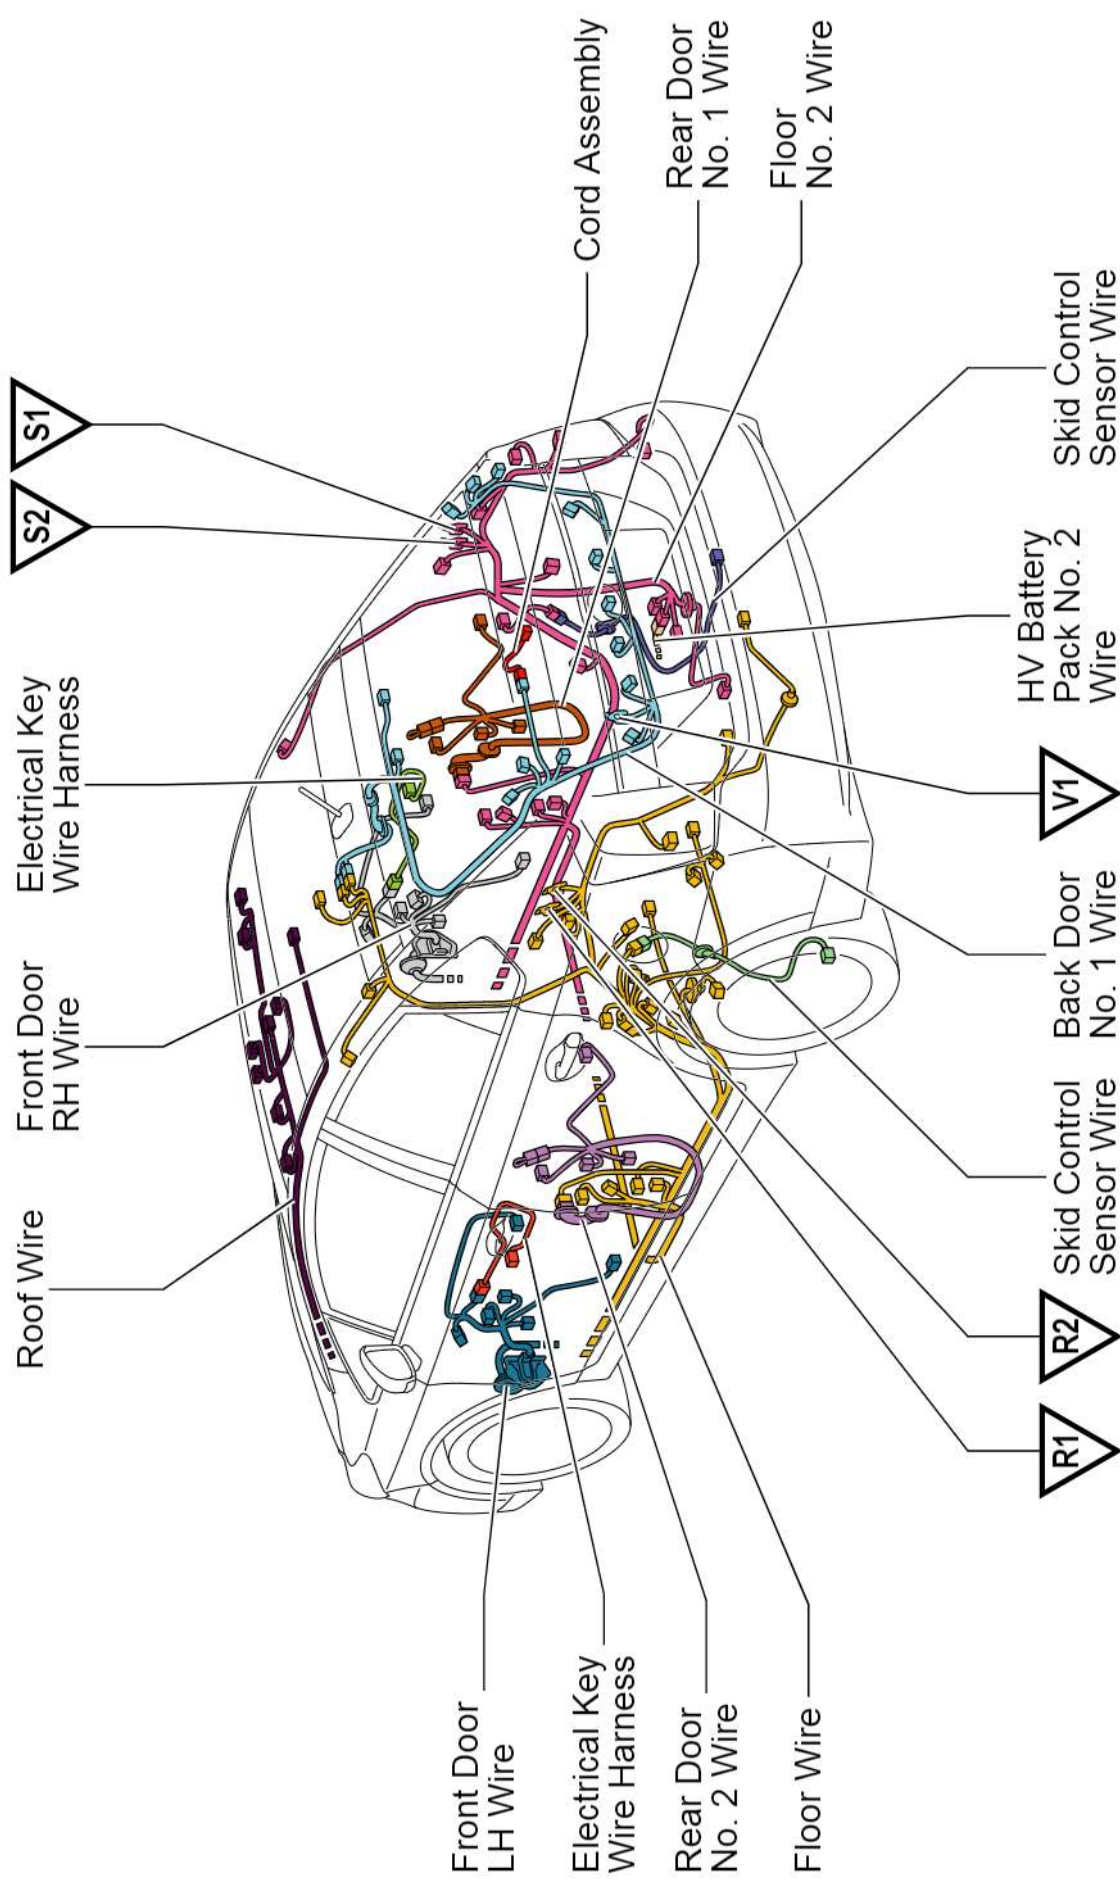


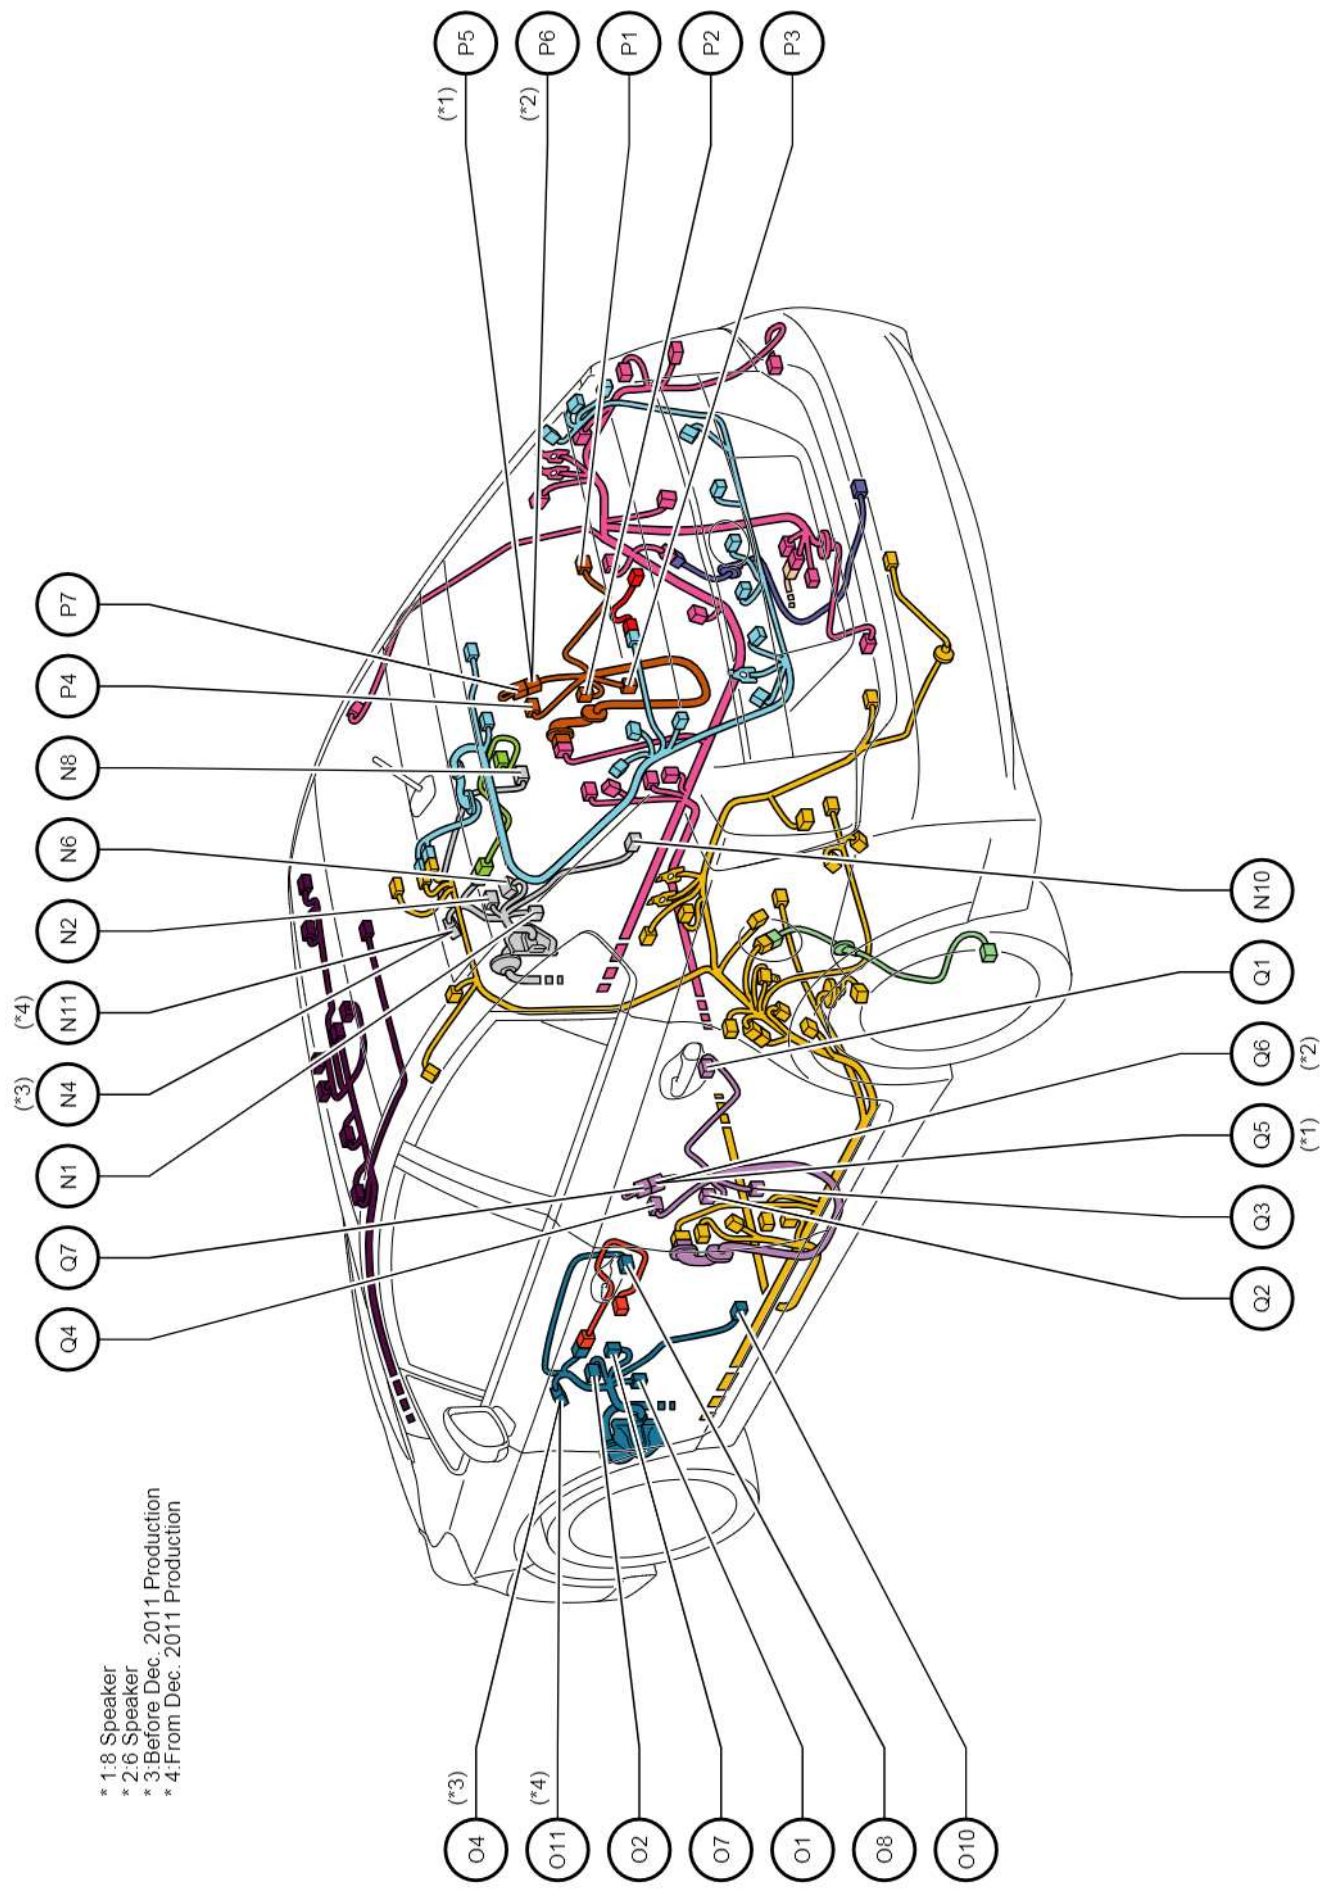


N	1	Front No. 1 Speaker Assembly RH
N	2	Front Power Window Regulator Motor Assembly RH
N	4	Outer Rear View Mirror Assembly RH
N	6	Multiplex Network Master Switch Assembly RH
N	8	Front Door Lock Assembly RH
N	10	Front Door Courtesy Light Assembly RH
N	11	Outer Rear View Mirror Assembly RH
O	1	Front No. 1 Speaker Assembly LH
O	2	Front Power Window Regulator Motor Assembly LH
O	4	Outer Rear View Mirror Assembly LH
O	7	Front Power Window Regulator Switch Assembly LH
O	8	Front Door Lock Assembly LH
O	10	Front Door Courtesy Light Assembly LH
O	11	Outer Rear View Mirror Assembly LH
P	1	Rear Door with Motor Lock Assembly RH
P	2	Rear Power Window Regulator Switch Assembly RH
P	3	Rear Speaker Assembly RH
P	4	Rear Power Window Regulator Motor Assembly RH
P	5	Rear No. 2 Speaker Assembly RH
P	6	Short Connector
P	7	Short Connector
Q	1	Rear Door with Motor Lock Assembly LH
Q	2	Rear Power Window Regulator Switch Assembly LH
Q	3	Rear Speaker Assembly LH
Q	4	Rear Power Window Regulator Motor Assembly LH
Q	5	Rear No. 2 Speaker Assembly LH
Q	6	Short Connector
Q	7	Short Connector

       Position of Parts in Body <RHD>

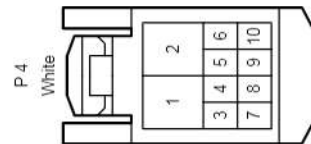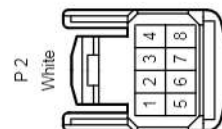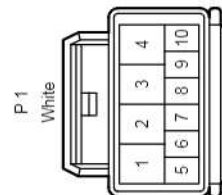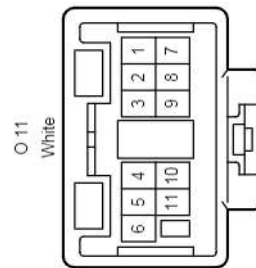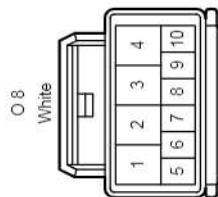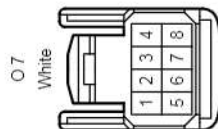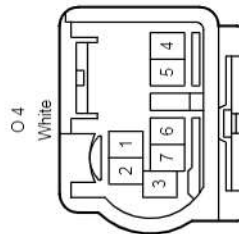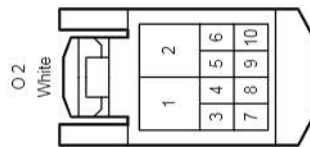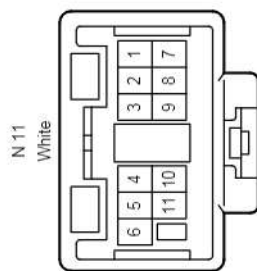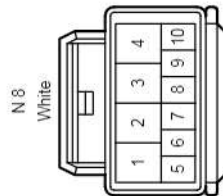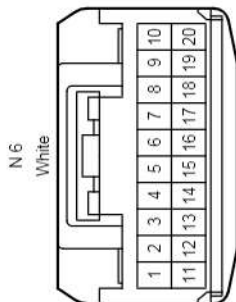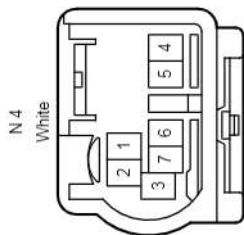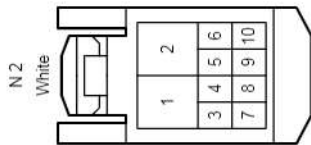

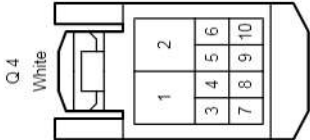


Position of Parts in Body <RHD>

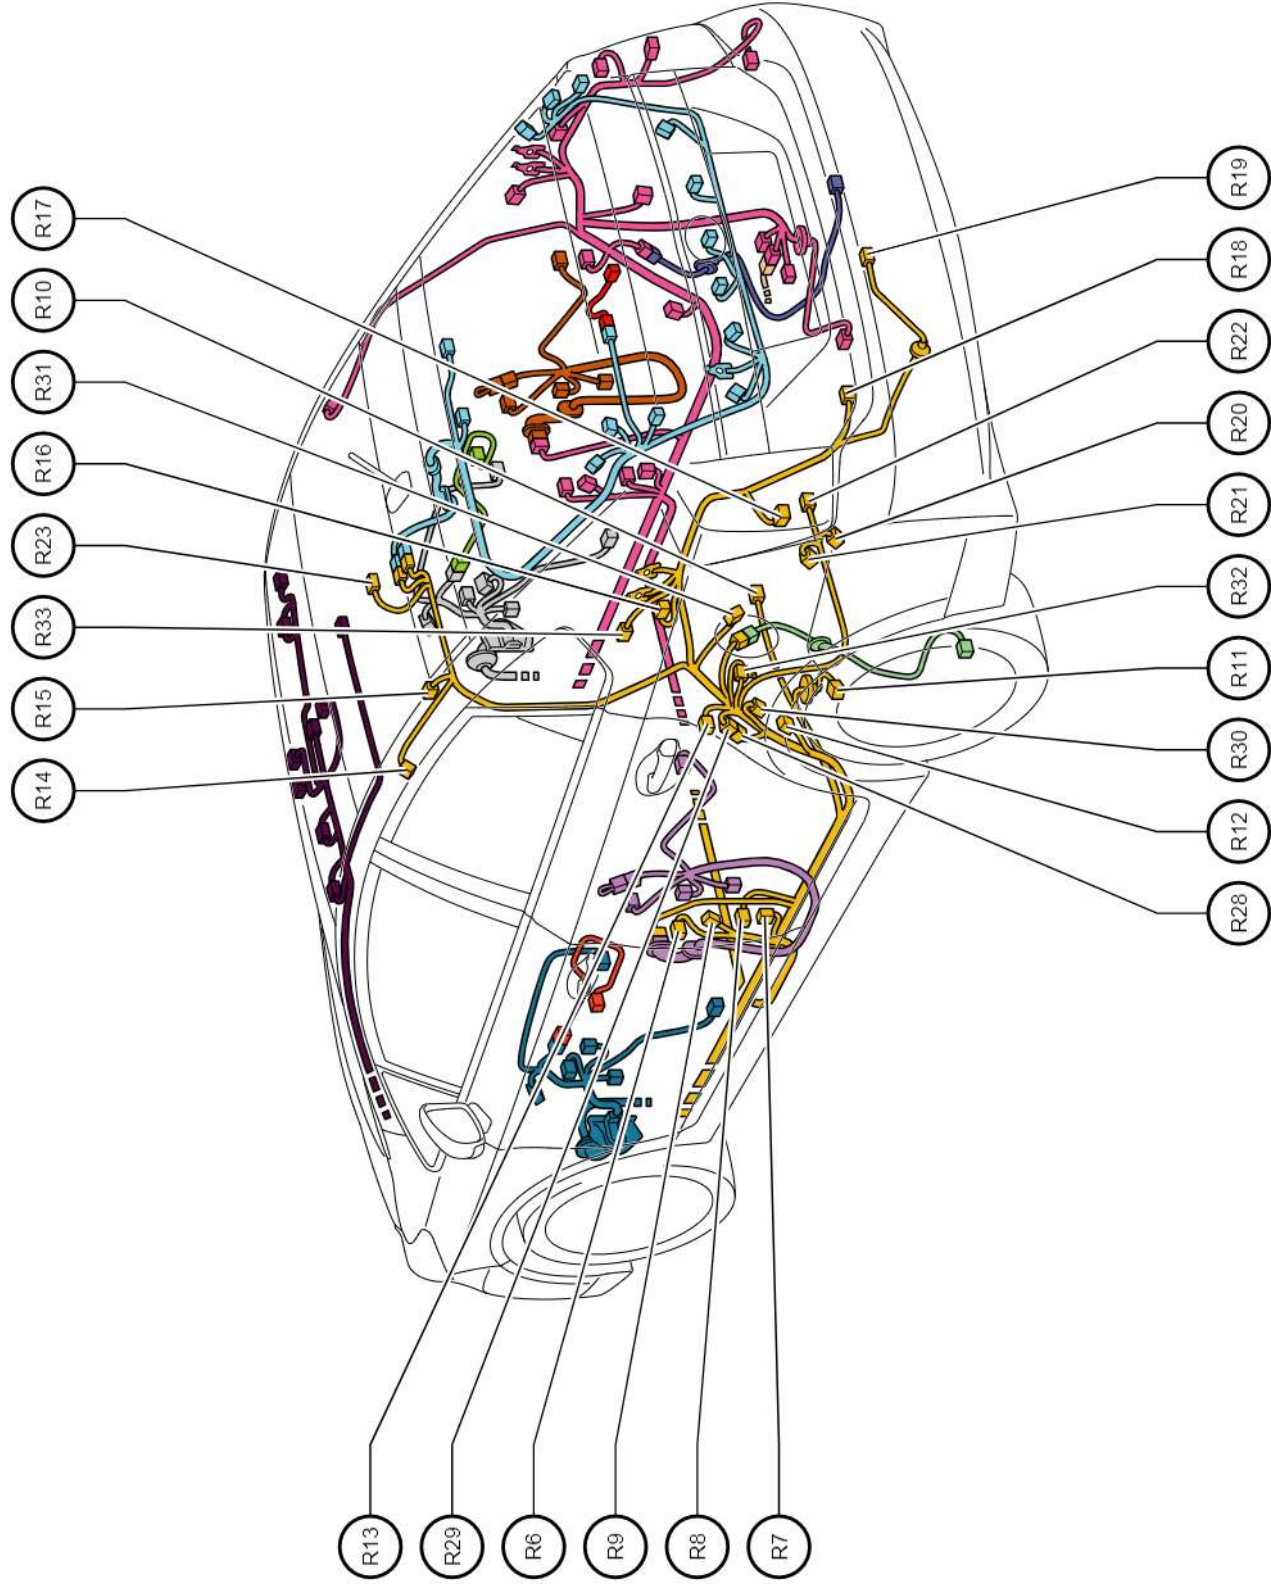


R	6	Front Door Courtesy Light Switch Assembly LH
R	7	Front Pretensioner LH
R	8	Front Pre-Crash Seat Belt Motor LH
R	9	Front Side Airbag Sensor Assembly LH
R	10	Rear Indoor Electrical Key Oscillator
R	11	Fuel Sender Gage Assembly
R	12	Rear Side Airbag Sensor Assembly LH
R	13	Rear Door Courtesy Light Switch Assembly LH
R	14	Curtain Shield Airbag Assembly Circuit LH
R	15	Noise Filter (Solar Ventilation System)
R	16	No. 2 Room Light Assembly
R	17	Rear Combination Light Assembly LH
R	18	Back Door Lock Assembly
R	19	Outside Luggage Electrical Key Antenna
R	20	Rear Seat Inner with Center Belt Assembly LH
R	21	Rear Seat Inner with Center Belt Assembly LH
R	22	Rear Seat Belt Assembly Inner RH
R	23	Sliding Roof Control ECU
R	28	Junction Connector
R	29	Junction Connector
R	30	Diode (Back Door Courtesy Light)
R	31	Junction Connector
R	32	Noise Filter (Rear Window Defogger)
R	33	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

Position of Parts in Body <RHD>

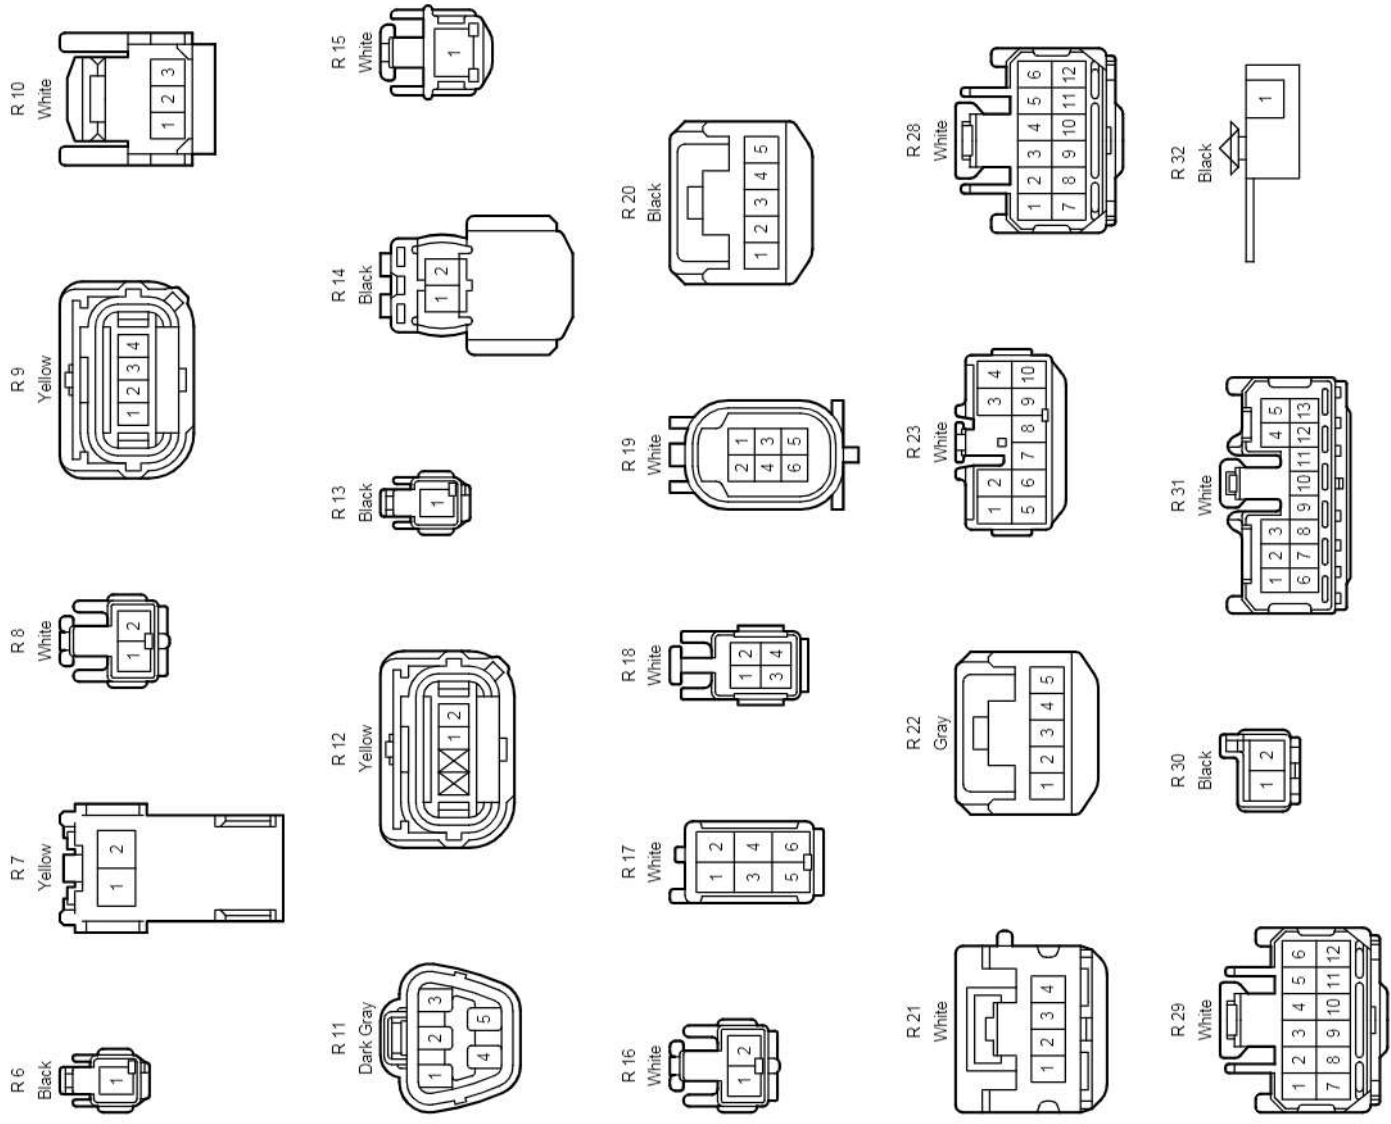


Position of Parts in Body <RHD>

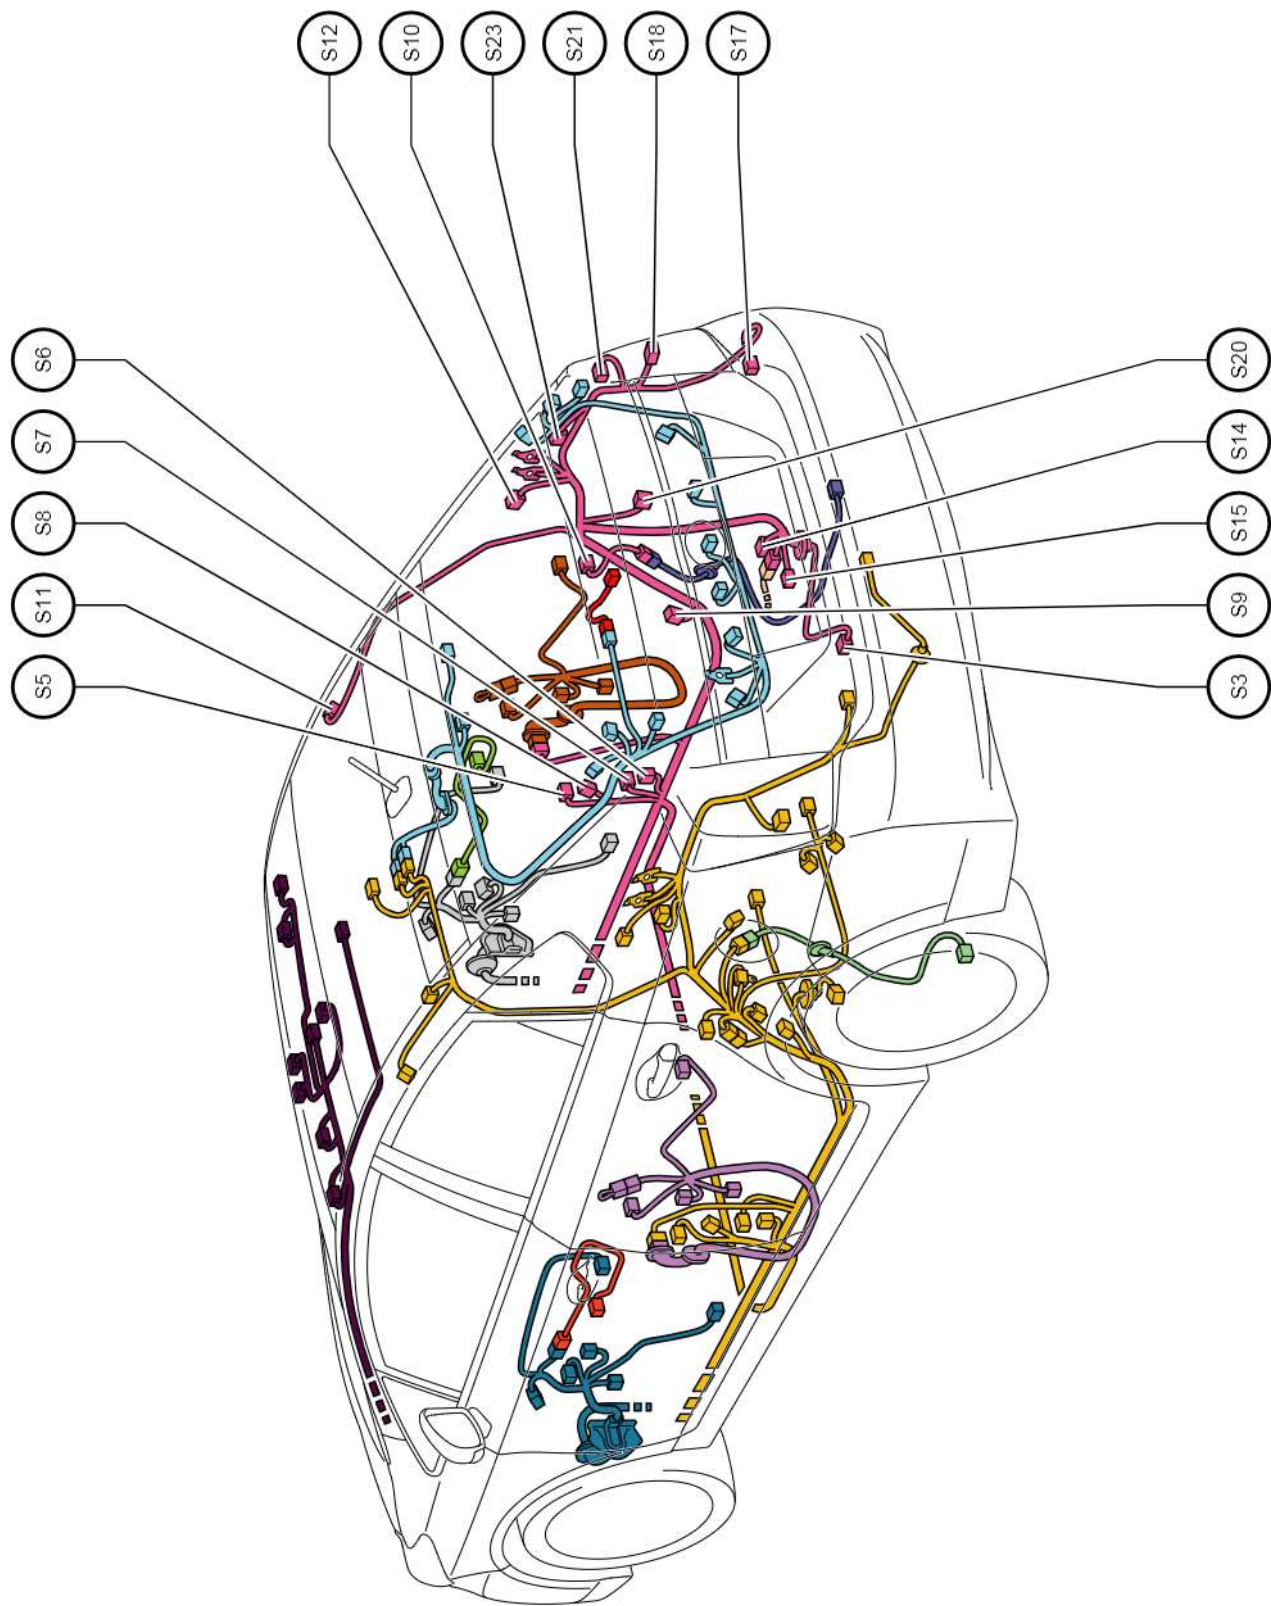


S	3	Rear Height Control Sensor Sub-Assembly RH
S	5	Front Door Courtesy Light Switch Assembly RH
S	6	Front Pretensioner RH
S	7	Front Pre-Crash Seat Belt Motor RH
S	8	Front Side Airbag Sensor Assembly RH
S	9	Rear Side Airbag Sensor Assembly RH
S	10	Rear Door Courtesy Light Switch Assembly RH
S	11	Curtain Shield Airbag Assembly Circuit RH
S	12	Door Control Receiver
S	14	Battery Cooling Blower Assembly
S	15	Indoor Luggage Compartment Electrical Key Oscillator
S	17	HV Battery Thermometer
S	18	Rear Combination Light Assembly RH
S	20	Junction Connector
S	21	Theft Warning Siren Assembly
S	23	Theft Warning Siren Assembly


Position of Parts in Body <RHD>

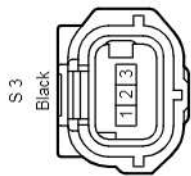


S 3
Black

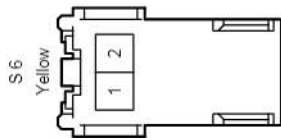


S 6
Yellow

 

S 7
White

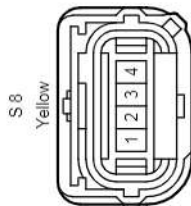


S 8
Yellow

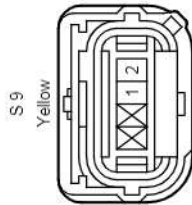


S 9
Yellow



S 10
Black

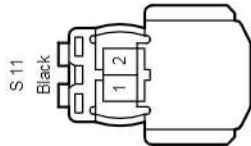


S 11
Black

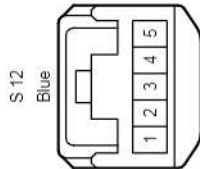

S 12
Blue




S 14
White

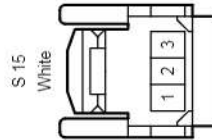


S 15
White



 
S 17
Black




S 18
White

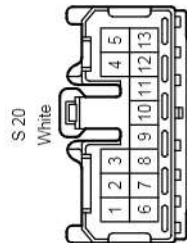

S 20
White

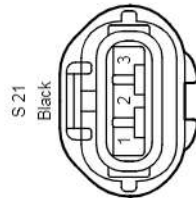


S 21
Black

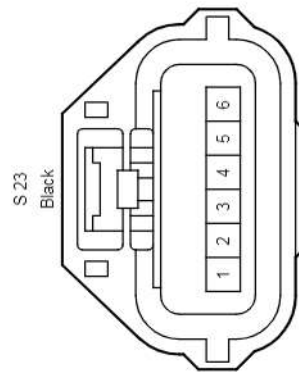


S 23
Black

Position of Parts in Body <RHD>


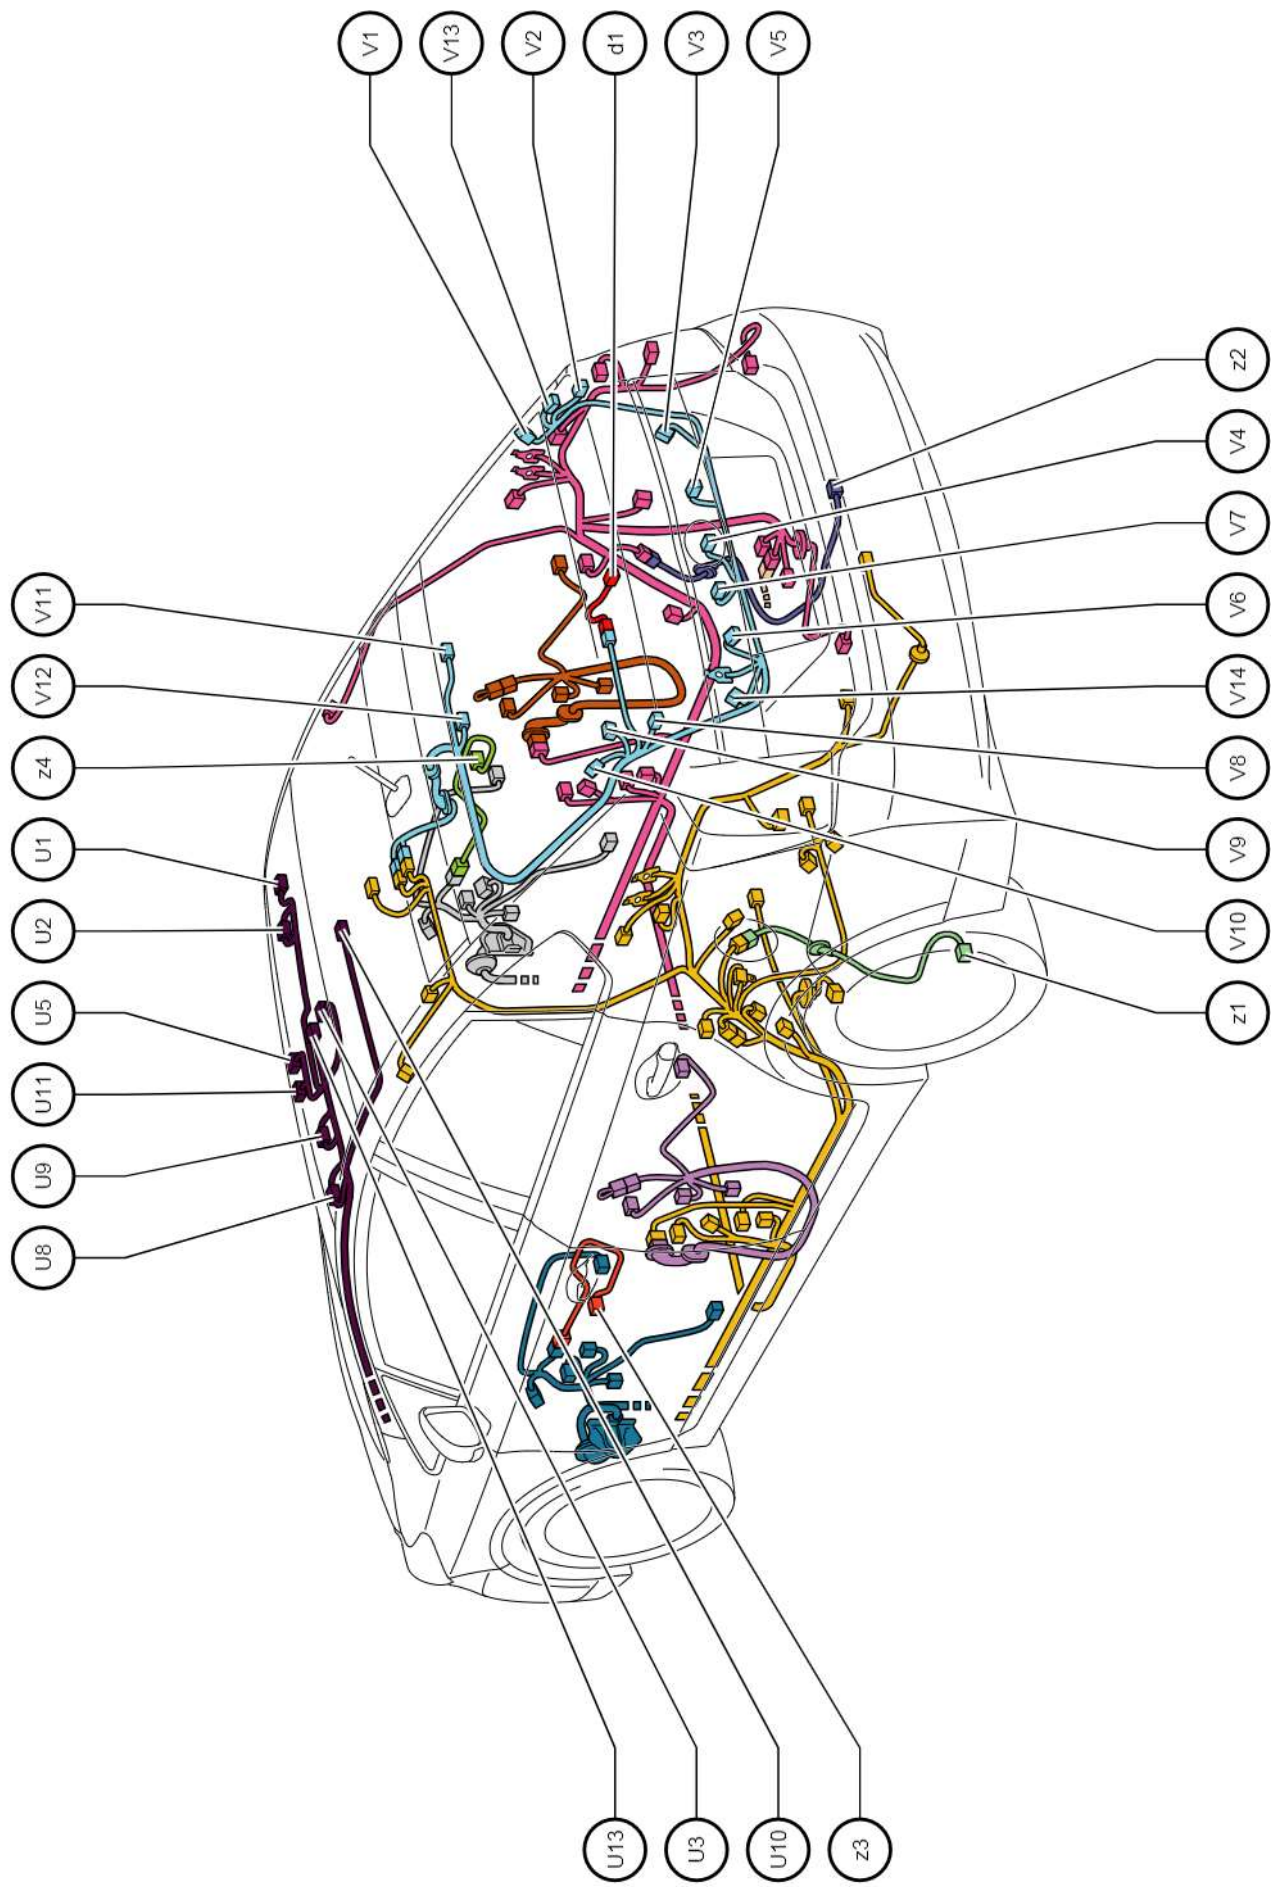


U	1	Visor Assembly RH
U	2	Vanity Light Assembly RH
U	3	Map Light Assembly
U	5	Inner Rear View Mirror Assembly
U	8	Visor Assembly LH
U	9	Vanity Light Assembly LH
U	10	No. 1 Room Light Assembly
U	11	Rain Sensor
U	13	Map Light Assembly
V	1	Rear Window Defogger (Back Door Glass)
V	2	Rear Window Defogger (Back Window Fix Glass)
V	3	Noise Filter (Rear Window Defogger)
V	4	Back Door Opener Switch Assembly
V	5	License Plate Light Assembly RH
V	6	Rear Television Camera Assembly
V	7	License Plate Light Assembly LH
V	8	Rear Window Defogger (Back Window Fix Glass)
V	9	Rear Wiper Motor Assembly
V	10	Rear Window Defogger (Back Door Glass)
V	11	Glass Breakage Sensor (Back Door Glass)
V	12	Glass Breakage Sensor (Back Door Glass)
V	13	Glass Breakage Sensor (Back Window Fix Glass)
V	14	Noise Filter (Stop Light)
d	1	Center Stop Light Assembly
z	1	Rear Speed Sensor LH
z	2	Rear Speed Sensor RH
z	3	Front Door Outside Handle Assembly LH
z	4	Front Door Outside Handle Assembly RH


Position of Parts in Body <RHD>

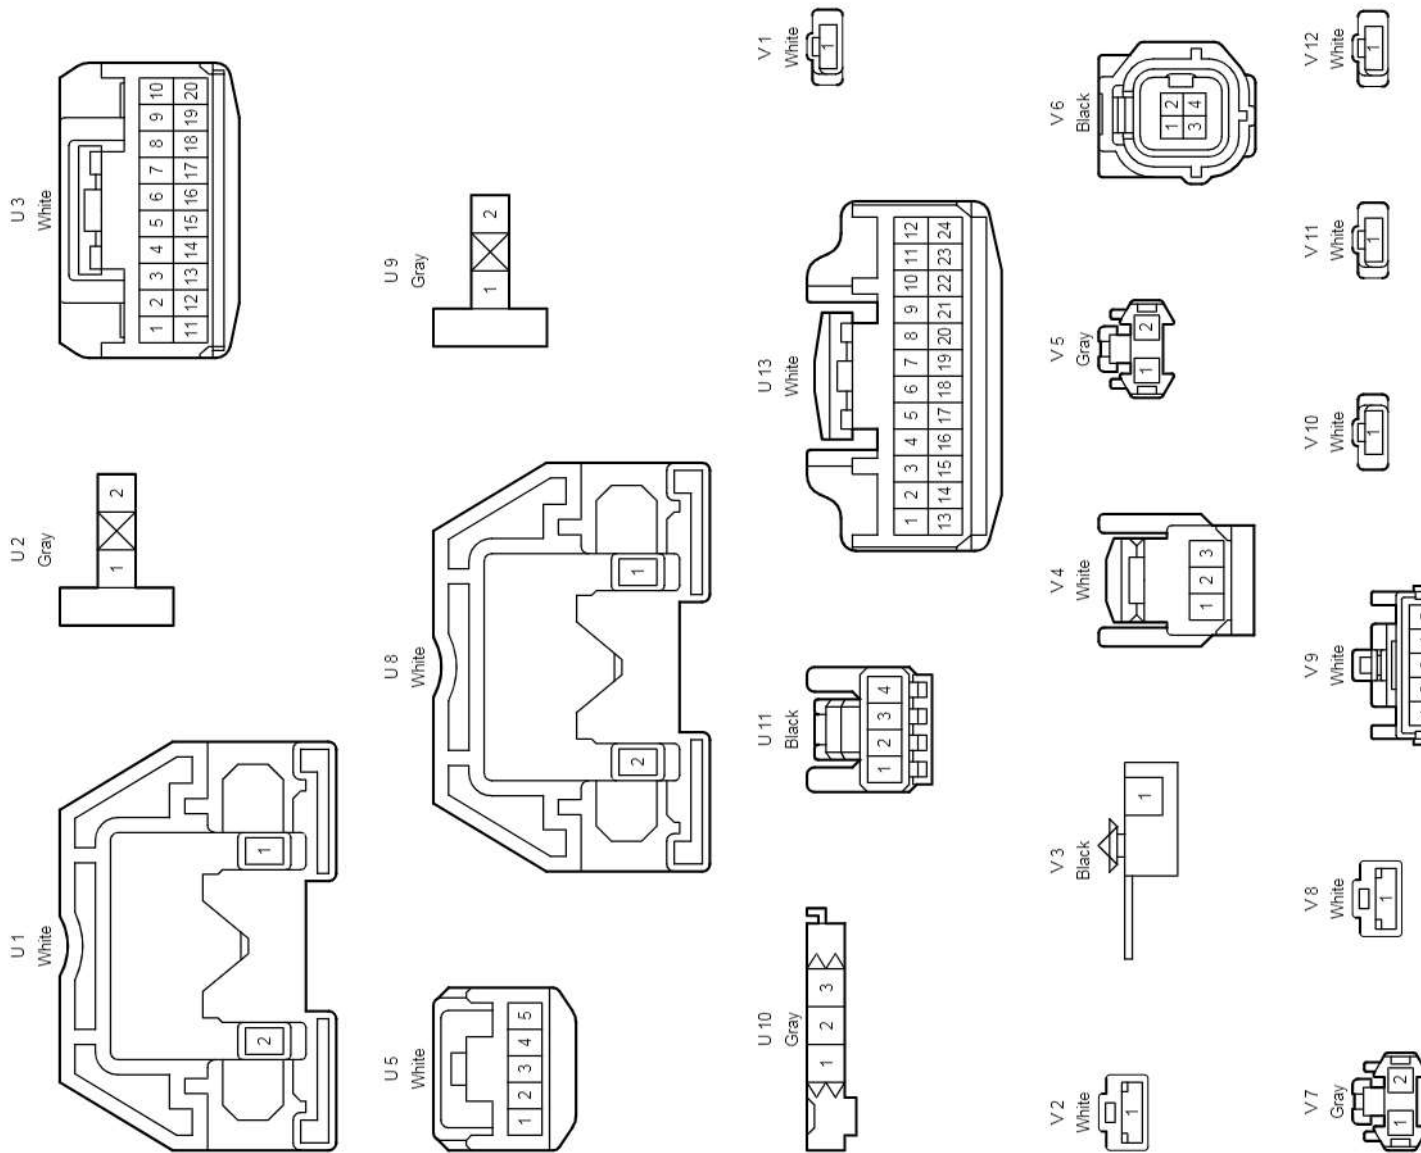



cardiagn.com

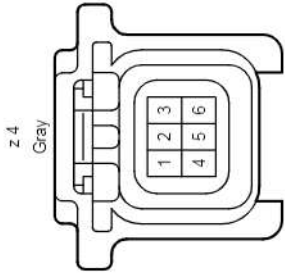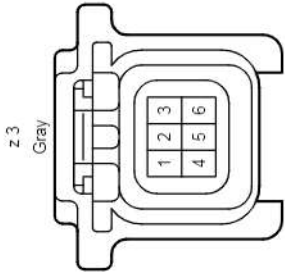



- * 1: Before Dec. 2011 Production
- * 2: From Dec. 2011 Production

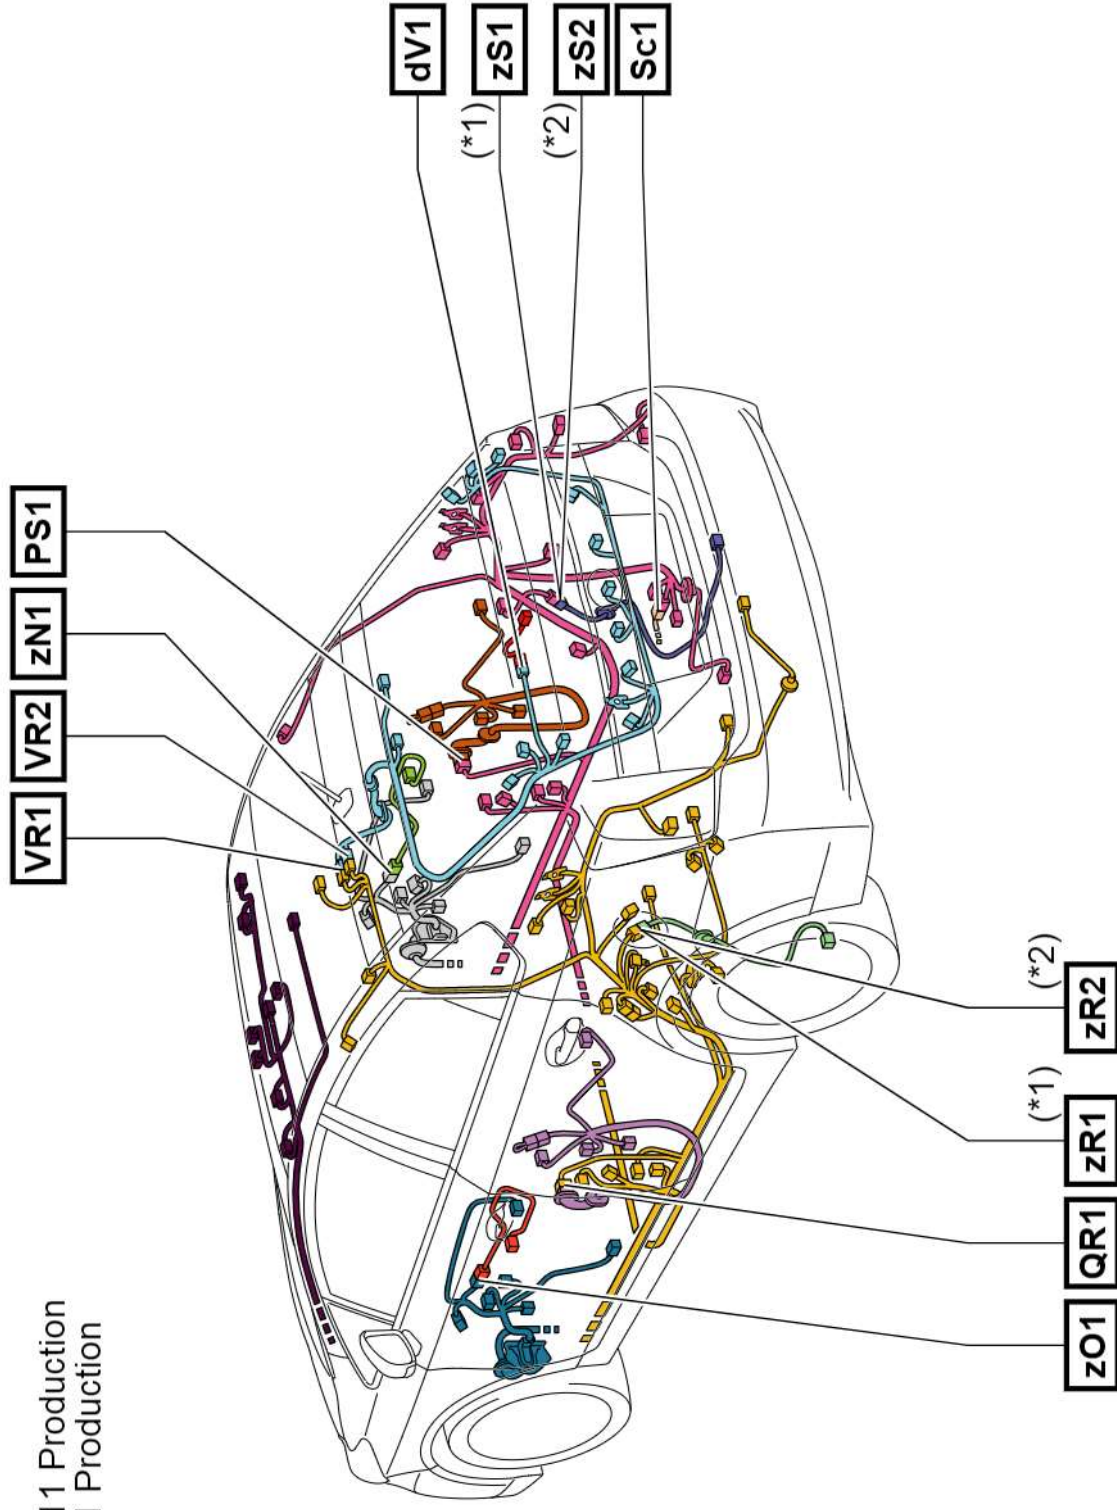



PS1
White

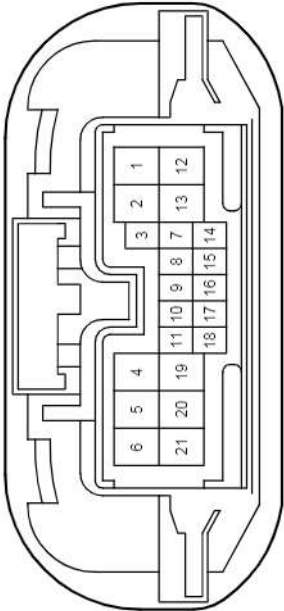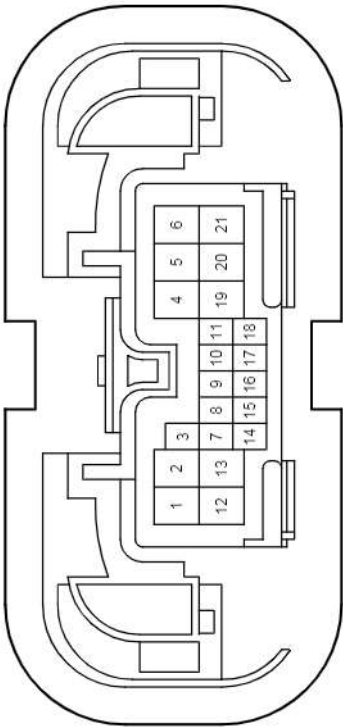

QR1
White

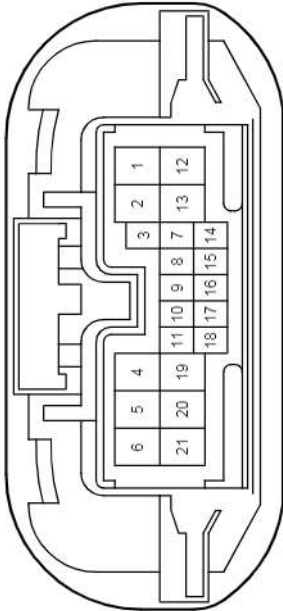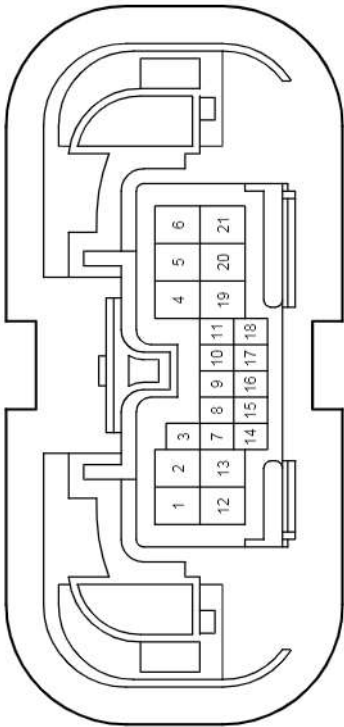


Sc1
White

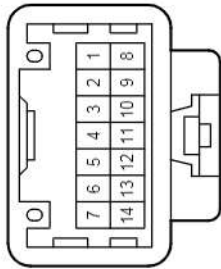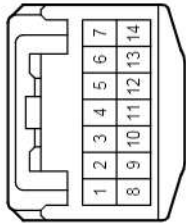


VR1
White


VR2
White

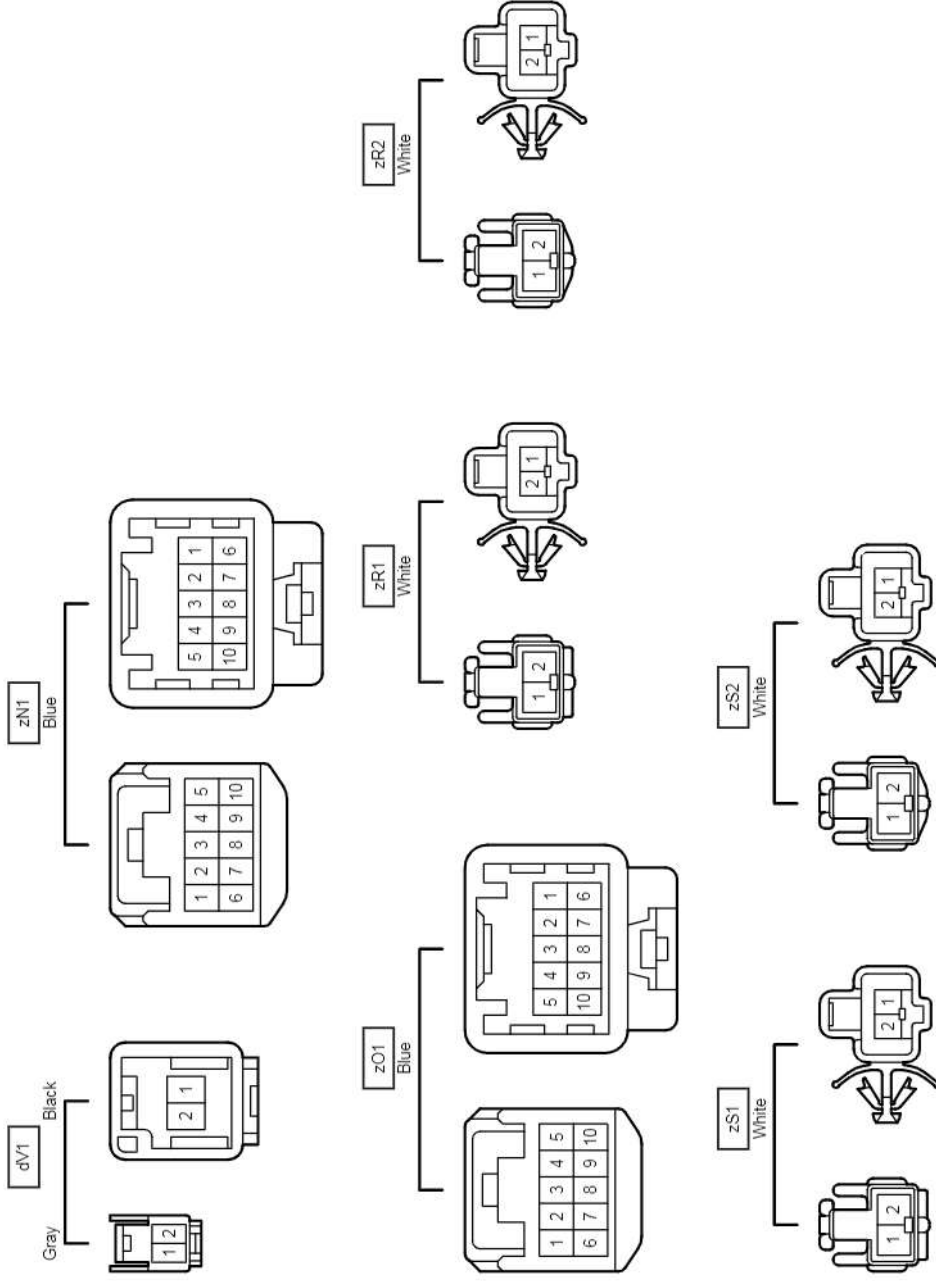

Ground Points in Engine Compartment <LHD>

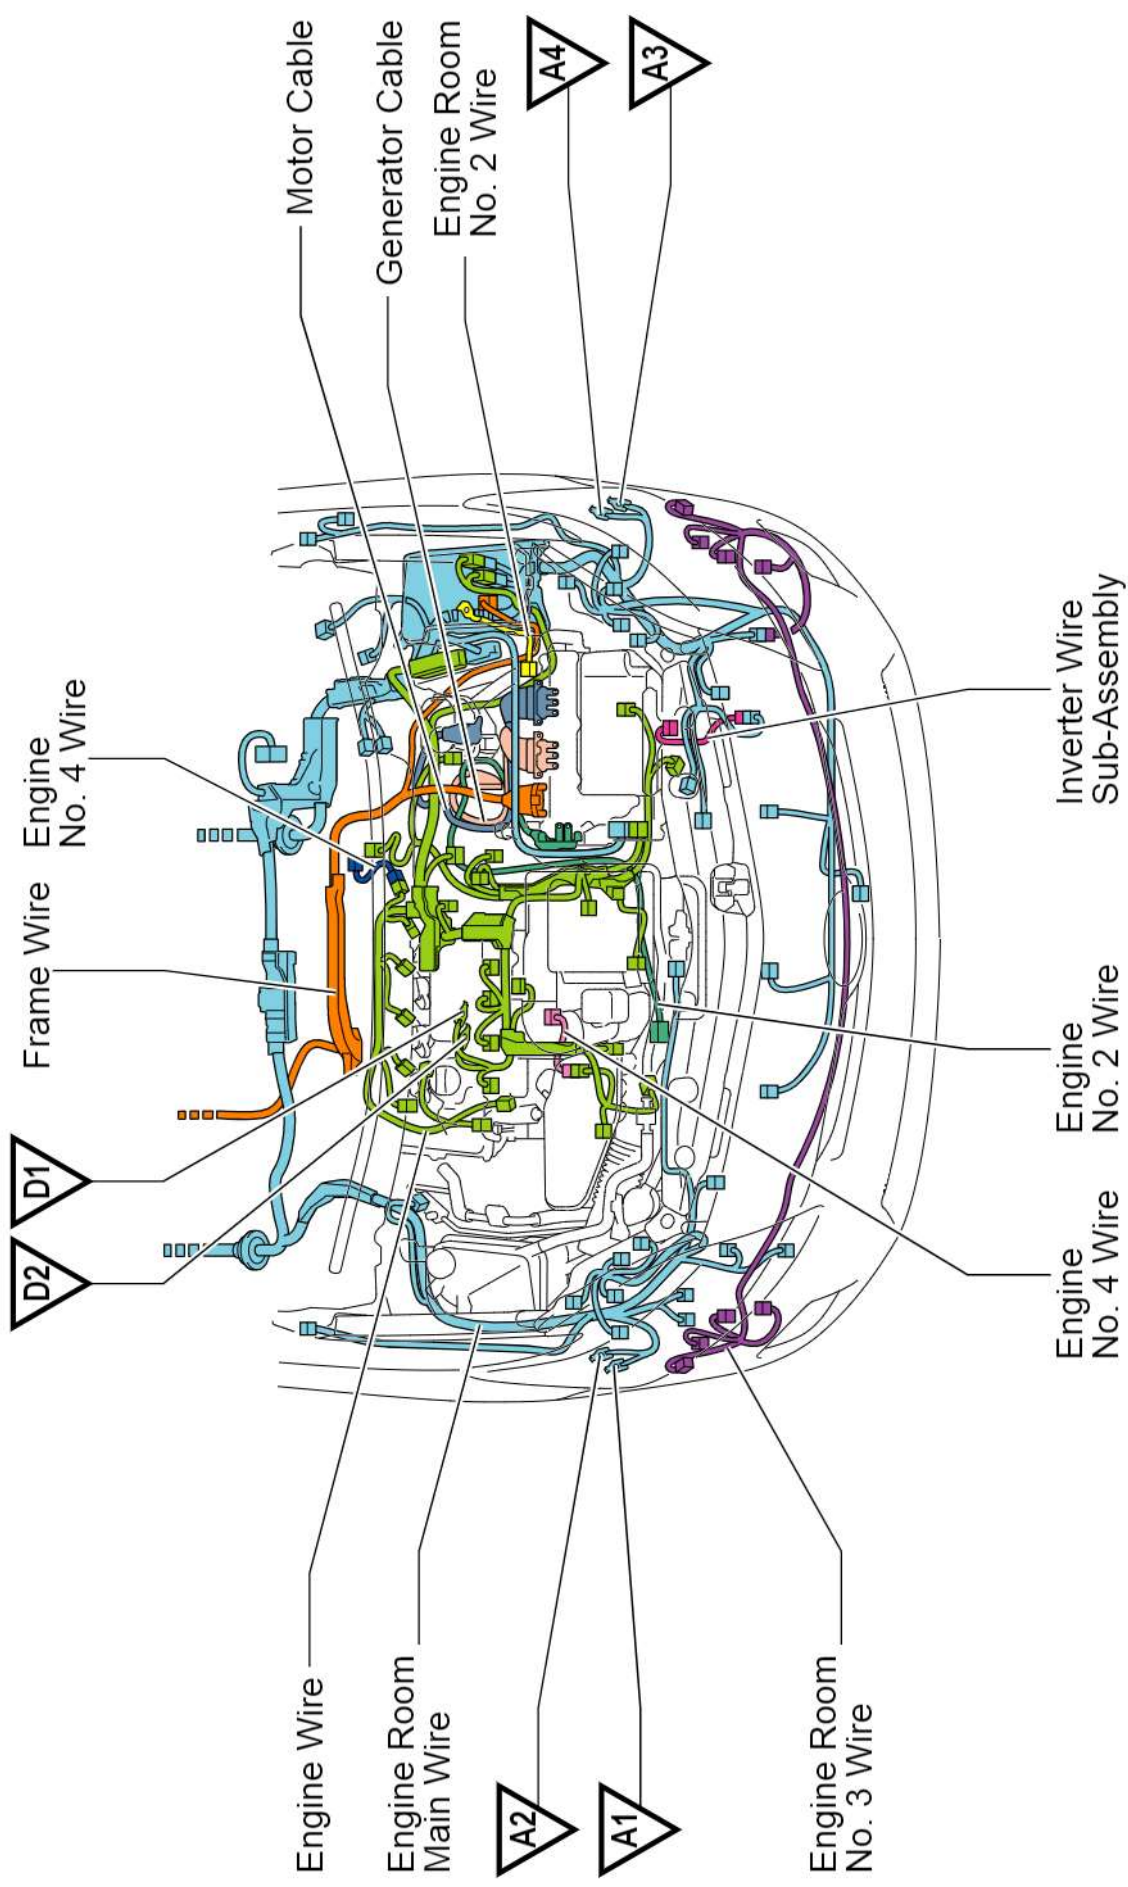



















Position of Parts in Engine Compartment <LHD>

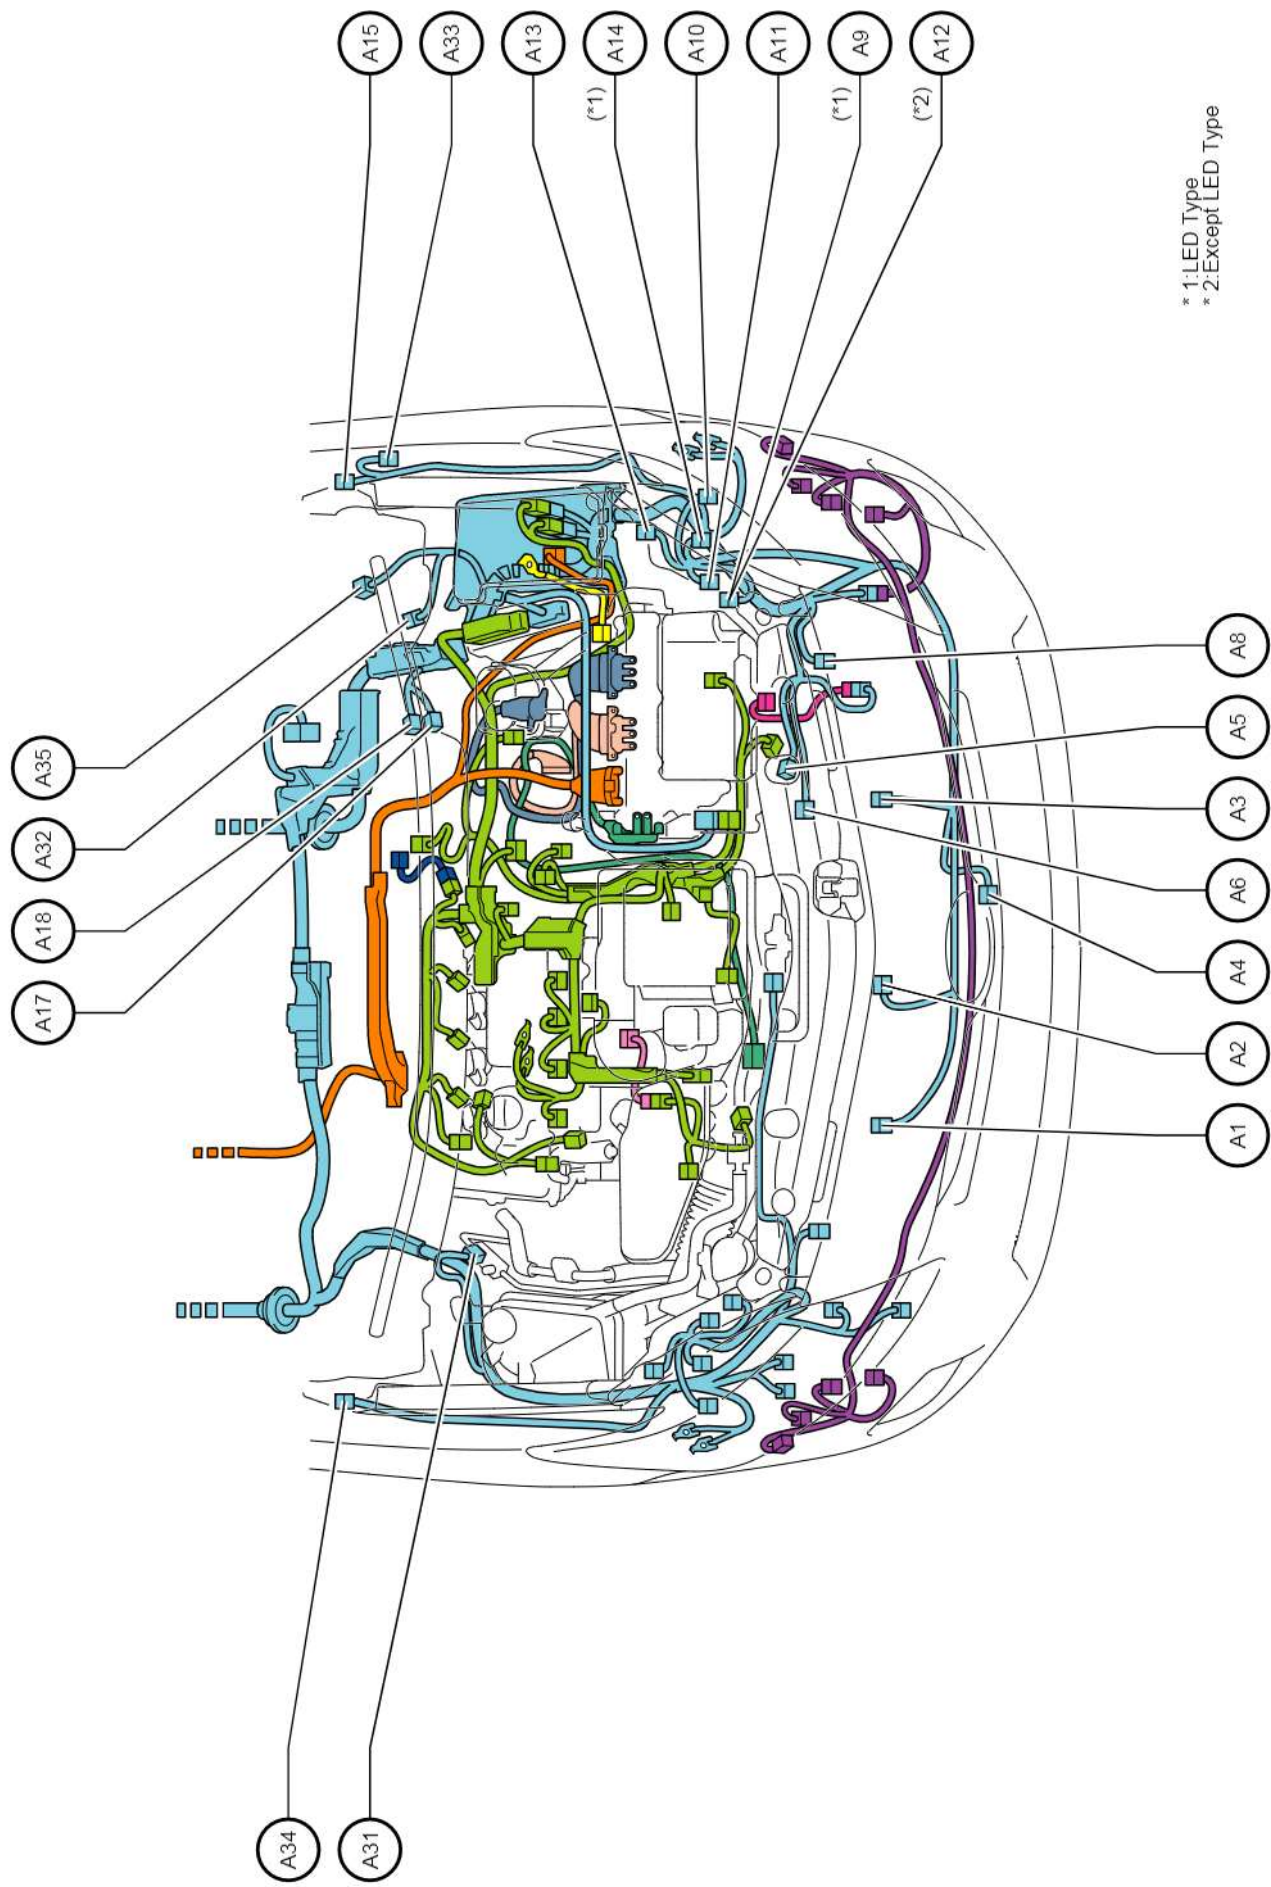


* 1: LED Type
* 2: Except LED Type

- A 1 High Pitched Horn Assembly
- A 2 Millimeter Wave Radar Sensor Assembly
- A 3 Low Pitched Horn Assembly
- A 4 Ambient Temperature Sensor
- A 5 Cooling Fan Motor
- A 6 No. 2 Cooling Fan Motor
- A 8 Front Airbag Sensor LH
- A 9 Headlight Assembly LH
- A 10 Headlight Assembly LH
- A 11 Headlight Assembly LH
- A 12 Headlight Assembly LH
- A 13 Headlight Assembly LH
- A 14 Headlight Assembly LH
- A 15 Front Speed Sensor LH
- A 17 Brake Booster Pump Assembly
- A 18 Brake Booster Pump Assembly
- A 31 A/C Pressure Sensor
- A 32 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 33 Wireless Door Lock Buzzer
- A 34 Front Speed Sensor RH
- A 35 Windshield Wiper Motor Assembly

  Position of Parts in Engine Compartment <LHD>

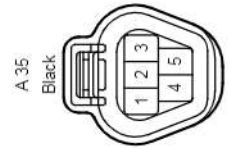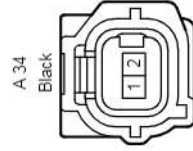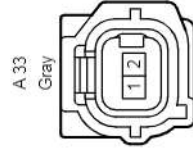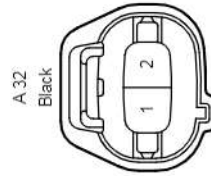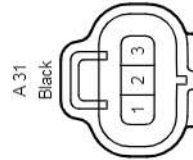
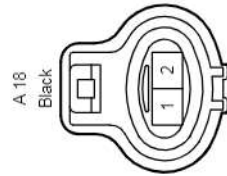
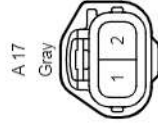
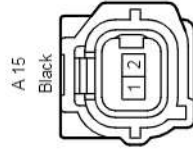
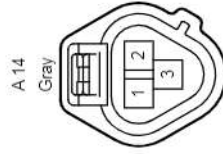
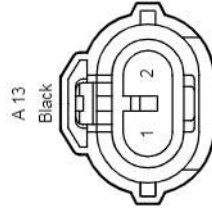
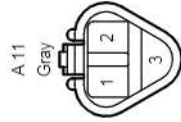
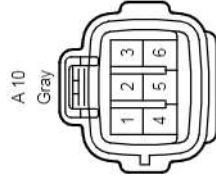
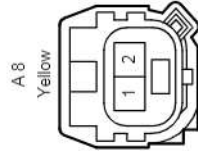
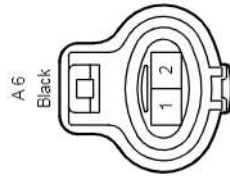
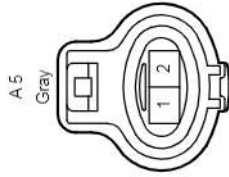

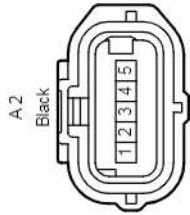



Position of Parts in Engine Compartment <LHD>

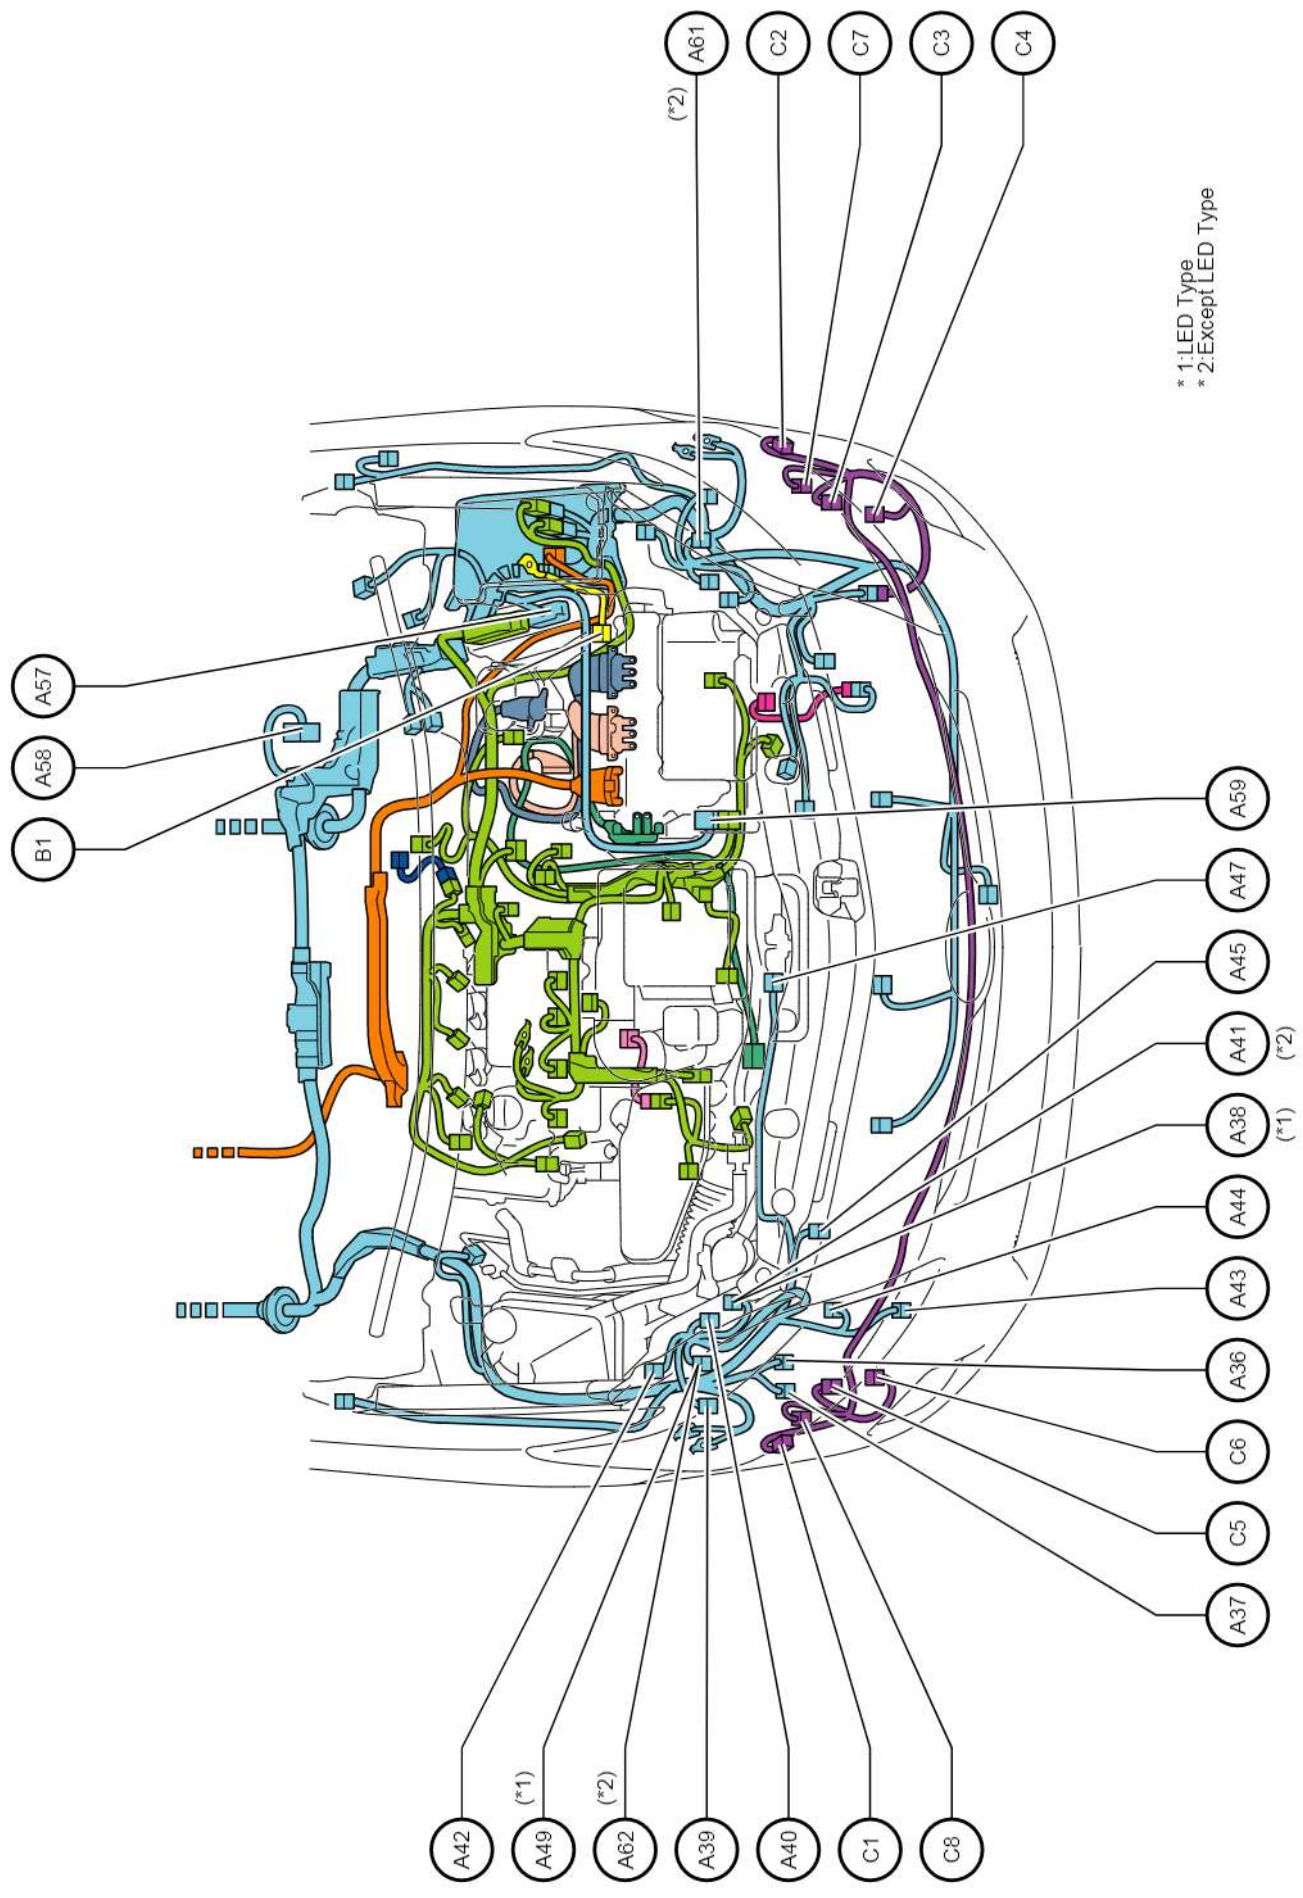


A	36	Windshield Washer Motor and Pump Assembly
A	37	Rear Washer Motor and Pump Assembly
A	38	Headlight Assembly RH
A	39	Headlight Assembly RH
A	40	Headlight Assembly RH
A	41	Headlight Assembly RH
A	42	Headlight Assembly RH
A	43	Headlight Cleaner Motor and Pump Assembly
A	44	Headlight Cleaner Relay
A	45	Front Airbag Sensor RH
A	47	Engine Hood Courtesy Switch Assembly
A	49	Headlight Assembly RH
A	57	ECM
A	58	Skid Control ECU with Actuator Assembly
A	59	Inverter with Converter Assembly
A	61	Headlight Assembly LH
A	62	Headlight Assembly RH
B	1	Inverter with Converter Assembly
C	1	No. 1 Ultrasonic Sensor RH
C	2	No. 1 Ultrasonic Sensor LH
C	3	Front Turn Signal Light LH
C	4	Fog Light Assembly LH
C	5	Front Turn Signal Light RH
C	6	Fog Light Assembly RH
C	7	Front Turn Signal Light LH
C	8	Front Turn Signal Light RH

Position of Parts in Engine Compartment <LHD>

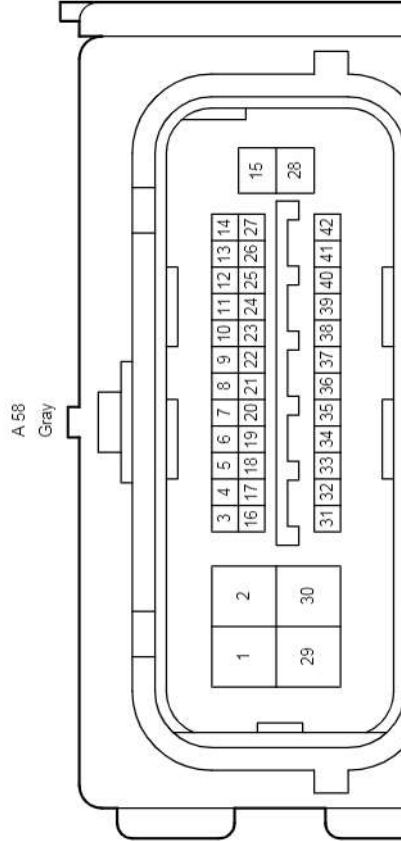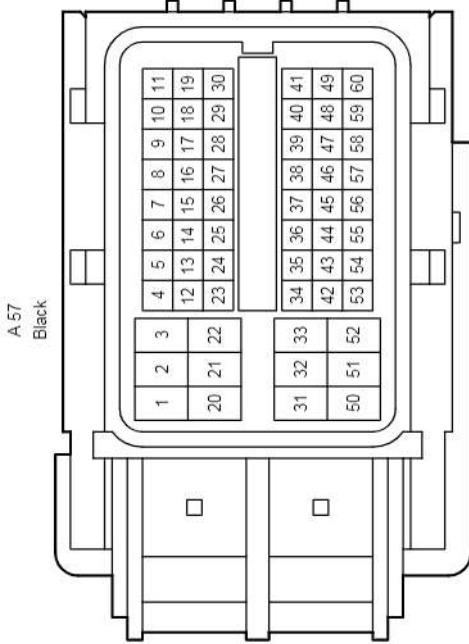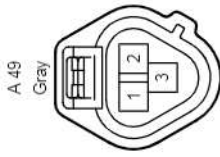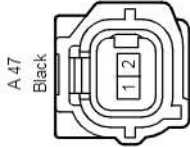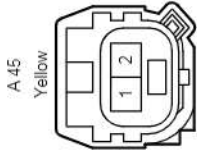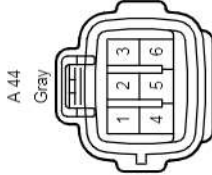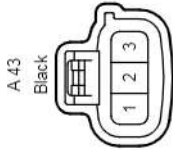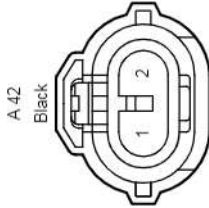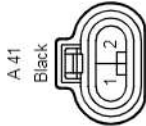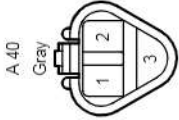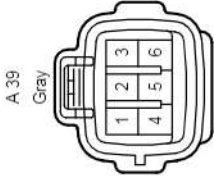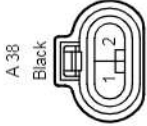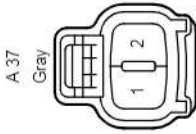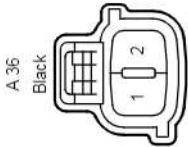

Position of Parts in Engine Compartment <LHD>


A 59
Black

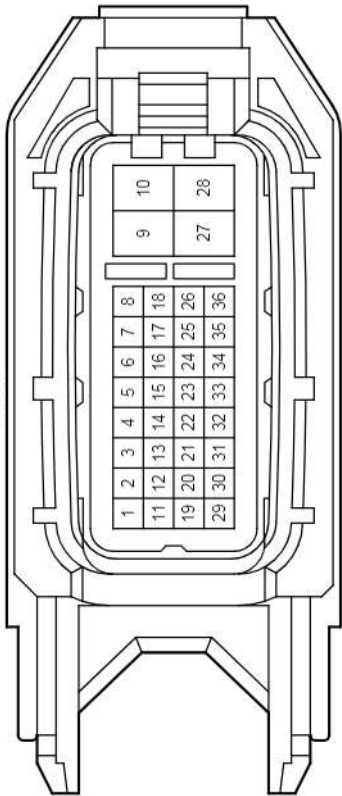

A 61
Black




A 62
Black

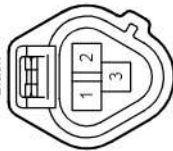


B 1




C 1
Black

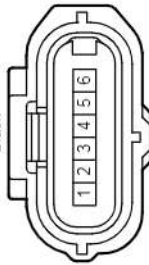


C 2
Black

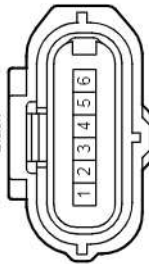


C 4
Black

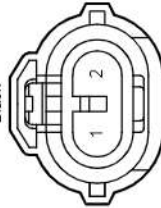


C 5
Gray

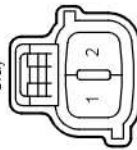


C 6
Black

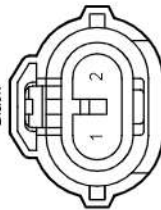


C 3
Gray

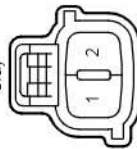


C 7
Gray

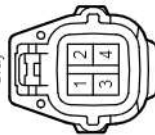

C 8
Gray
























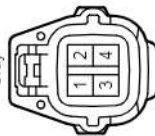


Position of Parts in Engine Compartment <LHD>

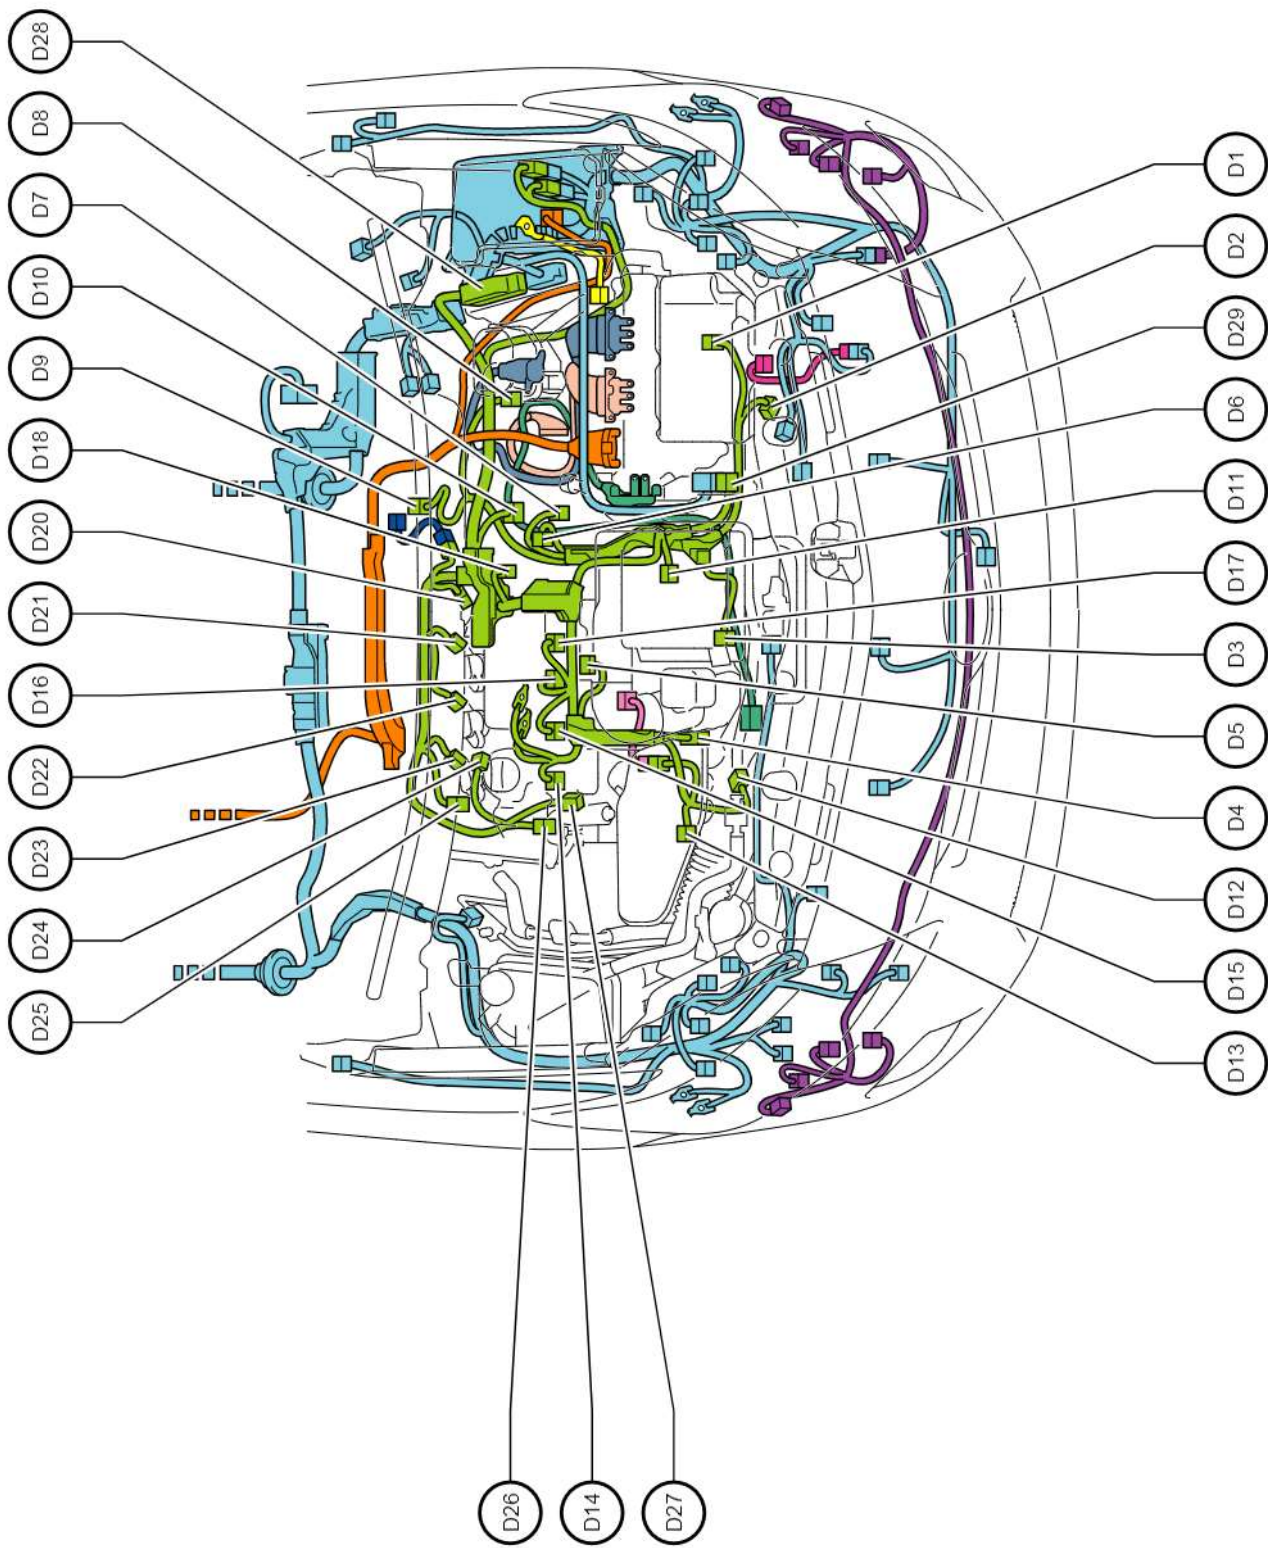


D 1	No. 2 Motor Generator
D 2	Shift Control Actuator Assembly
D 3	E.F.I. Vacuum Sensor Assembly
D 4	Throttle Body Assembly
D 5	Mass Air Flow Meter
D 6	E.F.I. Engine Coolant Temperature Sensor
D 7	No. 1 Motor Generator
D 8	No. 2 Motor Generator
D 9	Oxygen Sensor (Bank 1 Sensor 2)
D 10	EGR Valve Assembly
D 11	Purge VSV
D 12	Compressor with Motor Assembly
D 13	Water Pump Assembly
D 14	Fuel Injector Assembly No. 1
D 15	Fuel Injector Assembly No. 2
D 16	Fuel Injector Assembly No. 3
D 17	Fuel Injector Assembly No. 4
D 18	VVT Sensor (Intake Side)
D 20	Ignition Coil Assembly No. 4
D 21	Ignition Coil Assembly No. 3
D 22	Ignition Coil Assembly No. 2
D 23	Ignition Coil Assembly No. 1
D 24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 25	Camshaft Timing Oil Control Valve (Intake Side)
D 26	Engine Oil Pressure Switch Assembly
D 27	Crankshaft Position Sensor
D 28	ECM
D 29	Inverter with Converter Assembly


Position of Parts in Engine Compartment <LHD>

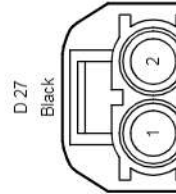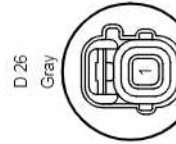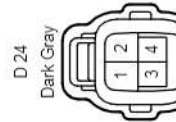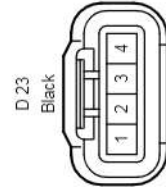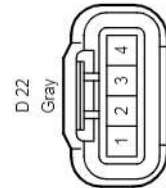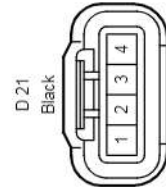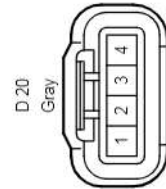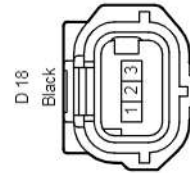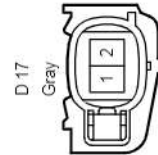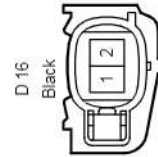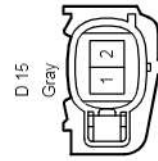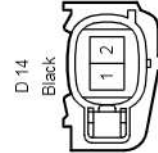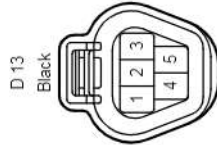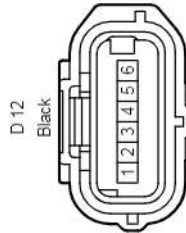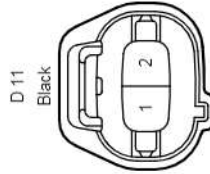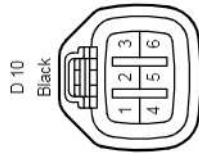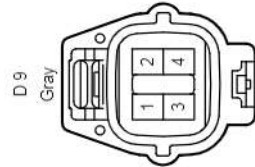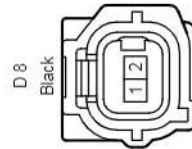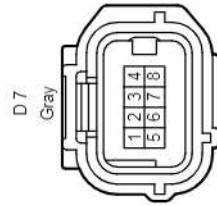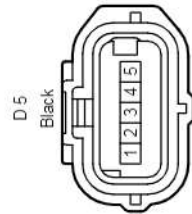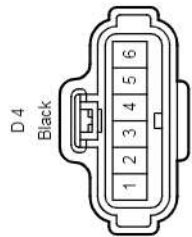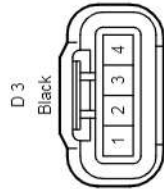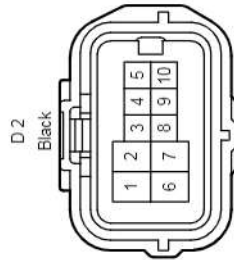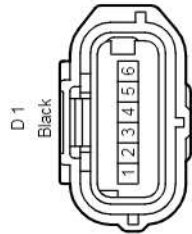

D 28
Black

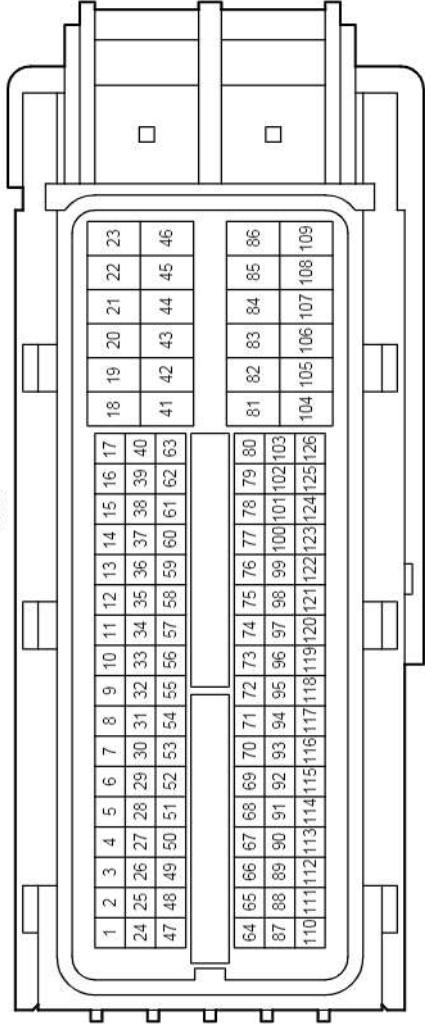


D 29
Black

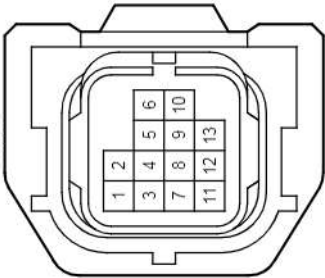












Position of Parts in Engine Compartment <LHD>



- * 3: Before Dec. 2011 Production
- * 4: From Dec. 2011 Production
- * 5: Before Jul. 2012 Production
- * 6: From Jul. 2012 Production until May 2014 Production
- * 7: Before May 2014 Production
- * 8: From May 2014 Production

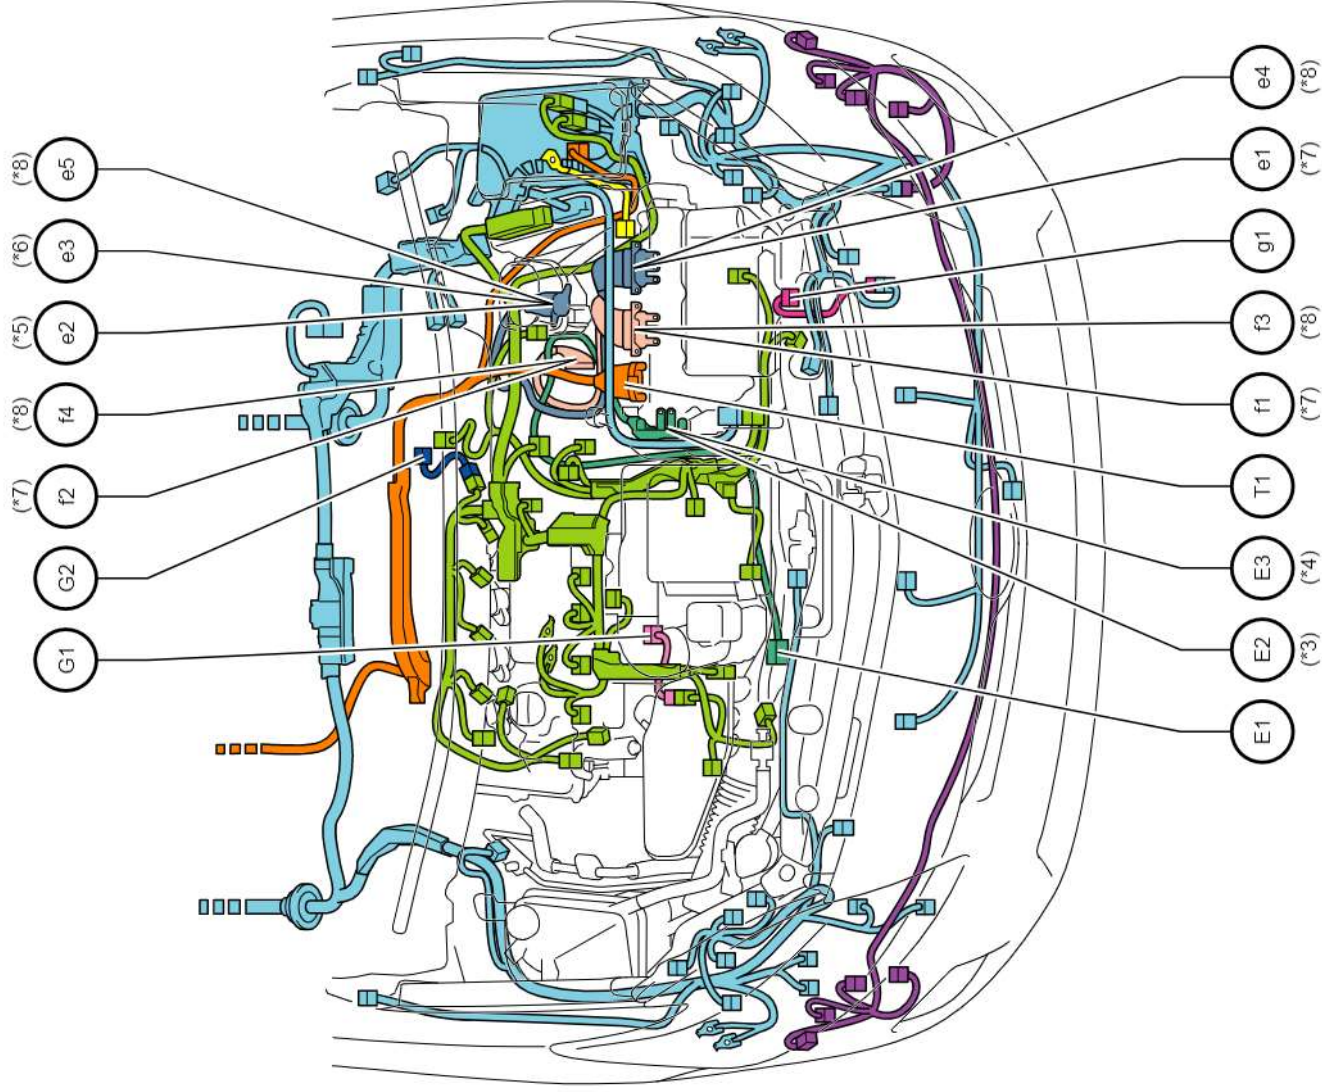


E	1	Compressor with Motor Assembly
E	2	Inverter with Converter Assembly
E	3	Inverter with Converter Assembly
G	1	Knock Control Sensor (Bank 1)
G	2	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
T	1	Inverter with Converter Assembly
e	1	Inverter with Converter Assembly
e	2	No. 2 Motor Generator
e	3	No. 2 Motor Generator
e	4	Inverter with Converter Assembly
e	5	No. 2 Motor Generator
f	1	Inverter with Converter Assembly
f	2	No. 1 Motor Generator
f	3	Inverter with Converter Assembly
f	4	No. 1 Motor Generator
g	1	Inverter Water Pump Motor Assembly


Position of Parts in Engine Compartment <LHD>

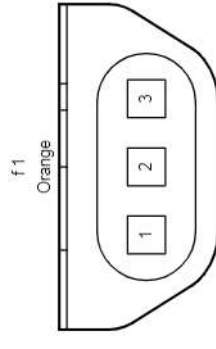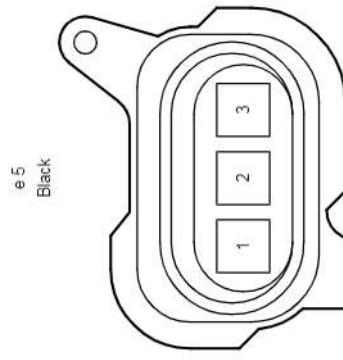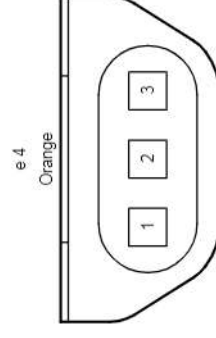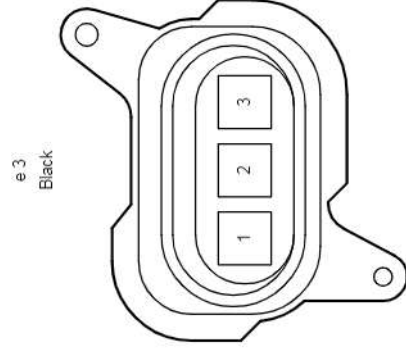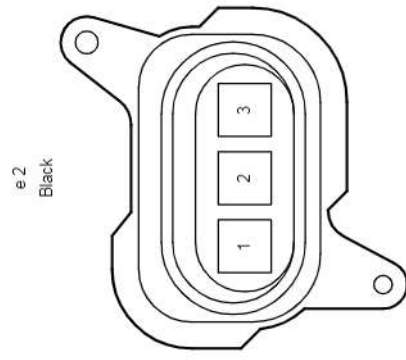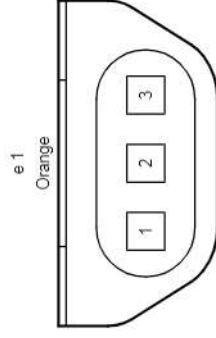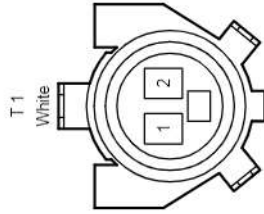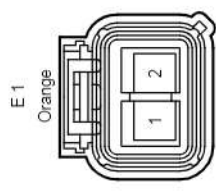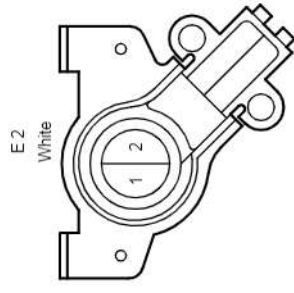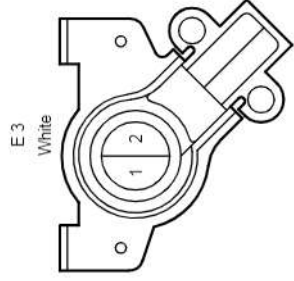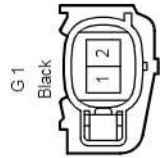

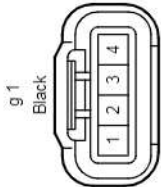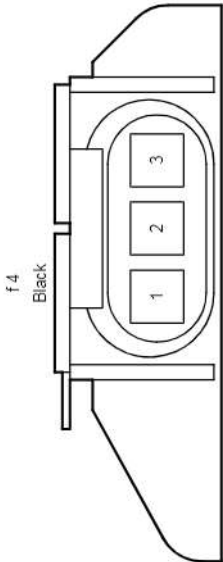


Wire and Wire in Engine Compartment <LHD>

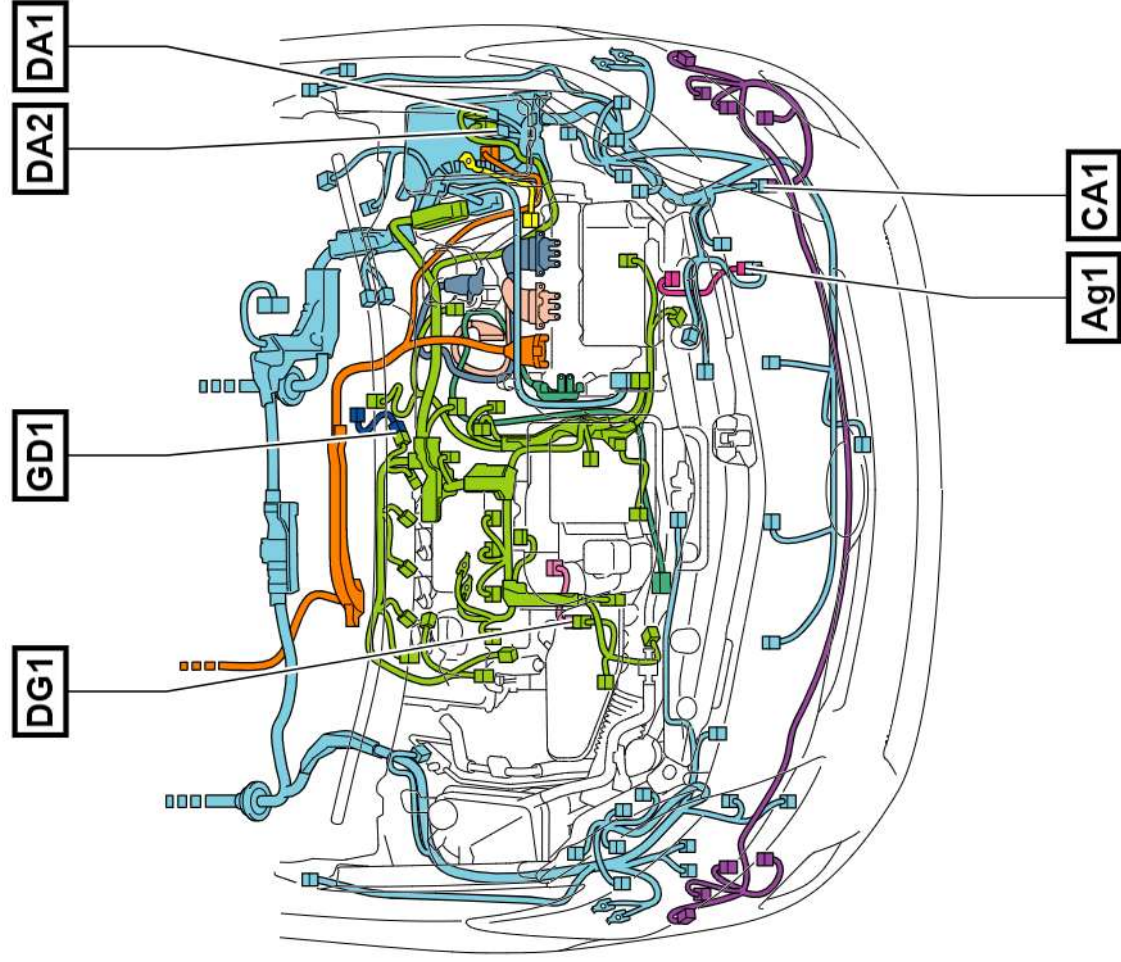


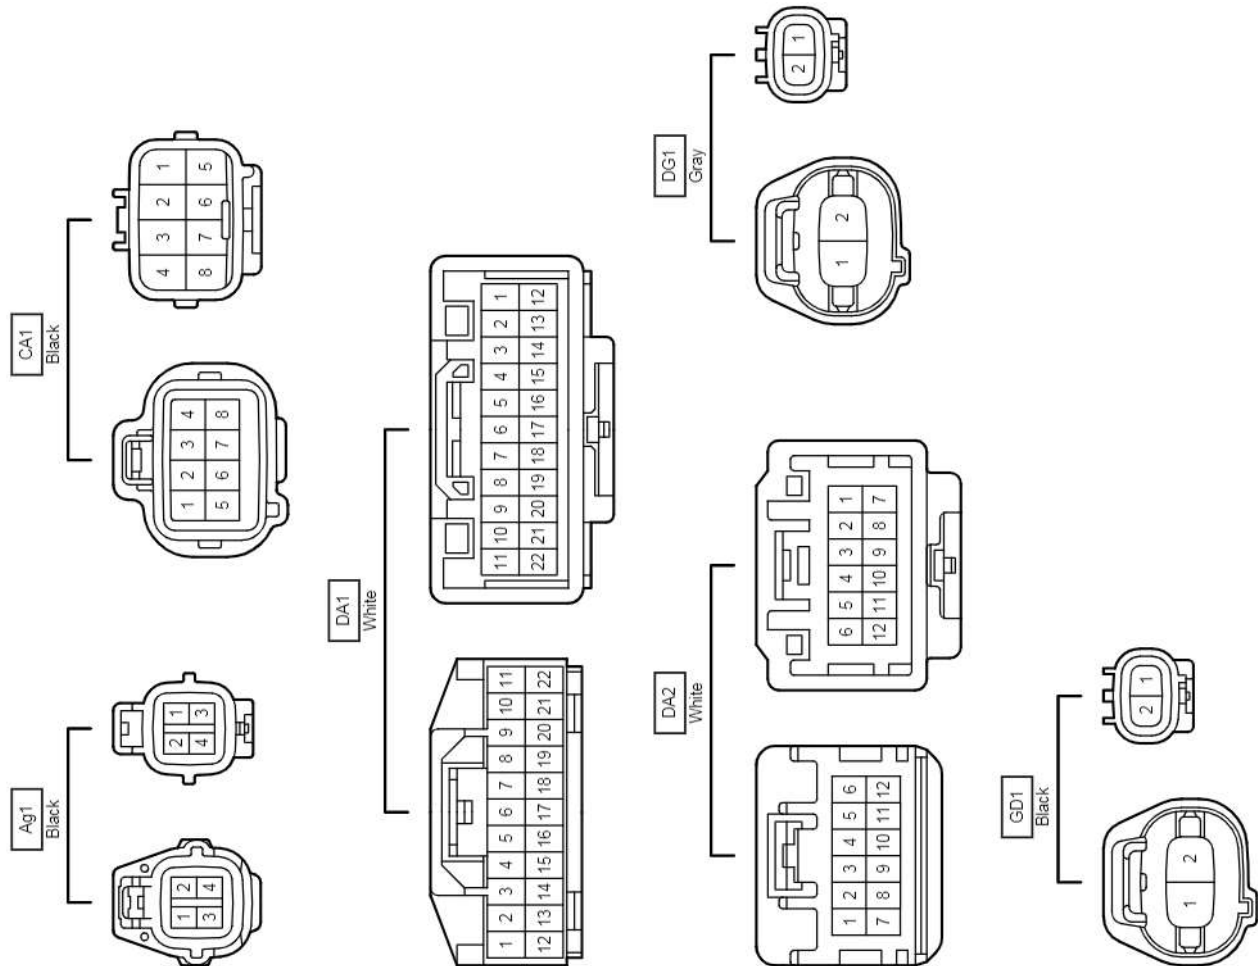

Ground Points in Engine Compartment <RHD>

















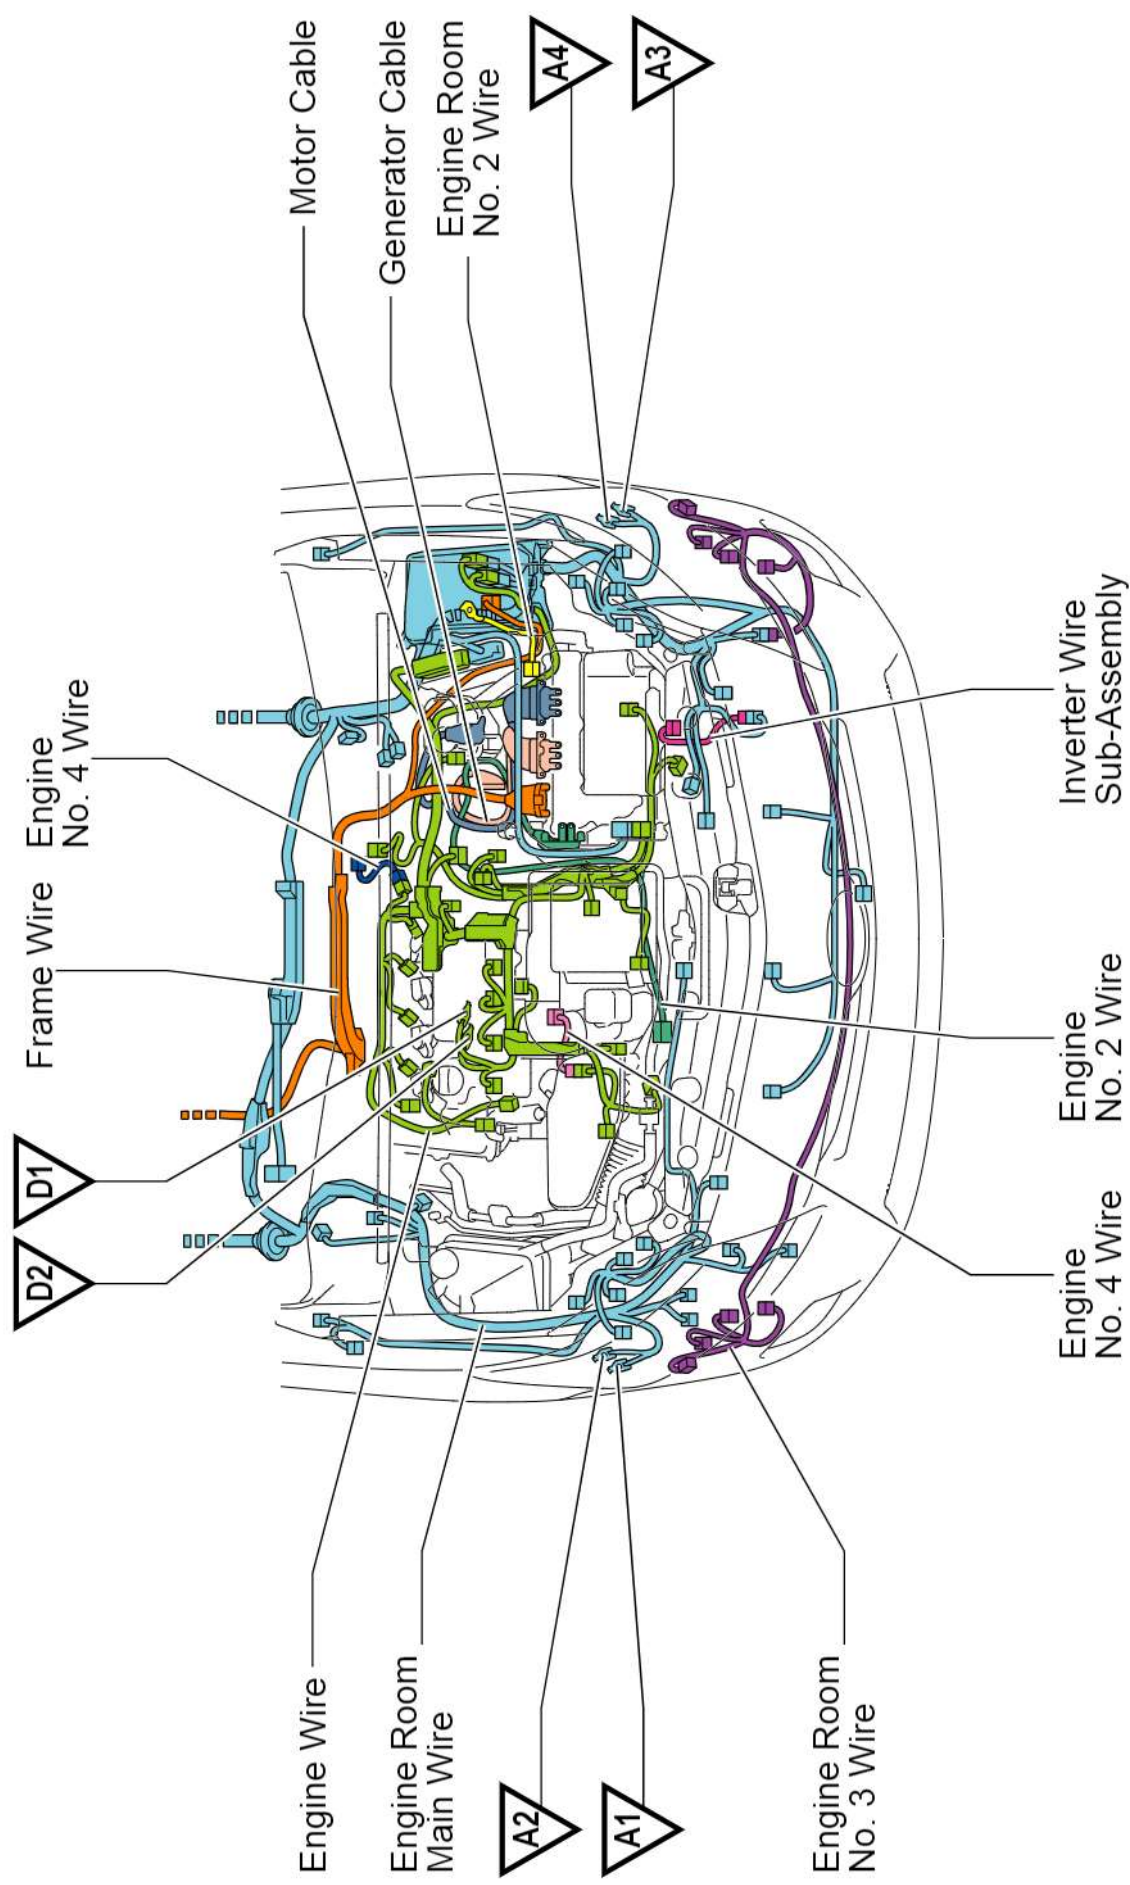


Position of Parts in Engine Compartment <RHD>

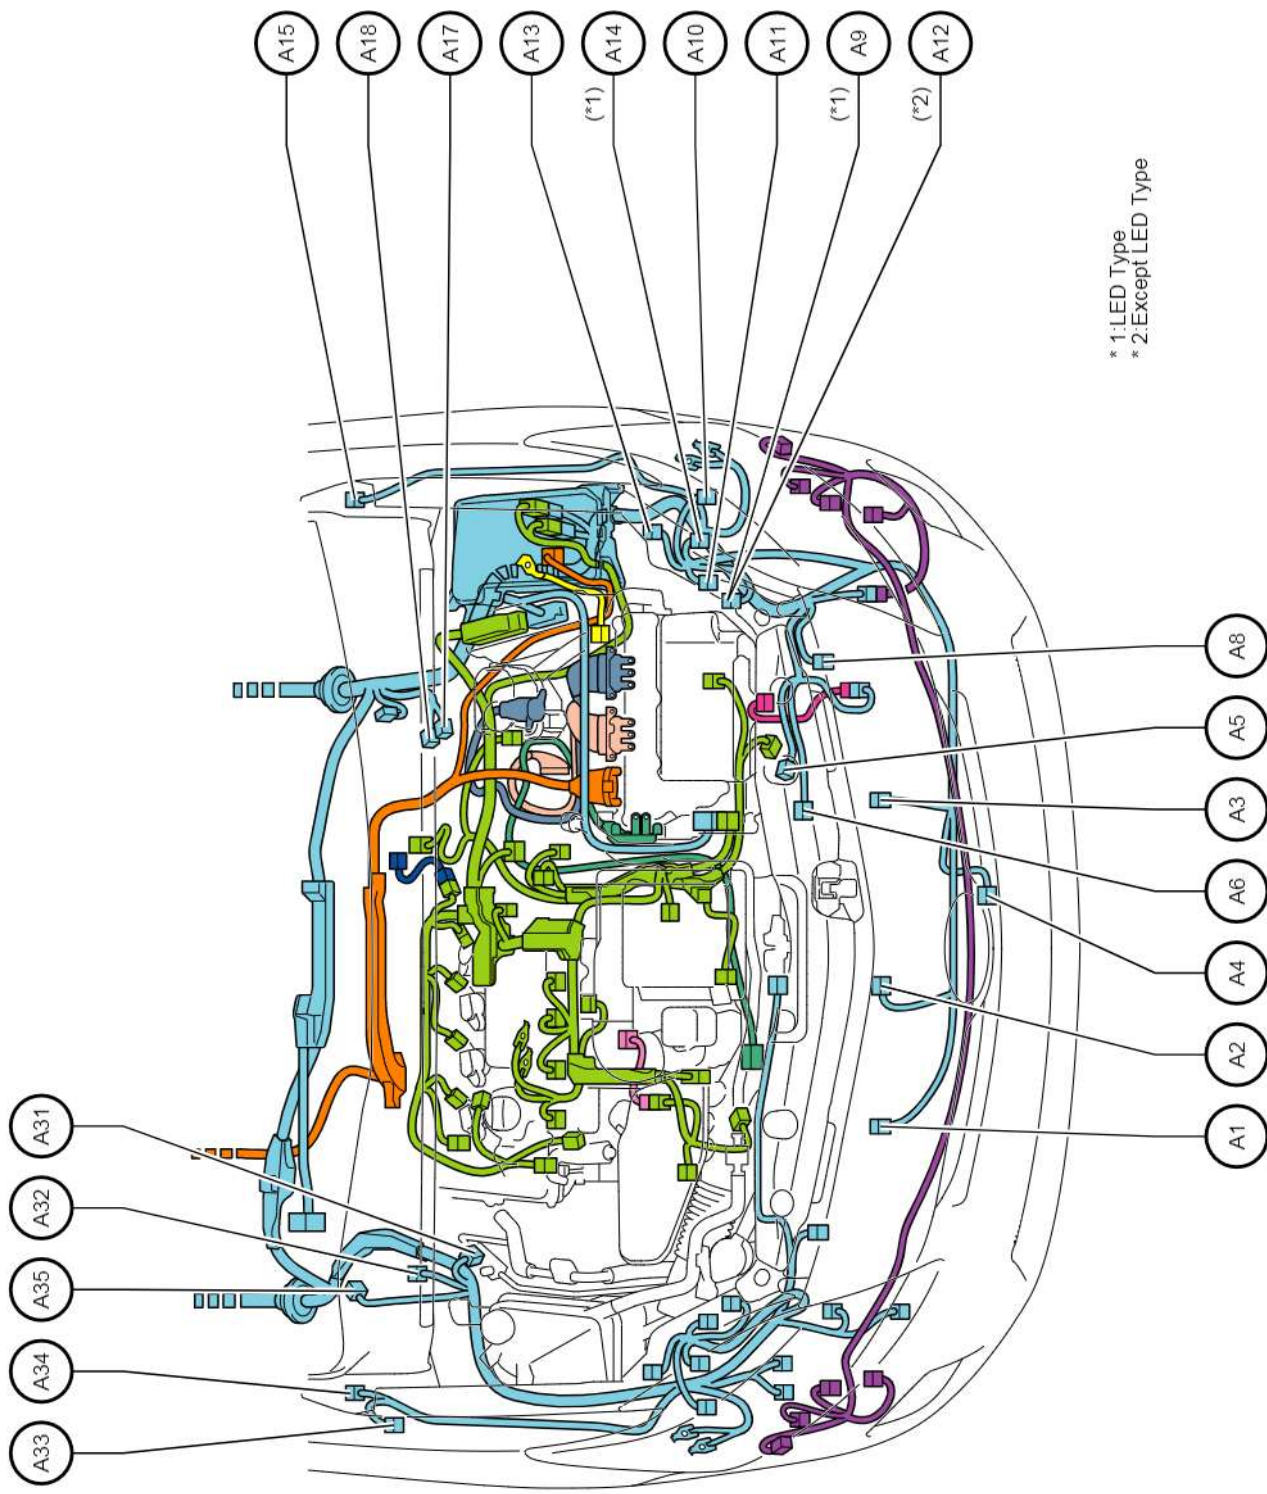


- A 1 High Pitched Horn Assembly
- A 2 Millimeter Wave Radar Sensor Assembly
- A 3 Low Pitched Horn Assembly
- A 4 Ambient Temperature Sensor
- A 5 Cooling Fan Motor
- A 6 No. 2 Cooling Fan Motor
- A 8 Front Airbag Sensor LH
- A 9 Headlight Assembly LH
- A 10 Headlight Assembly LH
- A 11 Headlight Assembly LH
- A 12 Headlight Assembly LH
- A 13 Headlight Assembly LH
- A 14 Headlight Assembly LH
- A 15 Front Speed Sensor LH
- A 17 Brake Booster Pump Assembly
- A 18 Brake Booster Pump Assembly
- A 31 A/C Pressure Sensor
- A 32 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 33 Wireless Door Lock Buzzer
- A 34 Front Speed Sensor RH
- A 35 Windshield Wiper Motor Assembly

 Position of Parts in Engine Compartment <RHD>

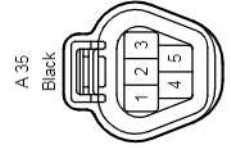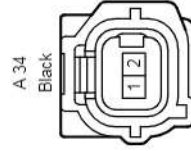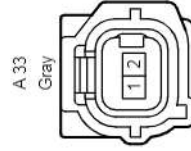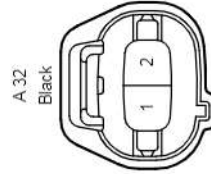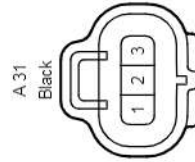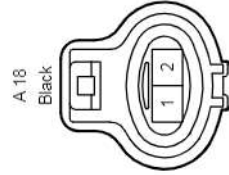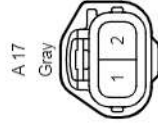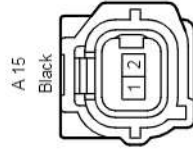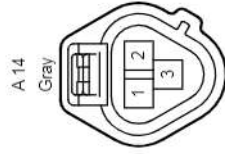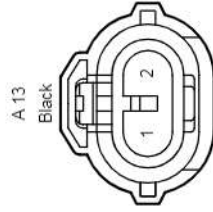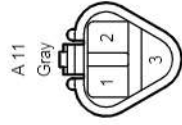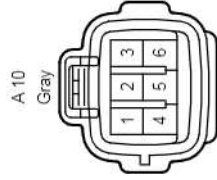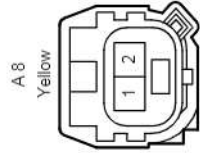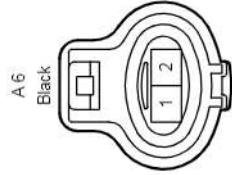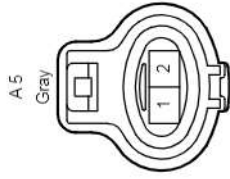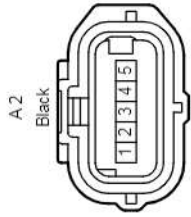


Position of Parts in Engine Compartment <RHD>

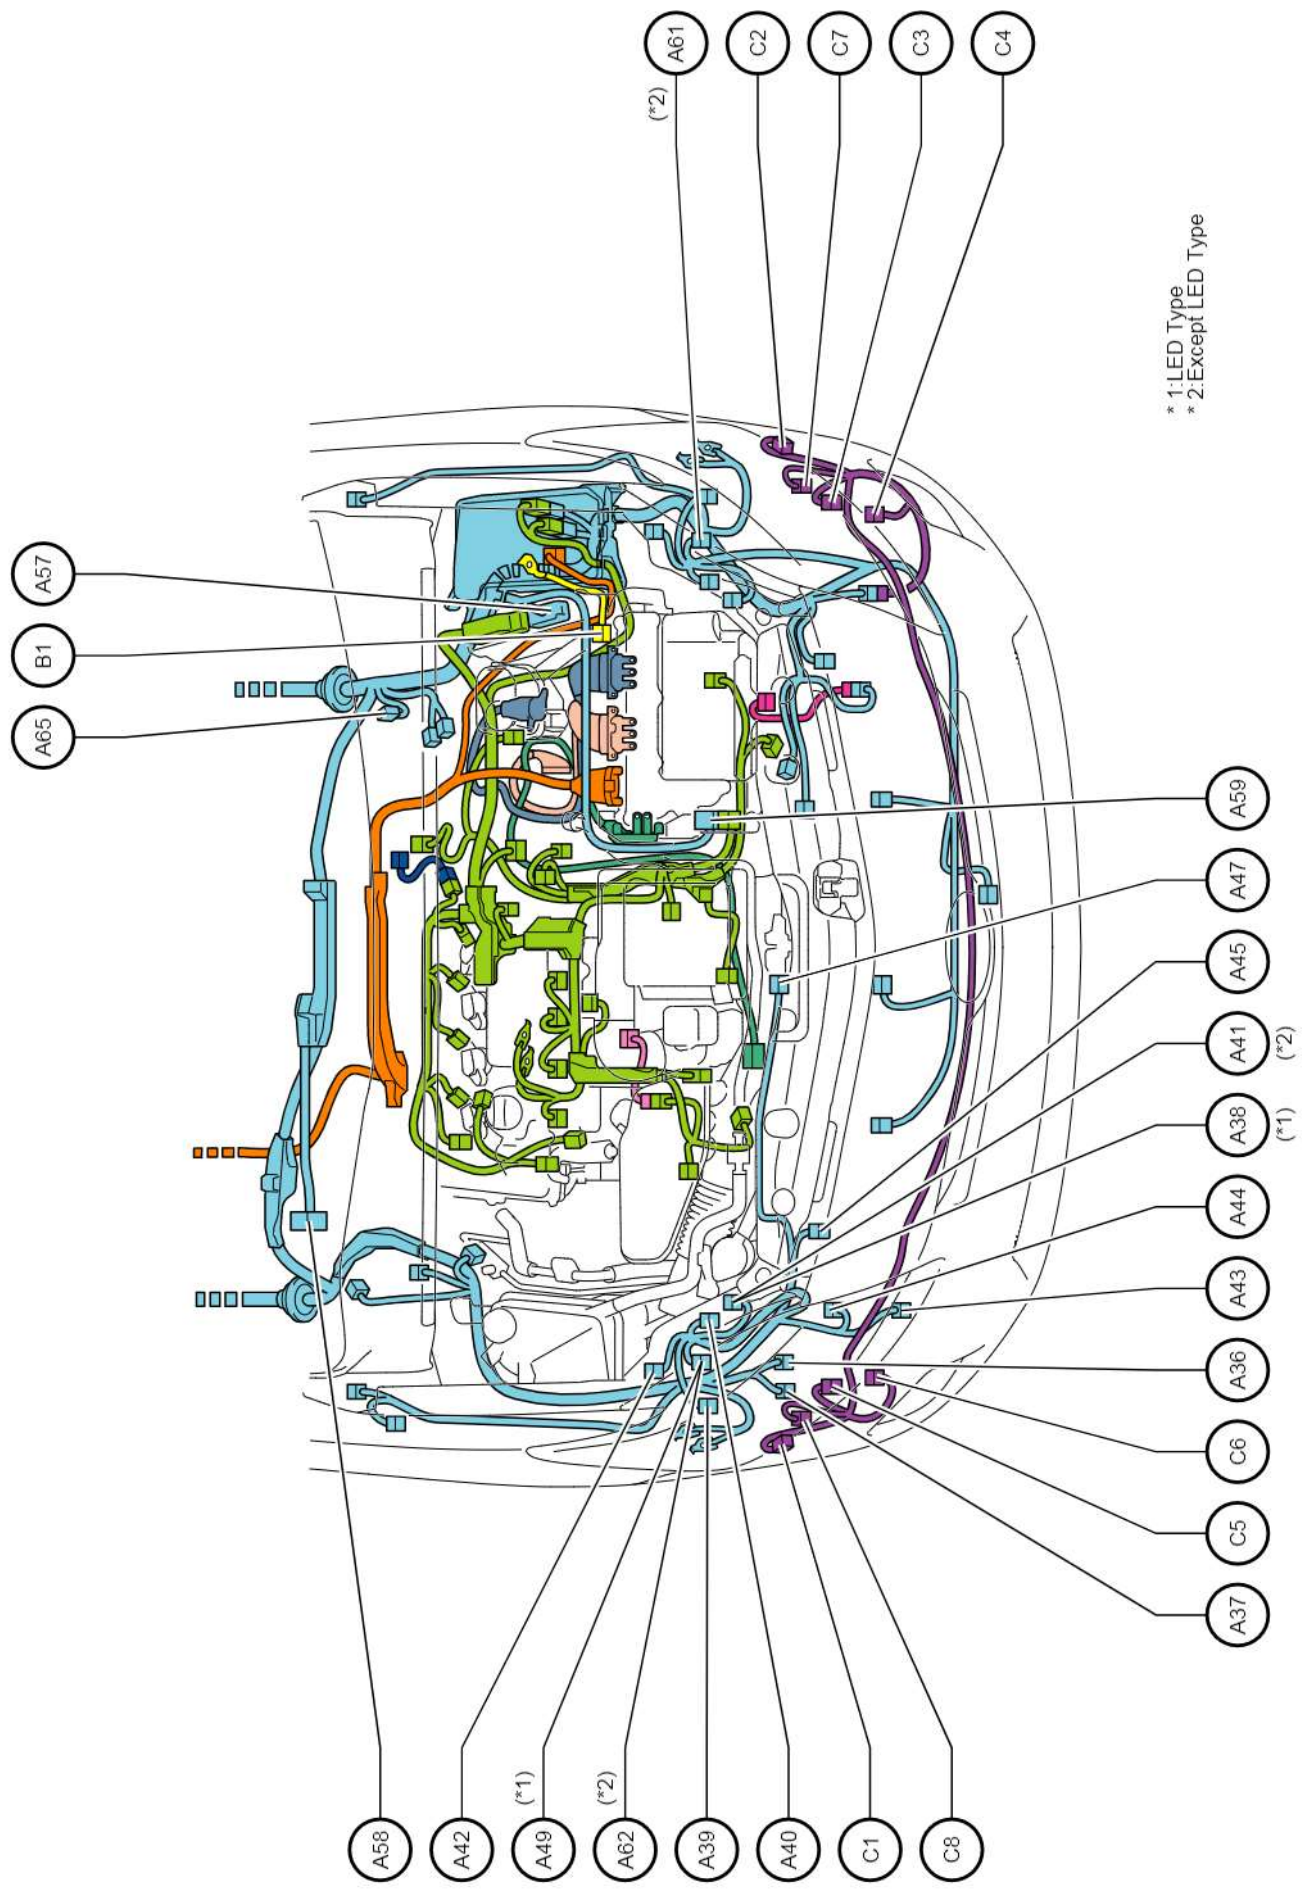


A	36	Windshield Washer Motor and Pump Assembly
A	37	Rear Washer Motor and Pump Assembly
A	38	Headlight Assembly RH
A	39	Headlight Assembly RH
A	40	Headlight Assembly RH
A	41	Headlight Assembly RH
A	42	Headlight Assembly RH
A	43	Headlight Cleaner Motor and Pump Assembly
A	44	Headlight Cleaner Relay
A	45	Front Airbag Sensor RH
A	47	Engine Hood Courtesy Switch Assembly
A	49	Headlight Assembly RH
A	57	ECM
A	58	Skid Control ECU with Actuator Assembly
A	59	Inverter with Converter Assembly
A	61	Headlight Assembly LH
A	62	Headlight Assembly RH
A	65	Security Horn Assembly
B	1	Inverter with Converter Assembly
C	1	No. 1 Ultrasonic Sensor RH
C	2	No. 1 Ultrasonic Sensor LH
C	3	Front Turn Signal Light LH
C	4	Fog Light Assembly LH
C	5	Front Turn Signal Light RH
C	6	Fog Light Assembly RH
C	7	Front Turn Signal Light LH
C	8	Front Turn Signal Light RH


Position of Parts in Engine Compartment <RHD>

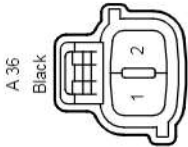


A 36
Black

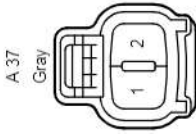


A 37
Gray

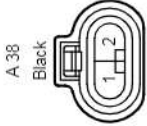


A 38
Black

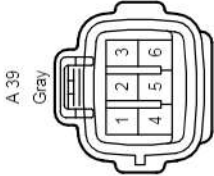


A 39
Gray

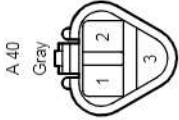


A 40
Gray

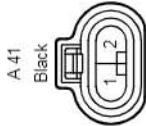


A 41
Black

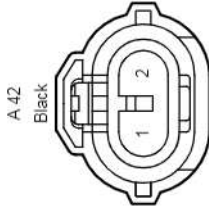


A 42
Black

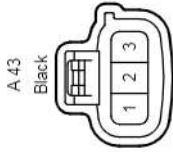


A 43
Black

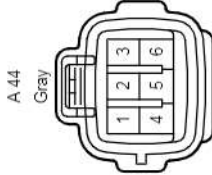


A 44
Gray

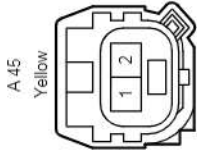


A 45
Yellow

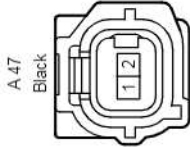


A 47
Black

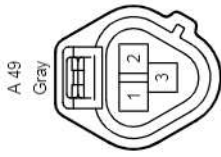

A 49
Gray

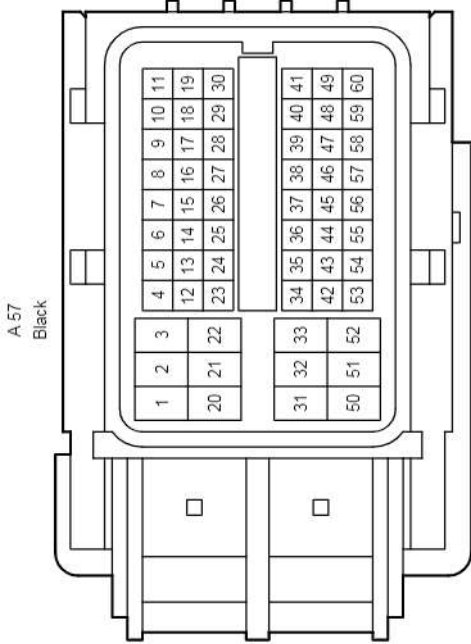


A 57
Black

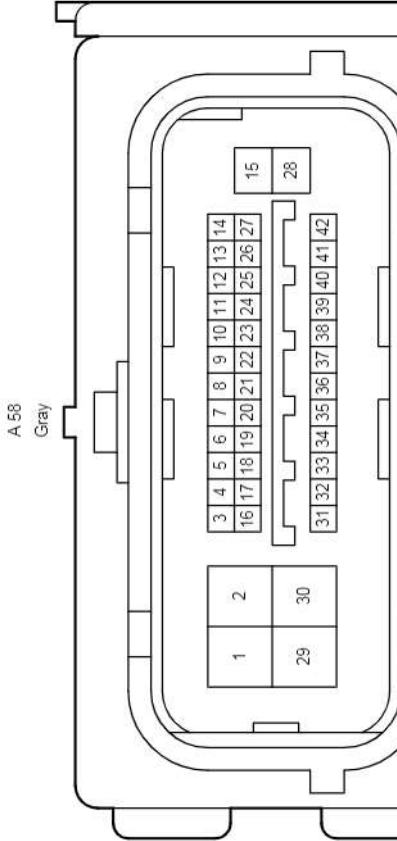


A 58
Gray

Position of Parts in Engine Compartment <RHD>
























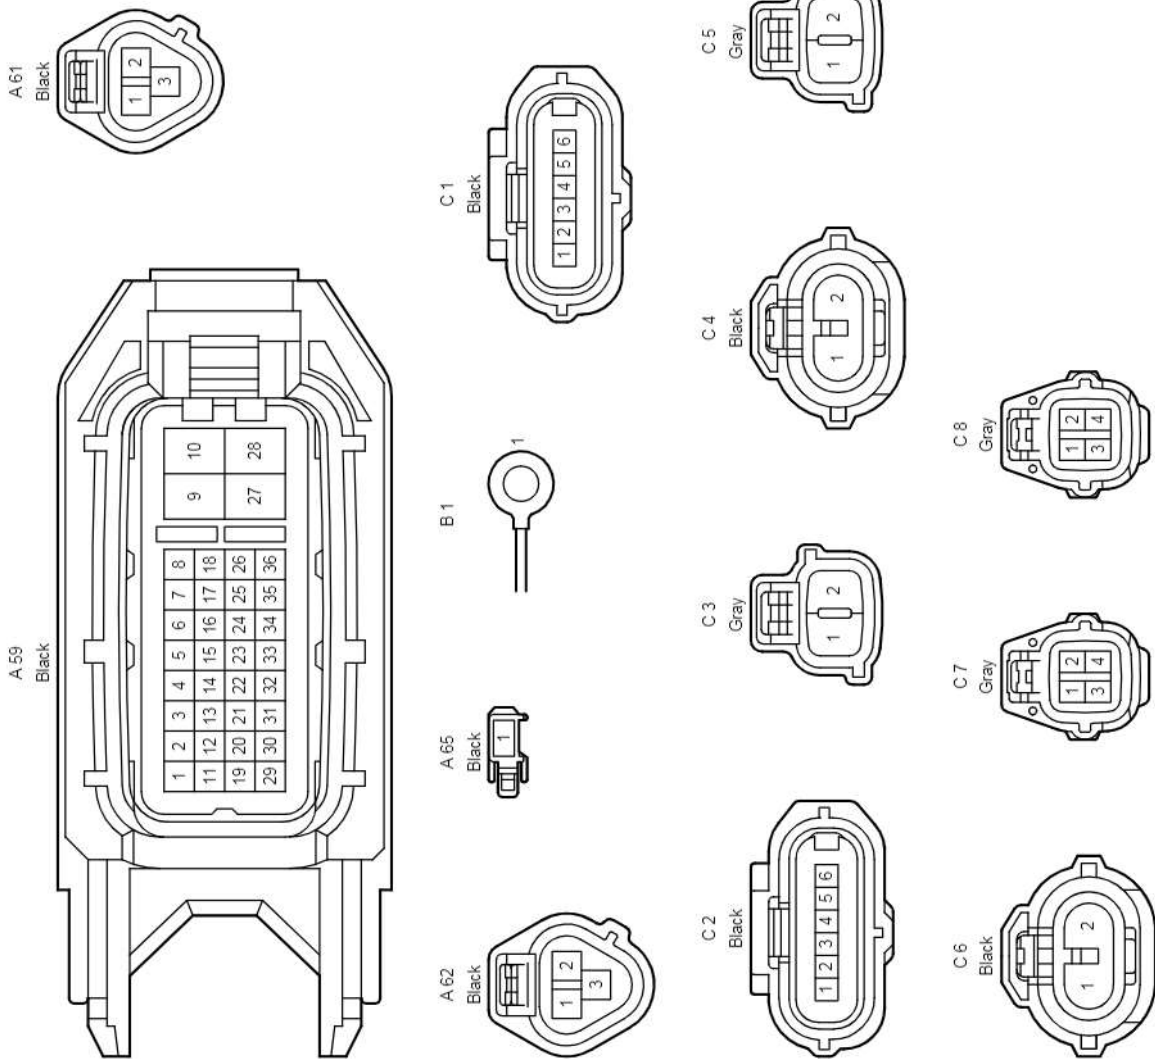


Position of Parts in Engine Compartment <RHD>

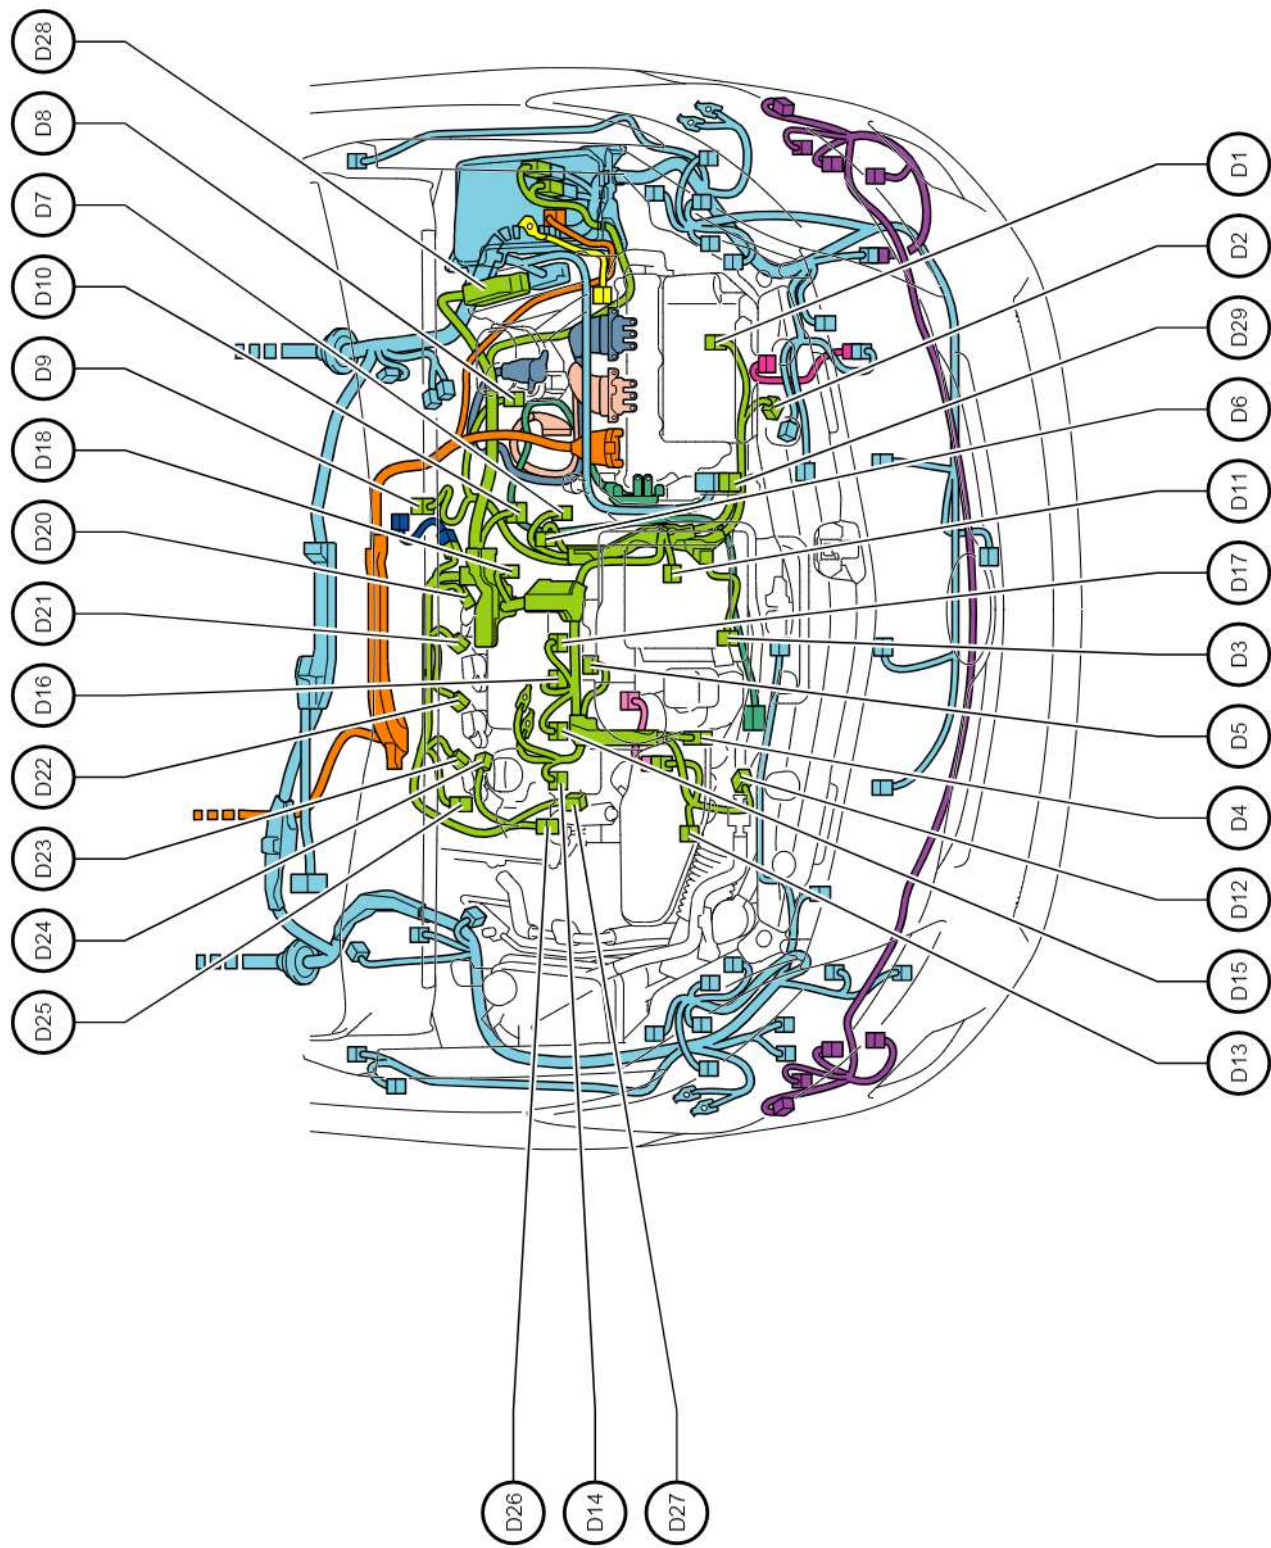


D 1	No. 2 Motor Generator
D 2	Shift Control Actuator Assembly
D 3	E.F.I. Vacuum Sensor Assembly
D 4	Throttle Body Assembly
D 5	Mass Air Flow Meter
D 6	E.F.I. Engine Coolant Temperature Sensor
D 7	No. 1 Motor Generator
D 8	No. 2 Motor Generator
D 9	Oxygen Sensor (Bank 1 Sensor 2)
D 10	EGR Valve Assembly
D 11	Purge VSV
D 12	Compressor with Motor Assembly
D 13	Water Pump Assembly
D 14	Fuel Injector Assembly No. 1
D 15	Fuel Injector Assembly No. 2
D 16	Fuel Injector Assembly No. 3
D 17	Fuel Injector Assembly No. 4
D 18	WT Sensor (Intake Side)
D 20	Ignition Coil Assembly No. 4
D 21	Ignition Coil Assembly No. 3
D 22	Ignition Coil Assembly No. 2
D 23	Ignition Coil Assembly No. 1
D 24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 25	Camshaft Timing Oil Control Valve (Intake Side)
D 26	Engine Oil Pressure Switch Assembly
D 27	Crankshaft Position Sensor
D 28	ECM
D 29	Inverter with Converter Assembly

Position of Parts in Engine Compartment <RHD>

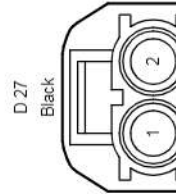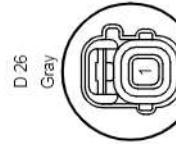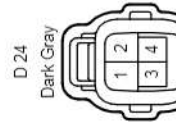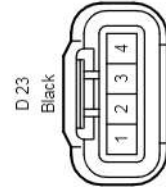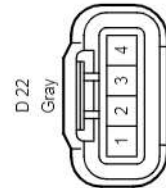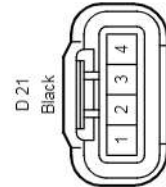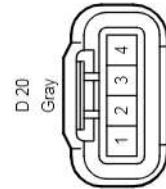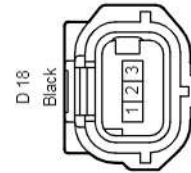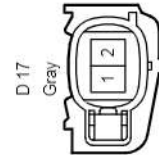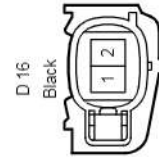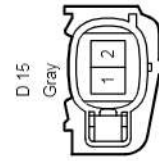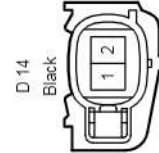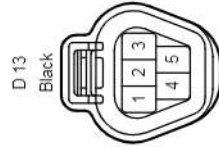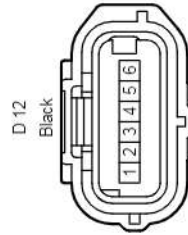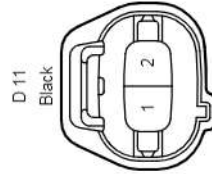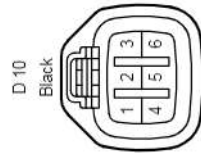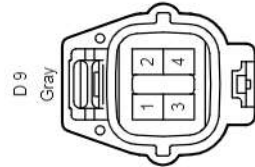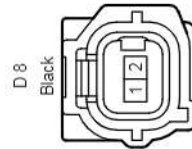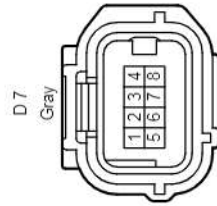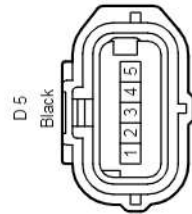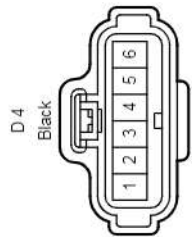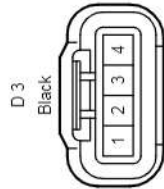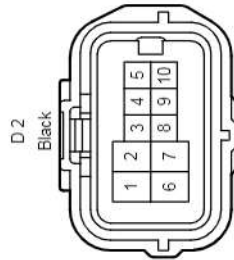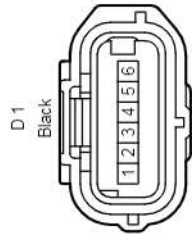


Position of Parts in Engine Compartment <RHD>


D 28
Black

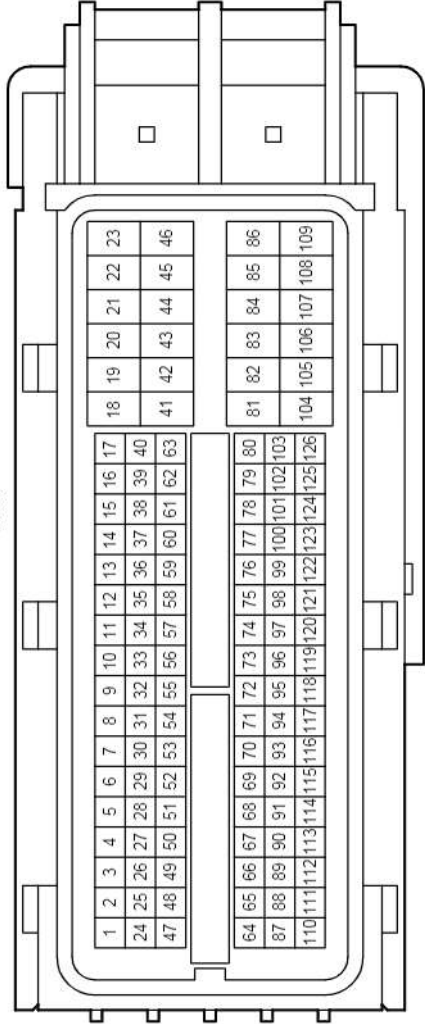

D 29
Black

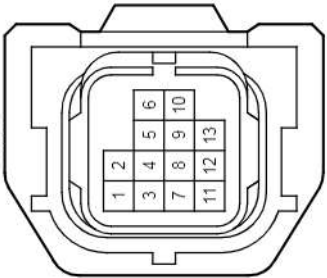












Position of Parts in Engine Compartment <RHD>


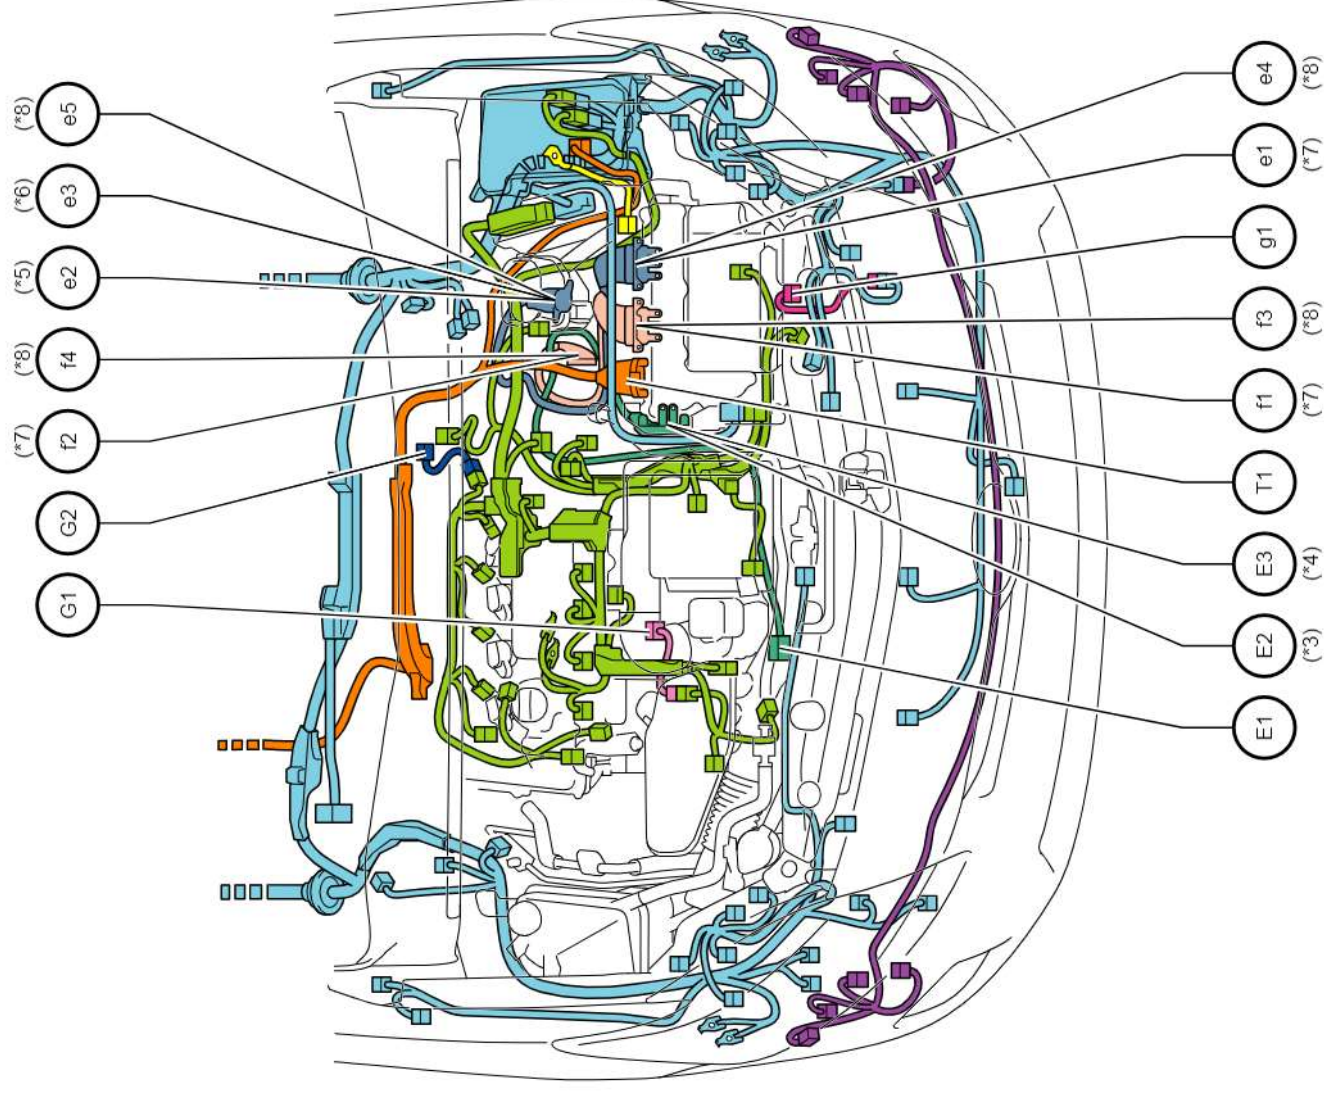



- * 3: Before Dec. 2011 Production
- * 4: From Dec. 2011 Production
- * 5: Before Jul. 2012 Production
- * 6: From Jul. 2012 Production
- * 7: Before May 2014 Production
- * 8: From May 2014 Production


E	1	Compressor with Motor Assembly
E	2	Inverter with Converter Assembly
E	3	Inverter with Converter Assembly
G	1	Knock Control Sensor (Bank 1)
G	2	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
T	1	Inverter with Converter Assembly
e	1	Inverter with Converter Assembly
e	2	No. 2 Motor Generator
e	3	No. 2 Motor Generator
e	4	Inverter with Converter Assembly
e	5	No. 2 Motor Generator
f	1	Inverter with Converter Assembly
f	2	No. 1 Motor Generator
f	3	Inverter with Converter Assembly
f	4	No. 1 Motor Generator
g	1	Inverter Water Pump Motor Assembly

Position of Parts in Engine Compartment <RHD>

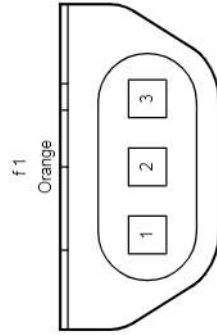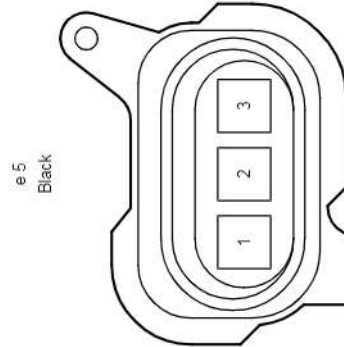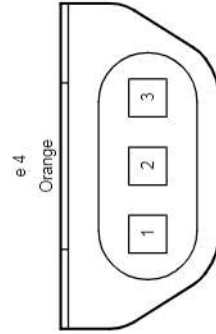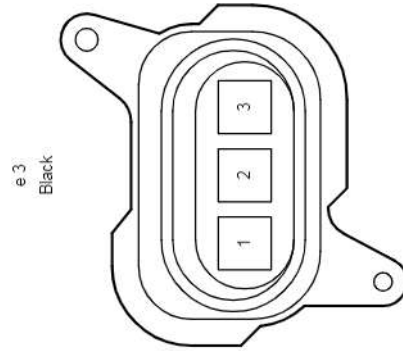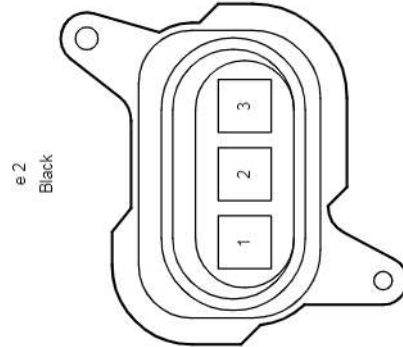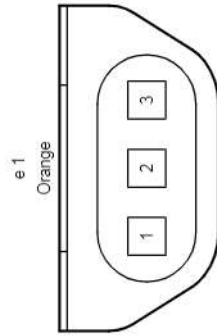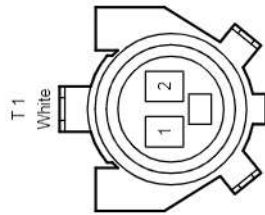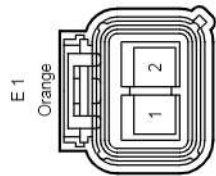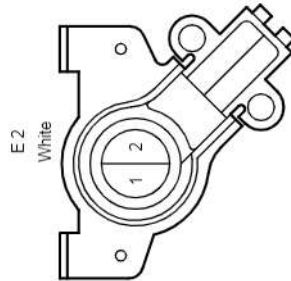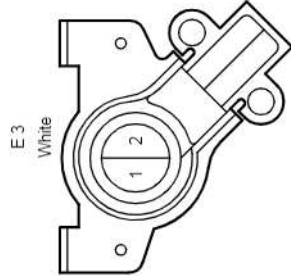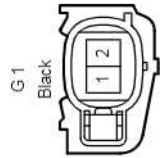


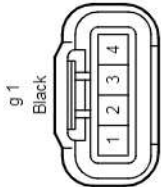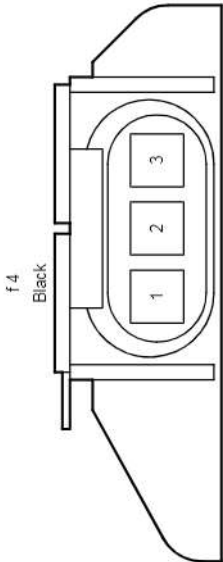

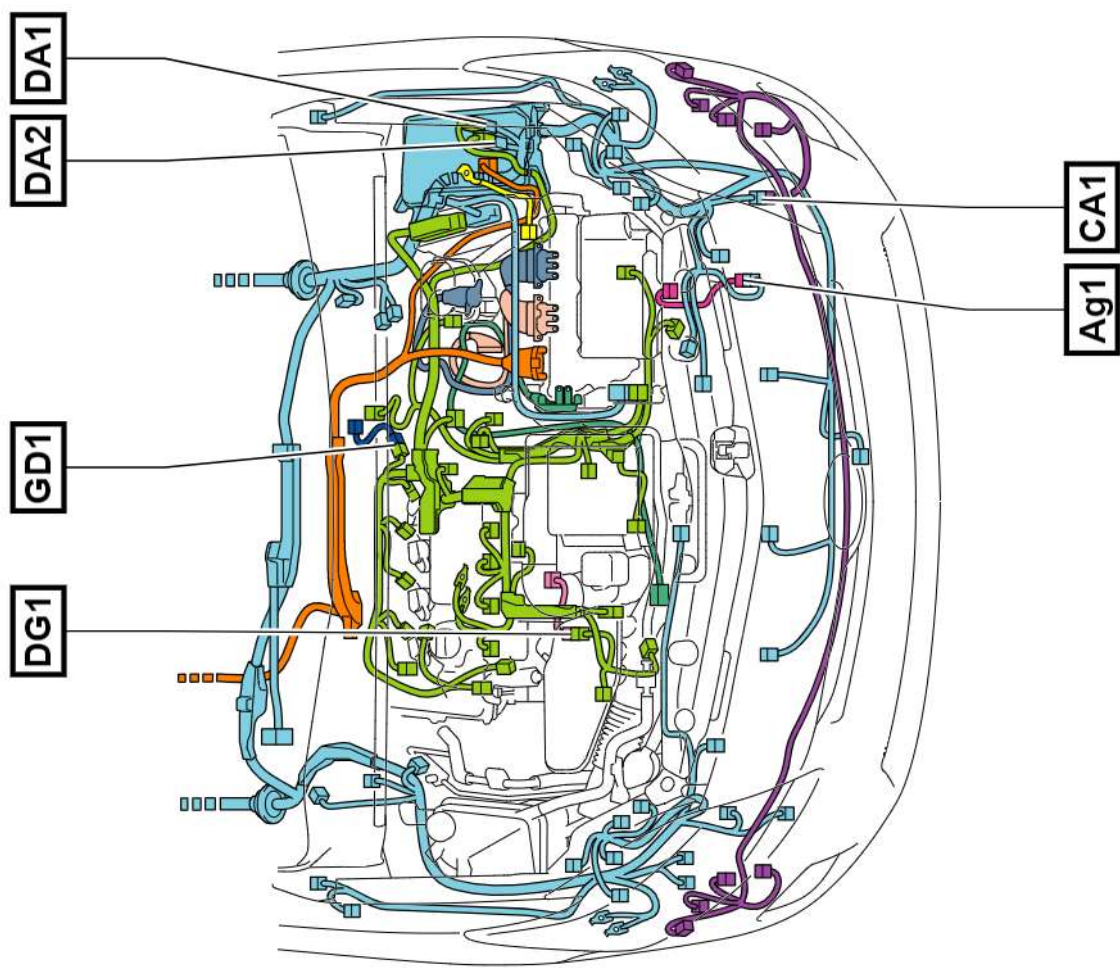


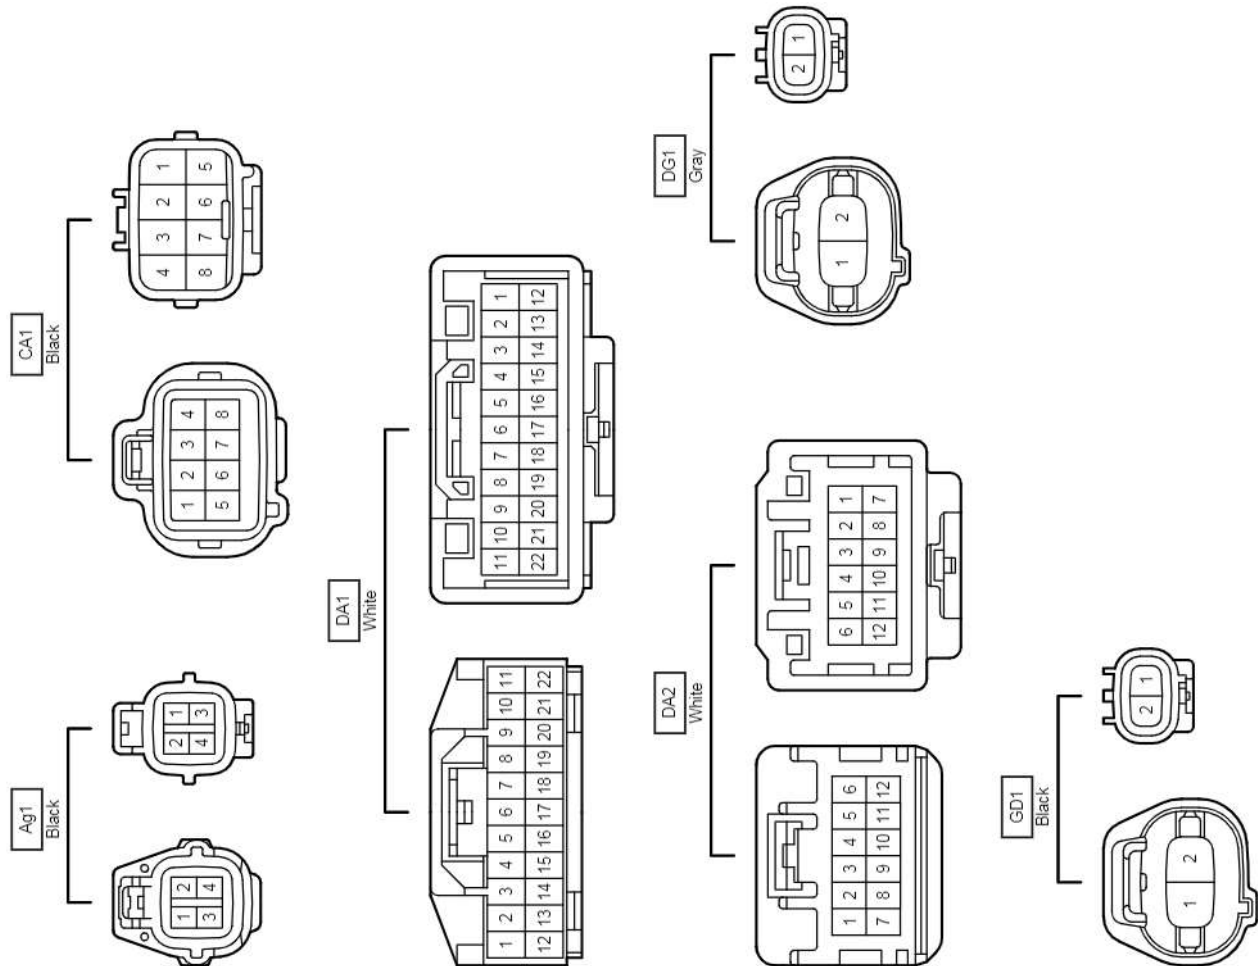


Position of Parts in Luggage Room <LHD>

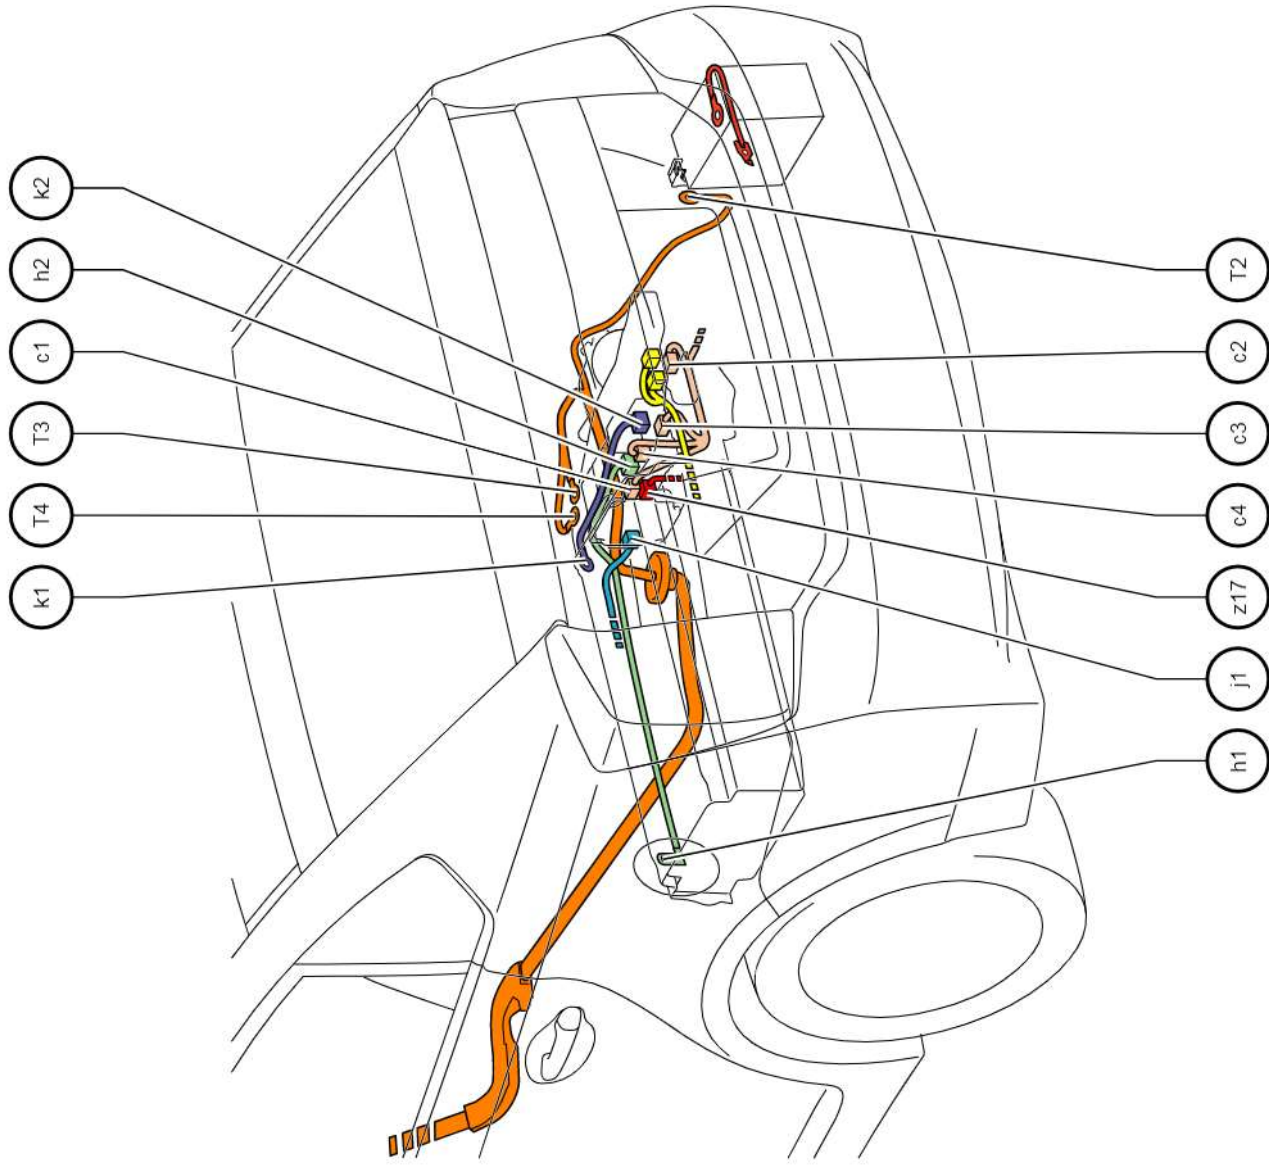


T	2	Fusible Link Block
T	3	HV Battery Junction Block Assembly
T	4	HV Battery Junction Block Assembly
c	1	Battery Voltage Sensor
c	2	Inter Lock Switch
c	3	HV Battery Junction Block Assembly
c	4	HV Battery Junction Block Assembly
h	1	HV Battery
h	2	HV Battery Junction Block Assembly
j	1	Battery Voltage Sensor , HV Battery
k	1	HV Battery
k	2	HV Battery Junction Block Assembly
z	17	Battery Voltage Sensor , HV Battery

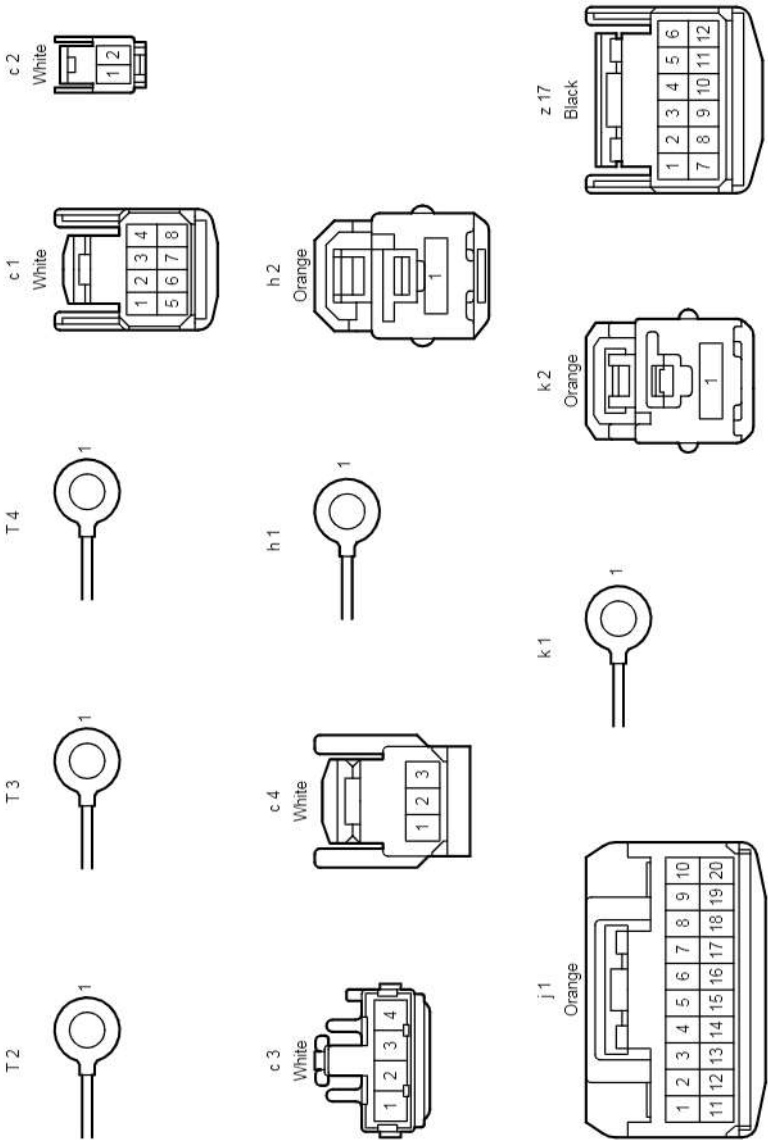

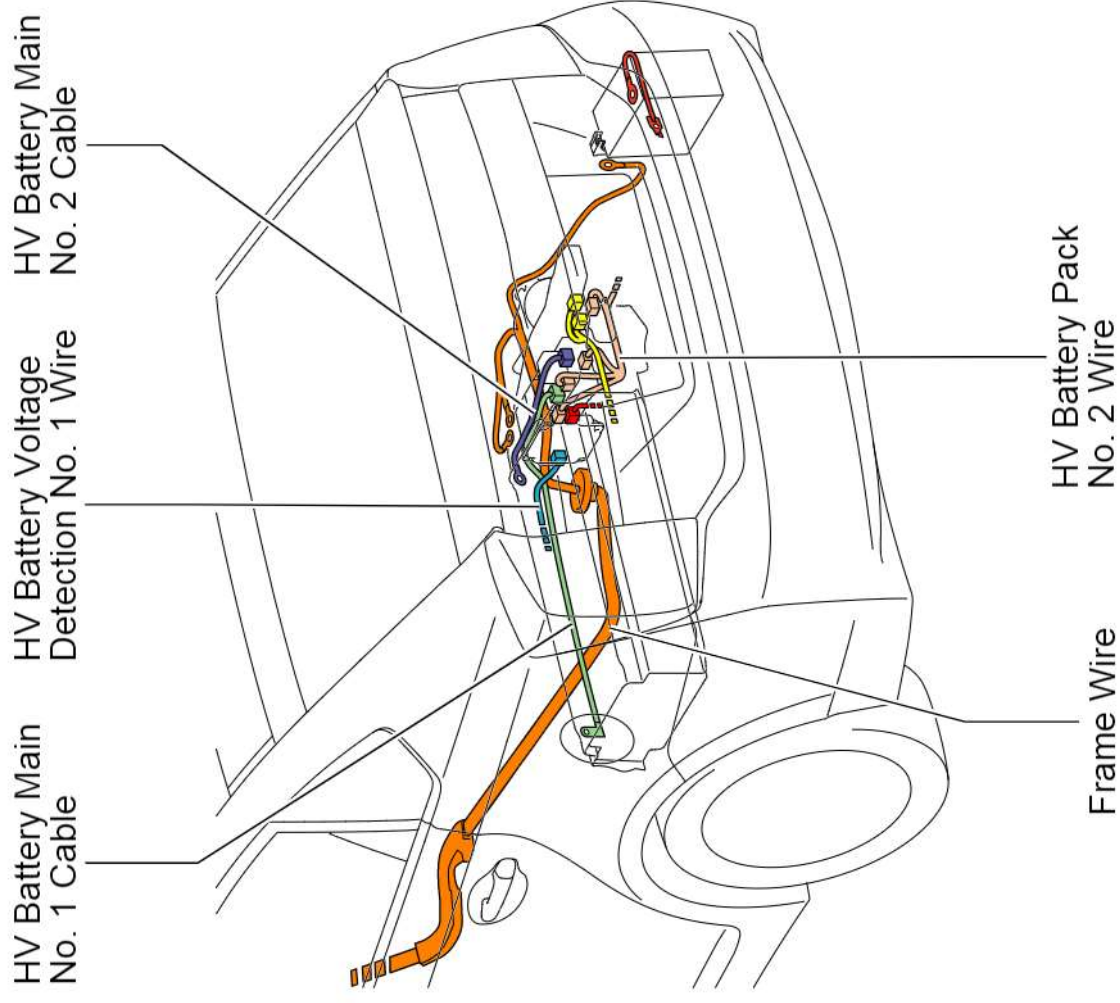

Position of Parts in Luggage Room <RHD>

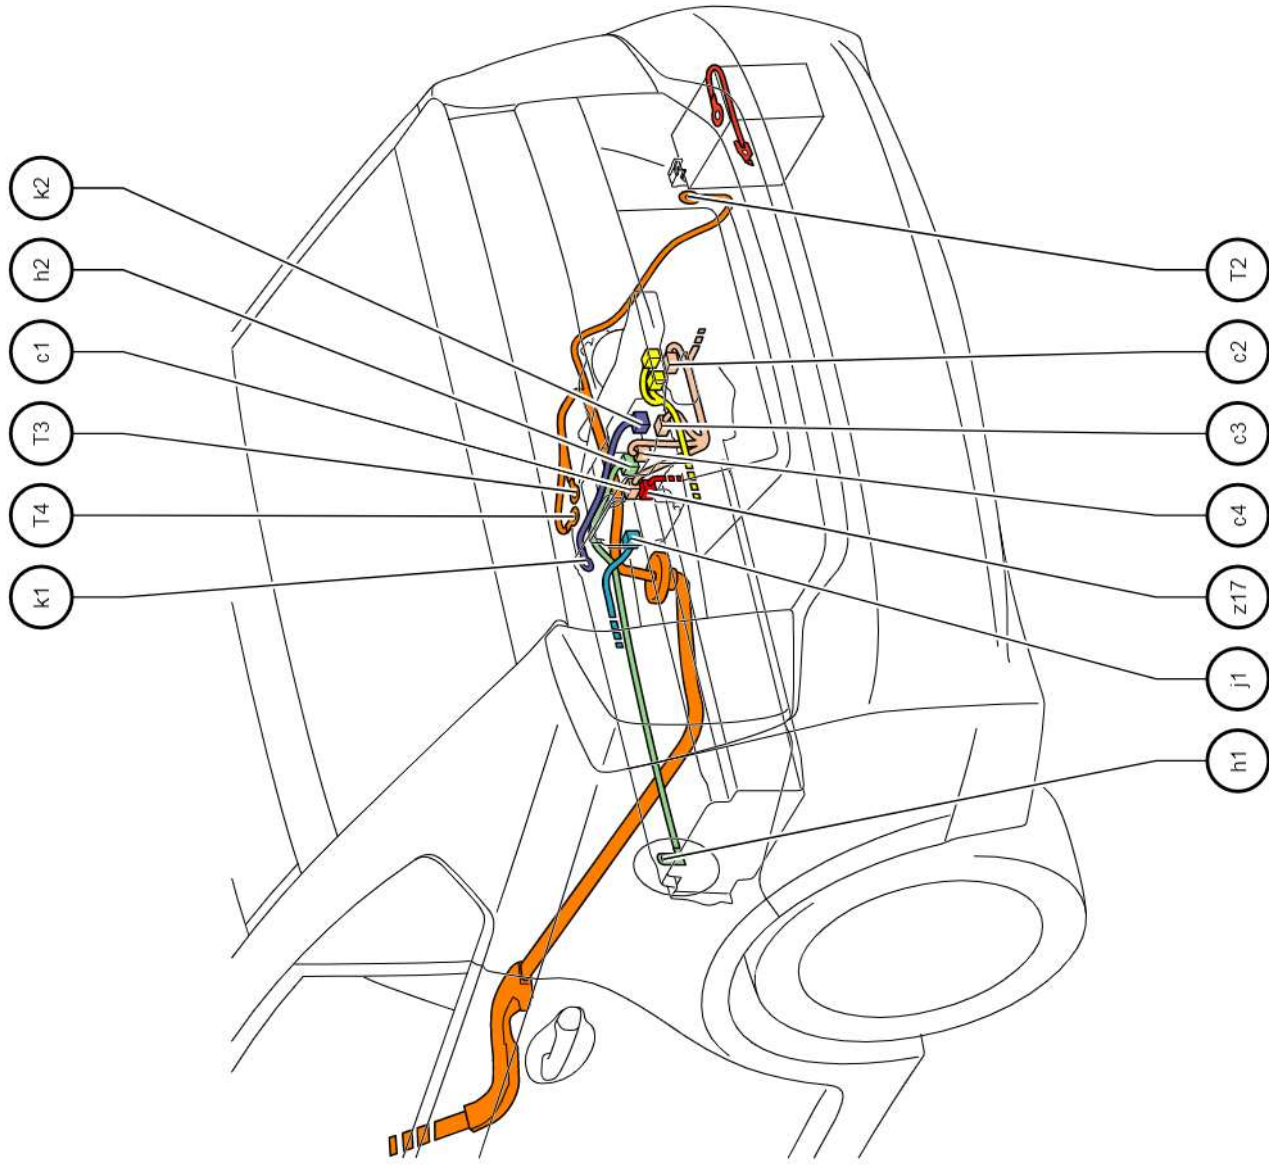

T	2	Fusible Link Block
T	3	HV Battery Junction Block Assembly
T	4	HV Battery Junction Block Assembly
c	1	Battery Voltage Sensor
c	2	Inter Lock Switch
c	3	HV Battery Junction Block Assembly
c	4	HV Battery Junction Block Assembly
h	1	HV Battery
h	2	HV Battery Junction Block Assembly
j	1	Battery Voltage Sensor , HV Battery
k	1	HV Battery
k	2	HV Battery Junction Block Assembly
z	17	Battery Voltage Sensor , HV Battery

T2



T3




T4



c1

White

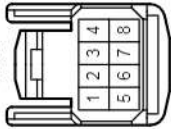


c2

White




c3

White

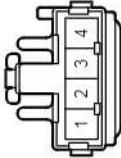

c4

White

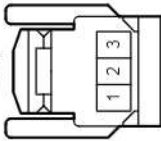


h1




h2

Orange

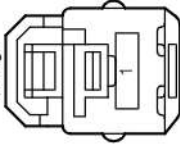

j1

Orange

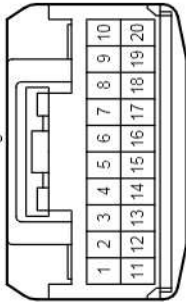


k1




k2


Orange

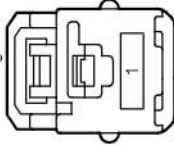


z17

Black

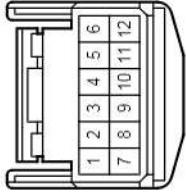


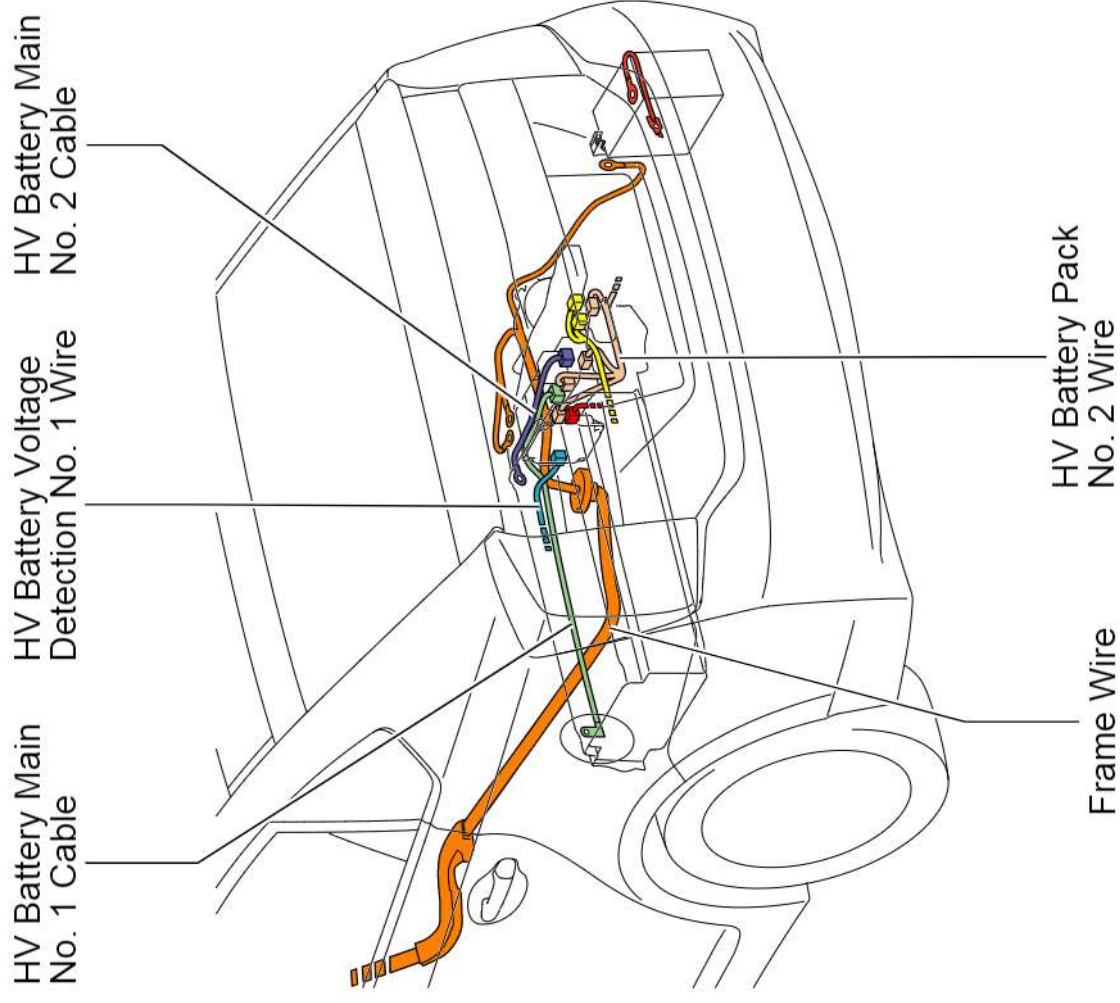

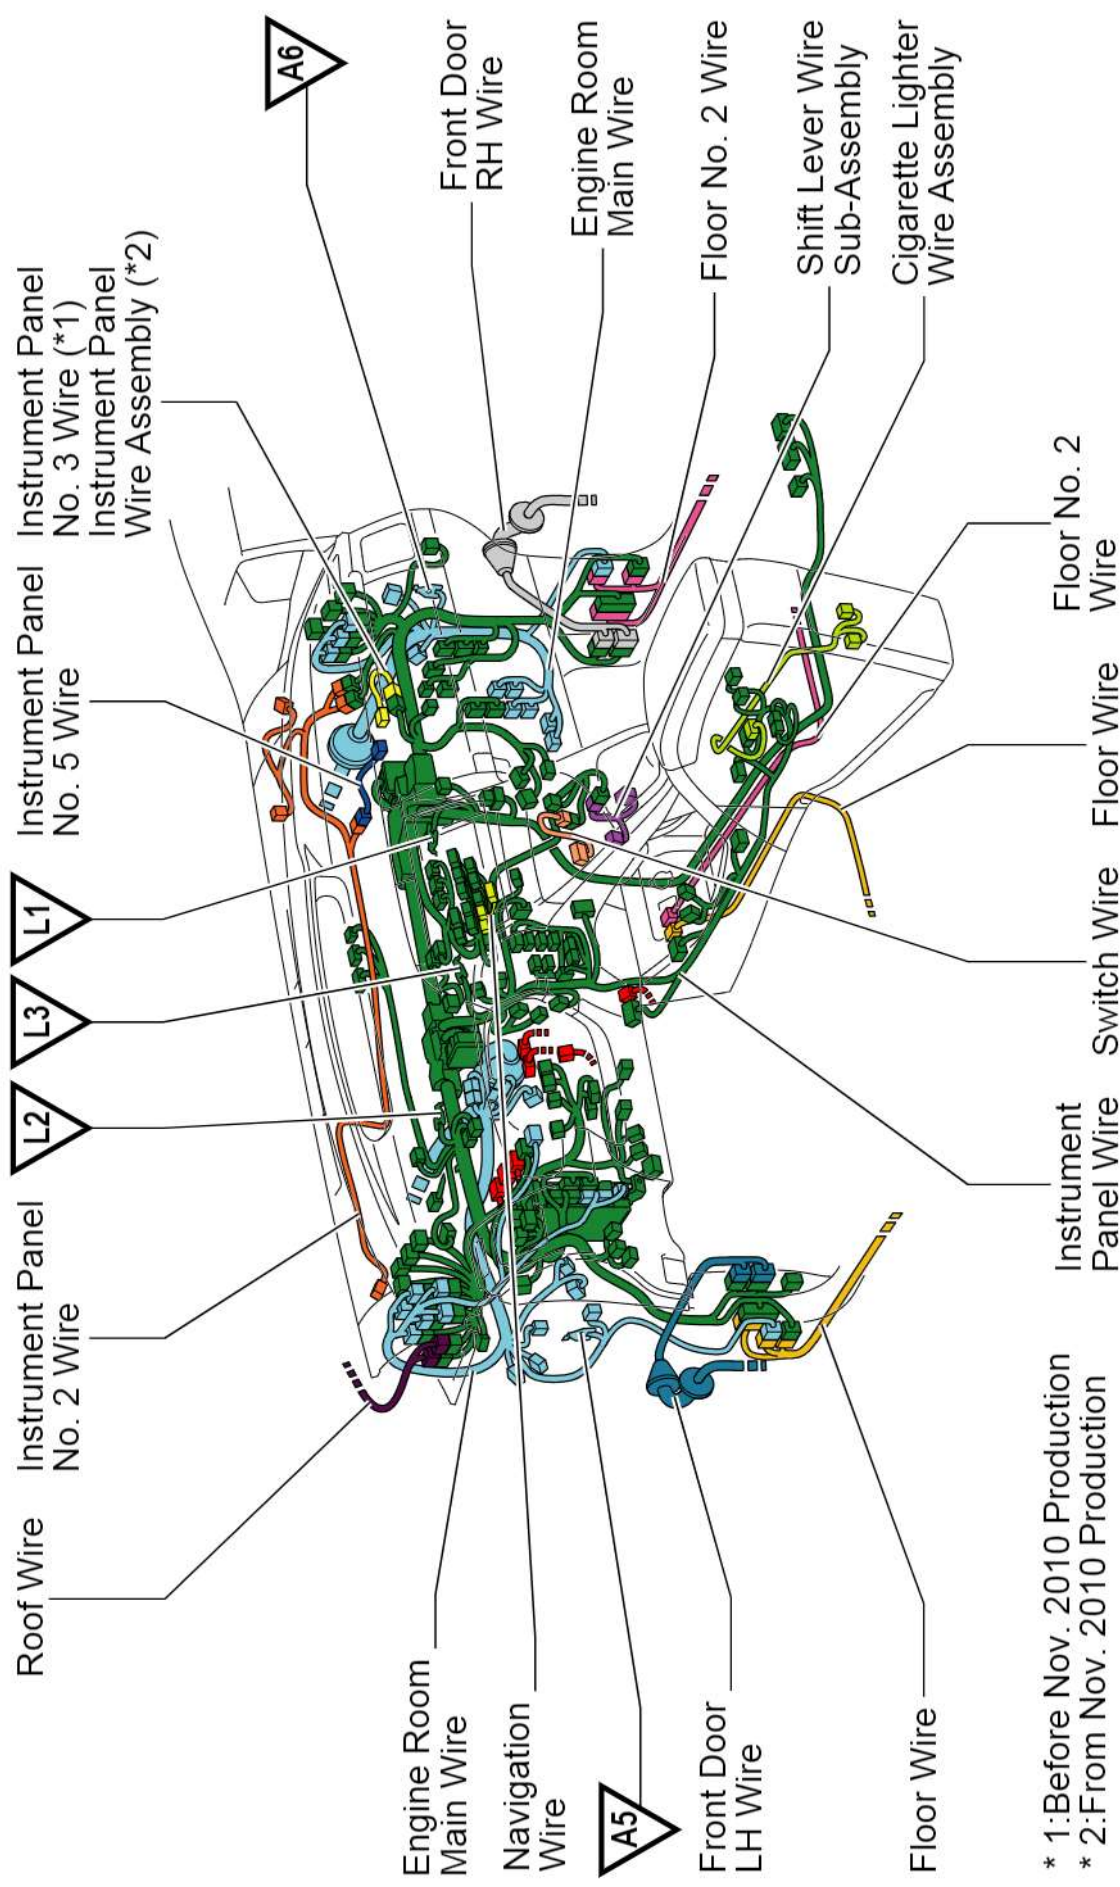

* 1: Before Nov. 2010 Production
 * 2: From Nov. 2010 Production











Position of Parts in Instrument Panel <LHD>

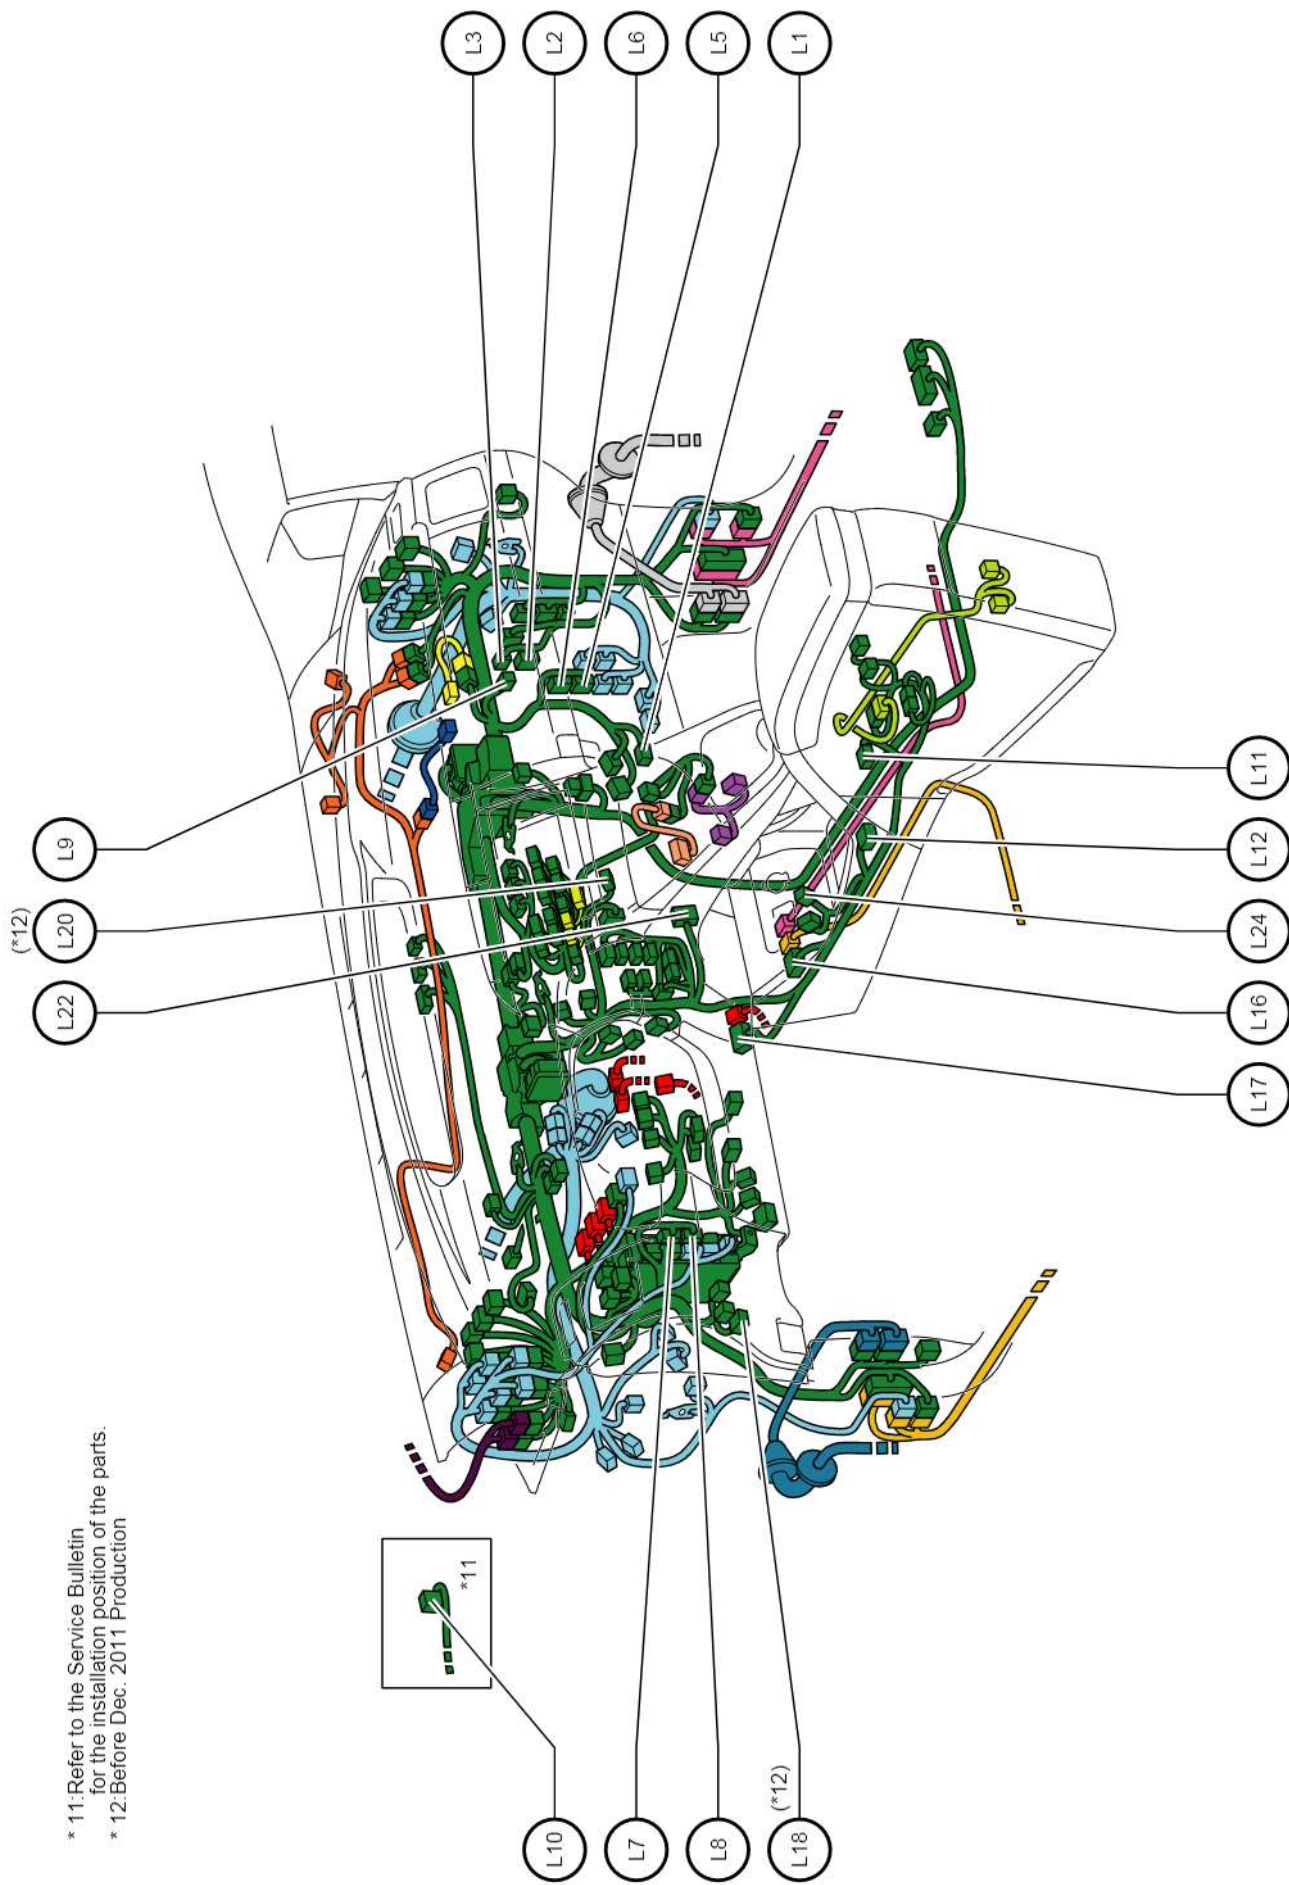


* 11: Refer to the Service Bulletin
for the installation position of the parts.
* 12: Before Dec. 2011 Production


L	1	No. 1 Interior Illumination Light Assembly RH
L	2	Seat Belt Control ECU
L	3	Seat Belt Control ECU
L	5	Power Management Control ECU
L	6	Power Management Control ECU
L	7	Main Body ECU
L	8	Main Body ECU
L	9	Glove Box Light (No. 1 Interior Illumination Light Assembly)
L	10	ID Code Box
L	11	Front Indoor Electrical Key Oscillator
L	12	Yaw Rate Sensor Assembly
L	16	Center Airbag Sensor Assembly
L	17	A/C Amplifier Assembly
L	18	Outer Mirror Switch Assembly
L	20	A/C Control Assembly
L	22	Solar Battery Air Conditioning Blower Vent ECU
L	24	Power Outlet Socket Assembly

Position of Parts in Instrument Panel <LHD>

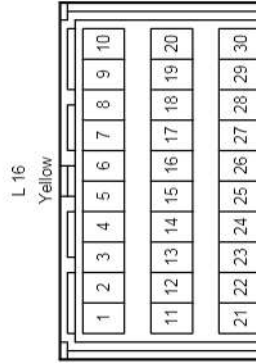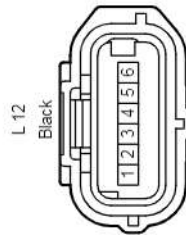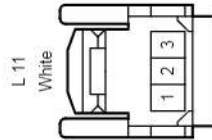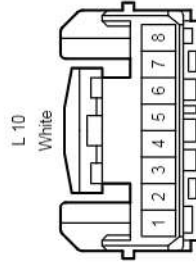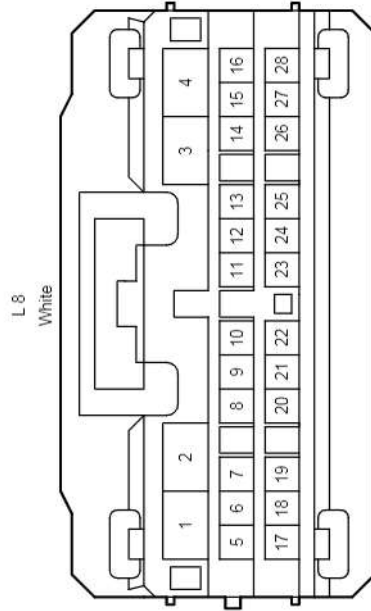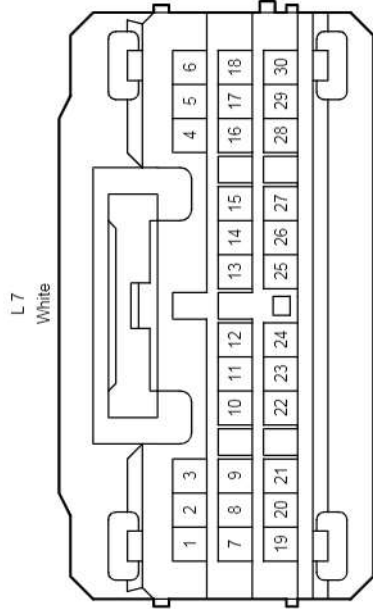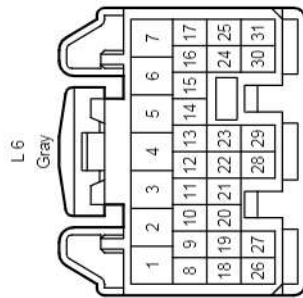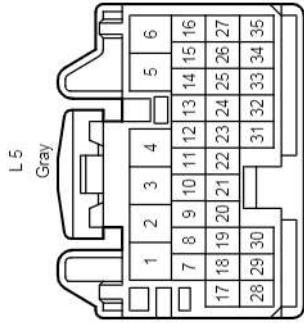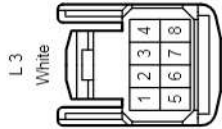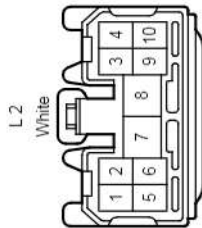




















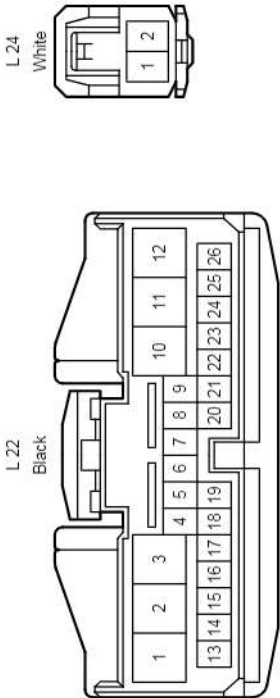


Position of Parts in Instrument Panel <LHD>

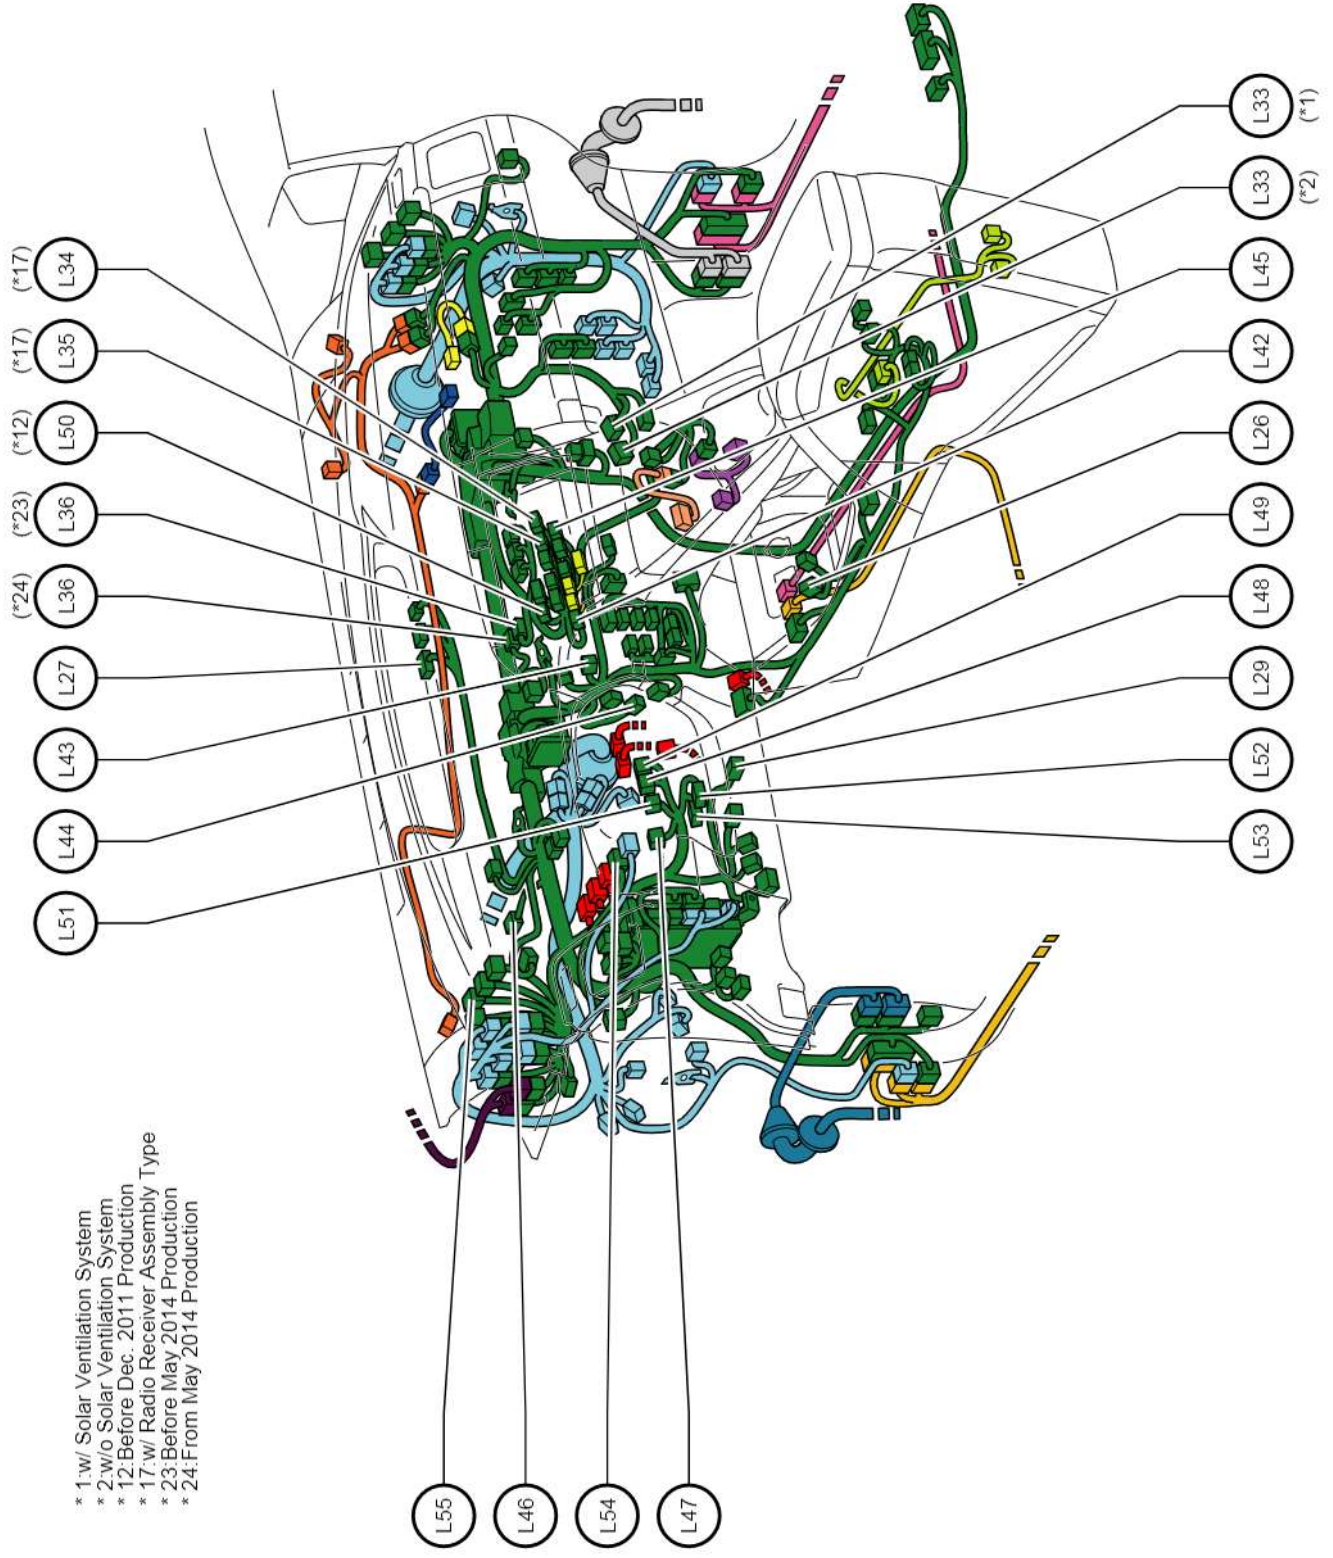


L 26	Seat Heater Switch
L 27	Combination Meter Assembly
L 29	Lower No. 1 Instrument Panel Airbag Assembly
L 33	Front Blower with Fan Motor Sub-Assembly
L 34	Radio Receiver Assembly
L 35	Radio Receiver Assembly
L 36	Amplifier Antenna Assembly
L 42	Navigation Receiver Assembly
L 43	Power Switch
L 44	Front Room Temperature Sensor
L 45	Radio Receiver Assembly
L 46	Skid Control Buzzer Assembly
L 47	Headlight Dimmer Switch Assembly
L 48	Windshield Wiper Switch Assembly
L 49	Windshield Wiper Switch Assembly
L 50	Radio Receiver Assembly
L 51	Steering Sensor
L 52	Spiral Cable Sub-Assembly
L 53	Spiral Cable Sub-Assembly
L 54	Power Steering ECU Assembly
L 55	Turn Signal Flasher Assembly

   Position of Parts in Instrument Panel <LHD>

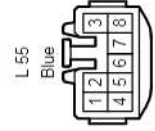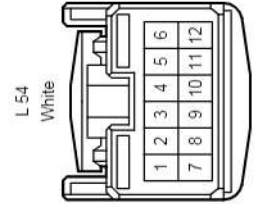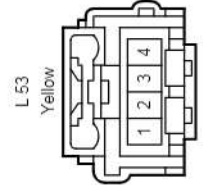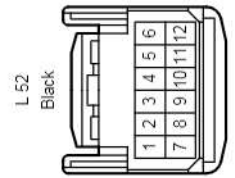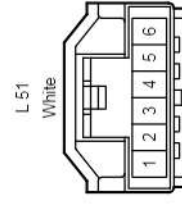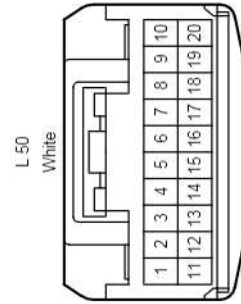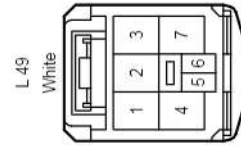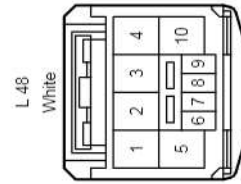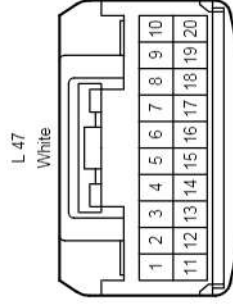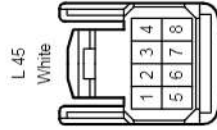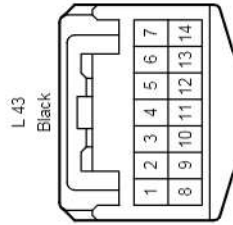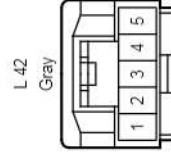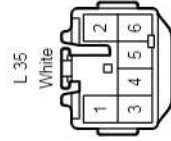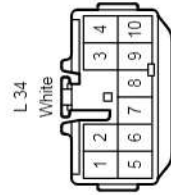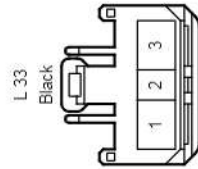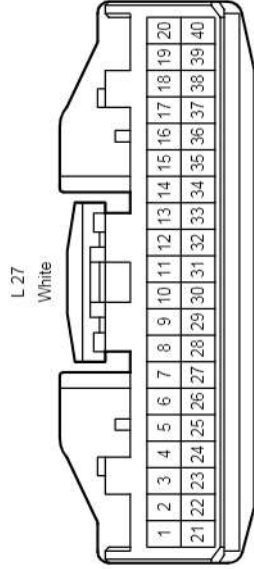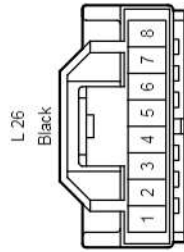


cardiagn.com

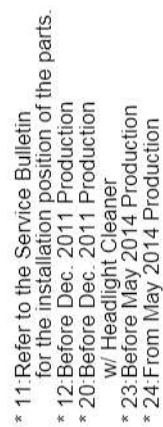


L 56	Back Sonar or Clearance Sonar Switch Assembly
L 57	Trip Switch
L 58	Headlight Cleaner Switch Assembly
L 60	Driving Support ECU Assembly
L 61	DLC3
L 62	Certification ECU Assembly
L 63	Certification ECU Assembly
L 64	Parking Assist ECU
L 65	Parking Assist ECU
L 66	Ventilator Switch
L 77	No. 1 Interior Illumination Light Assembly LH
L 78	Integration Control and Panel Assembly
L 85	Junction Connector
L 86	Junction Connector
L 87	Junction Connector
L 88	Junction Connector
L 89	Junction Connector
L 90	Diode (Front Courtesy Light RH)
L 91	Diode (Front Courtesy Light LH)
L 92	Junction Connector
L 93	Junction Connector
L 94	Junction Connector
L 95	Junction Connector
L 96	Junction Connector
L 97	Junction Connector
L 98	Junction Connector
L 99	Junction Connector


L 56
Black

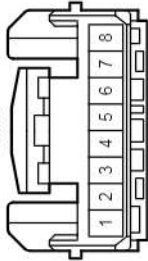


L 57
Black

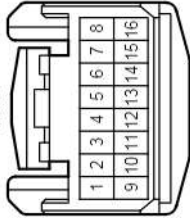


L 58
Gray

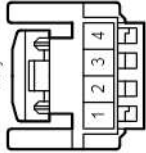


L 60
White

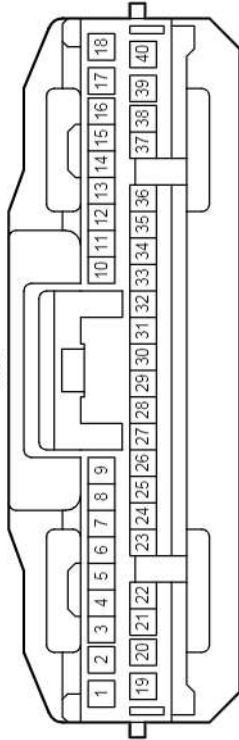


L 61
White

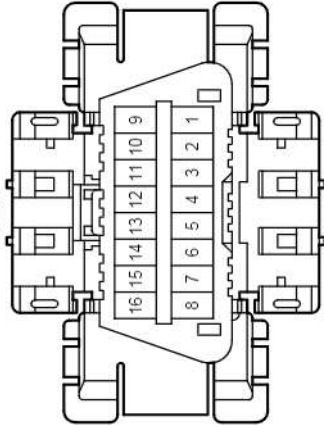


L 62
White

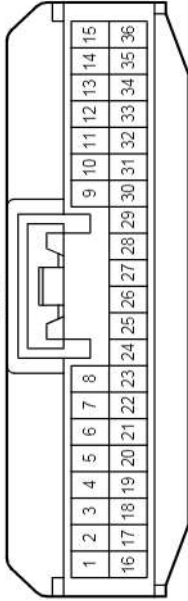

L 63
White

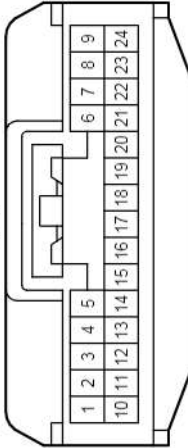


L 64
White

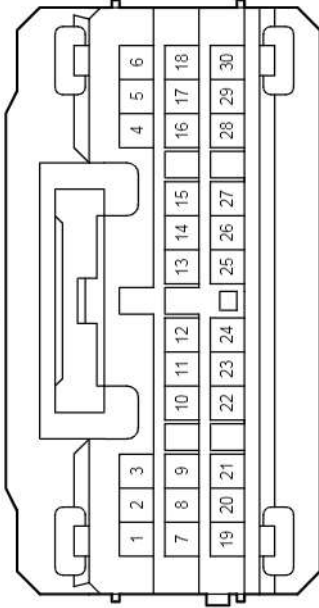


Position of Parts in Instrument Panel <LHD>


L 78
Black

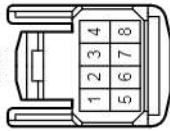


L 85
White

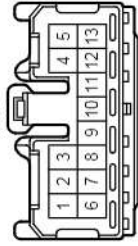


L 86
Black

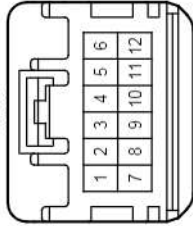


L 87
Black

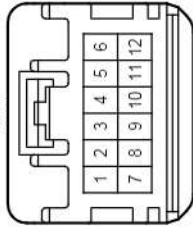

L 88
Black

 

L 89
Black

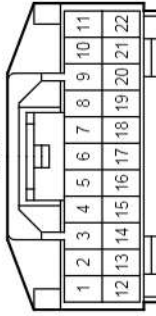


L 90
Black




L 91
Black




L 92
White

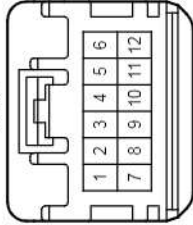


L 93
White

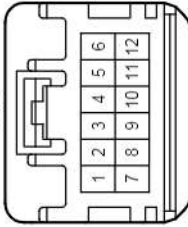

L 94
White

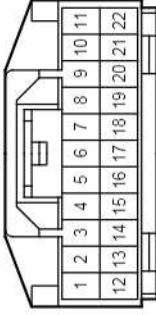


L 95
White

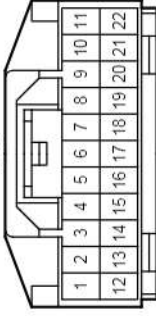


L 96
White



 
L 97
White




L 98
White

 

L 99
White

 


Position of Parts in Instrument Panel <LHD>

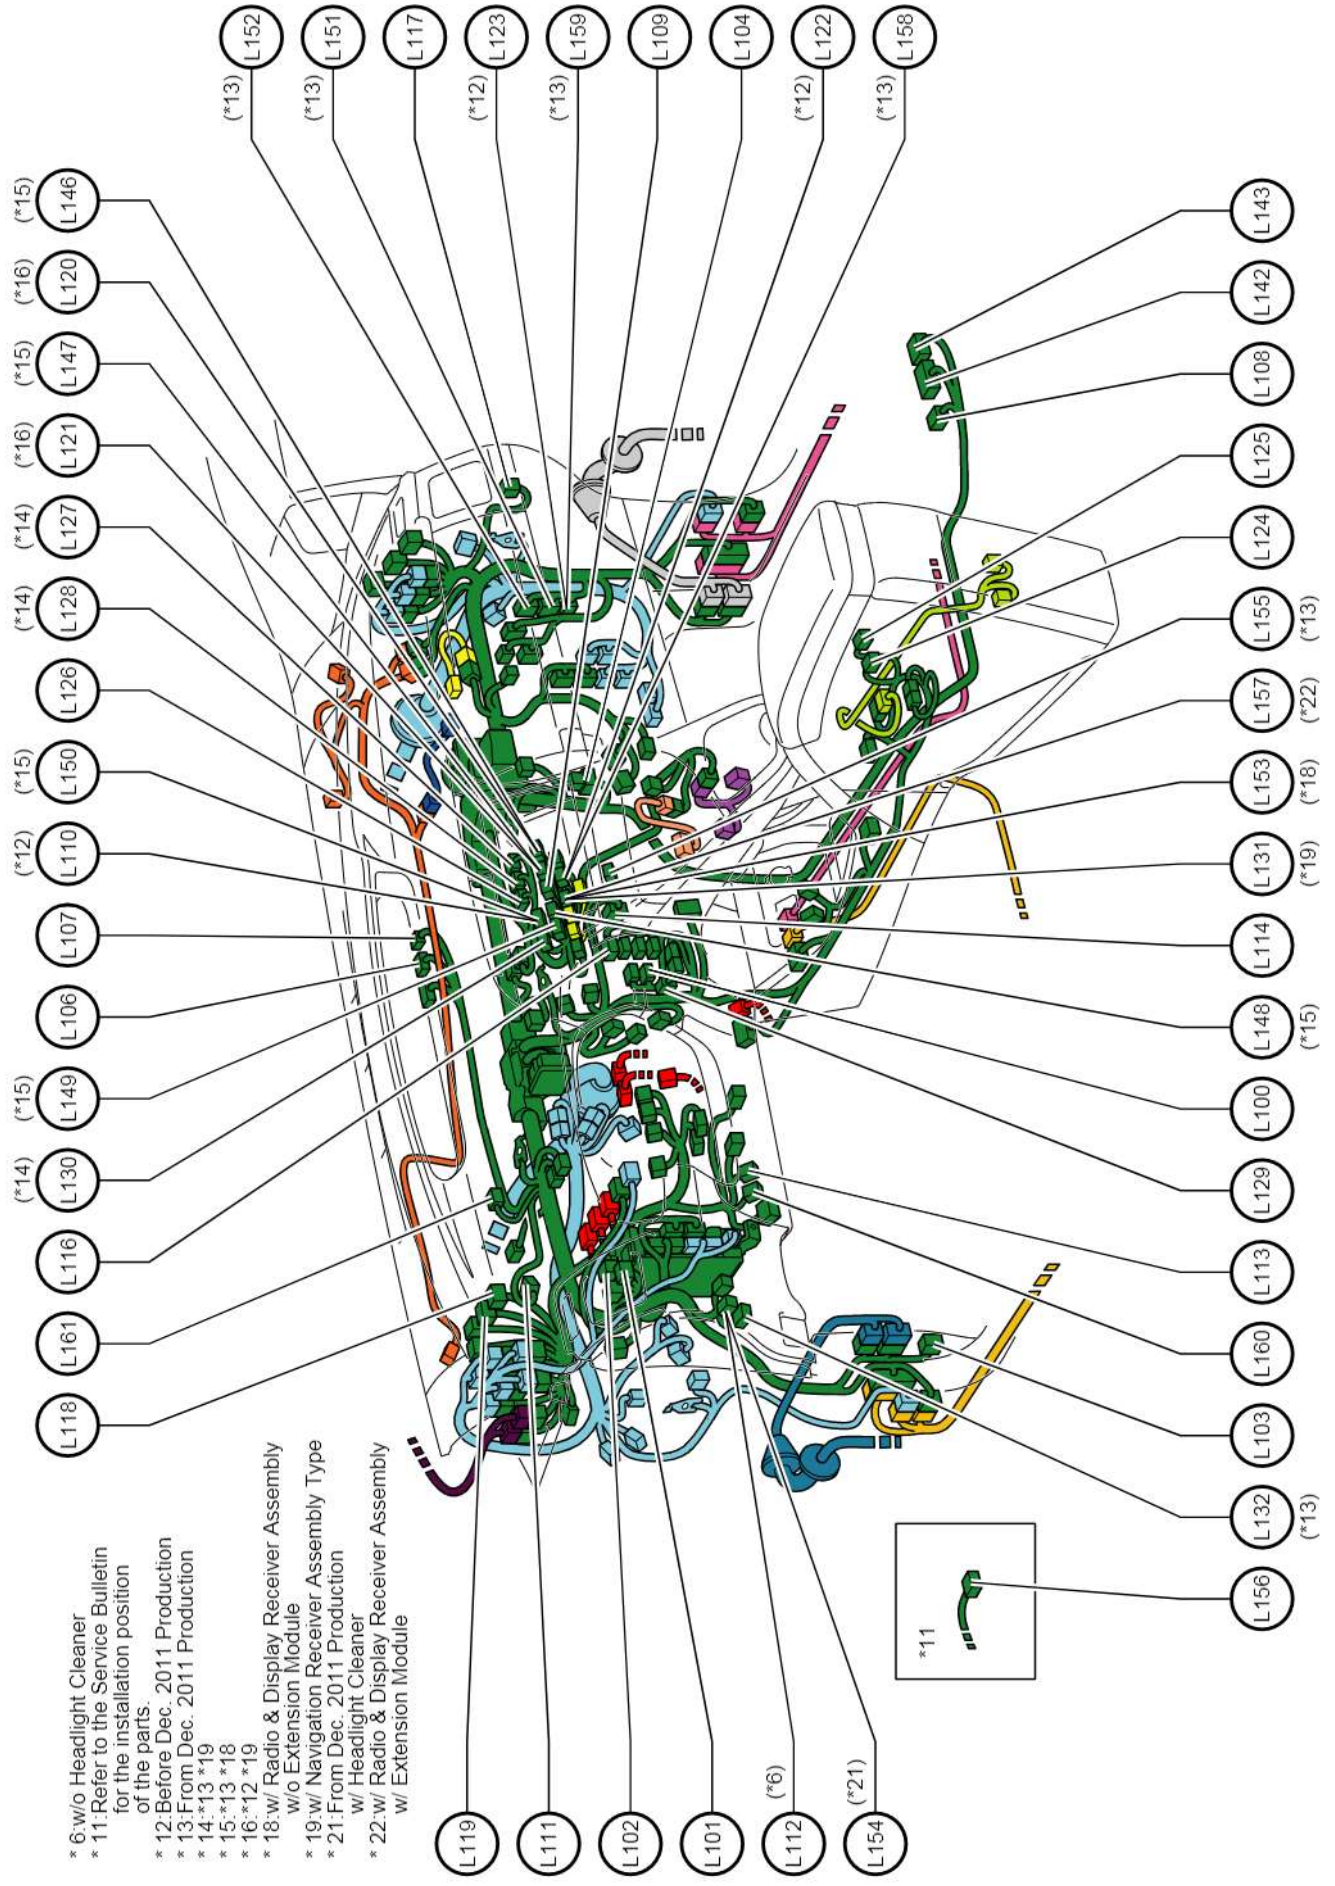


L 100	Junction Connector
L 101	Junction Connector
L 102	Junction Connector
L 103	Fuse Block
L 104	Solar Ventilation Relay
L 106	Combination Meter Assembly
L 107	Combination Meter Assembly
L 108	Stereo Component Amplifier Assembly
L 109	Navigation Receiver Assembly
L 110	Navigation Receiver Assembly
L 111	Combination Meter Mirror
L 112	Headlight Leveling Switch
L 113	Pre-Crash System Cancel Switch Assembly
L 114	Windshield Wiper Relay Assembly
L 116	Junction Connector
L 117	Airbag Cut Off Switch Cylinder Sub-Assembly
L 118	Rear Fog Light Relay
L 119	Panel Relay
L 120	Navigation Receiver Assembly
L 121	Navigation Receiver Assembly
L 122	Navigation Receiver Assembly
L 123	Parking Assist ECU
L 124	No. 1 Stereo Jack Adapter Assembly
L 125	Center Power Outlet Socket Assembly
L 126	Radio Receiver Assembly
L 127	Navigation Receiver Assembly
L 128	Navigation Receiver Assembly
L 129	Junction Connector
L 130	Navigation Receiver Assembly
L 131	Navigation Receiver Assembly
L 132	Outer Mirror Switch Assembly
L 142	Stereo Component Amplifier Assembly
L 143	Stereo Component Amplifier Assembly
L 146	Radio & Display Receiver Assembly
L 147	Radio & Display Receiver Assembly
L 148	Radio & Display Receiver Assembly
L 149	Radio & Display Receiver Assembly
L 150	Navigation Receiver Assembly
L 151	Parking Assist ECU
L 152	Parking Assist ECU
L 153	Radio & Display Receiver Assembly
L 154	Headlight Cleaner Switch Assembly
L 155	A/C Control Assembly
L 156	Telephone Transceiver Assembly

Position of Parts in Instrument Panel <LHD>

 
L100
White




L101
Black

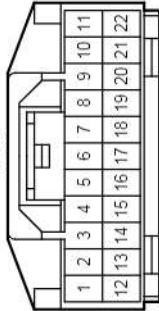


L102
Blue

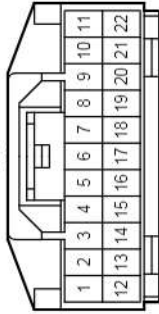


L103
White

 


L104
White

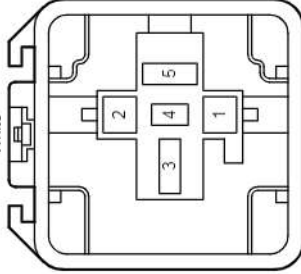


L106
White

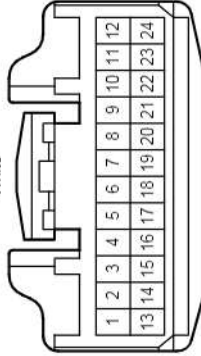


L107
White

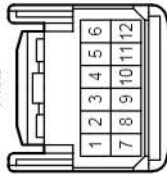


L108
White

 


L109
White

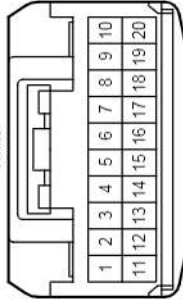

L110
White

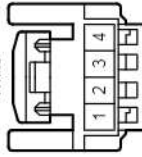


L111
White

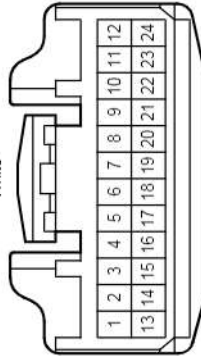


L112
Black



 
L113
White




L114
White

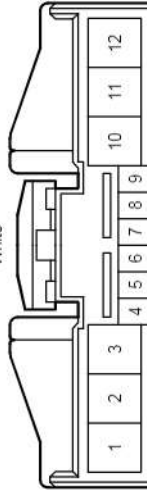
















L116
White

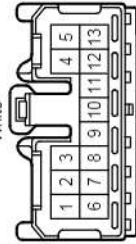


L117
White

 

  
Position of Parts in Instrument Panel <LHD>

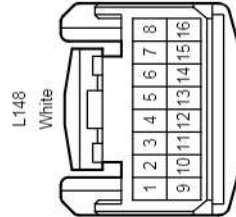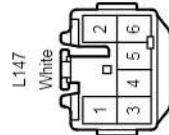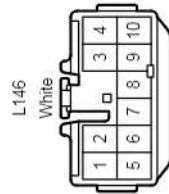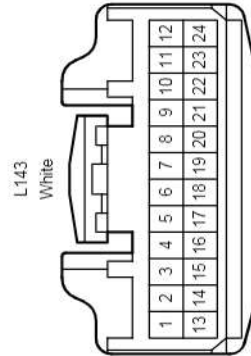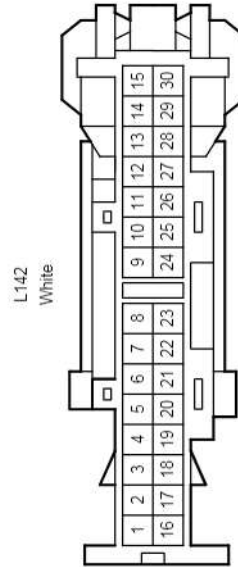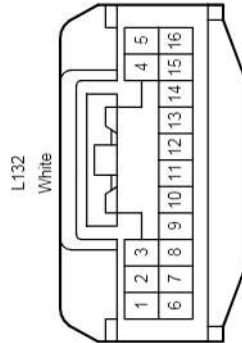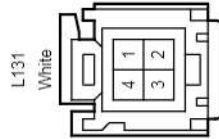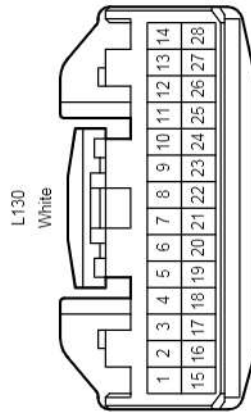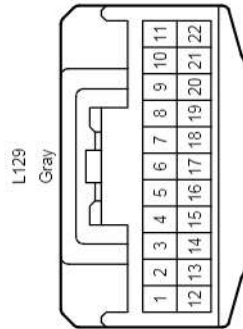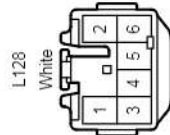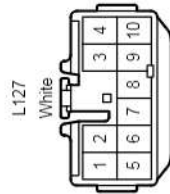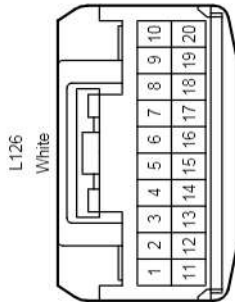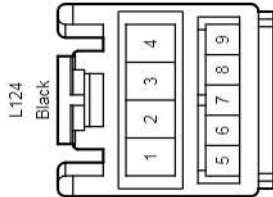


L151
Black

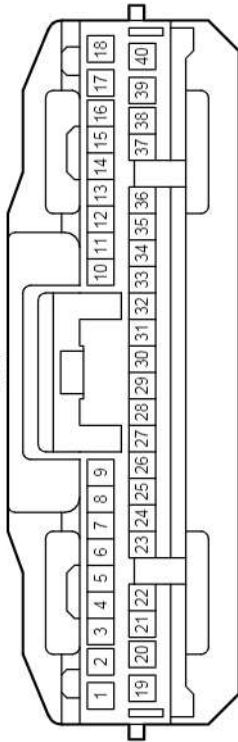


L152
White

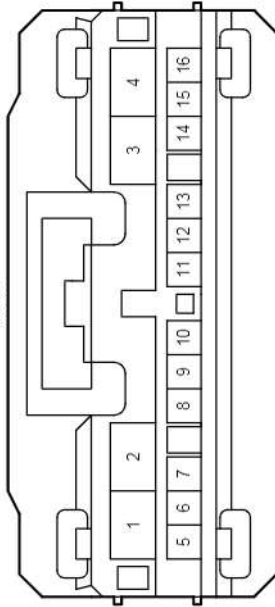


L153
White

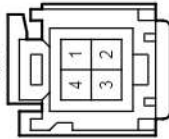


L154
Gray

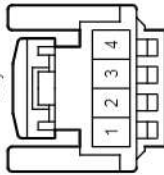


L155
Gray

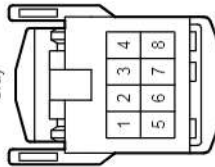


L156
White

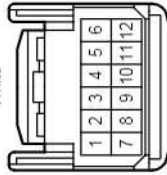

L157
White

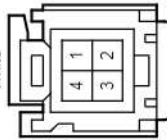

L158
White

 


L159
Gray




L160
White



 L161
Black




Position of Parts in Instrument Panel <LHD>

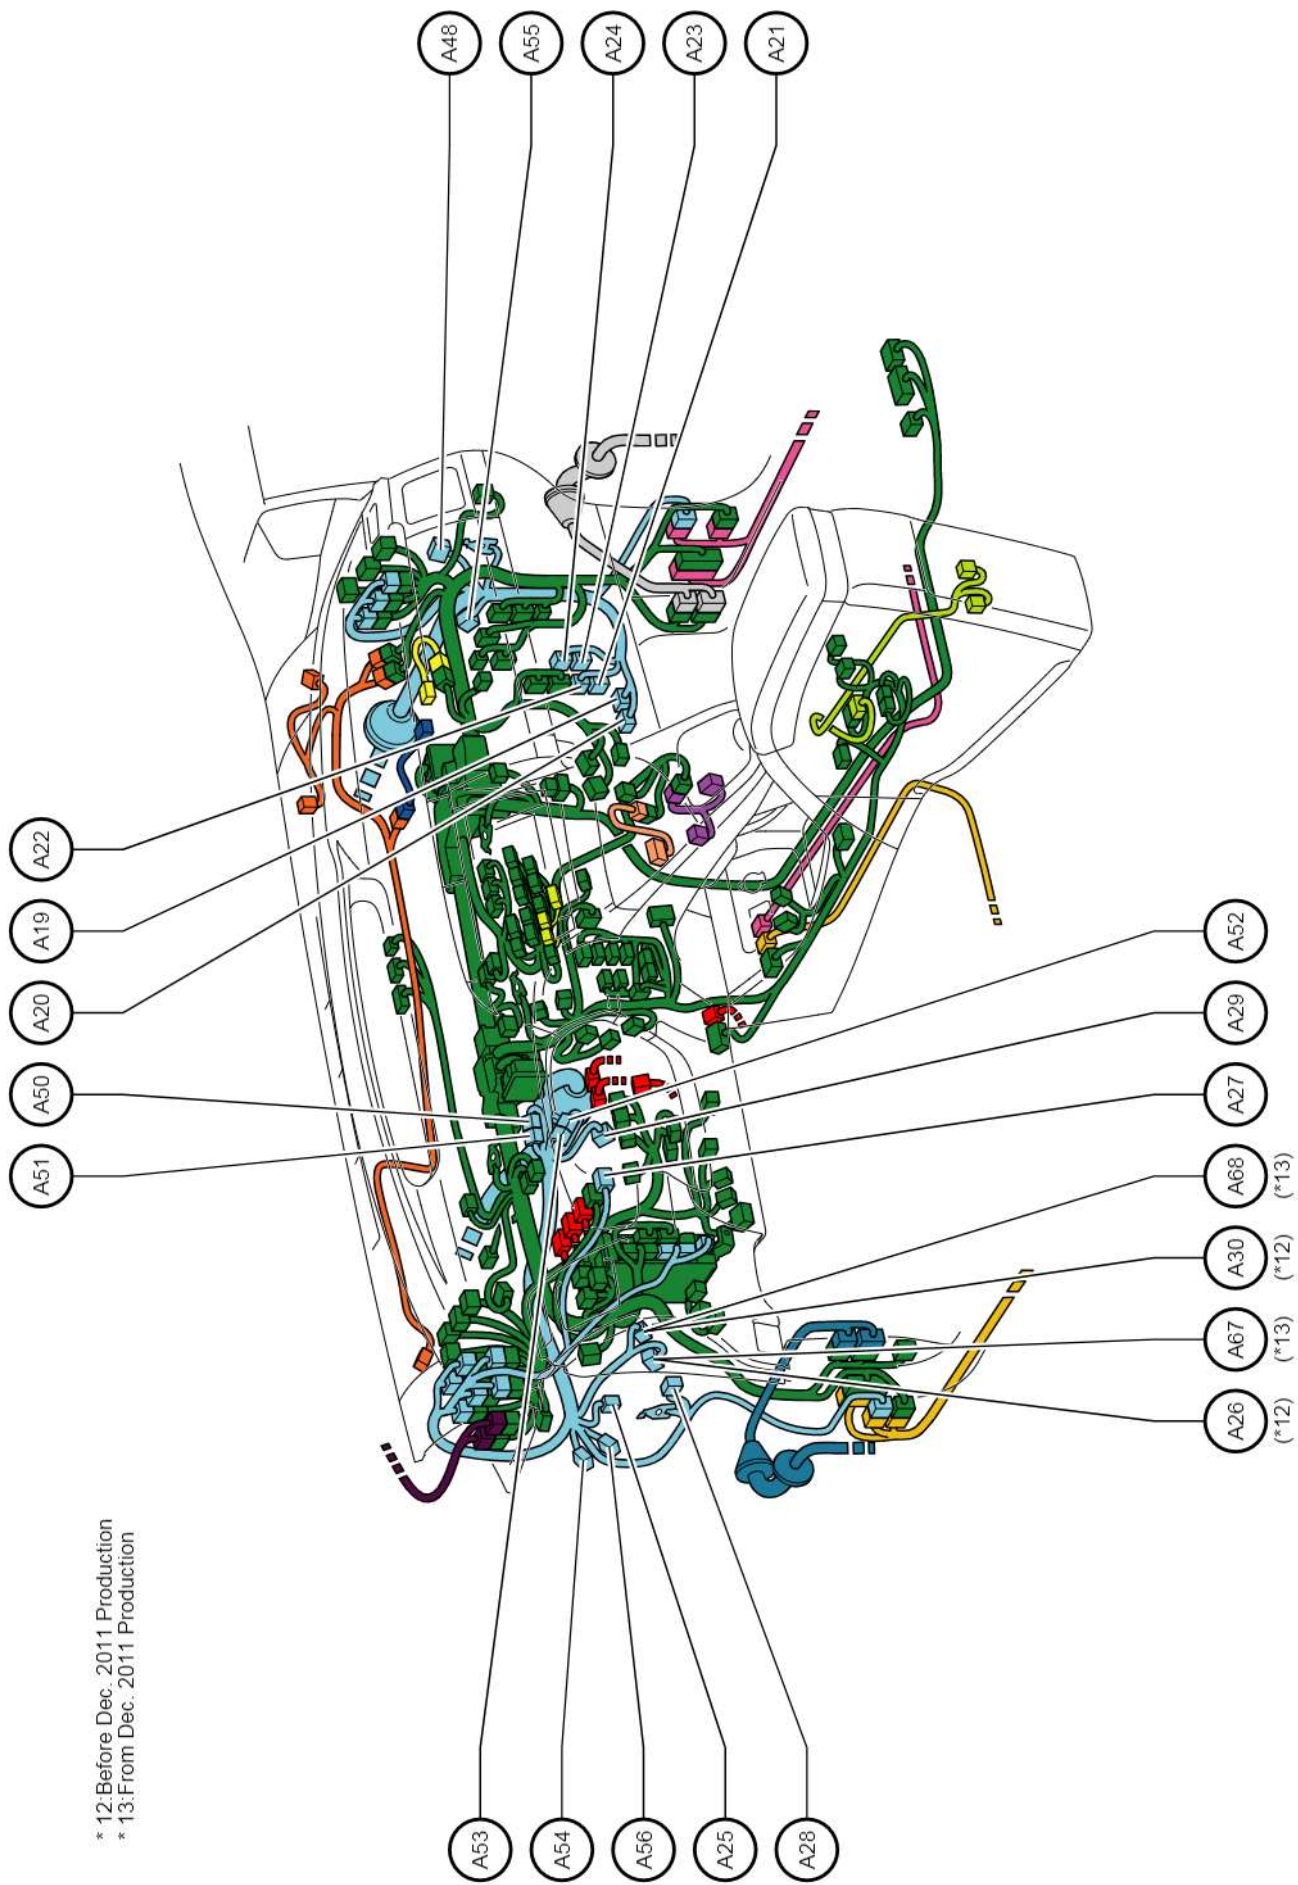


* 12: Before Dec. 2011 Production
* 13: From Dec. 2011 Production

A 19	Quick Heater Assembly
A 20	Quick Heater Assembly
A 21	Power Management Control ECU
A 22	Power Management Control ECU
A 23	Transmission Control ECU Assembly
A 24	Transmission Control ECU Assembly
A 25	Parking Brake Switch Assembly
A 26	Stop Light Switch Assembly
A 27	Power Steering ECU Assembly
A 28	Stop Light Control Relay Assembly
A 29	Accelerator Pedal Sensor Assembly
A 30	Brake Pedal Stroke Sensor Assembly
A 48	Headlight Leveling ECU Assembly
A 50	Junction Connector
A 51	Junction Connector
A 52	Junction Connector
A 53	Junction Connector
A 54	Junction Connector
A 55	Junction Connector
A 56	Junction Connector
A 67	Stop Light Switch Assembly
A 68	Brake Pedal Stroke Sensor Assembly


Position of Parts in Instrument Panel <LHD>

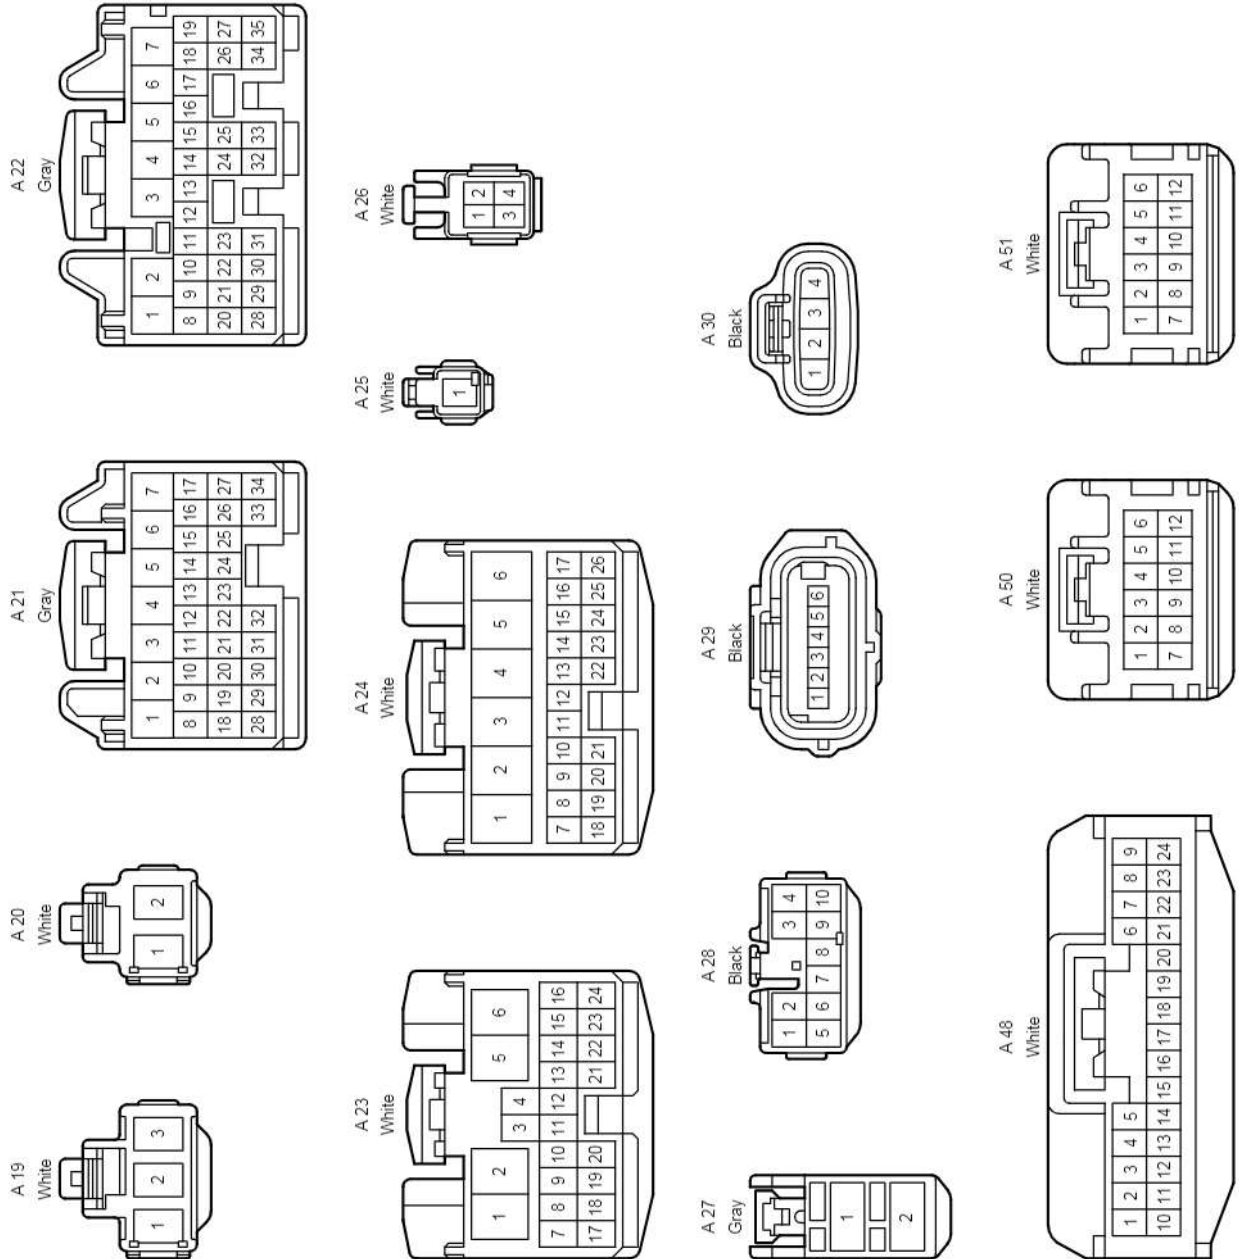

cardiagn.com

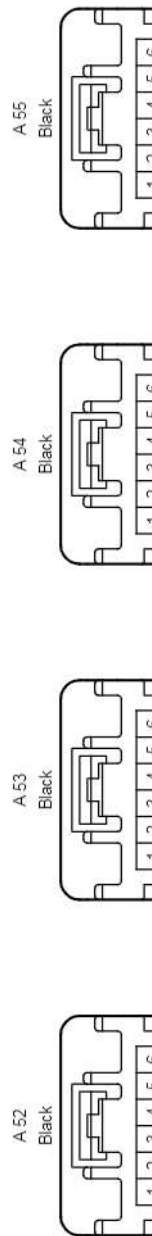

Position of Parts in Instrument Panel <LHD>

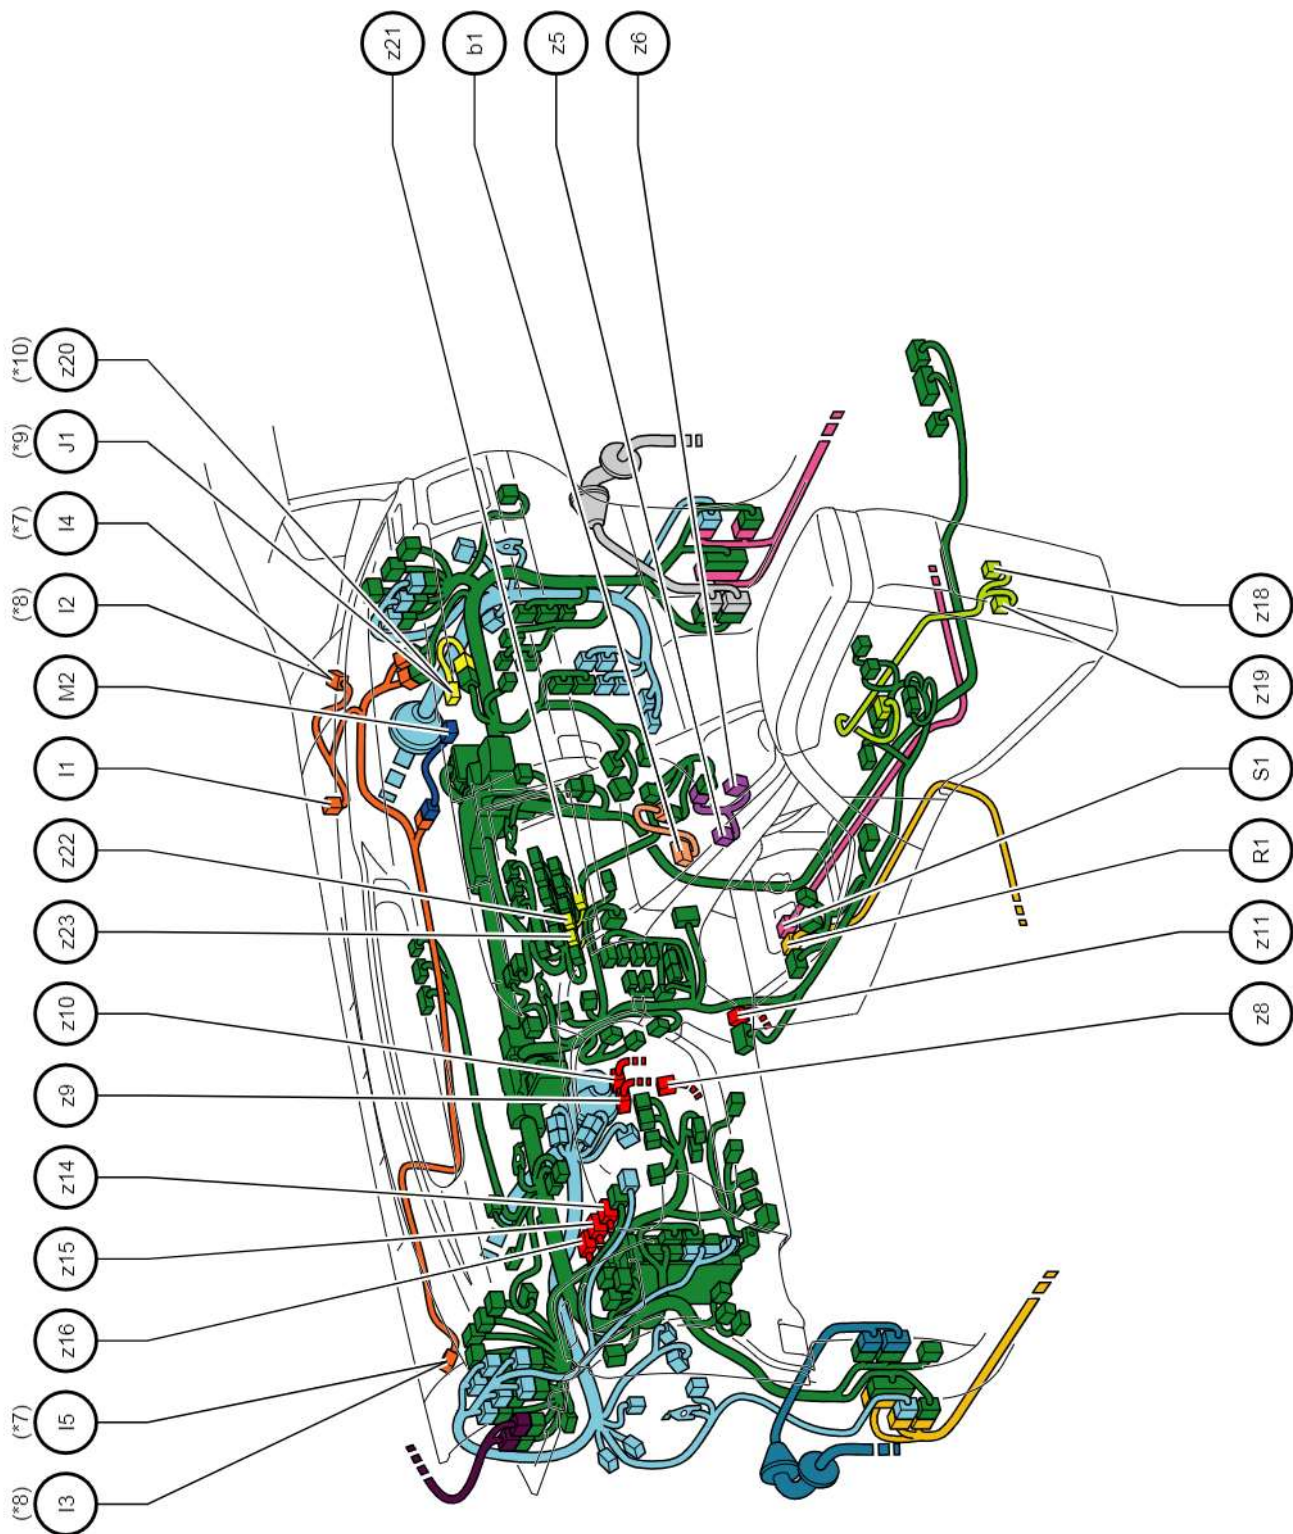



- * 7:8 Speaker
- * 8:6 Speaker
- * 9: Before Nov. 2010 Production
- * 10: From Nov. 2010 Production

Position of Parts in Instrument Panel <LHD>

I	1	Automatic Light Control Sensor
I	2	Front No. 2 Speaker Assembly RH
I	3	Front No. 2 Speaker Assembly LH
I	4	Instrument Panel Speaker RH (No. 1 Instrument Panel Speaker Panel Sub-Assembly)
I	5	Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
J	1	Front Passenger Side Squib Circuit
M	2	Passenger Seat Belt Warning Light Assembly
R	1	Center Airbag Sensor Assembly
S	1	Center Airbag Sensor Assembly
b	1	Transmission Shift Main Switch
z	5	Shift Lever Position Sensor
z	6	No. 2 Shift Lever Position Sensor
z	8	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z	9	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	10	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	11	A/C Amplifier Assembly , A/C Blower Assembly
z	14	Power Steering ECU Assembly , Power Steering Torque Sensor
z	15	Power Steering ECU Assembly , Power Steering Motor Assembly
z	16	Power Steering ECU Assembly , Power Steering Motor Assembly
z	18	Center Power Outlet Socket Assembly
z	19	No. 1 Stereo Jack Adapter Assembly
z	20	Front Passenger Side Squib Circuit
z	21	Extension Module
z	22	Radio & Display Receiver Assembly
z	23	Radio & Display Receiver Assembly


Position of Parts in Instrument Panel <LHD>

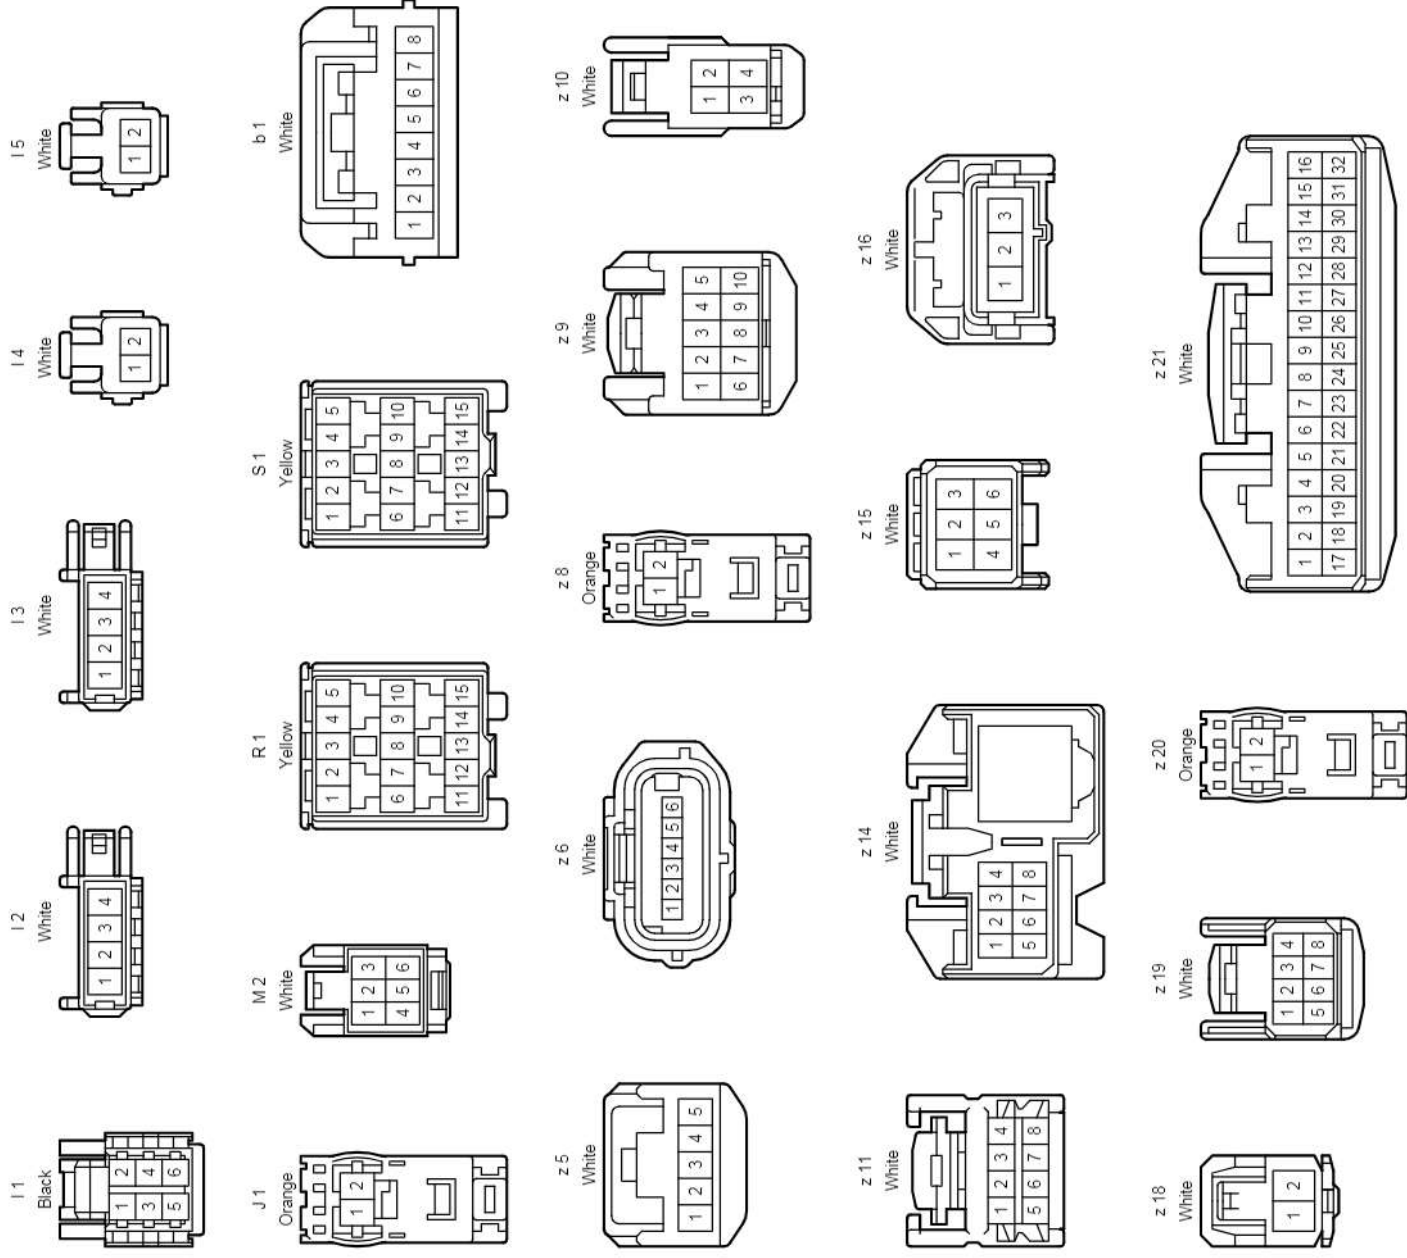

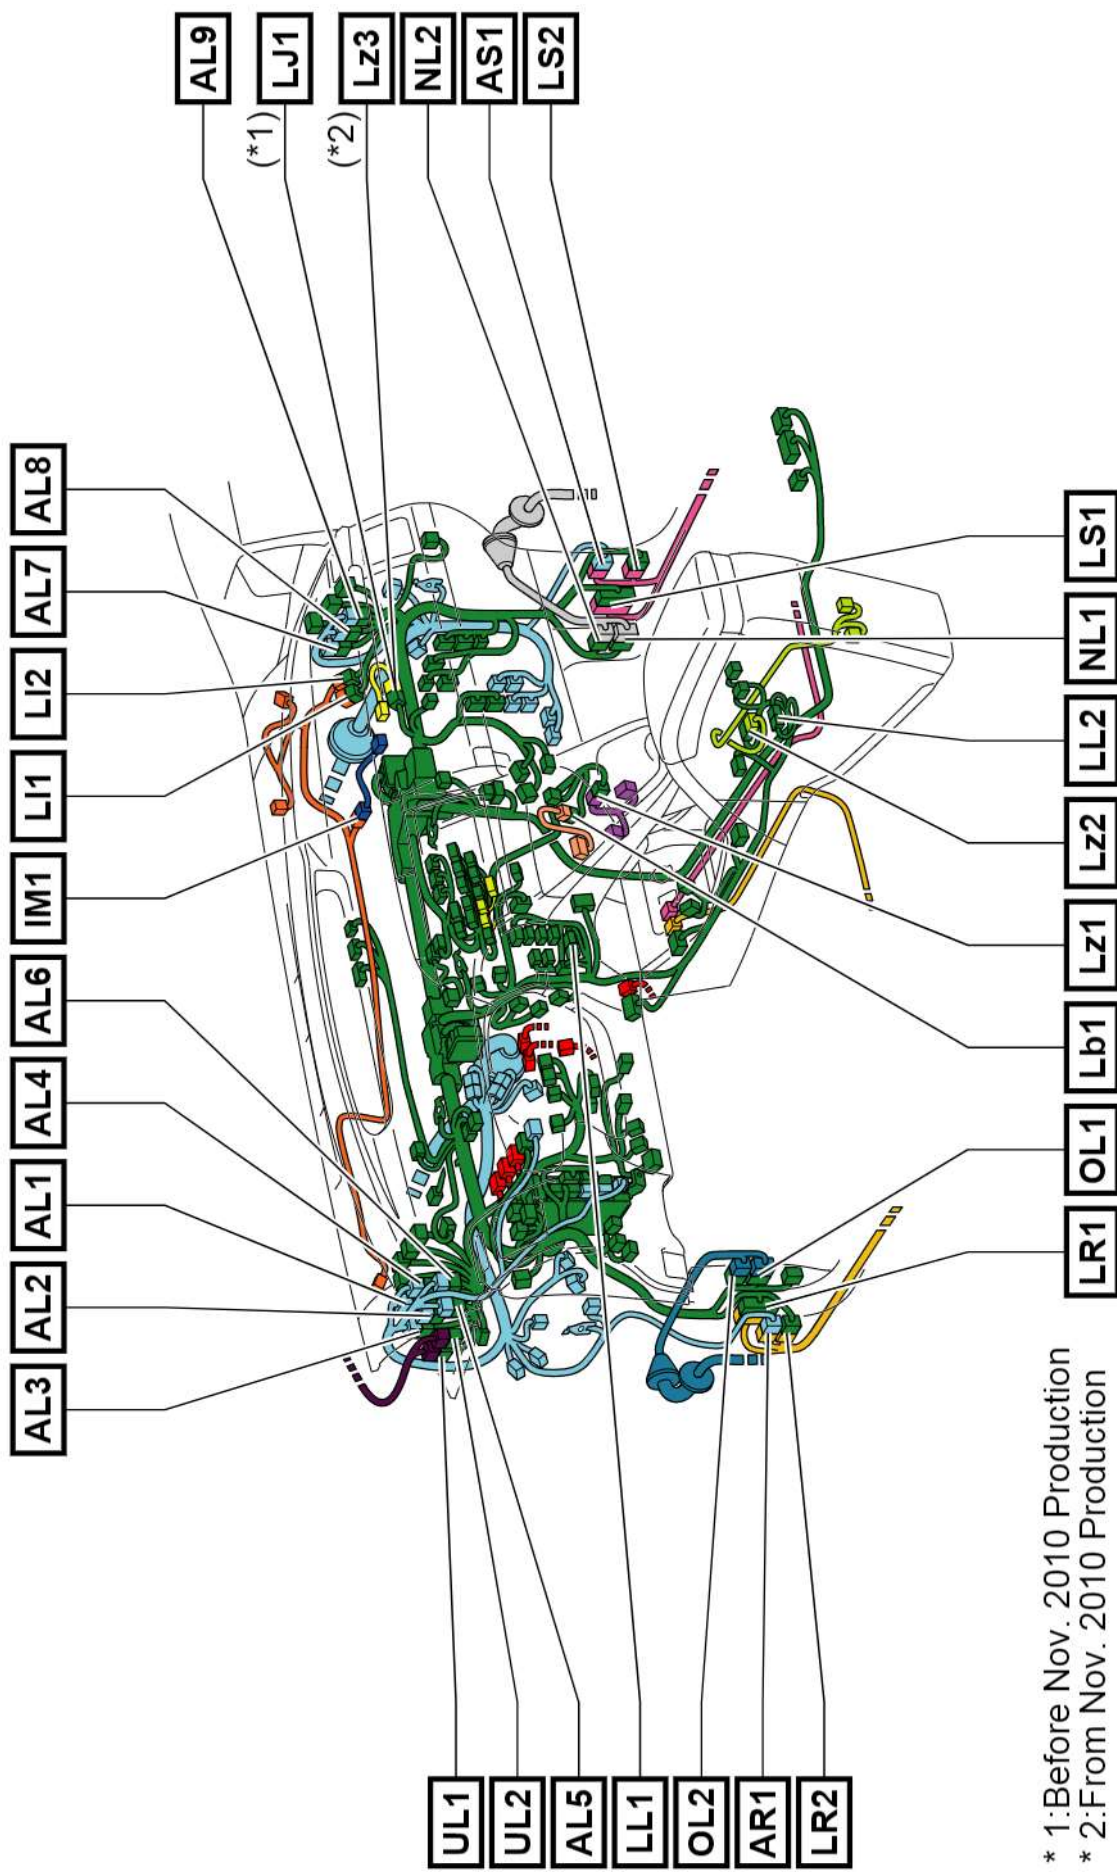


* 1: Before Nov. 2010 Production
 * 2: From Nov. 2010 Production



AL1
Blue

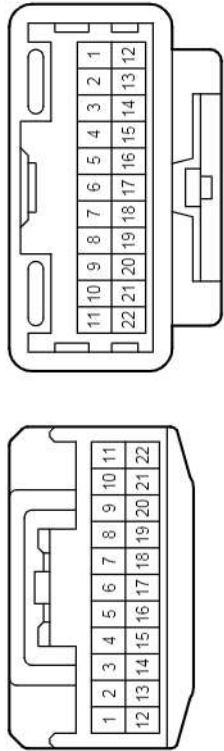



AL2
Gray

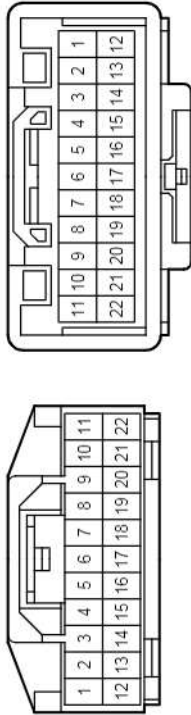



AL3
White

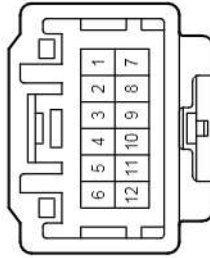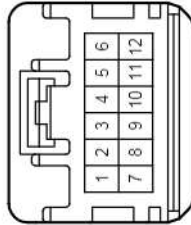



AL4
Black

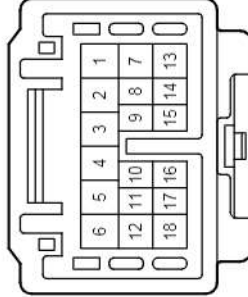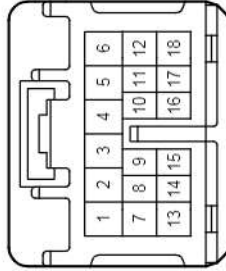

AL5
White

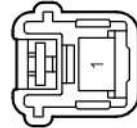 


AL6
Yellow

 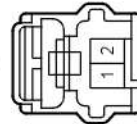

AL7
Black



AL8
White

Wire and Wire in Instrument Panel <LHD>


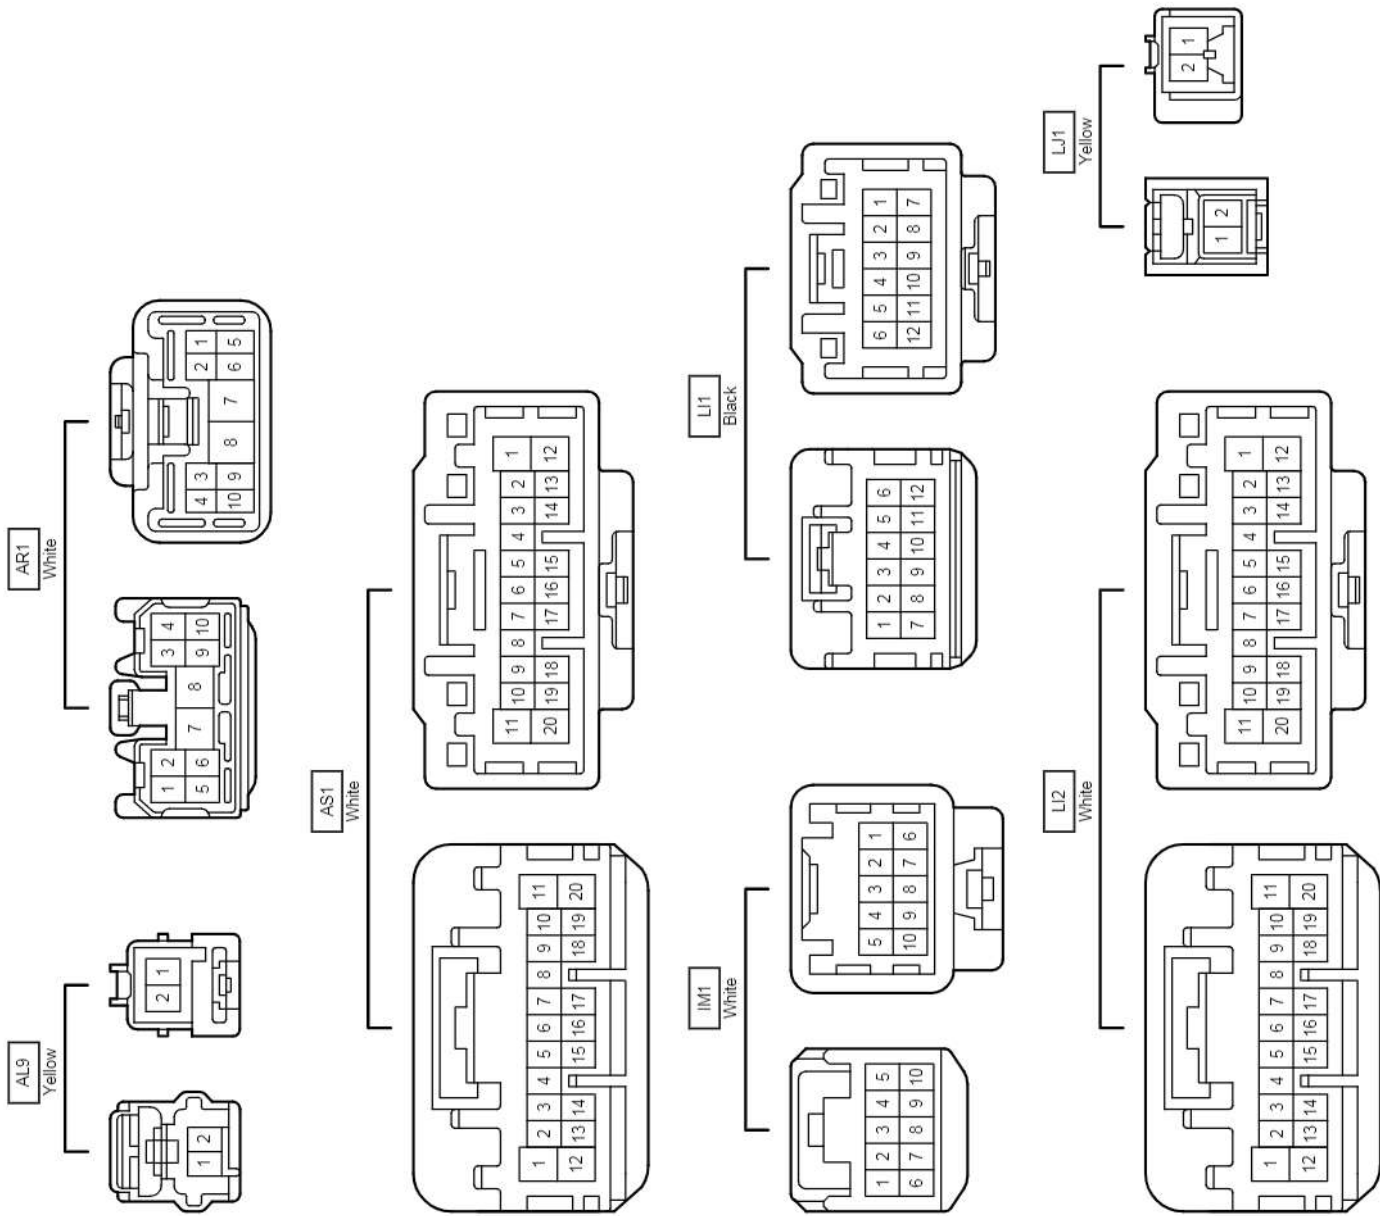


Wire and Wire in Instrument Panel <LHD>



LR1
White

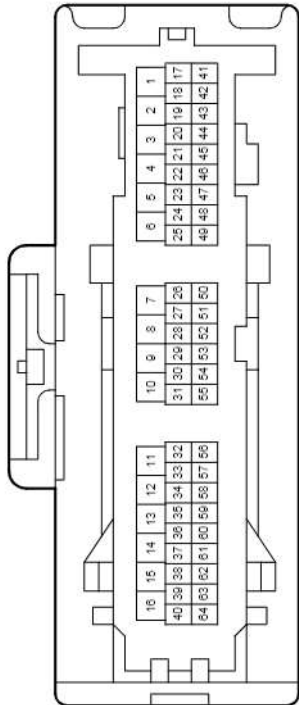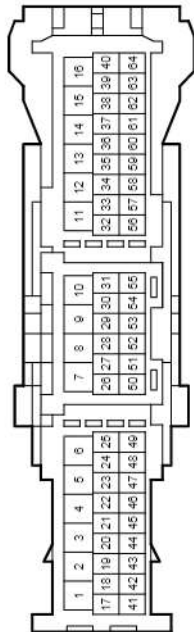



LR2
Black

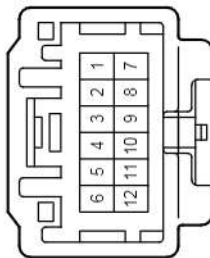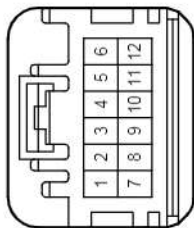



LS1
White

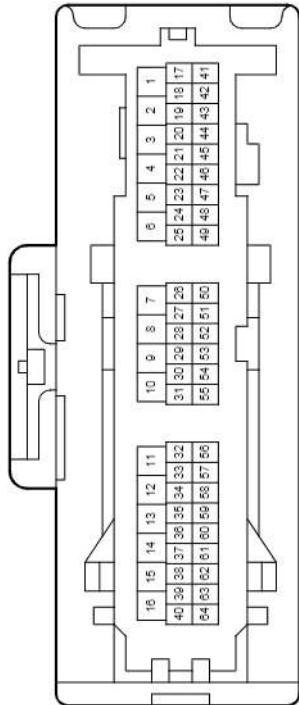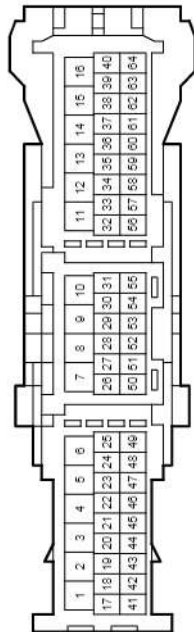


LS2
Black

  



Lb1
White

  


Wire and Wire in Instrument Panel <LHD>

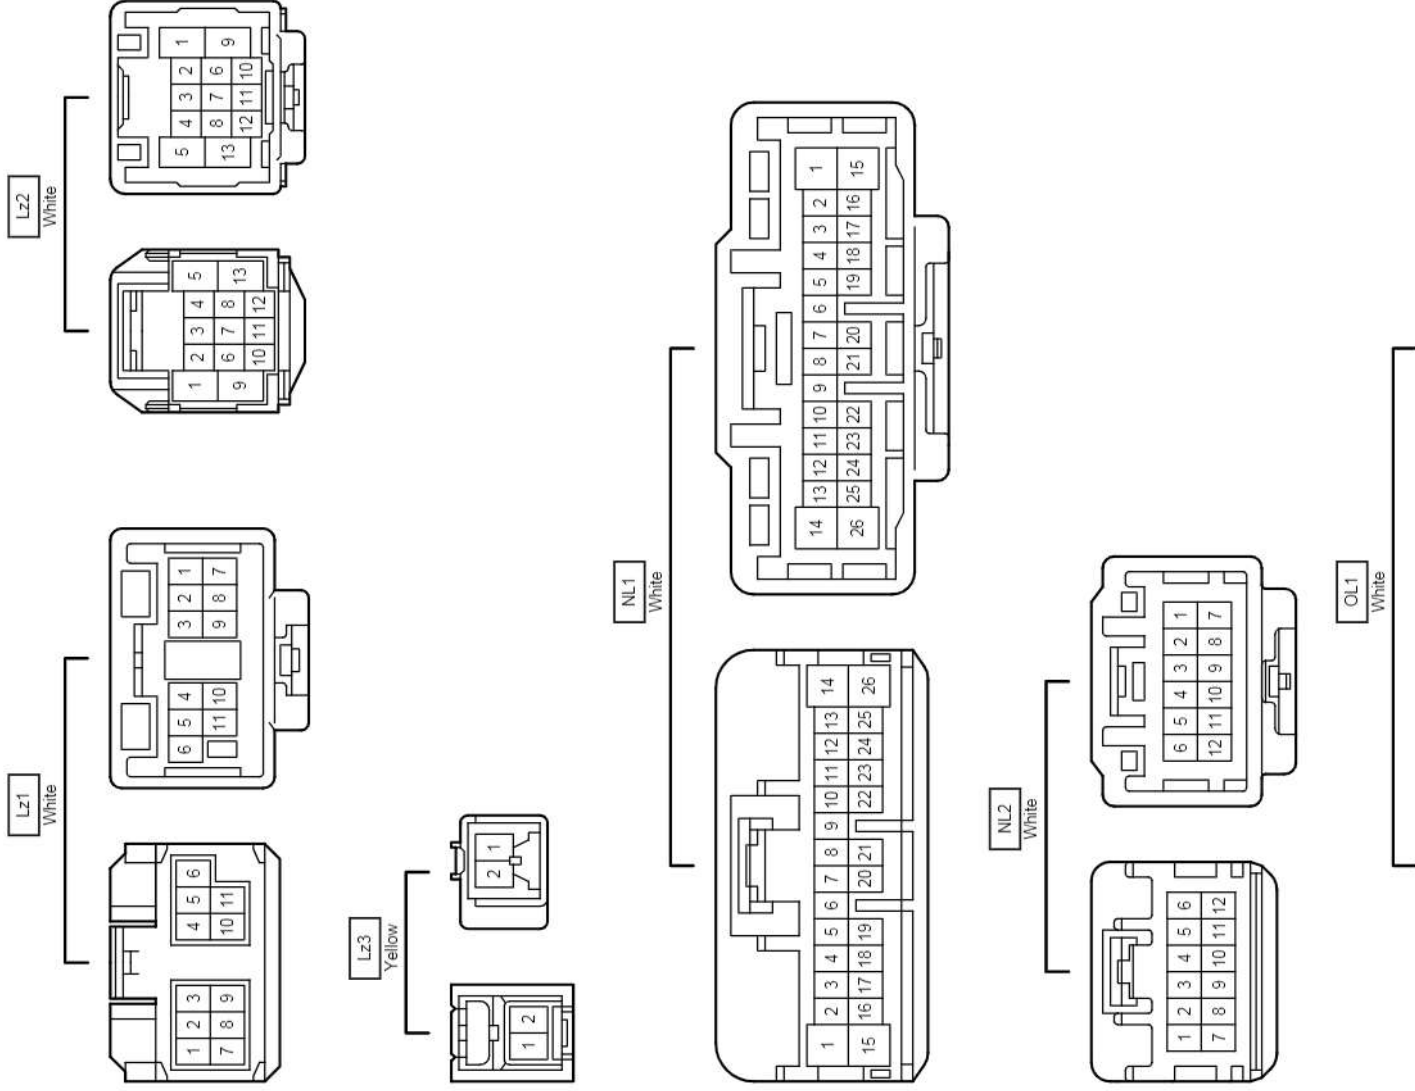

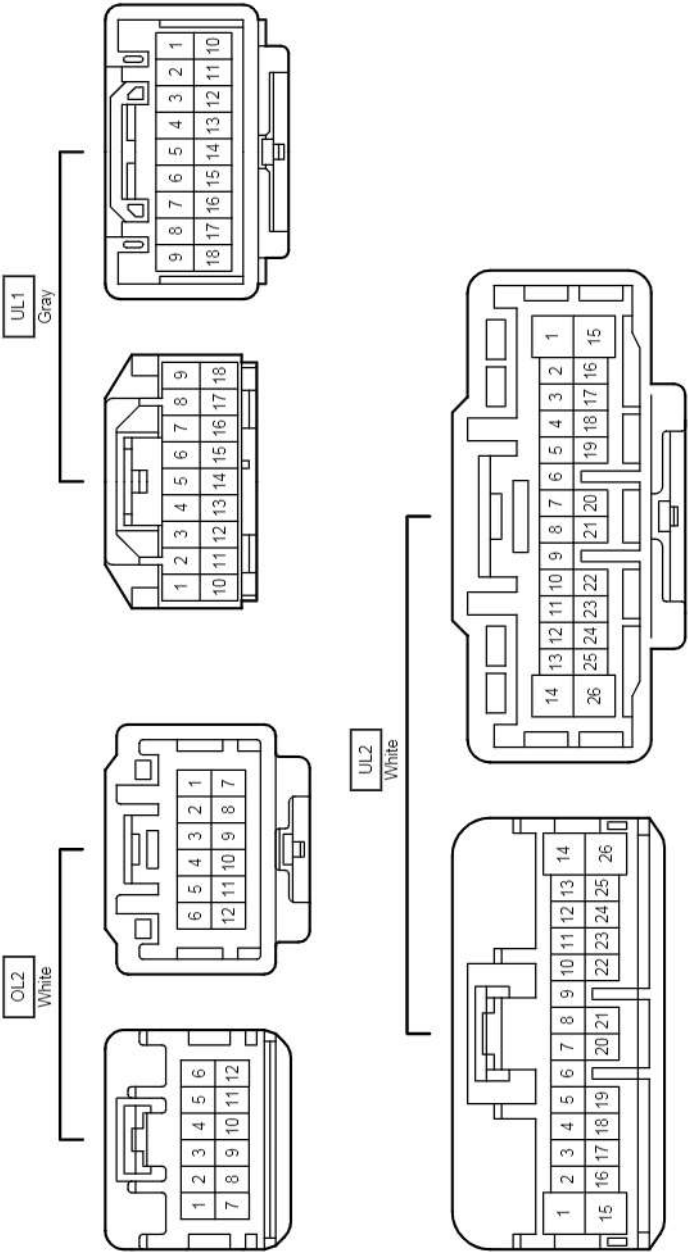

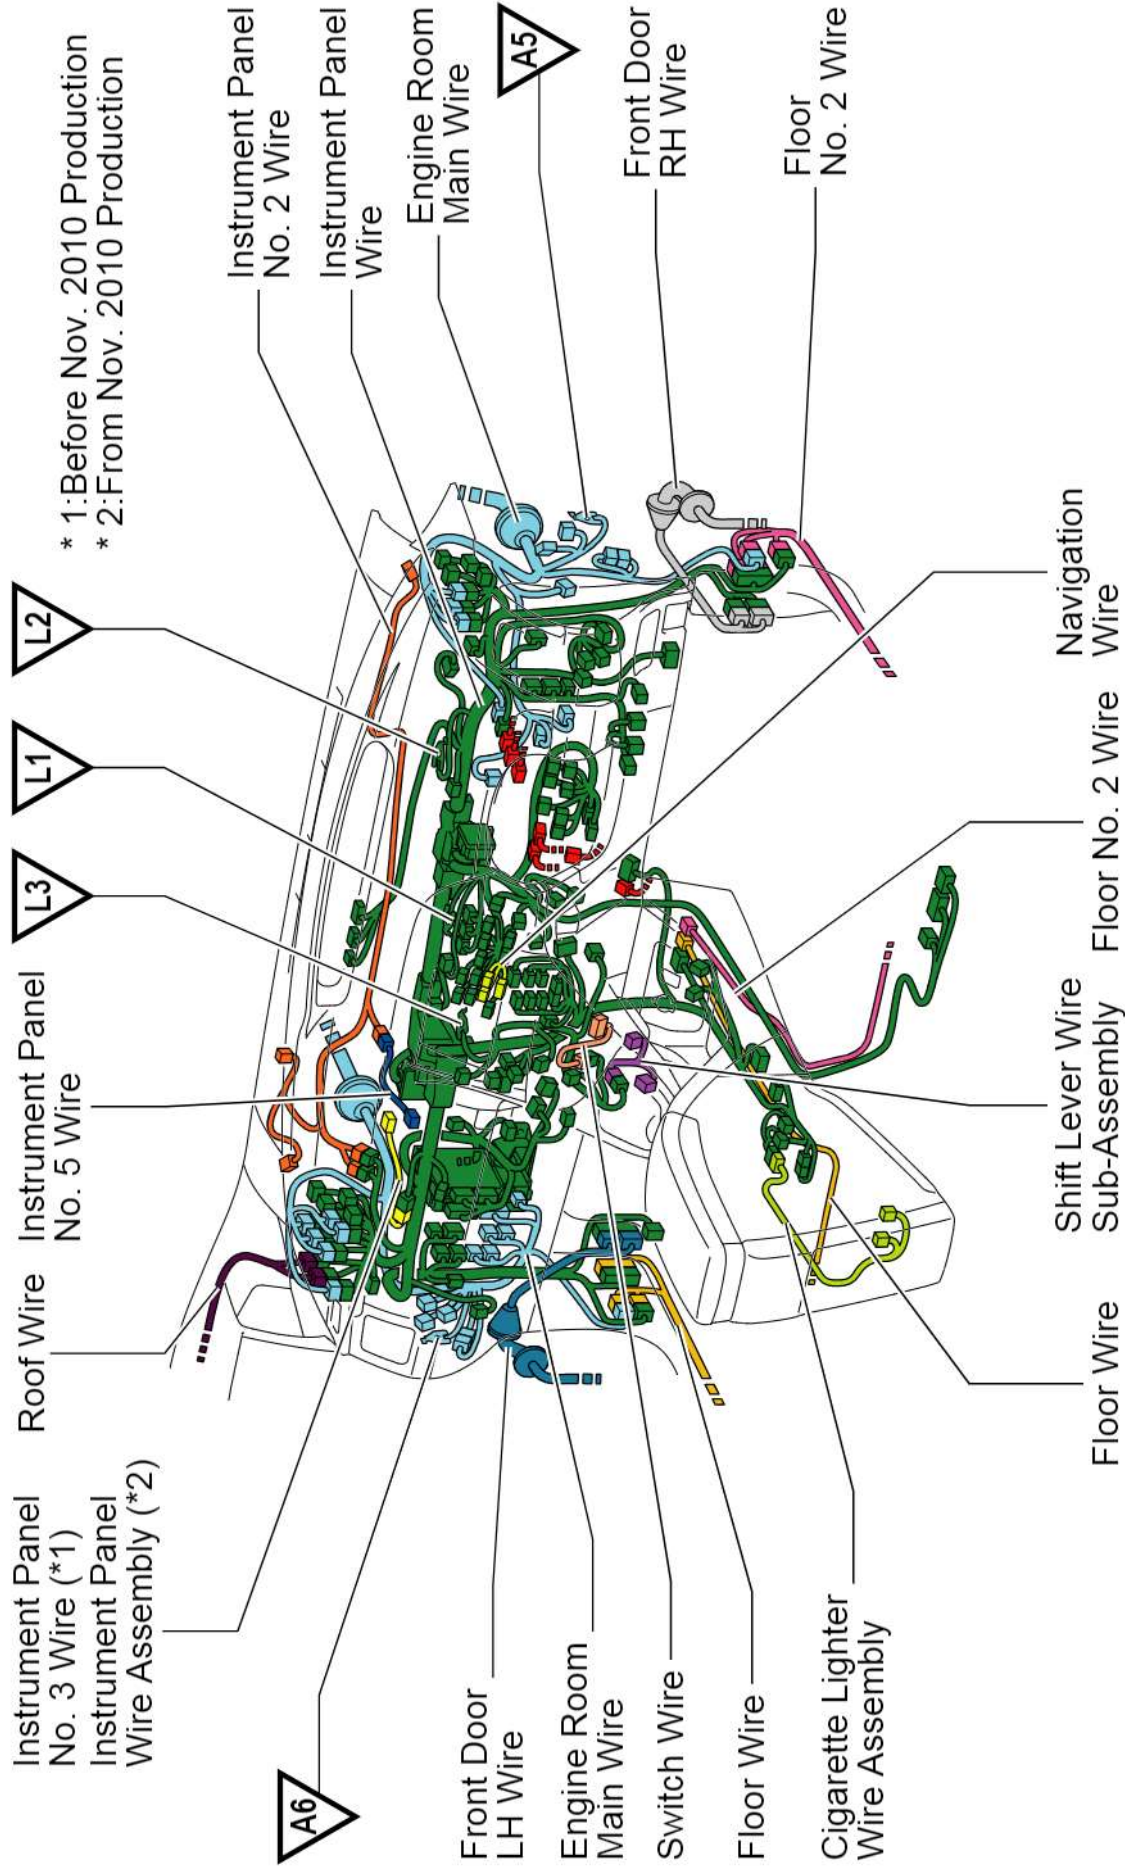

Position of Parts in Instrument Panel <RHD>










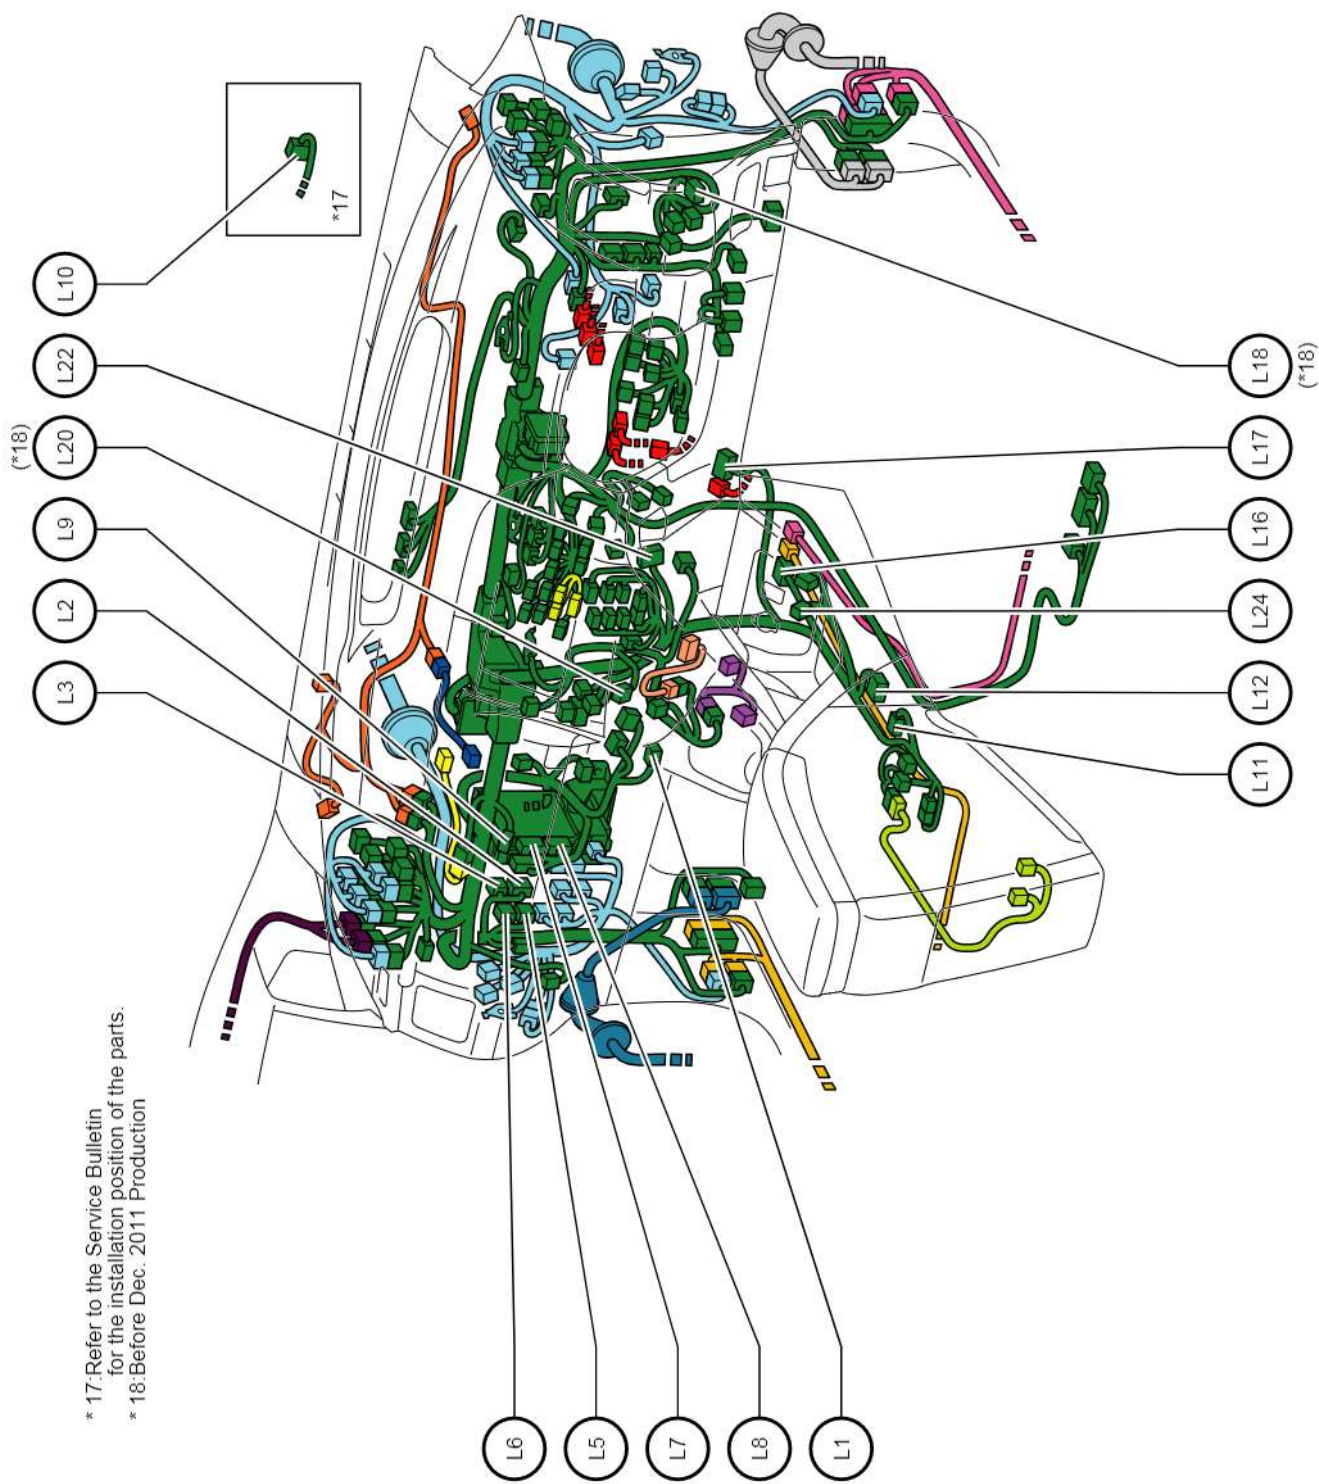



* 17: Refer to the Service Bulletin
for the installation position of the parts.

* 18: Before Dec. 2011 Production


L	1	No. 1 Interior Illumination Light Assembly RH
L	2	Seat Belt Control ECU
L	3	Seat Belt Control ECU
L	5	Power Management Control ECU
L	6	Power Management Control ECU
L	7	Main Body ECU
L	8	Main Body ECU
L	9	Glove Box Light (No. 1 Interior Illumination Light Assembly)
L	10	ID Code Box
L	11	Front Indoor Electrical Key Oscillator
L	12	Yaw Rate Sensor Assembly
L	16	Center Airbag Sensor Assembly
L	17	A/C Amplifier Assembly
L	18	Outer Mirror Switch Assembly
L	20	A/C Control Assembly
L	22	Solar Battery Air Conditioning Blower Vent ECU
L	24	Power Outlet Socket Assembly

Position of Parts in Instrument Panel <RHD>

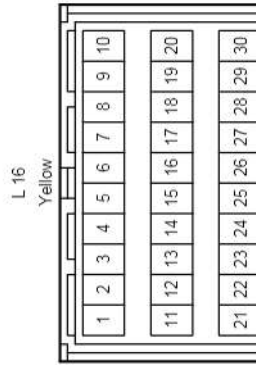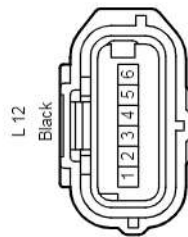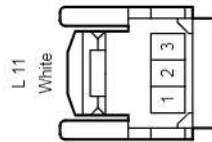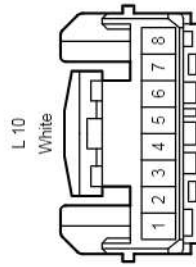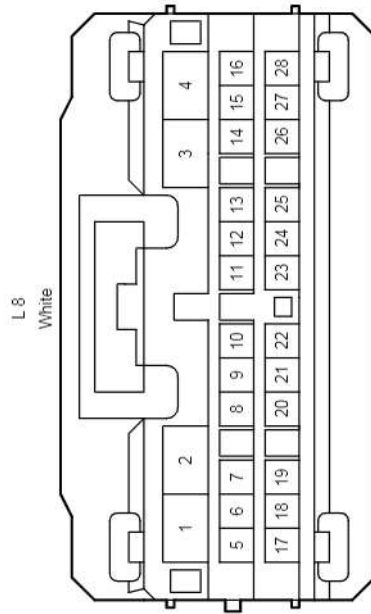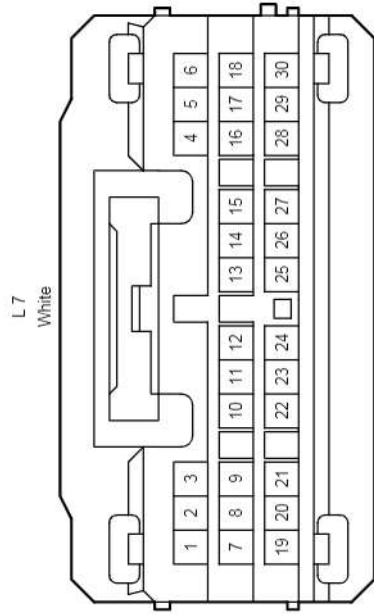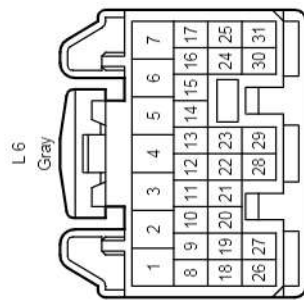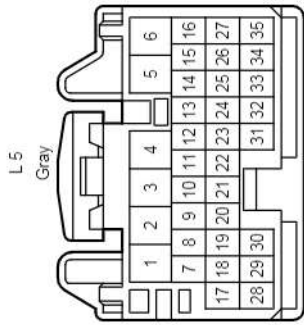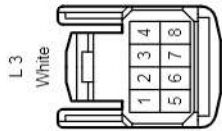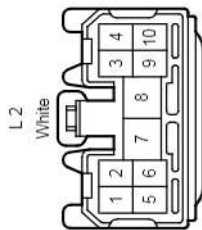


















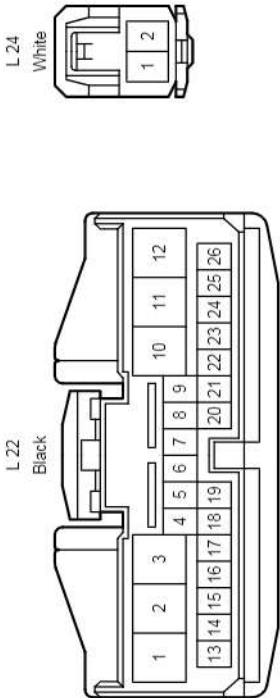


Position of Parts in Instrument Panel <RHD>

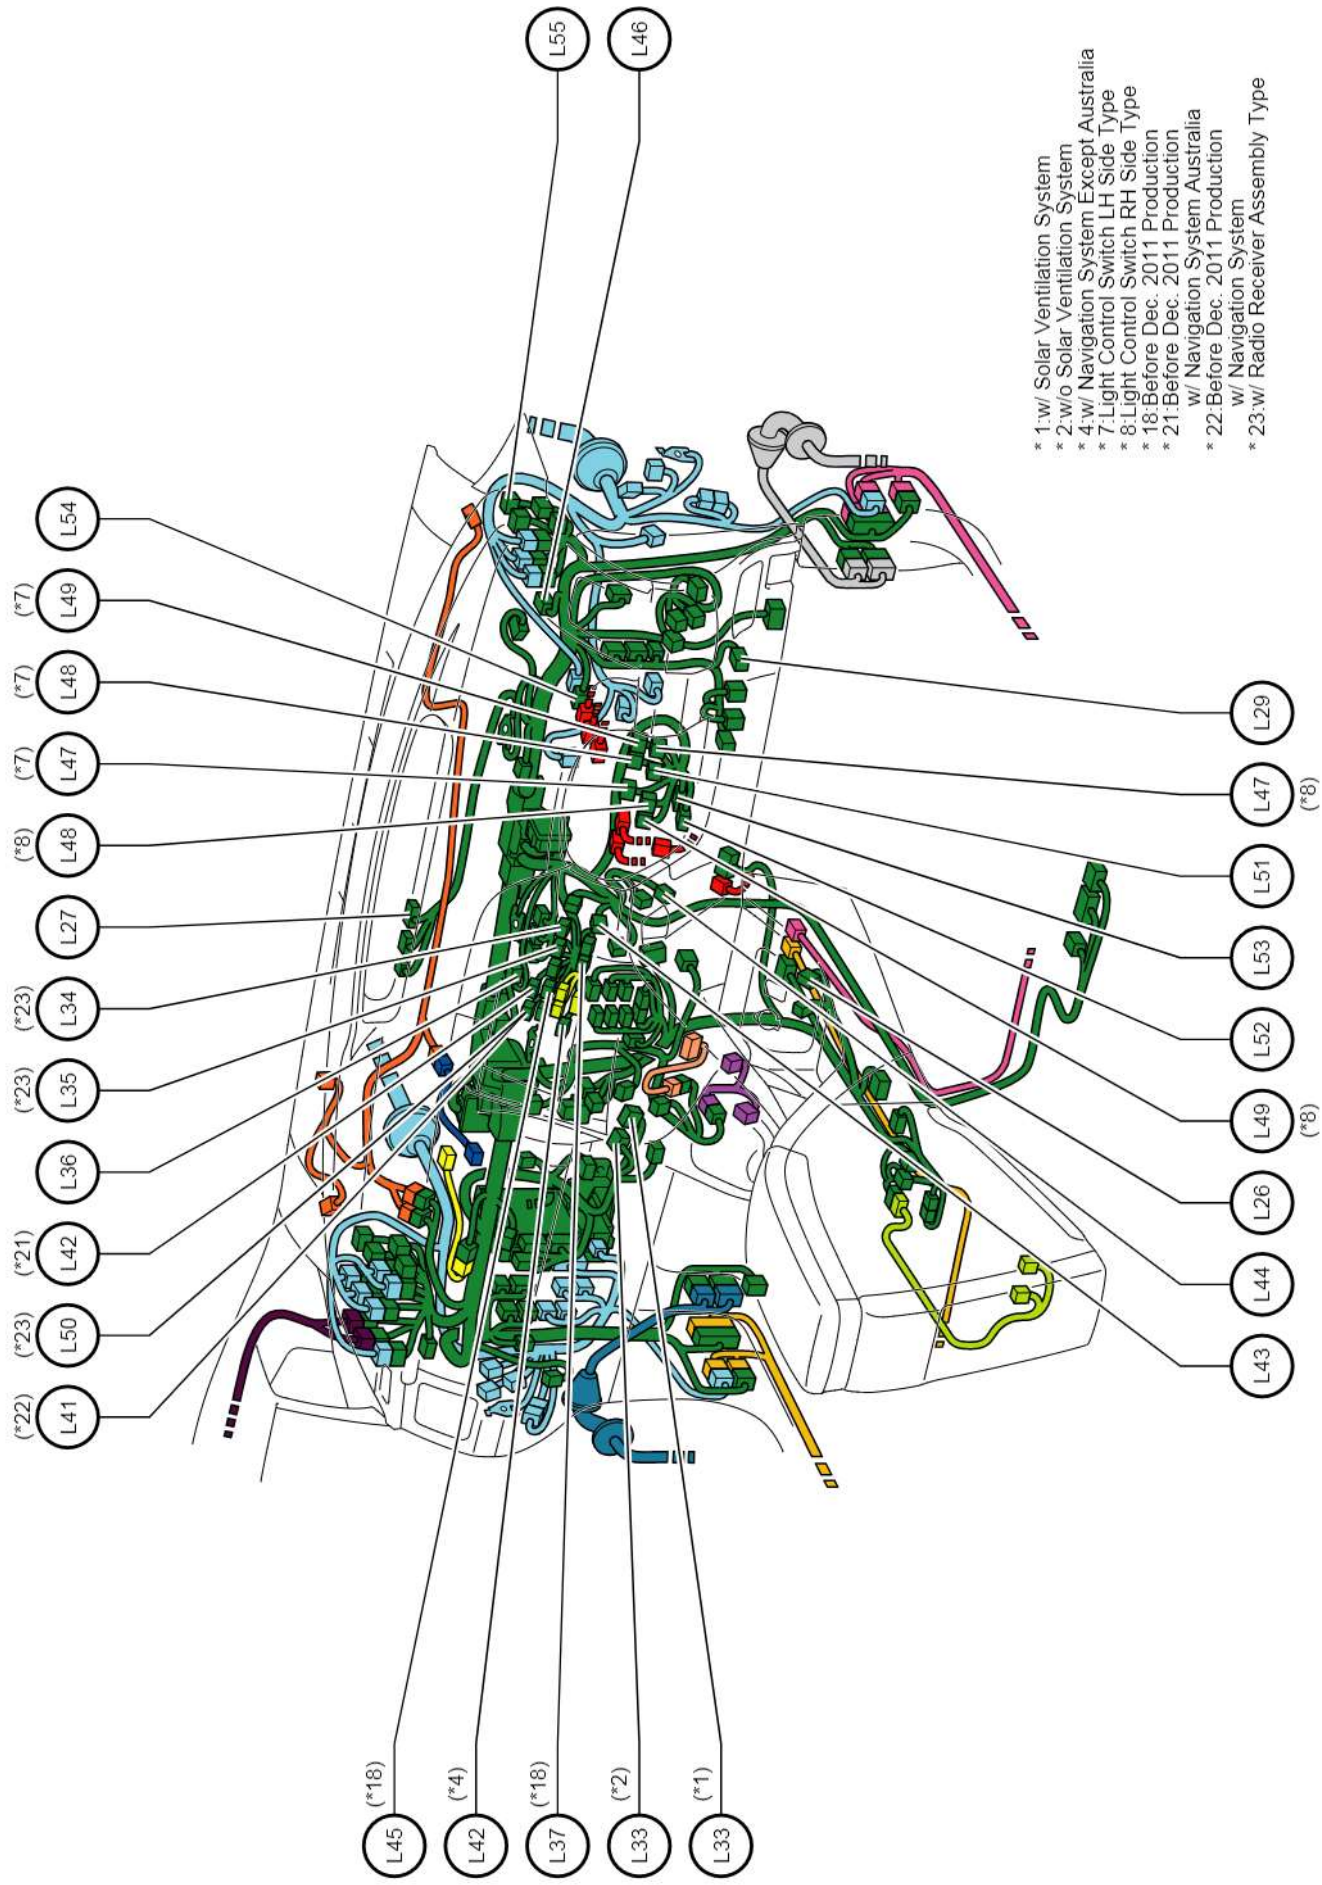

L 26	Seat Heater Switch
L 27	Combination Meter Assembly
L 29	Lower No. 1 Instrument Panel Airbag Assembly
L 33	Front Blower with Fan Motor Sub-Assembly
L 34	Radio Receiver Assembly
L 35	Radio Receiver Assembly
L 36	Amplifier Antenna Assembly
L 37	Navigation Receiver Assembly
L 41	Navigation Receiver Assembly
L 42	Navigation Receiver Assembly
L 43	Power Switch
L 44	Front Room Temperature Sensor
L 45	Radio Receiver Assembly
L 46	Skid Control Buzzer Assembly
L 47	Headlight Dimmer Switch Assembly
L 48	Windshield Wiper Switch Assembly
L 49	Windshield Wiper Switch Assembly
L 50	Radio Receiver Assembly
L 51	Steering Sensor
L 52	Spiral Cable Sub-Assembly
L 53	Spiral Cable Sub-Assembly
L 54	Power Steering ECU Assembly
L 55	Turn Signal Flasher Assembly

   Position of Parts in Instrument Panel <RHD>

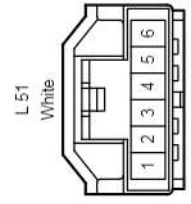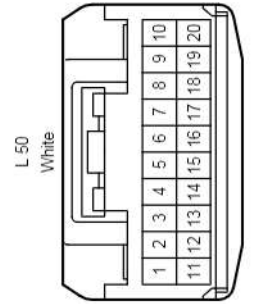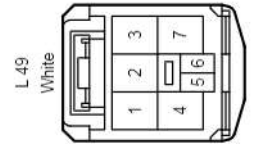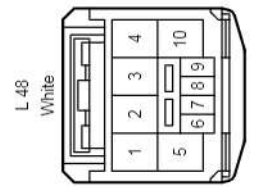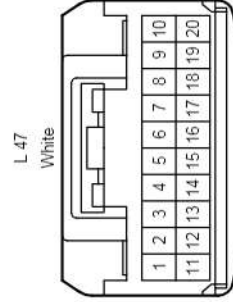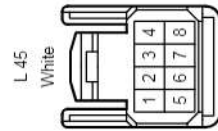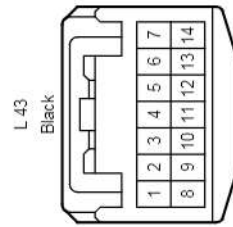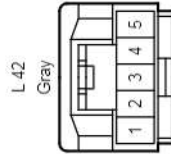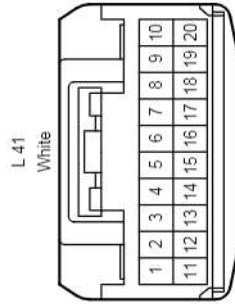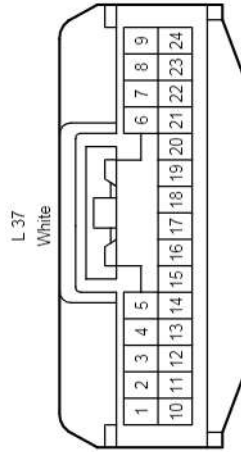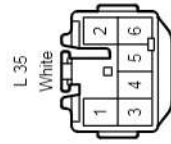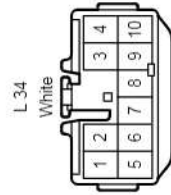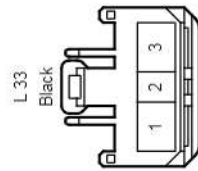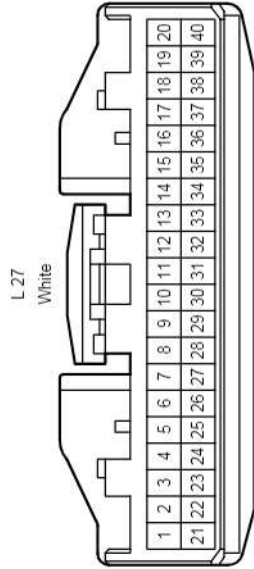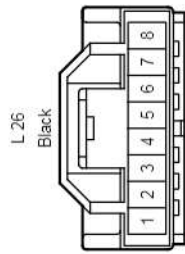

L 52
Black


L 53
Yellow

L 54
White

L 55
Blue

cardiagn.com


Position of Parts in Instrument Panel <RHD>

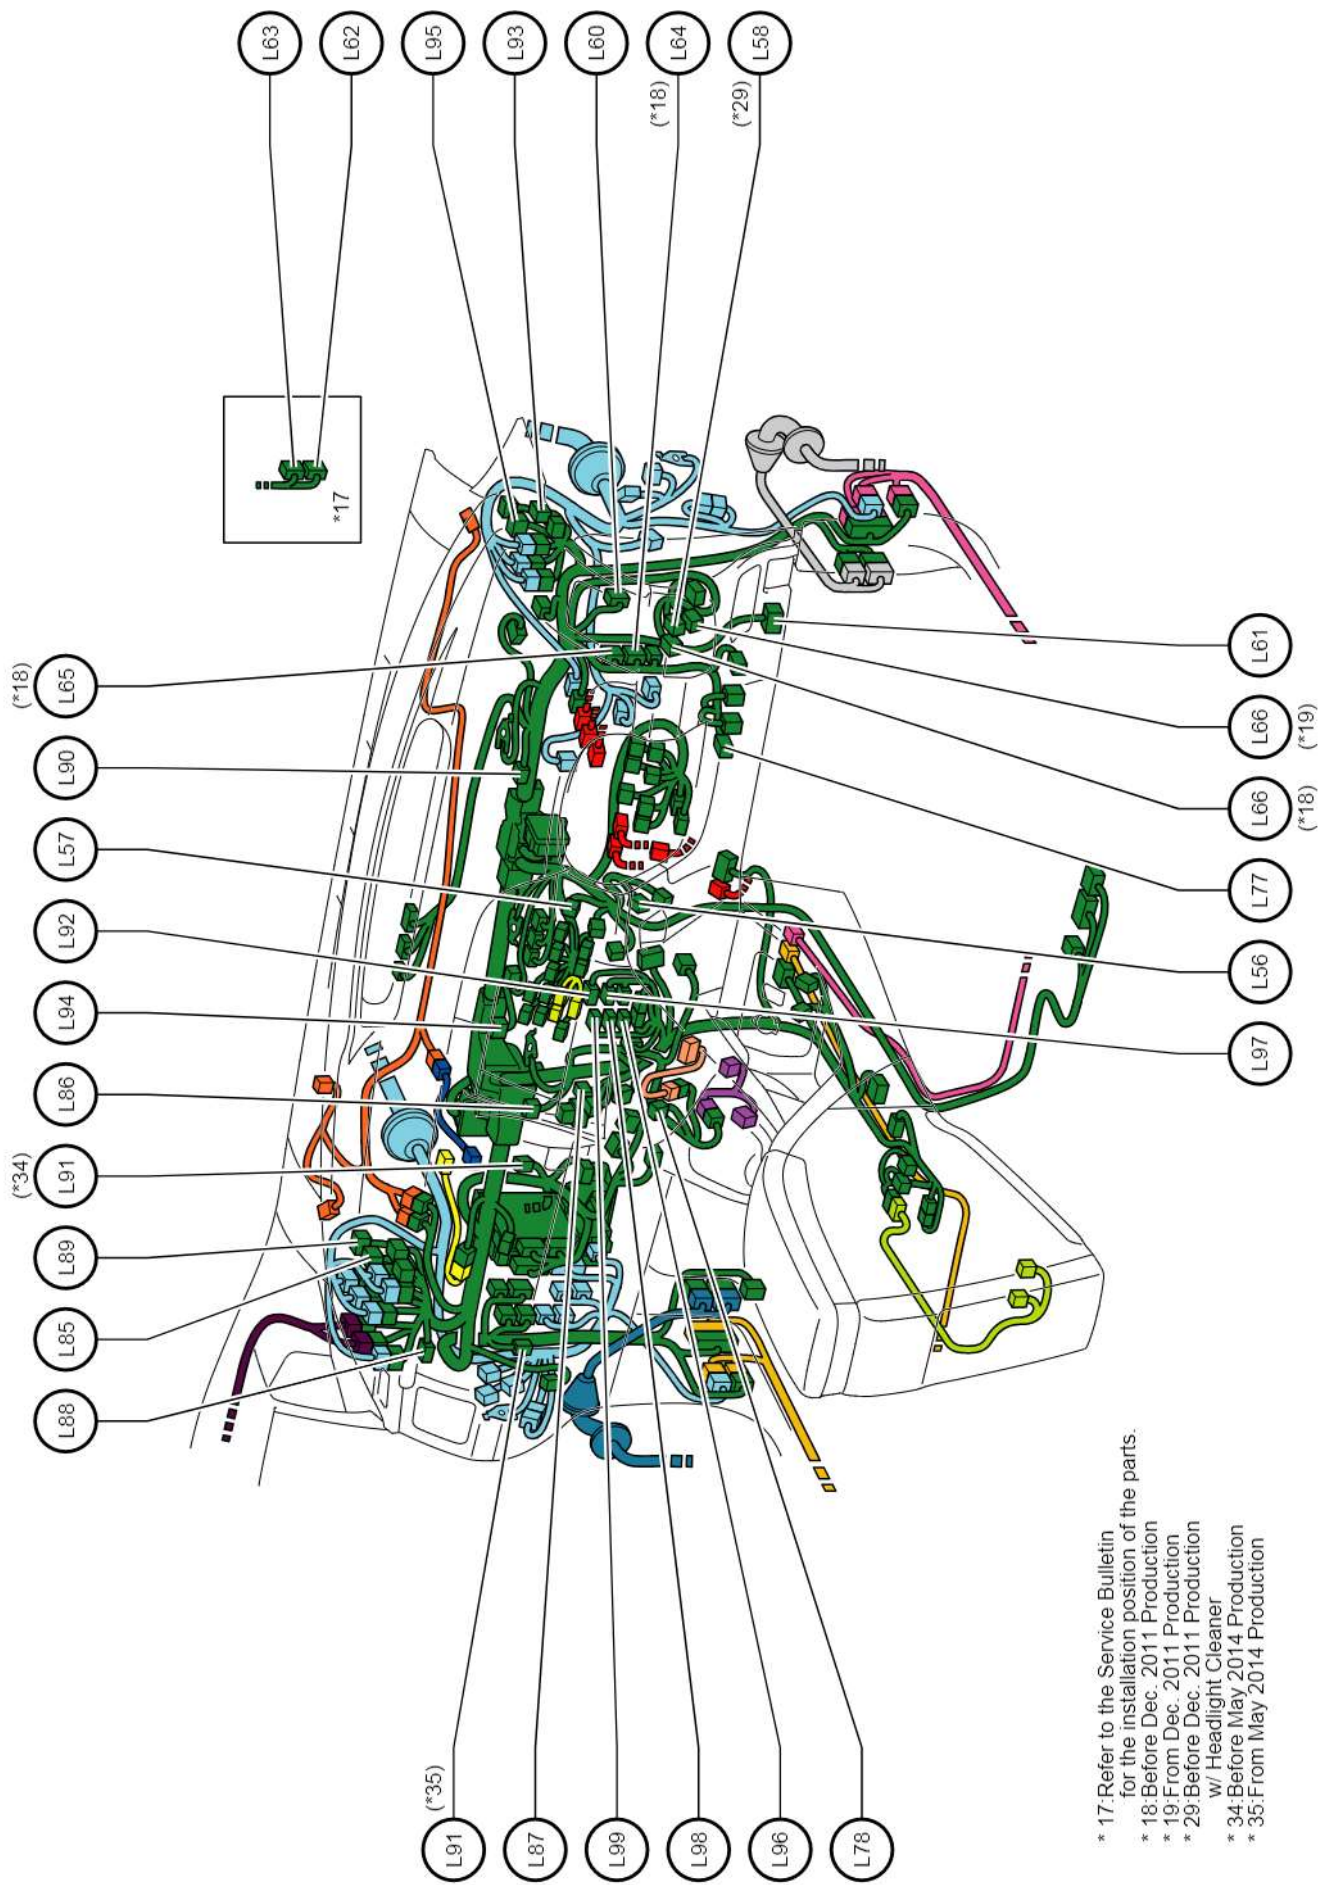


- * 17: Refer to the Service Bulletin for the installation position of the parts.
- * 18: Before Dec. 2011 Production
- * 19: From Dec. 2011 Production
- * 29: Before Dec. 2011 Production w/ Headlight Cleaner
- * 34: Before May 2014 Production
- * 35: From May 2014 Production

L 56	Back Sonar or Clearance Sonar Switch Assembly
L 57	Trip Switch
L 58	Headlight Cleaner Switch Assembly
L 60	Driving Support ECU Assembly
L 61	DLC3
L 62	Certification ECU Assembly
L 63	Certification ECU Assembly
L 64	Parking Assist ECU
L 65	Parking Assist ECU
L 66	Ventilator Switch
L 77	No. 1 Interior Illumination Light Assembly LH
L 78	Integration Control and Panel Assembly
L 85	Junction Connector
L 86	Junction Connector
L 87	Junction Connector
L 88	Junction Connector
L 89	Junction Connector
L 90	Diode (Front Courtesy Light RH)
L 91	Diode (Front Courtesy Light LH)
L 92	Junction Connector
L 93	Junction Connector
L 94	Junction Connector
L 95	Junction Connector
L 96	Junction Connector
L 97	Junction Connector
L 98	Junction Connector
L 99	Junction Connector


L 56
Black

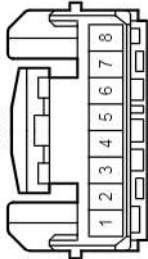


L 57
Black

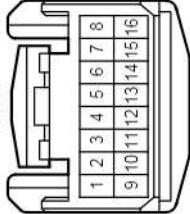


L 58
Gray

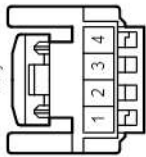


L 60
White

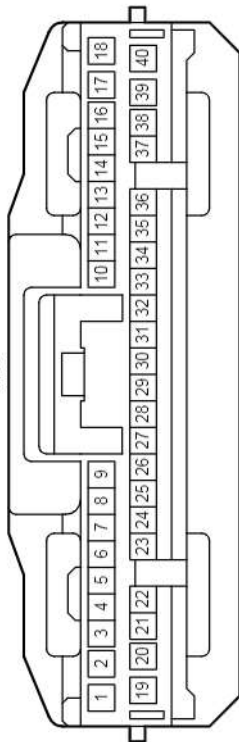


L 61
White

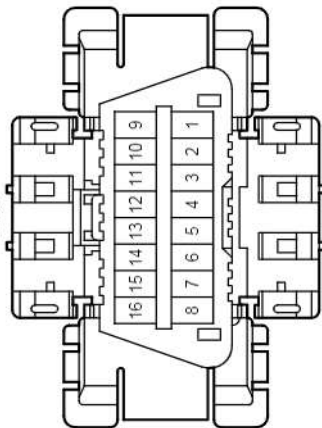


L 62
White

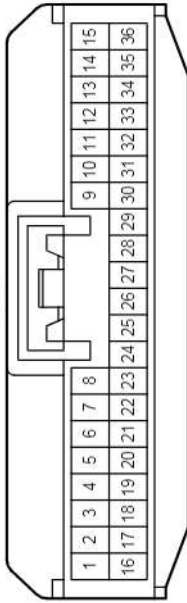

L 63
White

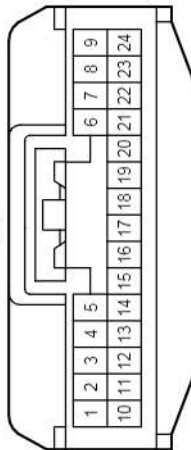


L 64
White

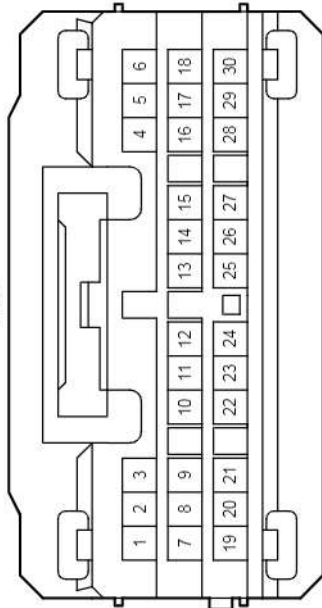


Position of Parts in Instrument Panel <RHD>


L 78
Black

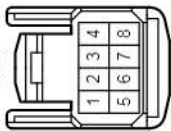


L 85
White

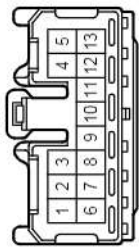


L 86
Black

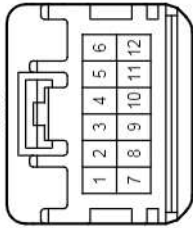


L 87
Black

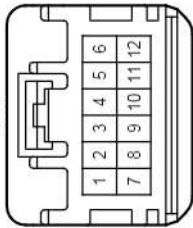

L 88
Black

 

L 89
Black

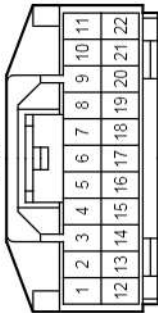


L 90
Black




L 91
Black




L 92
White

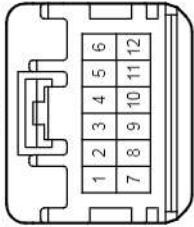


L 93
White

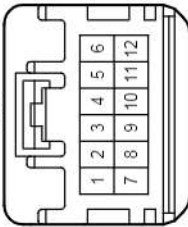

L 94
White

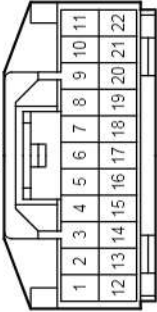


L 95
White

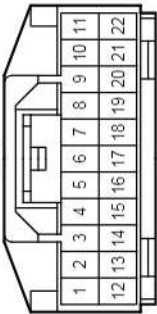


L 96
White



 
L 97
White




L 98
White

 

L 99
White

 


Position of Parts in Instrument Panel <RHD>

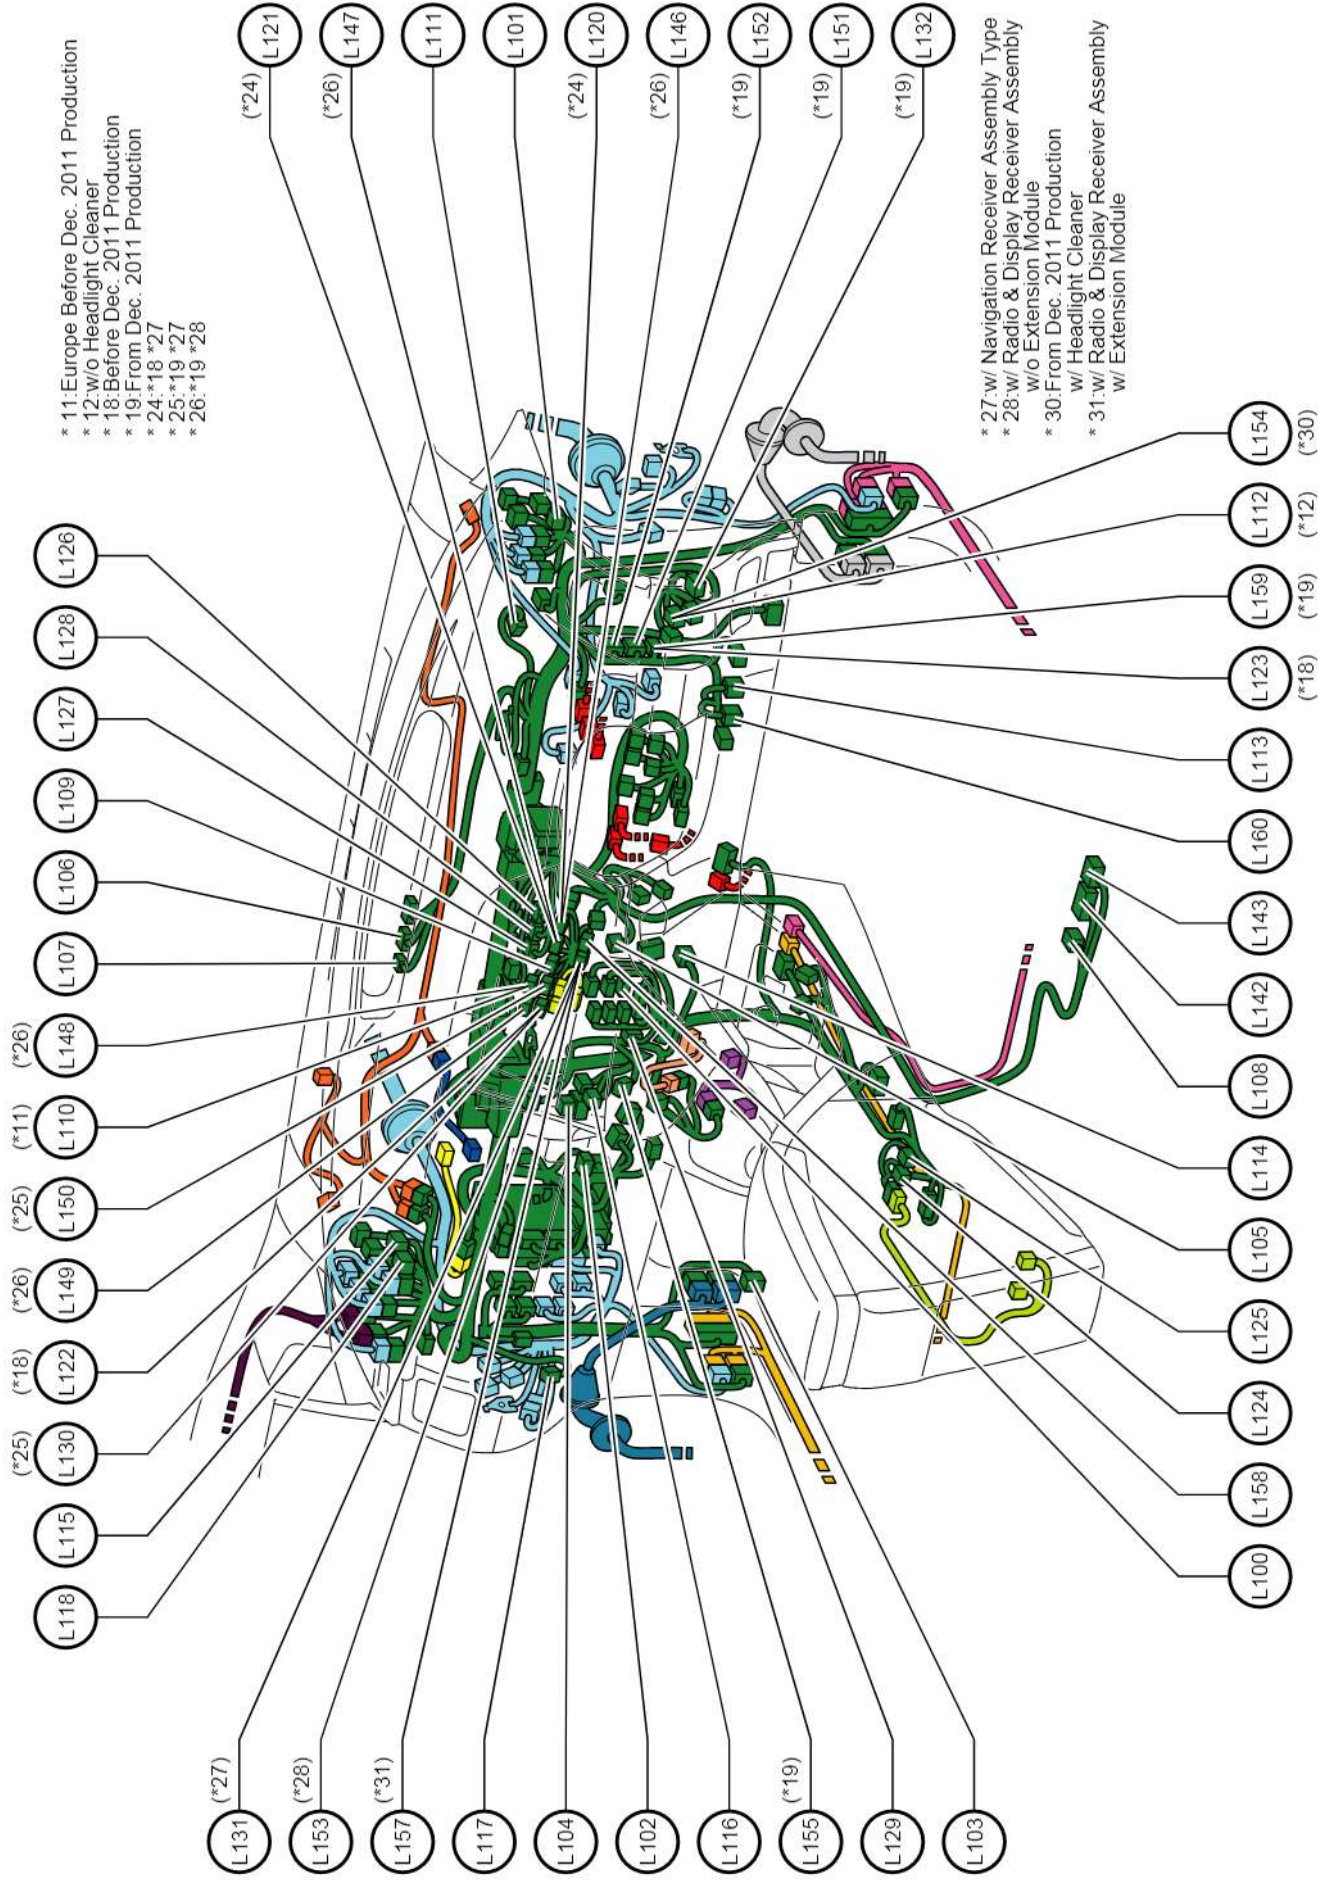


L 100	Junction Connector
L 101	Junction Connector
L 102	Junction Connector
L 103	Fuse Block
L 104	Solar Ventilation Relay
L 105	Double Lock Door Control Relay Assembly
L 106	Combination Meter Assembly
L 107	Combination Meter Assembly
L 108	Stereo Component Amplifier Assembly
L 109	Navigation Receiver Assembly
L 110	Navigation Receiver Assembly
L 111	Combination Meter Mirror
L 112	Headlight Leveling Switch
L 113	Pre-Crash System Cancel Switch Assembly
L 114	Windshield Wiper Relay Assembly
L 115	Junction Connector
L 116	Junction Connector
L 117	Airbag Cut Off Switch Cylinder Sub-Assembly
L 118	Rear Fog Light Relay
L 120	Navigation Receiver Assembly
L 121	Navigation Receiver Assembly
L 122	Navigation Receiver Assembly
L 123	Parking Assist ECU
L 124	No. 1 Stereo Jack Adapter Assembly
L 125	Center Power Outlet Socket Assembly
L 126	Radio Receiver Assembly
L 127	Navigation Receiver Assembly
L 128	Navigation Receiver Assembly
L 129	Junction Connector
L 130	Navigation Receiver Assembly
L 131	Navigation Receiver Assembly
L 132	Outer Mirror Switch Assembly
L 142	Stereo Component Amplifier Assembly
L 143	Stereo Component Amplifier Assembly
L 146	Radio & Display Receiver Assembly
L 147	Radio & Display Receiver Assembly
L 148	Radio & Display Receiver Assembly
L 149	Radio & Display Receiver Assembly
L 150	Navigation Receiver Assembly
L 151	Parking Assist ECU
L 152	Parking Assist ECU
L 153	Radio & Display Receiver Assembly
L 154	Headlight Cleaner Switch Assembly
L 155	A/C Control Assembly

Position of Parts in Instrument Panel <RHD>

 
L100
White




L101
Black

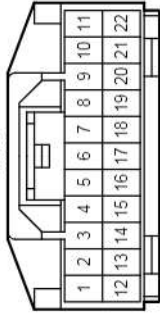


L102
Blue

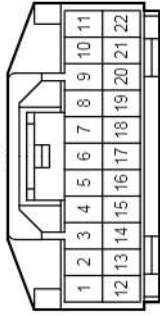

L103
White

 


L104
White

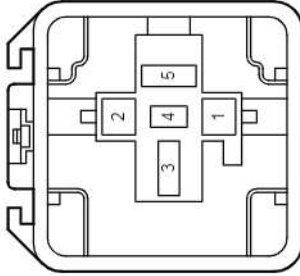


L105
White



L106
White

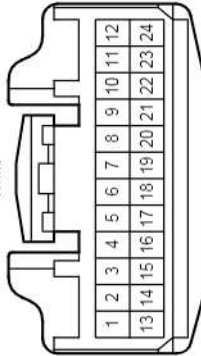


L107
White

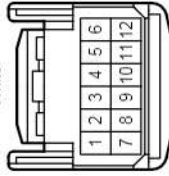


L108
White




L109
White

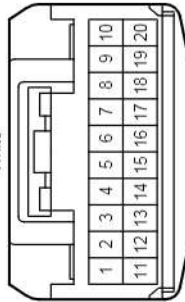

L110
White

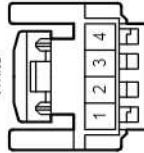


L111
White

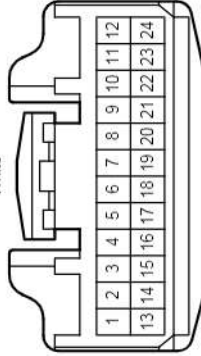


L112
Black



 
L113
White



L114
White

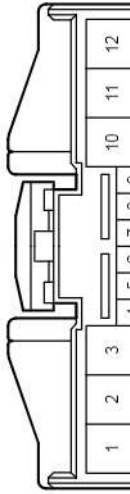


L115
White

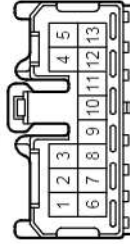

Position of Parts in Instrument Panel <RHD>


L122

 Blue




L123

 White




L124

Black

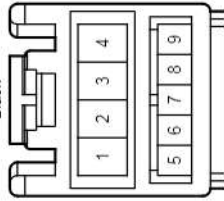


L125

 White




L126

White

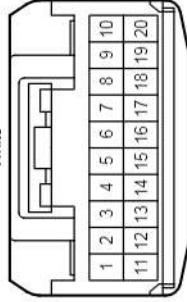


L127

 White




L128

 White




L129

Gray

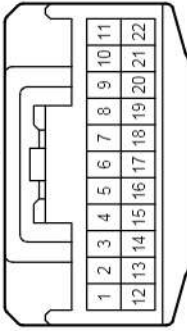


L130

White

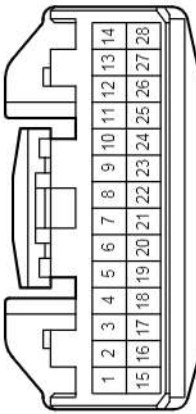


L131

White

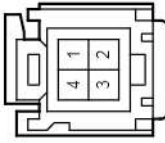


L132

White

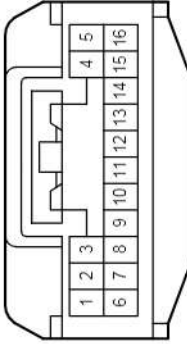


L142

White

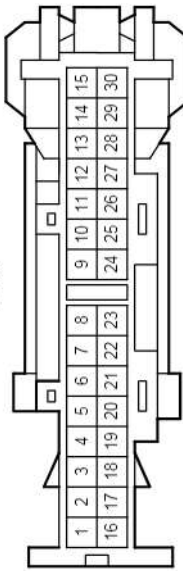


L143

White

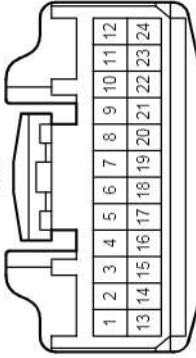


L146

 White




L147

 White




L148


White

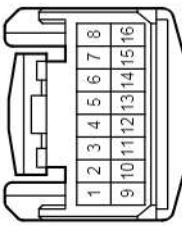


L151
Black

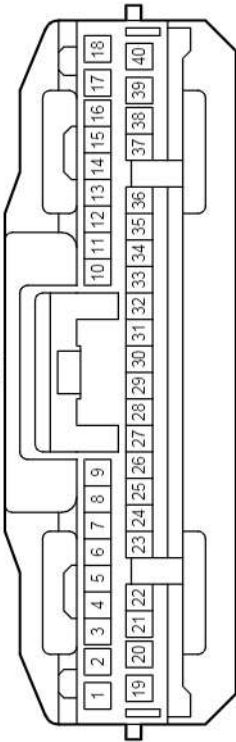


L152
White

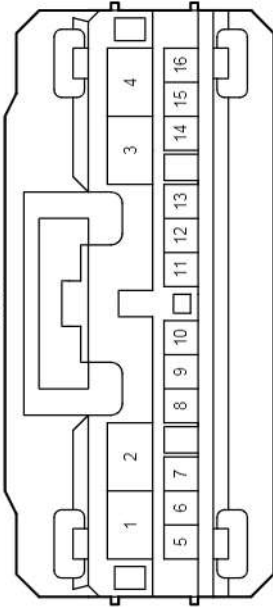


L153
White

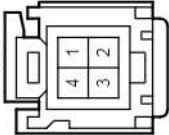


L154
Gray

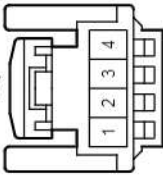


L155
Gray

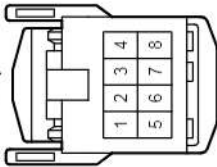


L157
White

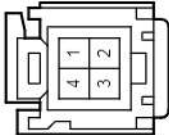


L158
White

 


L159
Gray

 

L160
White

 



















Position of Parts in Instrument Panel <RHD>

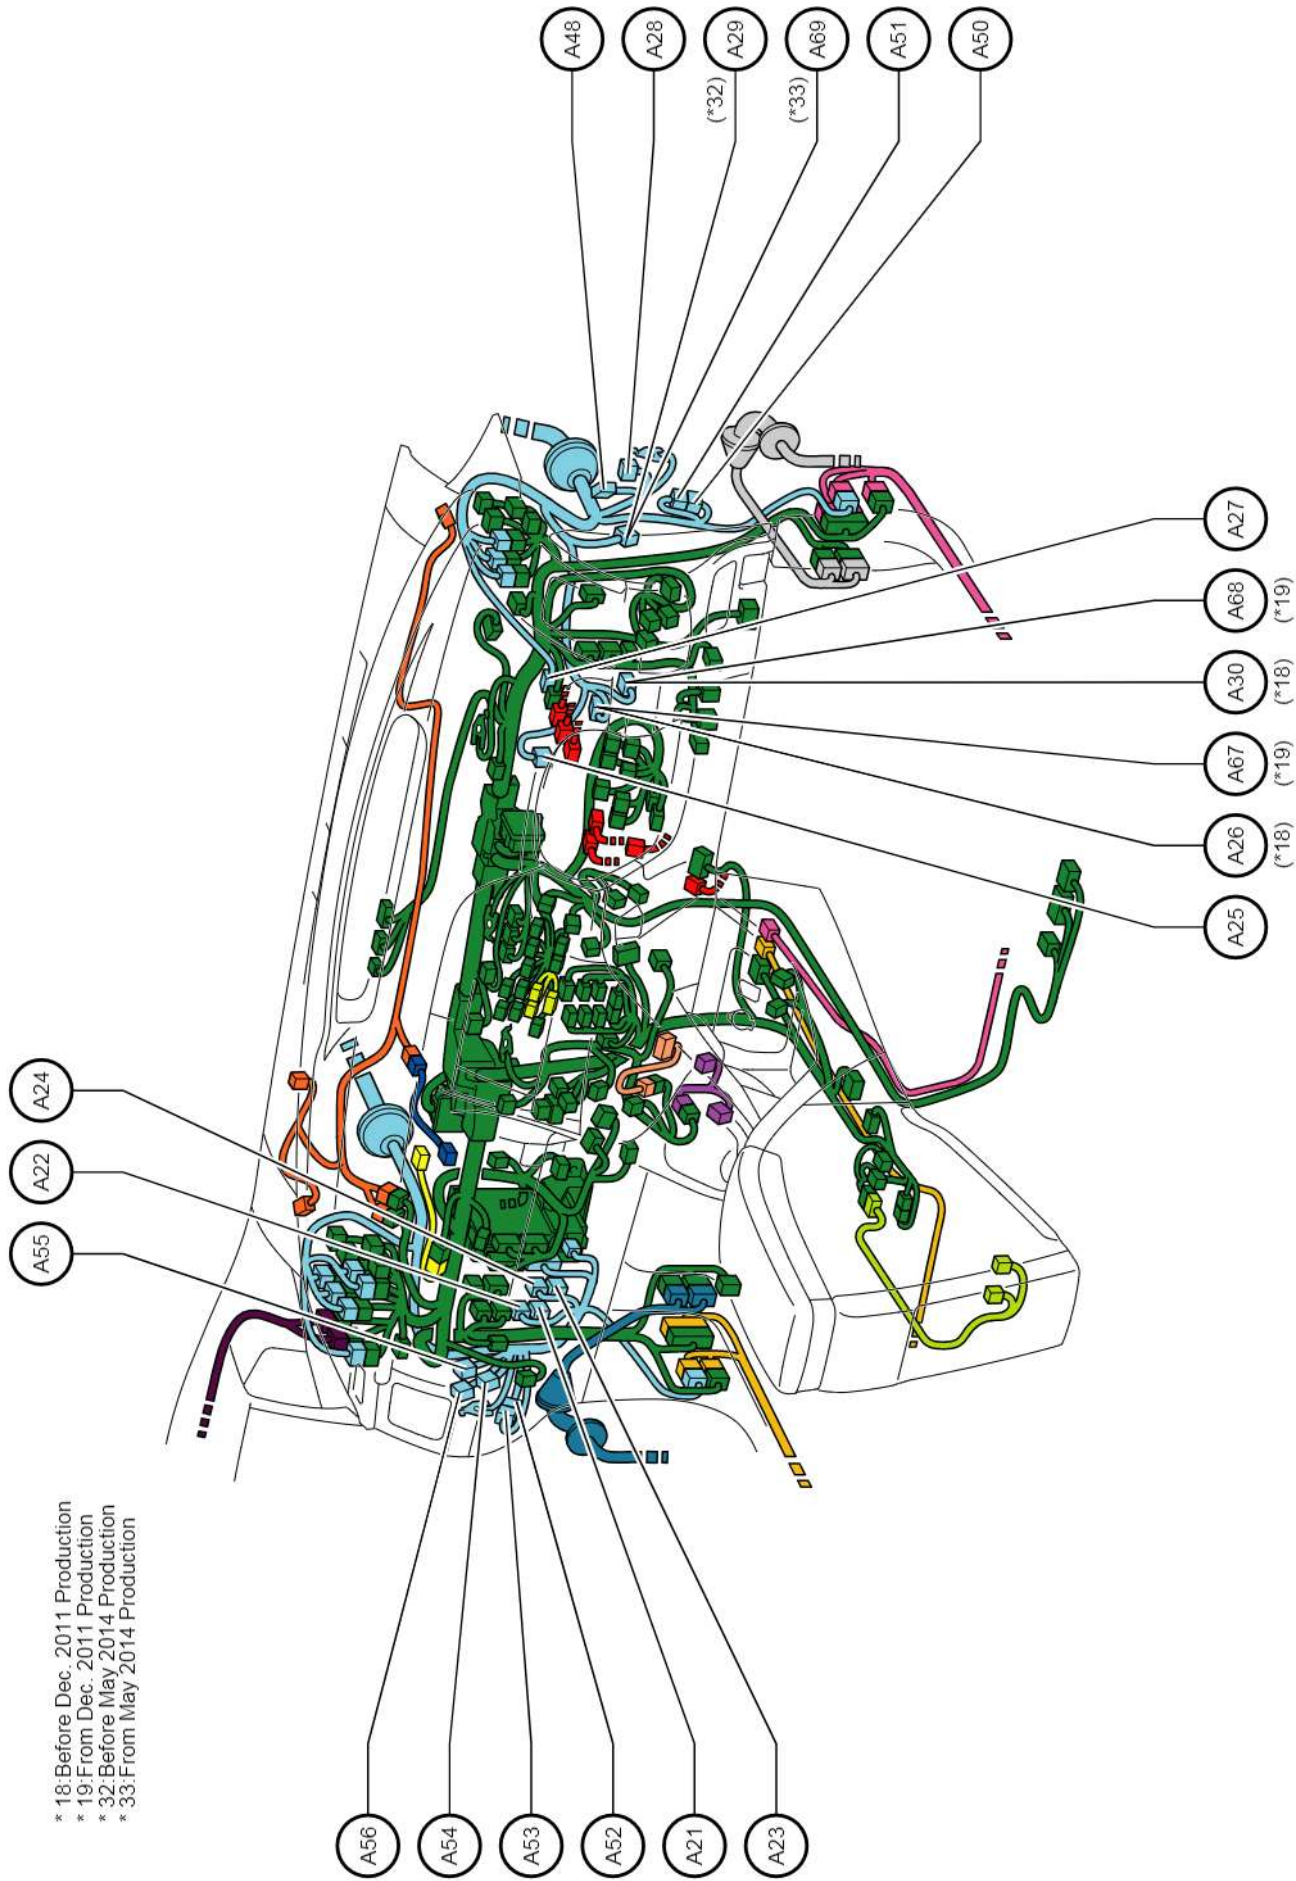


- * 18: Before Dec. 2011 Production
- * 19: From Dec. 2011 Production
- * 32: Before May 2014 Production
- * 33: From May 2014 Production

A 21	Power Management Control ECU
A 22	Power Management Control ECU
A 23	Transmission Control ECU Assembly
A 24	Transmission Control ECU Assembly
A 25	Parking Brake Switch Assembly
A 26	Stop Light Switch Assembly
A 27	Power Steering ECU Assembly
A 28	Stop Light Control Relay Assembly
A 29	Accelerator Pedal Sensor Assembly
A 30	Brake Pedal Stroke Sensor Assembly
A 48	Headlight Leveling ECU Assembly
A 50	Junction Connector
A 51	Junction Connector
A 52	Junction Connector
A 53	Junction Connector
A 54	Junction Connector
A 55	Junction Connector
A 56	Junction Connector
A 67	Stop Light Switch Assembly
A 68	Brake Pedal Stroke Sensor Assembly
A 69	Accelerator Pedal Sensor Assembly

  Position of Parts in Instrument Panel <RHD>

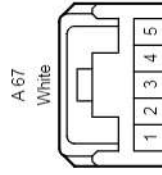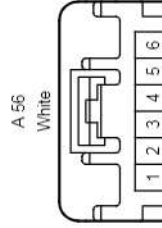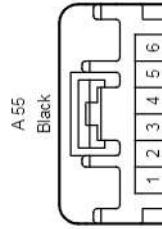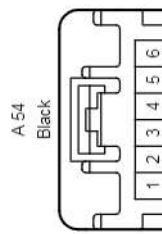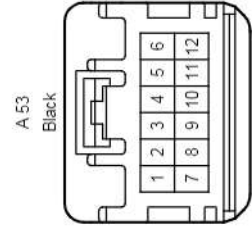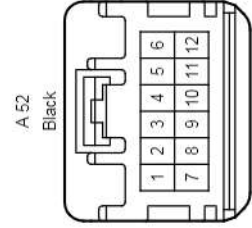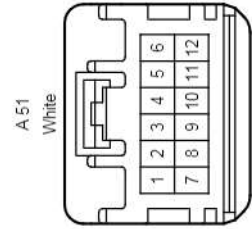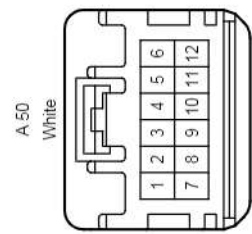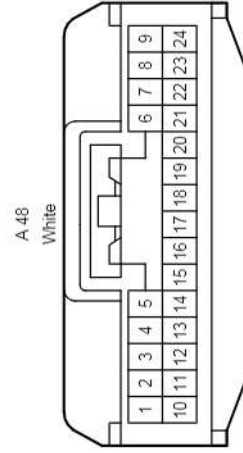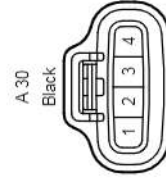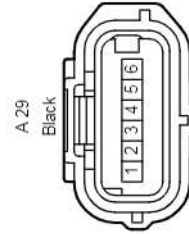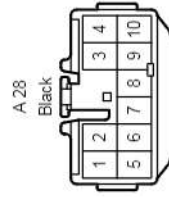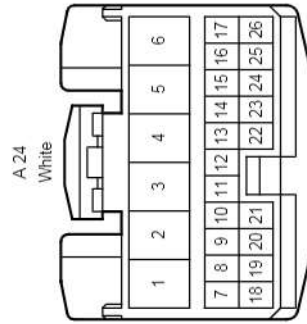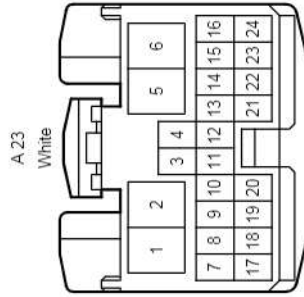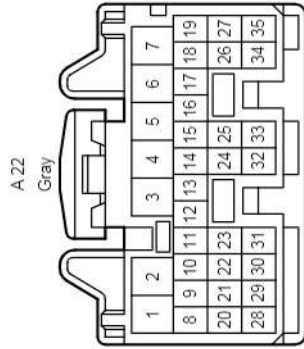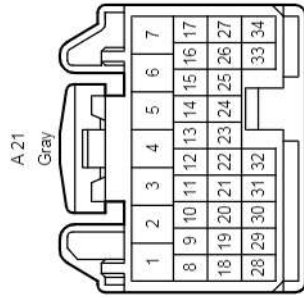


Position of Parts in Instrument Panel <RHD>

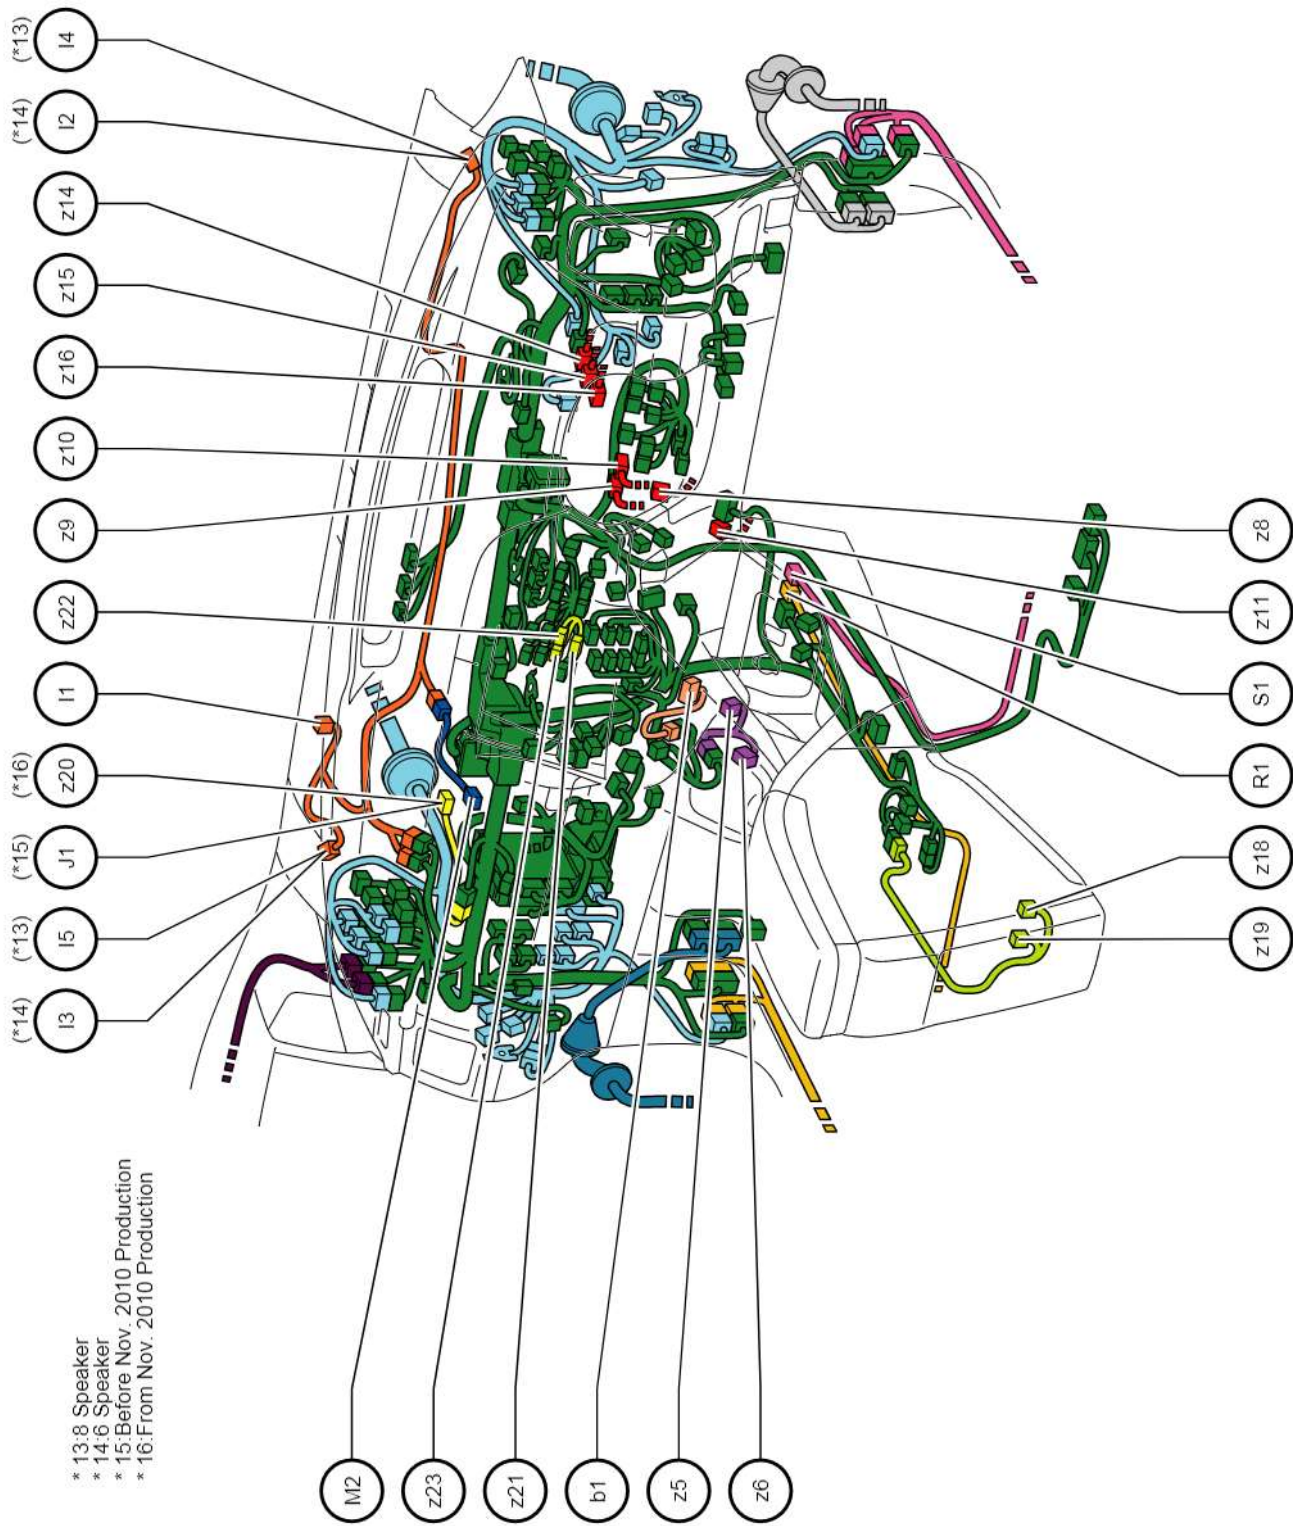


Position of Parts in Instrument Panel <RHD>


I	1	Automatic Light Control Sensor
I	2	Front No. 2 Speaker Assembly RH
I	3	Front No. 2 Speaker Assembly LH
I	4	Instrument Panel Speaker RH (No. 1 Instrument Panel Speaker Panel Sub-Assembly)
I	5	Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
J	1	Front Passenger Side Squib Circuit
M	2	Passenger Seat Belt Warning Light Assembly
R	1	Center Airbag Sensor Assembly
S	1	Center Airbag Sensor Assembly
b	1	Transmission Shift Main Switch
z	5	Shift Lever Position Sensor
z	6	No. 2 Shift Lever Position Sensor
z	8	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z	9	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	10	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	11	A/C Amplifier Assembly , A/C Blower Assembly
z	14	Power Steering ECU Assembly , Power Steering Torque Sensor
z	15	Power Steering ECU Assembly , Power Steering Motor Assembly
z	16	Power Steering ECU Assembly , Power Steering Motor Assembly
z	18	Center Power Outlet Socket Assembly
z	19	No. 1 Stereo Jack Adapter Assembly
z	20	Front Passenger Side Squib Circuit
z	21	Extension Module
z	22	Radio & Display Receiver Assembly
z	23	Radio & Display Receiver Assembly

Position of Parts in Instrument Panel <RHD>

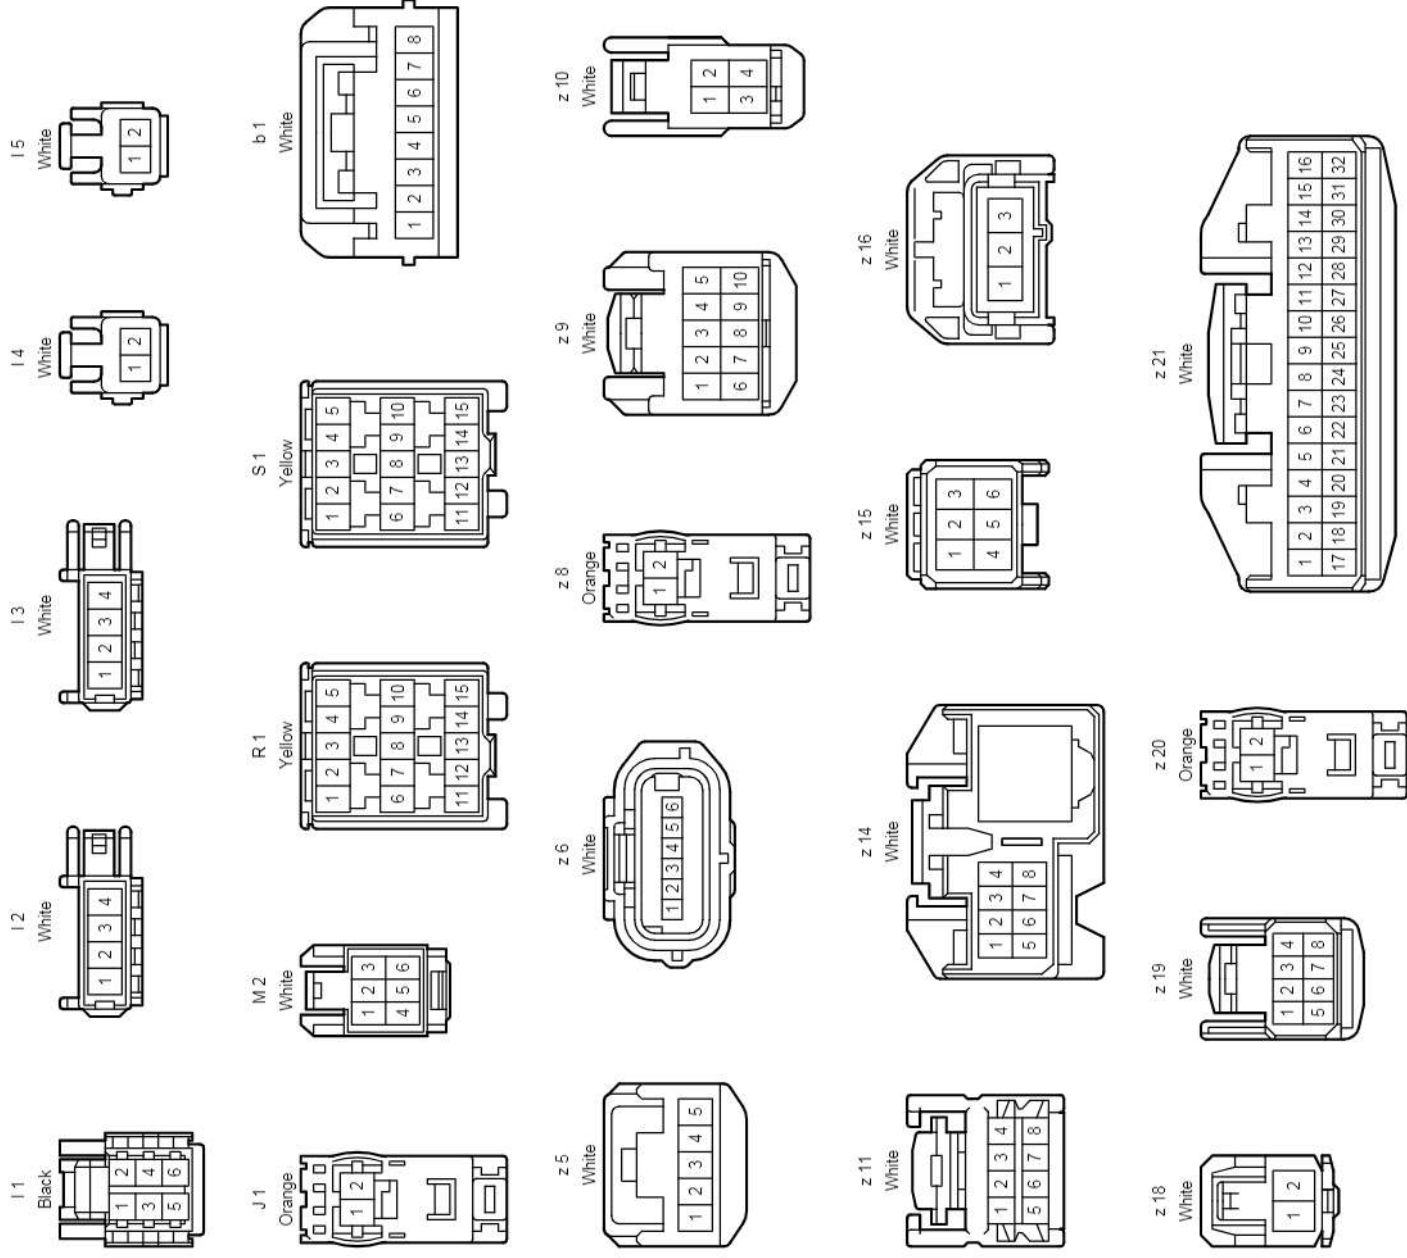


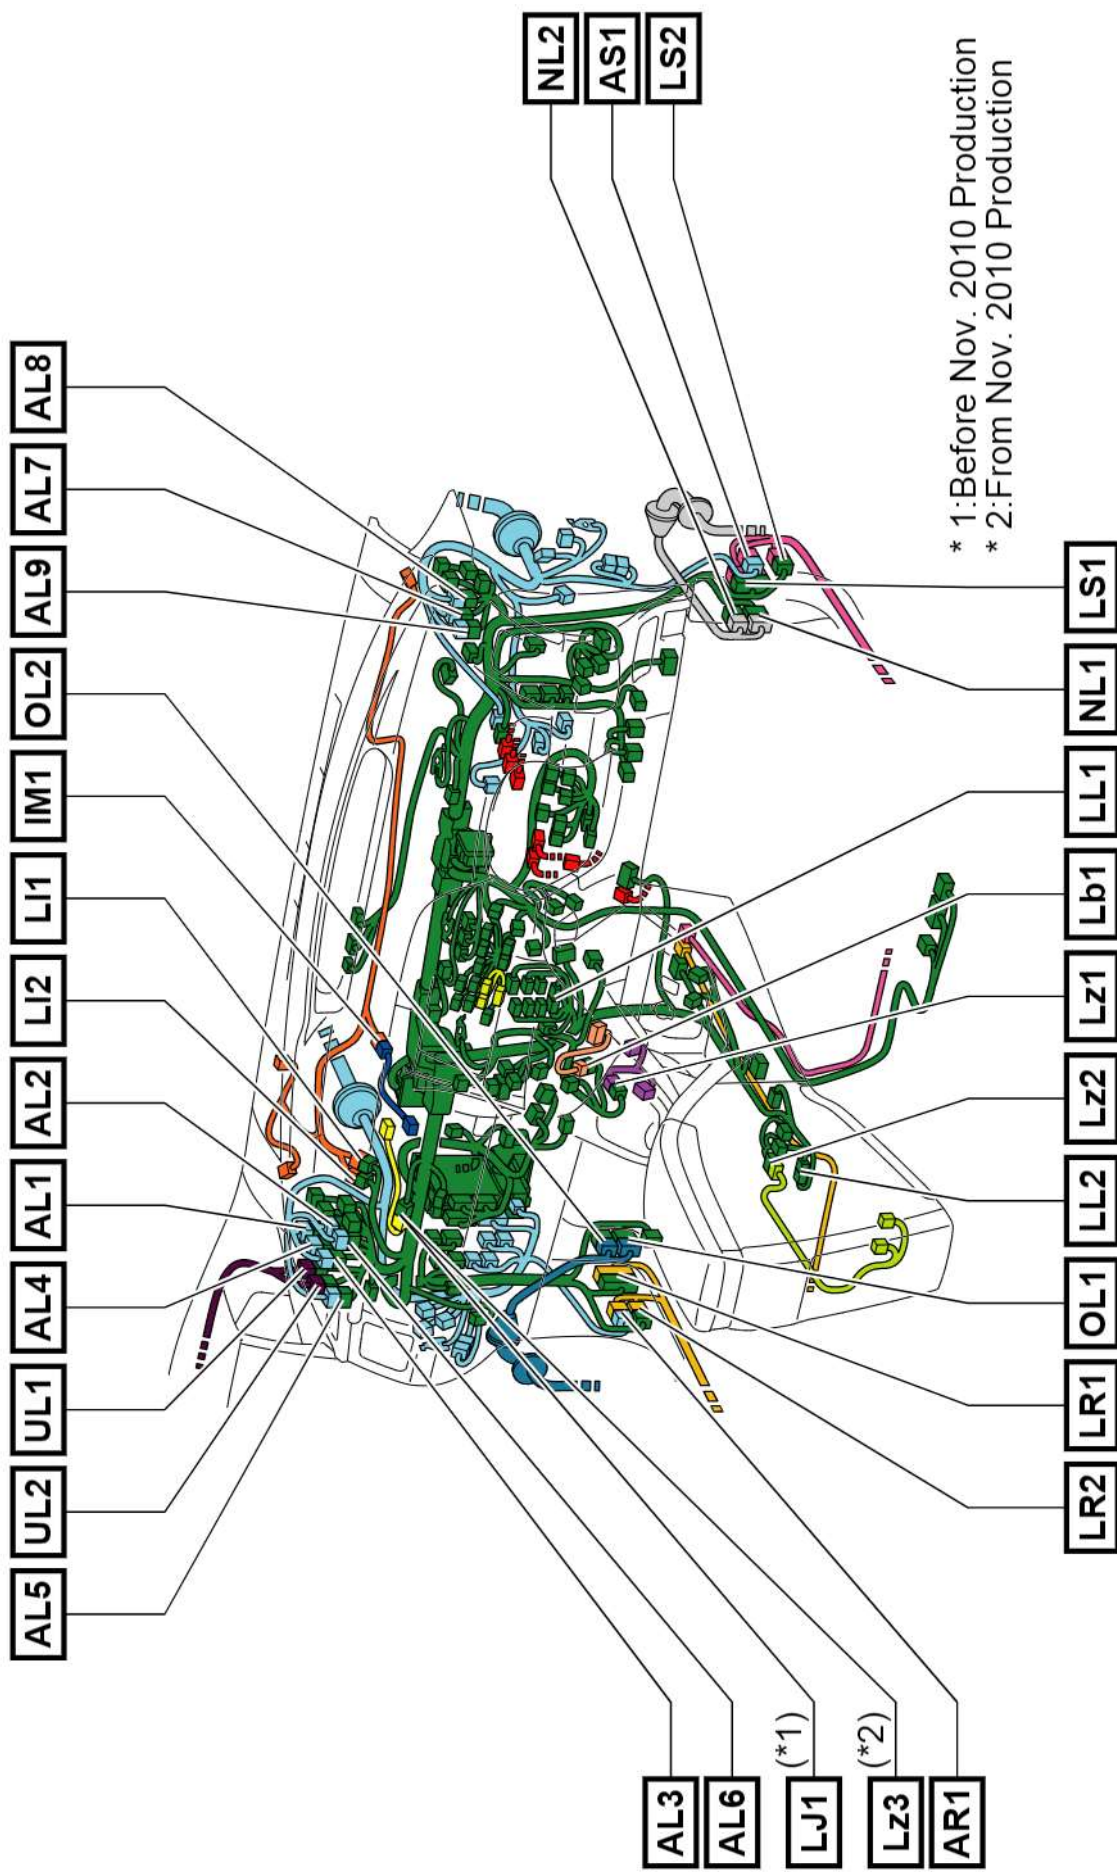




AL1
Blue

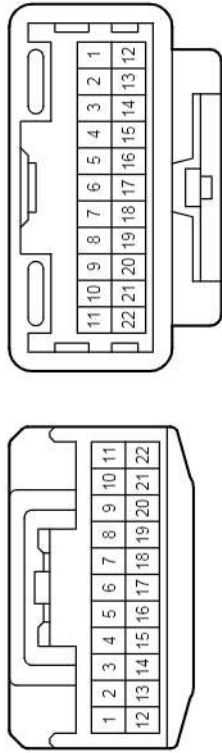


AL2
Gray

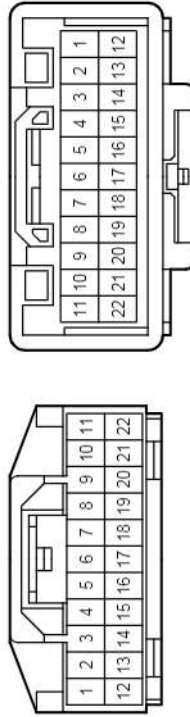



AL3
White

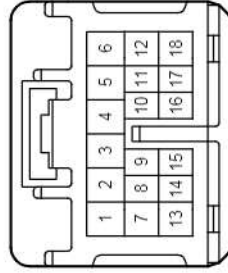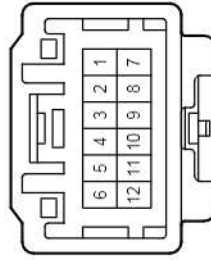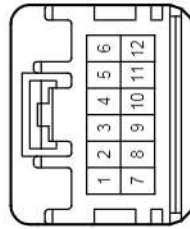



AL4
Black

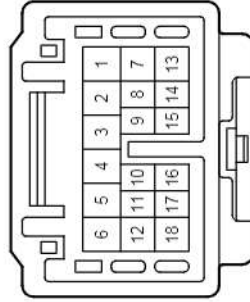

AL5
White

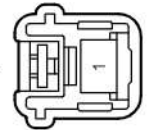 

AL6
Yellow

 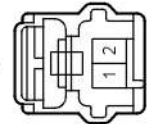


AL7
Black



AL8
White





Wire and Wire in Instrument Panel <RHD>


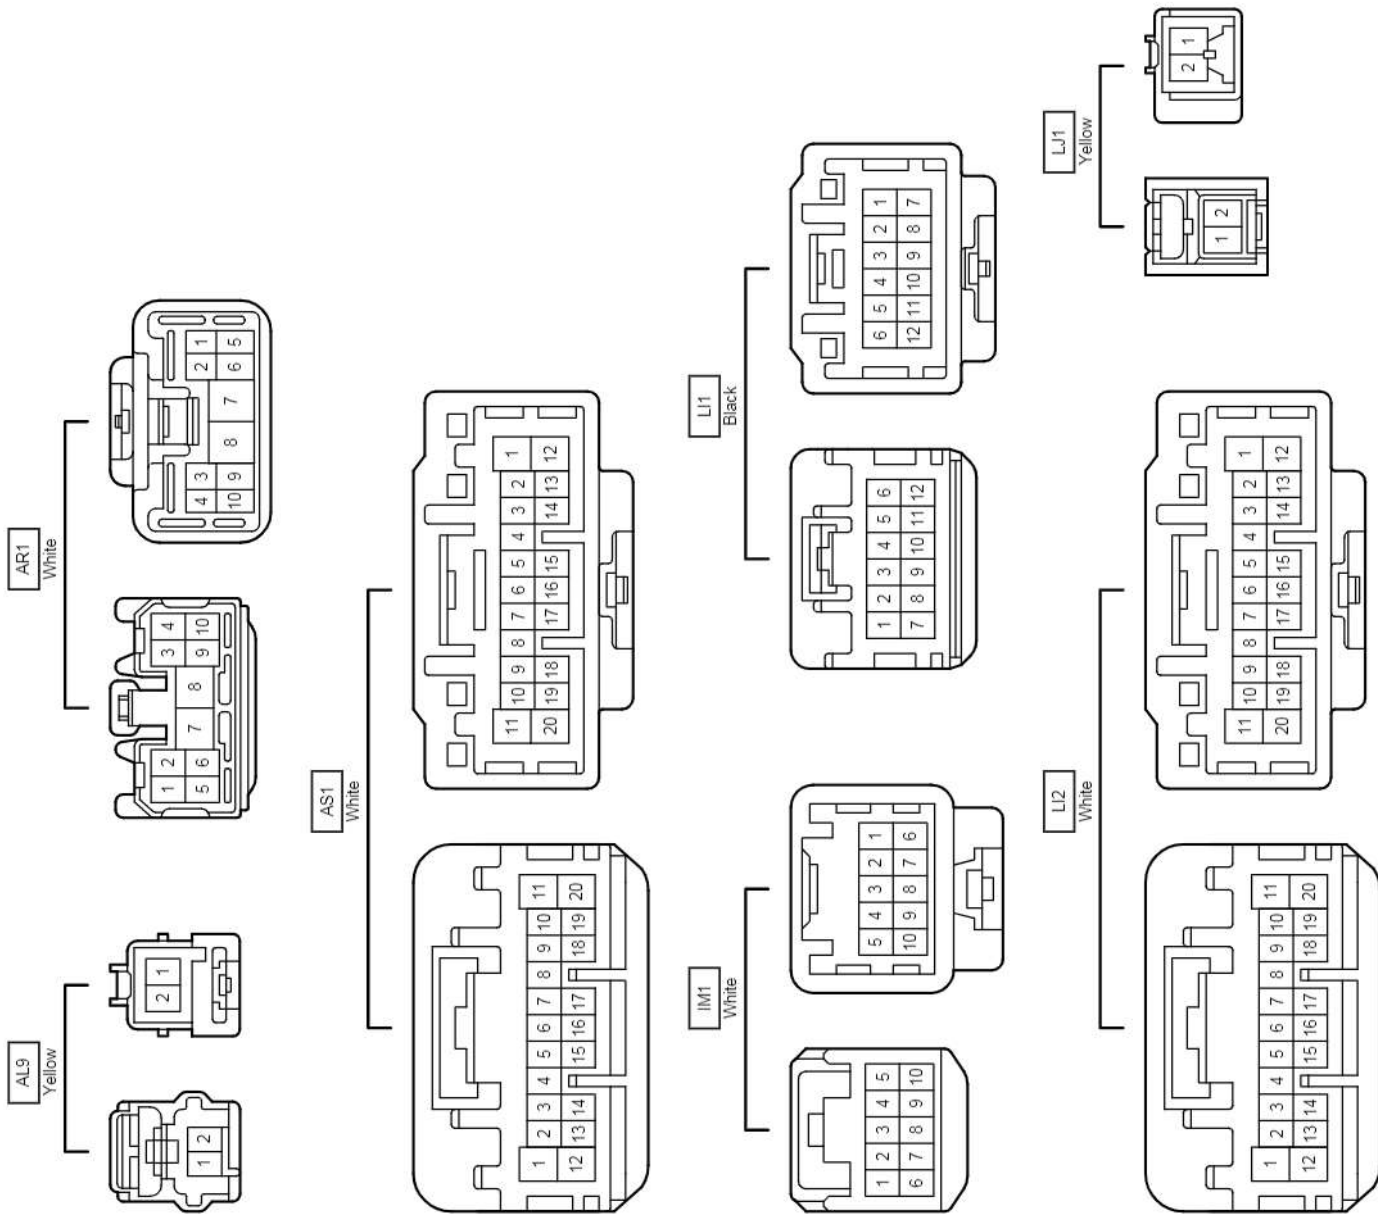


Wire and Wire in Instrument Panel <RHD>



LR1
White

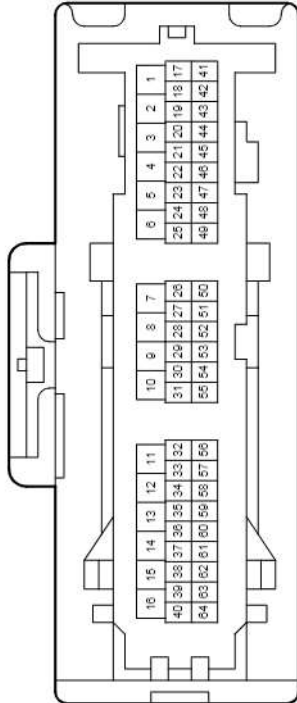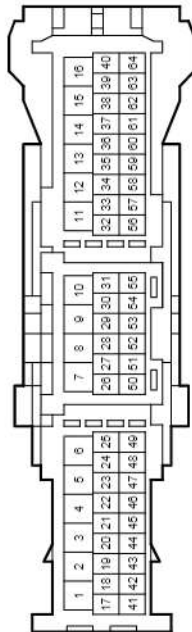



LR2
Black

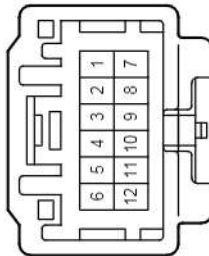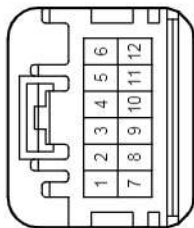



LS1
White

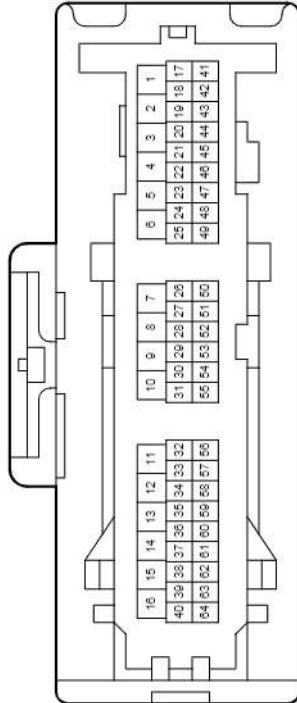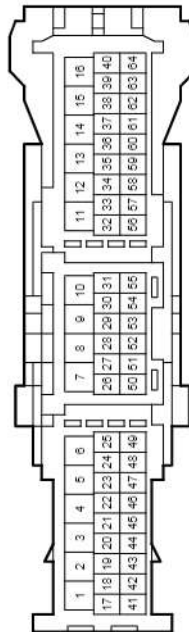

LS2
Black

  



Lb1
White

  

cardiagn.com


Wire and Wire in Instrument Panel <RHD>

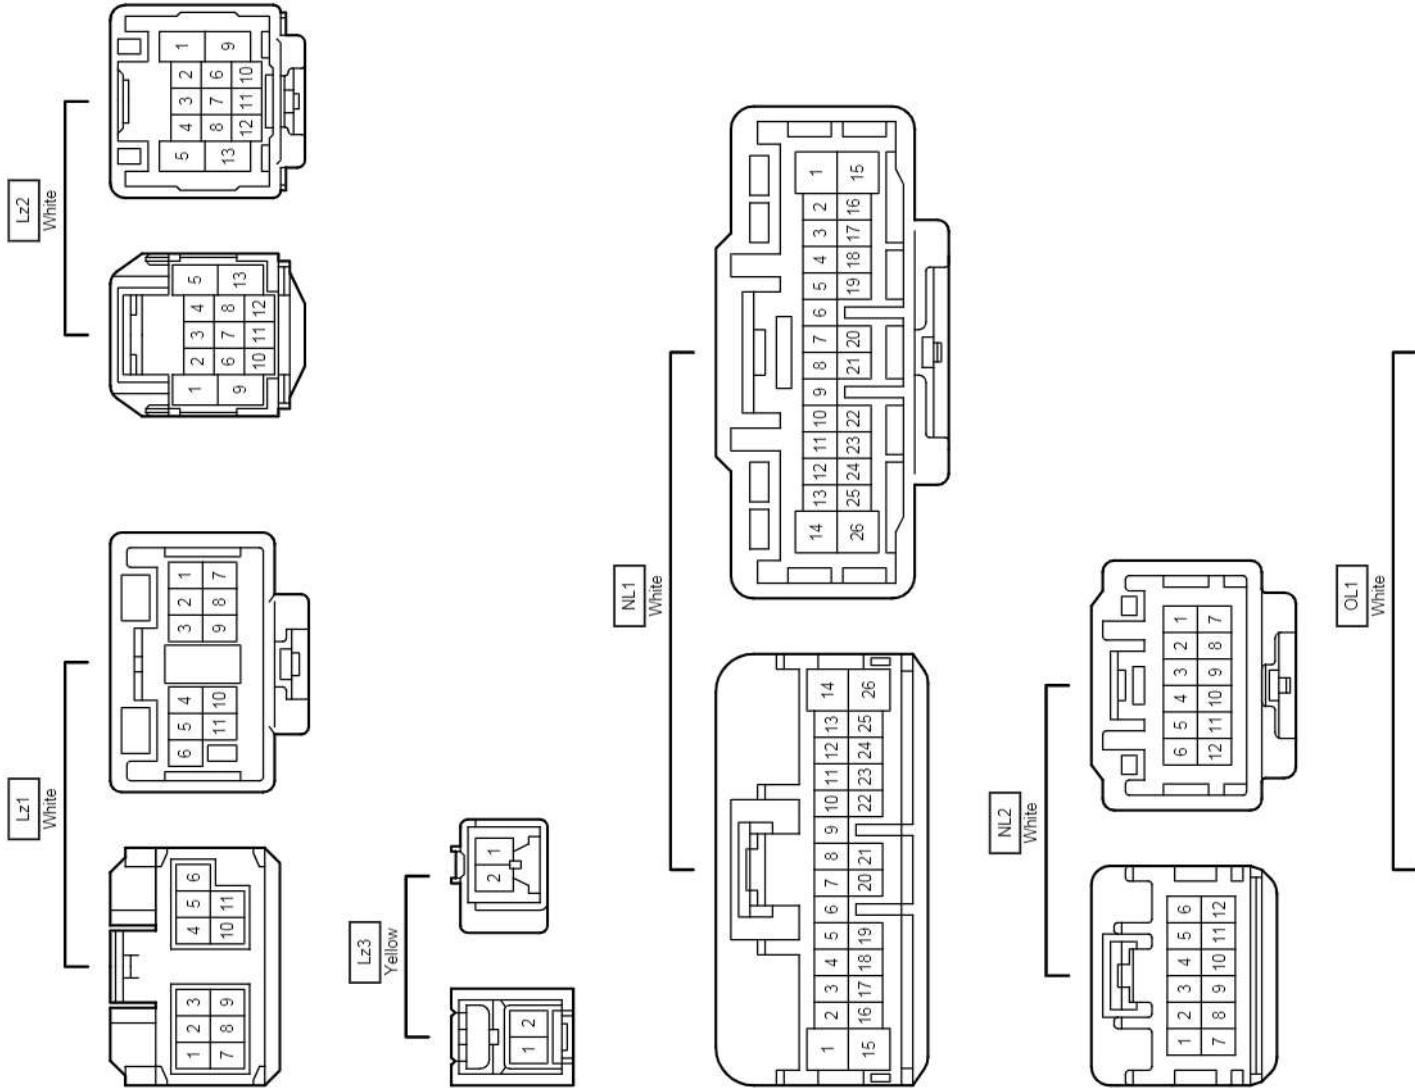

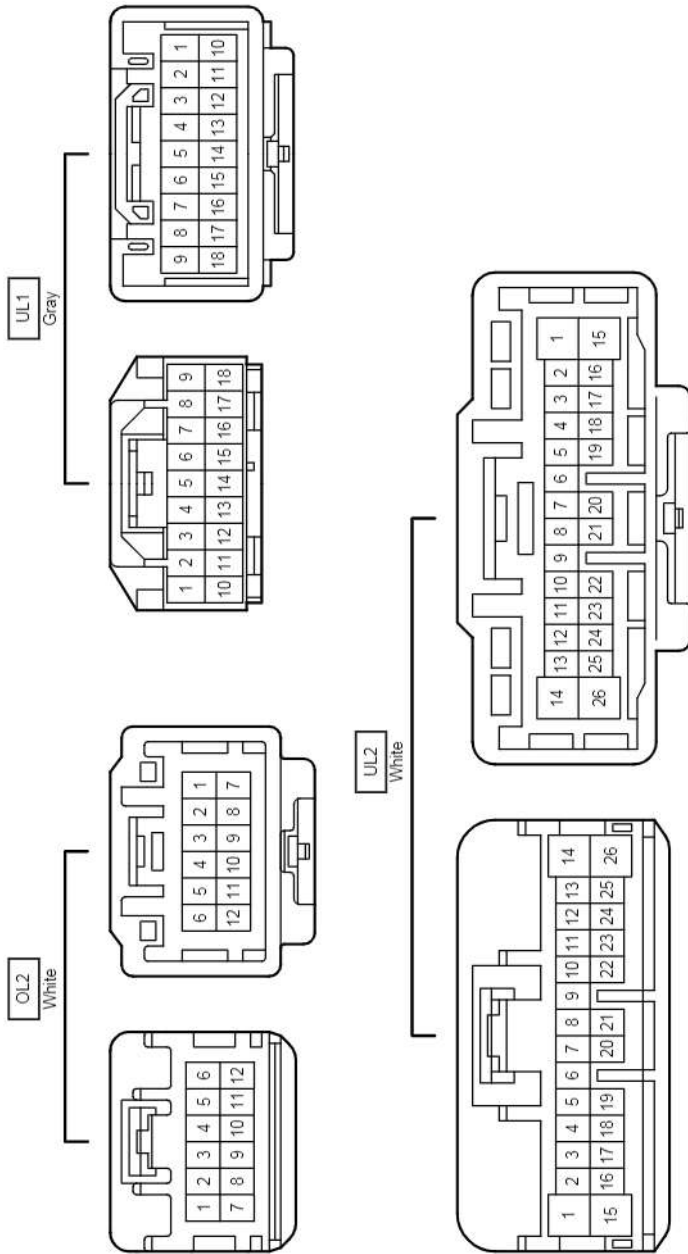














Position of Parts in Seat <LHD>


- * 1: Before Nov. 2010 Production
- * 2: From Nov. 2010 Production
- * 3: Before Dec. 2011 Production
- * 4: From Dec. 2011 Production

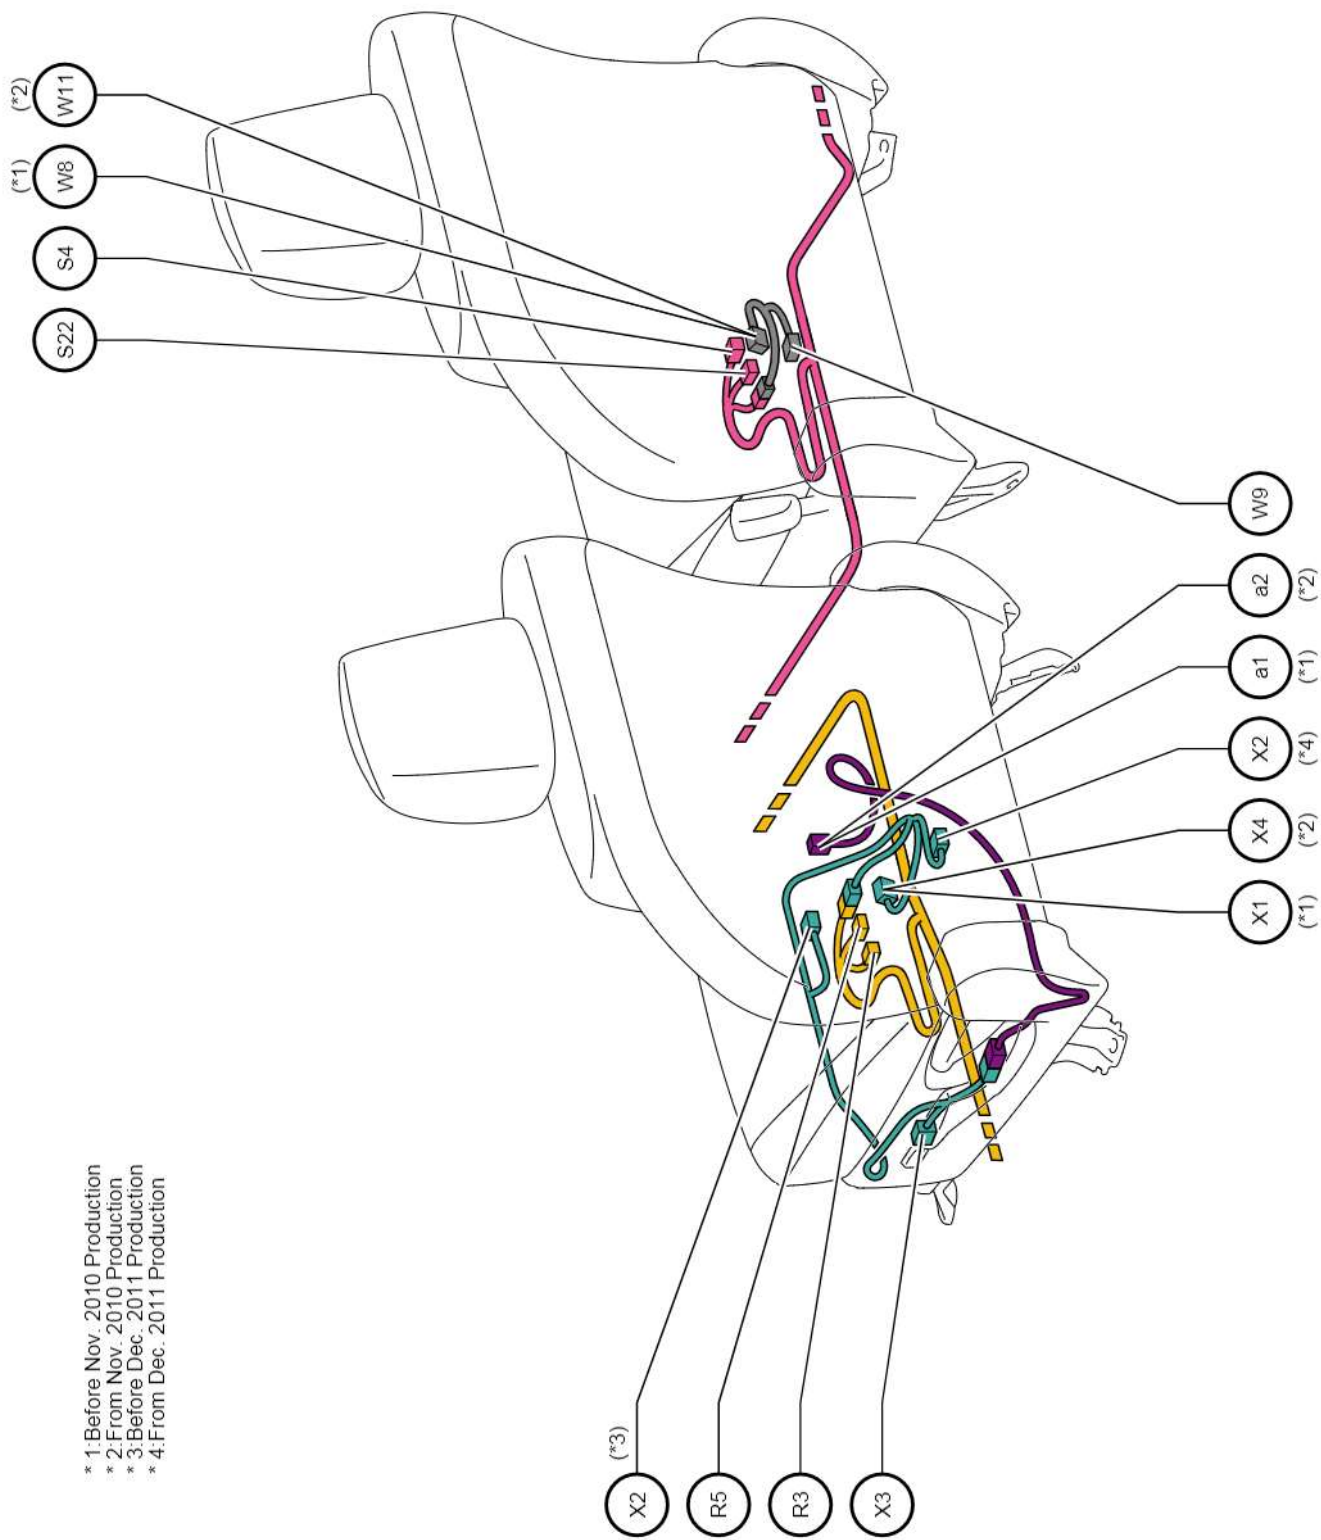



R	3	Side Airbag Squib Circuit LH
R	5	Front Seat Inner Belt Assembly LH
S	4	Side Airbag Squib Circuit RH
S	22	Front Seat Inner Belt Assembly RH
W	8	Seat Heater Control Sub-Assembly RH
W	9	Junction Connector
W	11	Seat Heater Control Sub-Assembly RH
X	1	Seat Heater Control Sub-Assembly LH
X	2	Junction Connector
X	3	Lumbar Support Switch LH (Power Seat Switch LH)
X	4	Seat Heater Control Sub-Assembly LH
a	1	Front Lumbar Support Motor Assembly LH
a	2	Front Lumbar Support Motor Assembly LH

        Position of Parts in Seat <LHD>

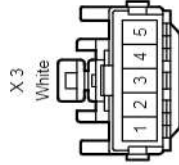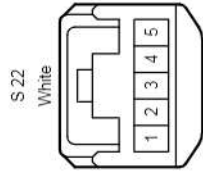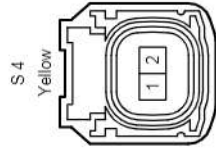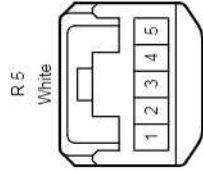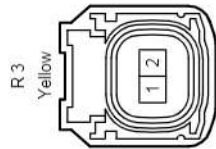


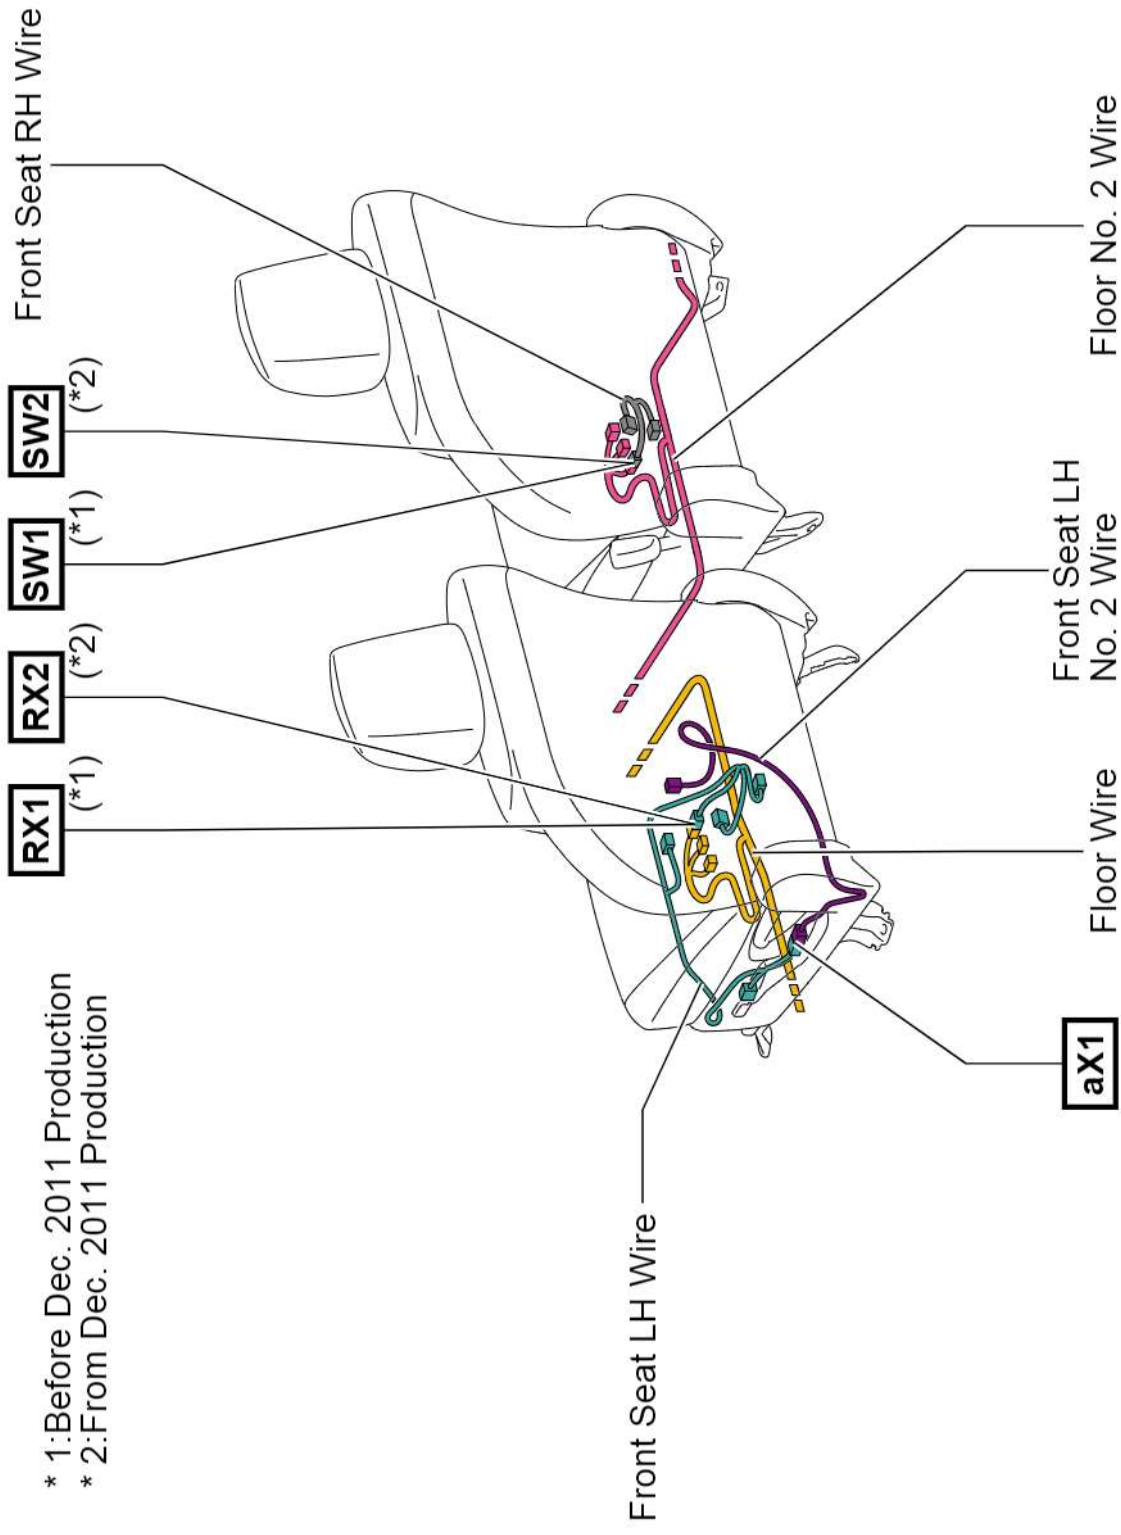

Wire and Wire in Seat <LHD>

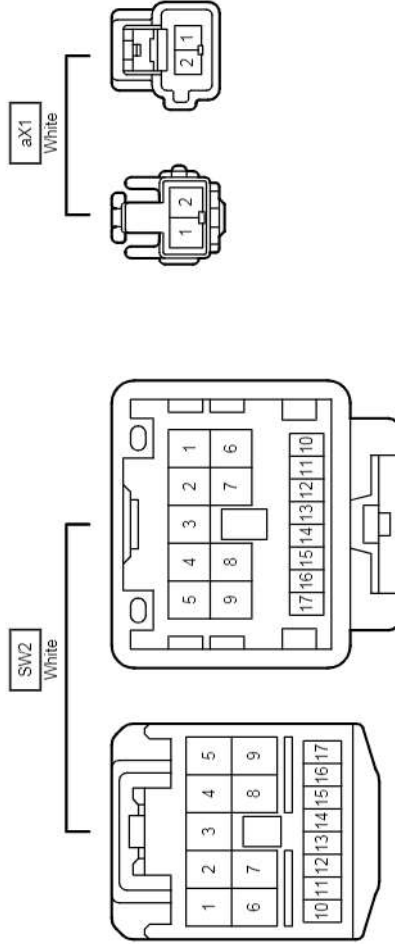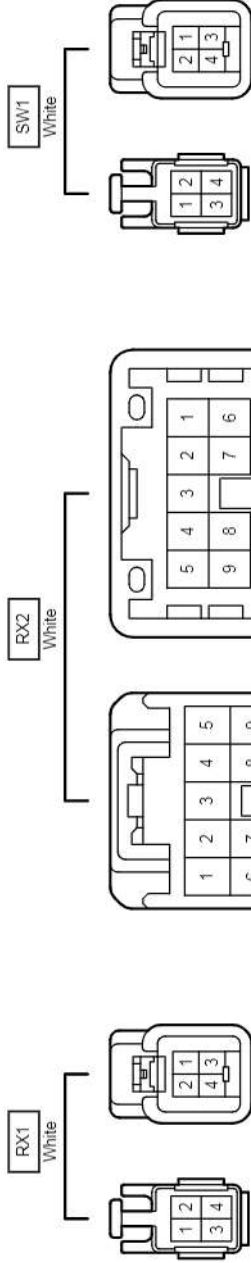


Position of Parts in Seat <RHD>

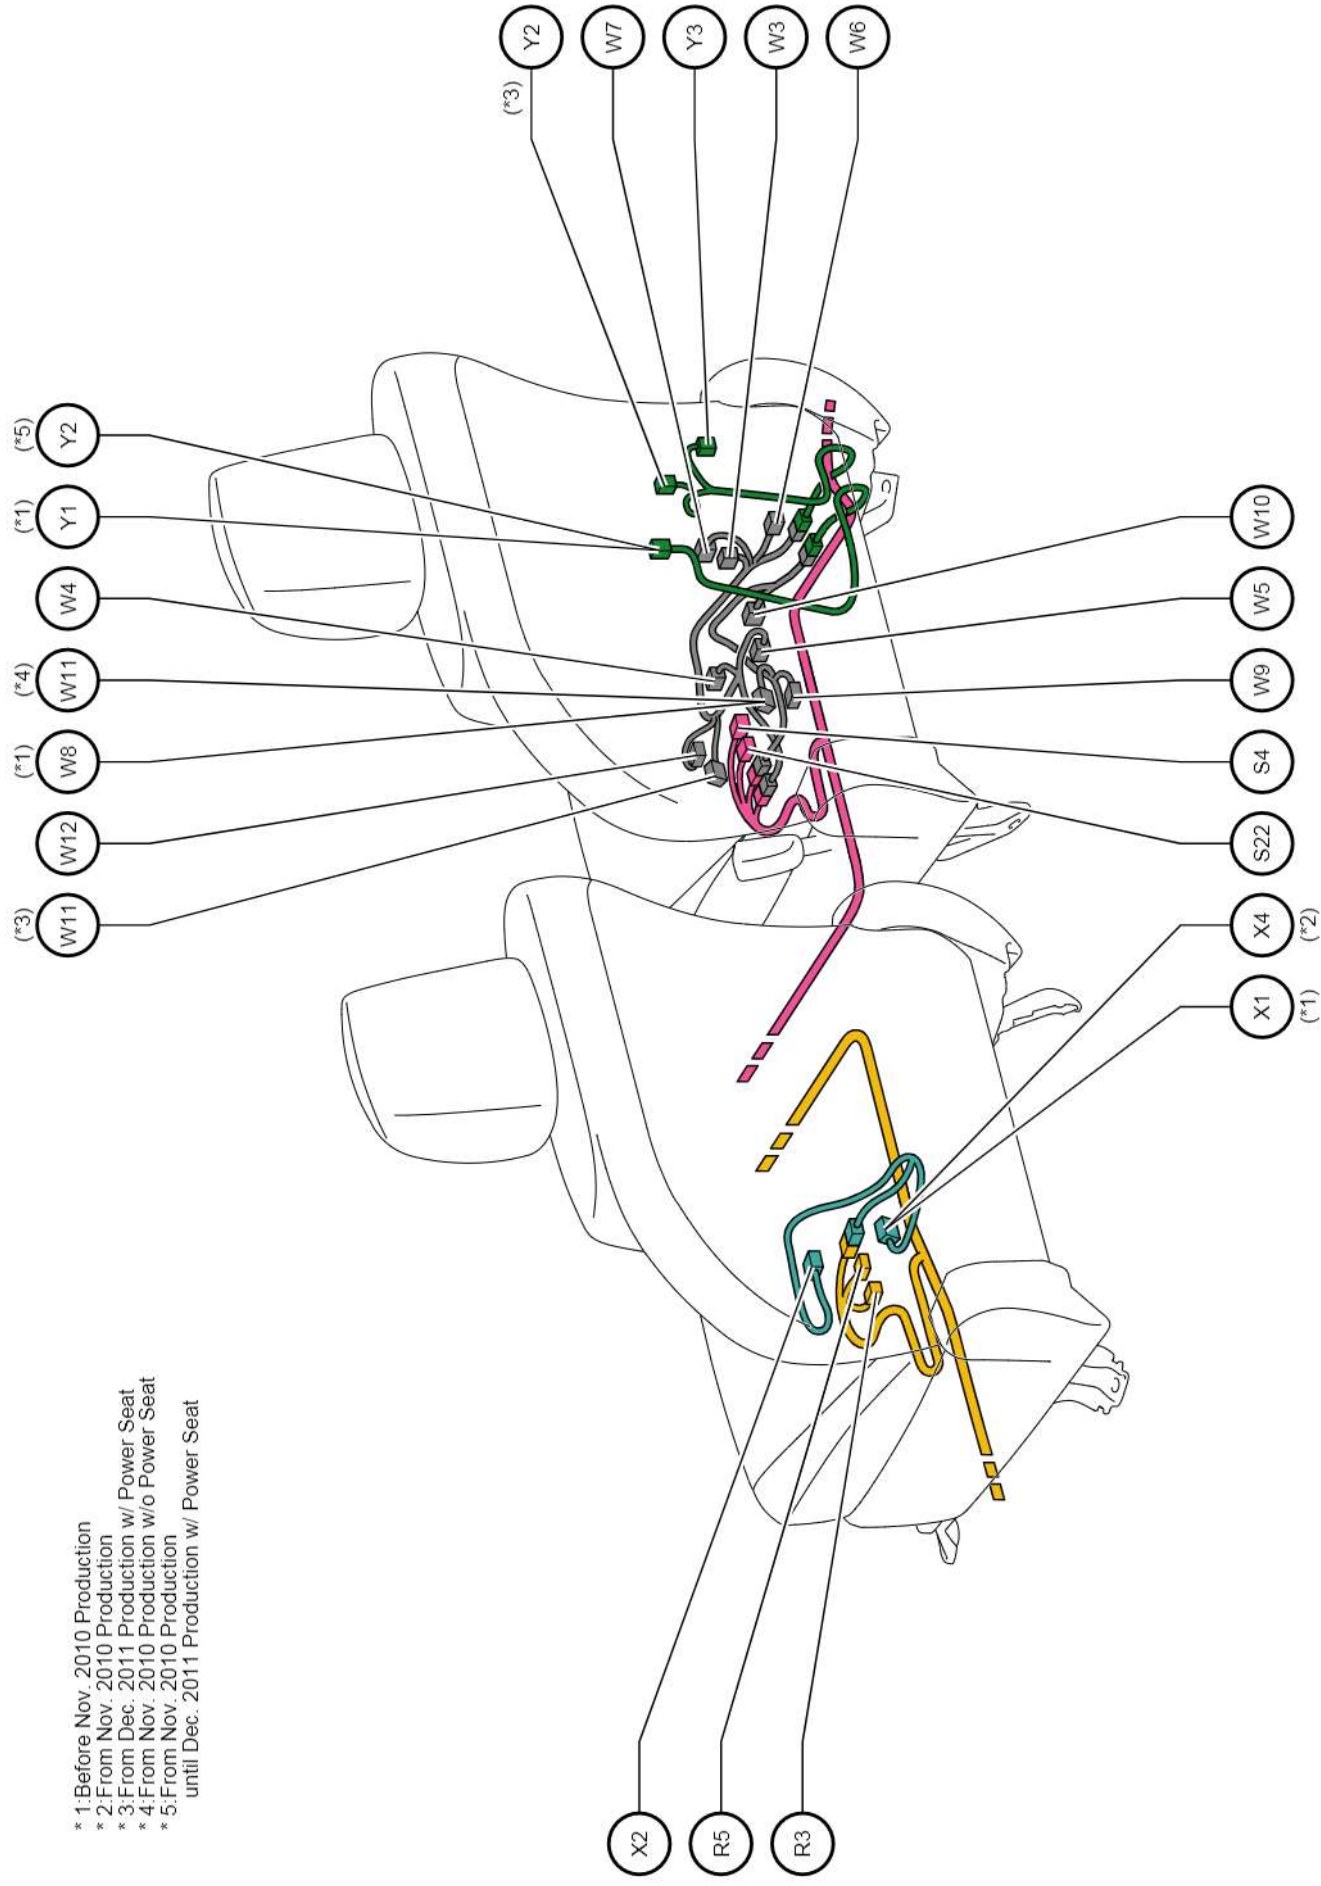


R	3	Side Airbag Squib Circuit LH
R	5	Front Seat Inner Belt Assembly LH
S	4	Side Airbag Squib Circuit RH
S	22	Front Seat Inner Belt Assembly RH
W	3	Lumbar Support Switch RH (Power Seat Switch RH)
W	4	Front Power Seat Slide Position Motor Assembly RH
W	5	Front Power Seat Vertical Position Motor Assembly RH
W	6	Front Power Seat Lift Position Motor Assembly RH
W	7	Front Power Seat Switch RH
W	8	Seat Heater Control Sub-Assembly RH
W	9	Junction Connector
W	10	Lumbar Support Switch RH (Power Seat Switch RH)
W	11	Seat Heater Control Sub-Assembly RH
W	12	Junction Connector
X	1	Seat Heater Control Sub-Assembly LH
X	2	Junction Connector
X	4	Seat Heater Control Sub-Assembly LH
Y	1	Front Lumbar Support Motor Assembly RH
Y	2	Front Lumbar Support Motor Assembly RH
Y	3	Front Power Seat Reclining Position Motor Assembly RH

Position of Parts in Seat <RHD>

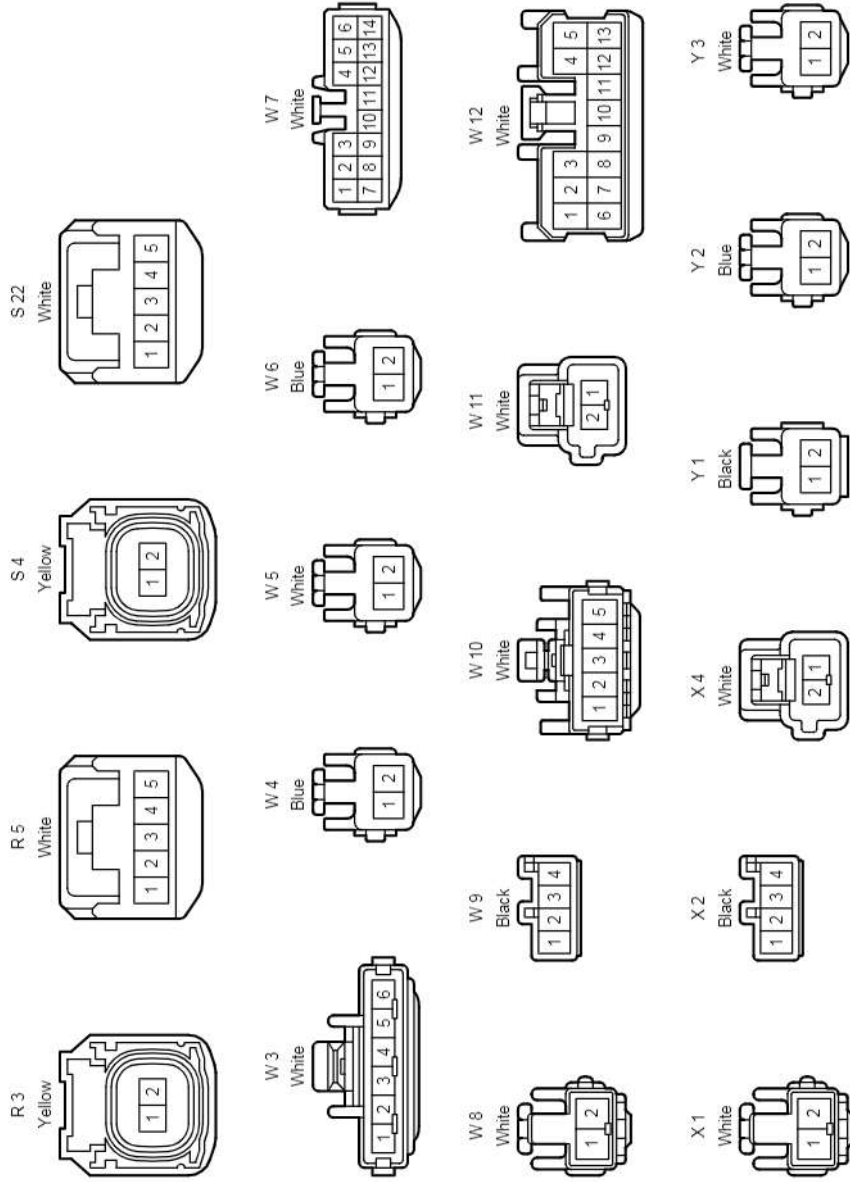

- * 1: Before Dec. 2011 Production
- * 2: From Dec. 2011 Production
w/ Power Seat
- * 3: From Dec. 2011 Production
w/o Power Seat
- * 4: From Dec. 2011 Production

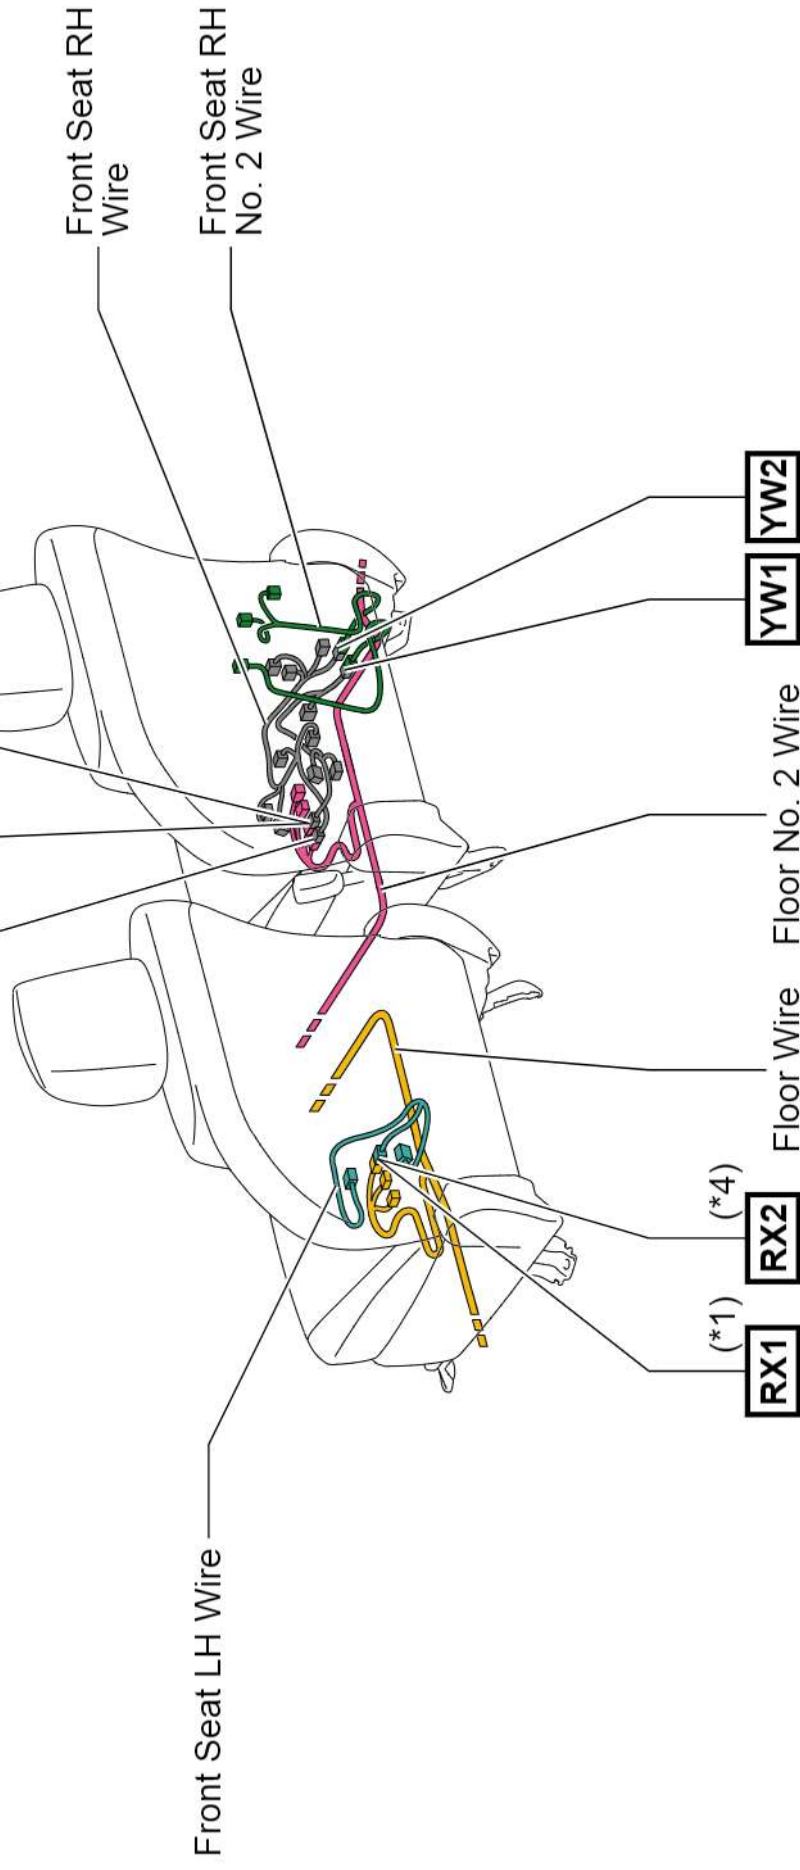

Wire and Wire in Seat <RHD>

