


Chevrolet Avalanche 2001 – 2002 fuse box diagram

Instrument Panel Fuse Block

The fuse block access door is on the driver's side edge of the instrument panel.

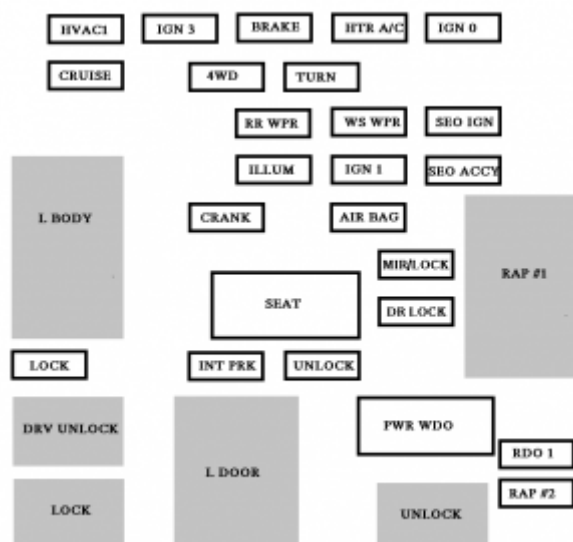

Chevrolet Avalanche GMT800 – fuse box –


instrument panel

Name	Usage
L BODY	Retained Accessory Power Relay
LOCK	Power Door Locks
DRV UNLOCK	Power Door Lock Relay
LOCK	Power Door Lock Relay
HVAC 1	Climate Control System
CRUISE	Cruise Control, Instrument Cluster
IGN 3	Ignition, Power Seats
4WD	Four-Wheel Drive System, Auxiliary Battery
CRANK	Starting System
INT PRK	Interior Lamps
L DOOR	Power Door Lock Relay
BRAKE	Anti-Lock Brake System
RR WIPER	Not Used
ILLUM	Interior Lamps, Cargo Lamps
SEAT	Power Seat Circuit Breaker
TURN	Exterior Lamps, Turn Signals, Hazard Lamps
UNLOCK	Power Door Locks
HTR A/C	Climate Control System
WS WPR	Windshield Wipers
IGN 1	Ignition, Instrument Panel

AIR BAG	Air Bag
MIR/LOCK	Power Mirrors, Power Door Locks
DR LOCK	Power Door Locks
PWR WDO	Power Window Circuit Breaker
UNLOCK	Power Door Lock Relay
IGN 0	PRND321 Display, Odometer, VCM/PCM
SEO IGN	Special Equipment Option, Ignition
SEO ACCY	Special Equipment Option Accessory
RAP #1	Retained Accessory Power Relay
RDO 1	Audio System
RAP #2	Rear Power Windows, Sunroof, Radio

Center instrument panel utility block

The center instrument panel utility block is located underneath the instrument panel, to the left of the steering column.

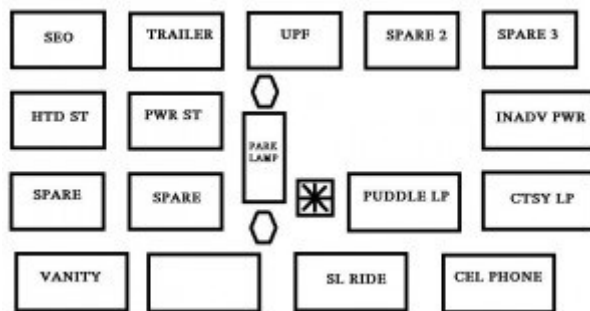

Chevrolet Avalanche-GMT800 – fuse box –

center instrument panel utility block

Relay name	Usage
SEO	Special Equipment Option
HTD ST	Heated Seats
SPARE	Not Used
VANITY	Headliner Wiring
TRAILER	Trailer Brake Wiring
PWR ST	Power Seats
SPARE	Not used
UPF	Upfitter
PARK LAMP	Parking Lamps
*FRT PRK EXPT	Not Used
SPARE 2	Not Used
PUDDLE LP	Puddle Lamps
SL RIDE	Not Used
SPARE 3	Not Used

TRL B/U	Backup Lamps Trailer Wiring
INJ-A	Fuel Controls, Ignition
RR HVAC	Not Used
VEH B/U	Vehicle Backup Lamps
ENG 1	Engine Controls, Canister Purge, Fuel System
ETC	Electronic Throttle Control
IGN E	A/C Compressor Relay, Rear Window Defogger, Daytime Running Lamps, A.I.R. System
B/U LP	Backup Lamps, Automatic Transmission Shift Lock Control System
ATC	Automatic Transfer Case
RR DEFOG	Rear Window Defogger, Heated Mirrors (Relay)
RTD	Not Used
RR PRK	Right Rear Parking Lamps
ECM B	VCM/PCM
F/PMP	Fuel Pump (Relay)
O2 A	Oxygen Sensors
O2 B	Oxygen Sensors
LR PRK	Left Rear Parking Lamps
RR DEFOG	Rear Window Defogger, Heated Mirrors
HDLP	Headlamps (Relay)
TRL PRK	Parking Lamps Trailer Wiring
PRIME	Not Used
RT HDLP	Right Headlamps
DRL	Daytime Running Lamps (Relay)
HTD MIR	Heated Mirrors
LT HDLP	Left Headlamps
A/C	Air Conditioning
AUX PWR	Cigarette Lighter, Auxiliary Power Outlets
SEO 2	Special Equipment Option Power, Power Seats, Aux Roof Mnt Lamp
SEO 1	Special Equipment Option Power, Aux Roof Mnt Lamp
DRL	Daytime Running Lamps
A/C	A/C (Relay)
FOG LP	Fog Lamps
FOG LP	Fog Lamps (Relay)
RADIO	Audio System, Instrument Cluster, Climate Control System
CIGAR	Cigarette Lighter, Auxiliary Power Outlets
RT TURN	Right Turn Signals
BTSI	Automatic Transmission Shift Lock Control System

LT TURN	Left Turn Signals
FR PRK	Front Parking Lamps, Sidemarker Lamps
W/W PMP	Windshield Washer Pump
HORN	Horn (Relay)
IGN C	Ignition Switch, Fuel Pump, PRND321 Display, Crank
RDO AMP	Radio Amplifier
HAZ LP	Exterior Lamps, Hazard Lamps
EXP LPS	Not Used
HORN	Horn
CTSY LP	Interior Lamps
RR WPR	Not Used
TBC	Body Control Module, Remote Keyless Entry, Headlamps