


Fiat Doblo Combi_Cargo mk2 FL (from 2014) – fuse box diagrams

Year of production: 2014, 2015, 2016

Fuse box in engine compartment

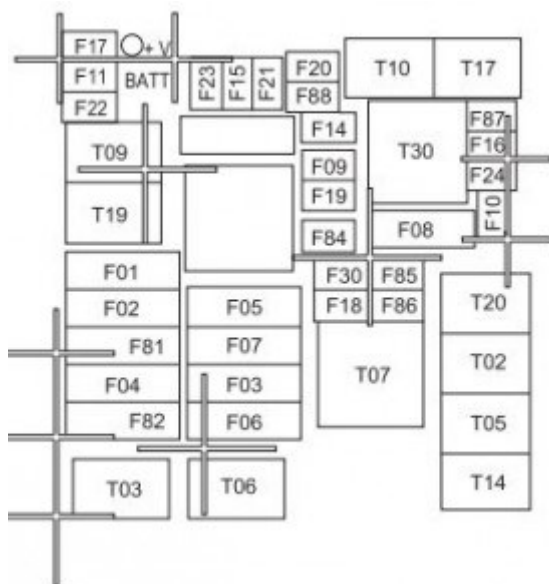


Fiat Doblo mk2 FL – fuse box – engine

compartment

Protected device	Fuse	Ampere rating [A]
BCM – Body Computer Control Unit	F01	60
Rear window winder driver's side manual gearbox (Doblò/Doblò Combi versions)	F02	20
Ignition switch	F03	20
BSM Braking system control unit (electropump)	F04	40
Additional heater PTC2 (diesel engines)	F05	50
Radiator fan (low speed)	F06	30
Radiator fan (high speed, 187/300/350W)	F07	40
Radiator fan (high speed, 500W)	F07	60
Passenger compartment fan	F08	40
Remote control switch for opening swing door (Cargo version)	F09	10
Single tone horn	F10	10
Engine control system secondary loads	F11	10
Main beam headlights	F14	15
Additional heater PTC1 (diesel engines)	F15	30
ECM Engine management control unit, ignition management relay 1 with Start&Stop system	F16	7,5

ECM Engine control unit (power supply) (1.3 Multijet Euro 4, 1.4 BZ, 1.6 Multijet – 2.0 JTD)	F17	10
ECM Engine control unit, engine control system management main relay	F18	7,5
Climate control compressor	F19	7,5
Heated rear window	F20	30
Fuel pump on tank	F21	15
Engine management system primary loads (1.3 Multijet Euro 4, 1.4)	F22	15
Engine management system primary loads (1.3 Multijet Euro / Euro 5, 1.6 Multijet – 2.0 JTD)	F22	20
BSM Braking system ECU (control unit and solenoid unit)	F23	20
BSM Braking system control unit (supply and key), steering angle sensor	F24	5
Fog lights	F30	15
Glow plug pre-heating control unit (1.3 Multijet Euro 4, 1.3 Multijet Euro 5, 1.6 Multijet – 2.0 JTD Euro 4 – Euro 5)	F81	60
Rear window winder passenger's side (Doblò/Doblò Combi versions with manual gearbox)	F82	20
Headlight washer pump	F83	20
Rear power socket	F85	15
Passenger compartment power socket	F86	15
IBS Battery charge status sensor for Start&Stop system	F87	5
Wing mirror defrosters	F88	7,5

Fuse box in passenger compartment

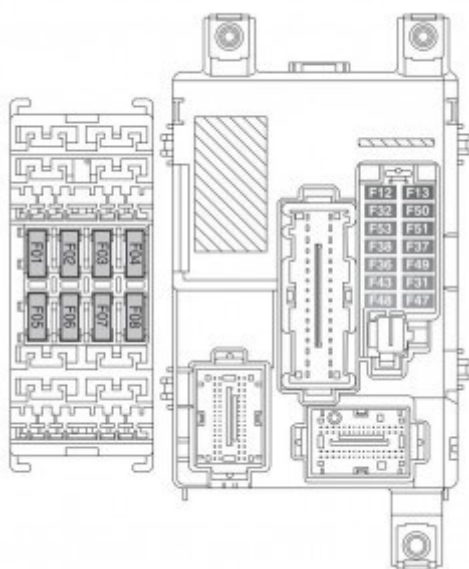

Fiat Doblo mk2 FL – fuse box – passenger compartment

Protected device	Fuse	Ampere rating [A]
Heated driver seat	F1	10

Heated passenger seat	F2	10
Cigar lighter	F3	15
Third power socket on dashboard	F4	20
Driver's side rear electric window	F5	20
Passenger's side rear electric window	F6	20
Right low beam	F12	7,5
Front courtesy light, rear courtesy light, lights on sun visors, door clearance lights, boot light	F32	7,5
Instrument panel	F53	5
Door locking/unlocking motors, dead lock actuator motors, tailgate unlocking motor	F38	20
Supply + battery for EOBD diagnosis socket, radio, tyre pressure monitoring control unit	F36	10
Windscreen/rear window washer pump	F43	15
Electric window motor on passenger-side front door	F48	20
Left low beam, headlight corrector	F13	7,5
Centralka air bag	F50	7,5
Int. power for brake pedal switch, clutch pedal switch, interior heater, convergence control unit Blue&Me™, sound system set-up	F51	7,5
Int. power for instrument panel, brake pedal switch, third brake light	F37	5
Int. power for control panel lights, parking control unit, tyre pressure detector control unit, electric door mirror motor, rain sensor, electric top control unit, My-port infotainment socket	F49	5
Int. power for engine fusebox relay coils and body computer relay coils	F31	5
Electric window motor on driver-side front door	F47	20
Rear socket	F94	15
Cigarette lighter/Passenger compartment socket	F95	15
Cigarette lighter/Passenger compartment socket	F96	15
Heated driver seat	F97	10
Heated passenger seat	F98	10

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.