


Pontiac Sunfire 1999 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located on the driver's side of the instrument panel.

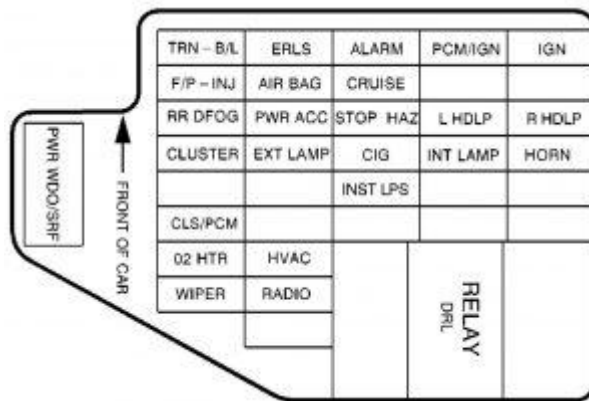

Pontiac Sunfire – fuse box – instrument

panel


Fuses	Usage
TURN-B/U	Turn Signals, Back-Up Lamps
F/P-INJ	Fuel Pump, Fuel Injectors
RR DFOG	Rear Window Defogger
CLUSTER	Instrument Cluster, Anti-Lock Brake System
CLS/PCM	Instrument Cluster, Powertrain Control Module, Daytime Running Lamps
O2 HTR	Rear O2 Sensor Heater
WIPER	Windshield Wipers, Windshield Washers

ERLS	Automatic Transaxle, Brake-Transaxle Shift Interlock (BTSI), A/C Compressor, Cruise Control, Multiport Fuel Injection
AIR BAG	Supplemental Inflatable Restraint (SIR) System
PWR ACC	Power Door Locks, Convertible Top (Convertible Models Only)
EXT LAMP	Exterior Lamps, Instrument Panel Lights
HVAC	Heater and A/C Control, Engine Cooling Fan
RADIO	Radio, Remote Keyless Entry
ALARM	Alarm Module – Interior Lamps, Warning Chimes
CRUISE	Cruise Control
STOP HAZ	Exterior Lamps, Anti-Lock Brake System, Cruise Control, Turn Signals
CIG	Cigarette Lighter
INST LPS	Instrument Panel Lights, Warning Chimes
PCM/IGN	Powertrain Control Module
L HDLP	Left Headlamp
INT LAMP	Alarm Module: Illuminated Entry, Warning Chimes, Overhead Lamps, Map/Reading Lamps, Glove Box Lamp, Trunk Lamp, Radio, Power Mirrors, Remote Keyless Entry

IGN	Engine Ignition
R HDLP	Right Headlamp
HORN	Horn, Diagnostic Connector
PWR WDO/SRF	Power Windows, Power Sunroof, Top Controls (Convertible Models Only) (Circuit Breaker)
DRL	Daytime Running Lamps (Relay)

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver's side of the vehicle.

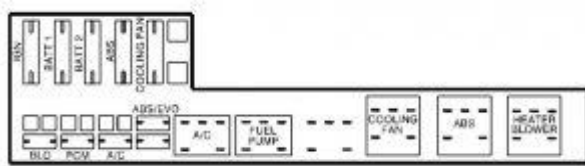

Pontiac Sunfire – fuse box – engine compartment

Fuses	Usage
IGN	Ignition Switch Circuits
BATT 1	Exterior lamps, Power Outlet, Horn, Audio Amplifier
BATT 2	Rear Defogger, Starter, Power Locks, Stoplamps
ABS	Anti-Lock Brake System
COOLING FAN	Engine Cooling Fan

BLO	Heater and A/C Blower
PCM	Powertrain Control Module
A/C	A/C Compressor
ABS/EVO	Anti-Lock Brake System