


Lincoln MKT 2013 – 2019 fuse box diagram

Engine Compartment Fuse Box

The power distribution box is located in the engine compartment.

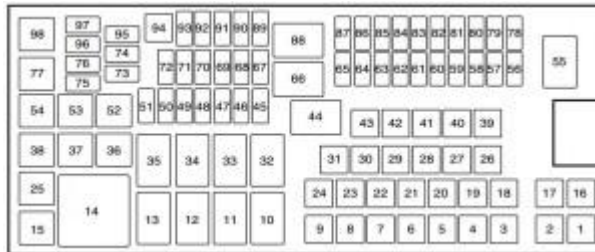

Lincoln MKT – fuse box diagram – engine compartment

No.	A	Protected components
1	40	Fan relay 2
2	40	Fan relay 1
3	30	Trailer brake control module
4	30	Wipers, Washer pump
5	50	Anti-lock brake system pump
6	50	B+ #1 access circuit (limousine/livery)
7	30	Power liftgate
8	20	Moonroof, Power sunshade
9	20	2nd row console power point

16	40	B+ #2 access circuit (limousine/livery)
17	30	110V AC power point
18	40	Front blower motor
19	30	Starter motor
20	20	Inside bin power point
21	20	Instrument panel power point / cigar lighter
22	30	3rd row seat module
23	30	Memory module
24	30	<i>non-Limousine/Livery:</i> Trailer tow battery charge
	40	<i>Limousine:</i> Vacuum pump relay
26	40	Rear window defroster, Heated mirrors
27	20	Cargo power point
28	30	Front climate controlled seats
29	30	Rear climate controlled seats.
30	20	Rear heated seats

31	25	Electronic fan relay 3
39	30	Auxiliary blower motor
40	30	Left front window
41	30	Left rear window
42	30	Passenger power seat
43	20	Anti-lock brake system valves
45	5	Rain sensor
46	5	EcoBoost:
47	15	Washer pump
48	10	Front park lamps
49	—	Not used
50	10	Heated mirrors
51	5	3.7L engine: Powertrain control module — Injector power monitor
56	30	Fuel injectors, Fuel pump relay
57	20	Left high-intensity discharge headlamps

58	10	Alternator sensor
59	10	Brake on/off switch
60	10	Trailer tow back-up lamps
61	20	B+ #6 access circuit (limousine/livery)
62	10	A/C clutch
63	15	Trailer tow stop/turn lamps
64	15	Rear wipers
65	20	B+ #7 access circuit (limousine/livery)
67	20	Vehicle power #2 – Oxygen sensor heater, Mass airflow sensor, Variable camshaft timing solenoid, Canister vent solenoid, Canister purge solenoid
68	20	Vehicle power #4 (ignition coils)
69	20	Vehicle power #1 (PCM)
70	15	Vehicle power #3 (coil) – A/C clutch relay, Fan control relays, Variable air conditioning compressor, Auxiliary transmission warmup, Turbo charge waste-gate control, Electronic compressor bypass valve (for turbo charger), All-wheel drive module, Positive crankcase ventilation heater
71	–	Not used

72	5	Limousine/livery run/accessory
73	5	Limousine/livery battery saver
74	—	Not used
75	—	Not used
76	—	Not used
78	20	Right high-intensity discharge headlamps
79	10	Adaptive cruise control
80	30	B+ #3 access circuit (limousine/livery)
81	15	B+ #4 access circuit (limousine/livery)
82	15	Rear washer
83	—	Not used
84	20	Trailer tow park lamps
85	15	B+ #5 access circuit (limousine/livery)
86	5	Powertrain control module — Keep-alive power, Powertrain control module relay, Canister vent solenoid (3.7L engine)
87	5	Run/start


89	10	Anti-lock brake system module, Adaptive headlamps module
90	10	Powertrain control module run/start
91	10	Adaptive cruise control
92	5	Front blower relay coil, Power steering module
93	5	Auxiliary blower, Rear defroster, Battery charge / vacuum pump relays
94	30	Body control module run/start
95	—	Not used
96	—	Not used
97	—	Not used
Relay		
10	3rd row power seats	
11	Heated rear window	
12	Trailer tow battery charge	
13	Starter	
14	Cooling fan #2	

15	Fuel pump
25	Not used
32	Auxiliary blower
33	Cooling fan #1
34	Front blower
35	Cooling fan (series)
36	Not used
37	Trailer tow right-hand stop/turn lamps
38	Trailer tow reverse lamps
44	Windshield washer
52	Not used
53	Trailer tow left-hand stop/turn lamps
54	Not used
55	Wipers
66	Powertrain control module – vehicle power

77	Trailer tow park lamps
88	Run/start
98	A/C clutch

Passenger compartment fuse box

The fuse panel is located under the instrument panel to the left of the steering wheel.

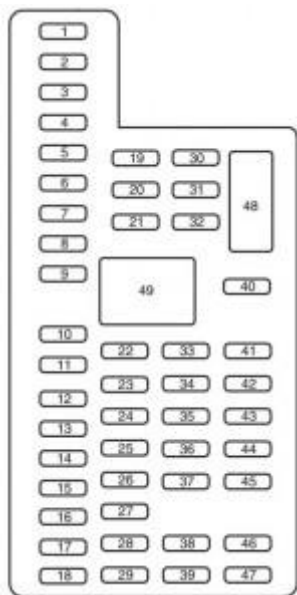

Lincoln MKT – fuse box diagram – passenger compartment

No.	A	Protected components
1	30	Passenger side rear window
2	15	Memory seat, Second row seats
3	30	Passenger side front window
4	10	Battery saver relay (interior demand lamps and seat power), Limousine battery saver

5	20	Smart amplifier ('13-'15), Audio amplifier ('16-'19), Active noise control module ('16-'19)
6	5	Rear climate control, Rear seat entertainment module (livery only), USB power outlet
7	7.5	Driver door module, Driver seat module, Keypad
8	10	Power liftgate
9	10	SYNC®, Electronic finish panel, Radio transceiver module
10	10	Run/accessory relay, Front wiper motor relay, Limousine run/accessory
11	10	Intelligent access module, Heads-up display
12	15	Interior lighting, Puddle lamps, Backlighting
13	15	Right turn lamps, Right rear stop/turn lamps, Right mirror turn signal
14	15	Left turn lamps, Left rear stop/turn lamps, Left mirror turn signal
15	15	Center high mounted stop lamp, Backup lamp
16	10	Low beam headlamps (right)
17	10	Low beam headlamps (left)
18	10	3rd row power seats, Start button run indicator, Keypad illumination, Brake shift interlock, Powertrain control module wake-up

19	20	Smart amplifier, Subwoofer amplifier
20	20	Not used (spare)
21	10	'17-'19: Extended power module
22	20	Horn relay
23	15	Steering wheel control module, Instrument cluster
24	15	Datalink connector, Steering wheel control module
25	15	Not used (spare)
26	5	Push button start switch
27	20	Intelligent access module
28	15	Not used (spare)
29	20	Radio, Global positioning system module ('13-'16)
30	15	Front park lamps, Trailer tow relay for park lamps, Front side markers
31	5	Trailer tow brake controller
32	15	Power window switches and motors, Power lock switches, Moonroof, 110V AC power point, Driver window/mirror switch, Rear seat switch (livery)

33	10	Suspension module
34	10	Blind spot monitor, Rear heated seat module, Reverse sensing system, Rearview camera, Interior mirror, Auto high beam/Lane departure warning/Lane keep assist module, Rear video camera
35	5	Heads-up display, Climate control humidity sensor, Overdrive cancel switch (limousine/livery)
36	10	Heated steering wheel
37	10	Refrigerator
38	10	Not used (spare)
39	15	High beam headlamps
40	10	Rear park lamps, License plate lamps, Rear light bar applique
41	7.5	'13-'16: Occupant classification system, Restraints control module '17-'19: Extended power module
42	5	Not used (spare)
43	10	Not used (spare)
44	10	Not used (spare)
45	5	Not used (spare)
46	10	Climate control module

47	15	Fog lamps, Fog lamp indicator
48	30	Circuit Breaker: Not used (spare)
Relay		
49	Delayed accessory, Body control module	