



F RELAY LOCATIONS

[Engine Compartment]

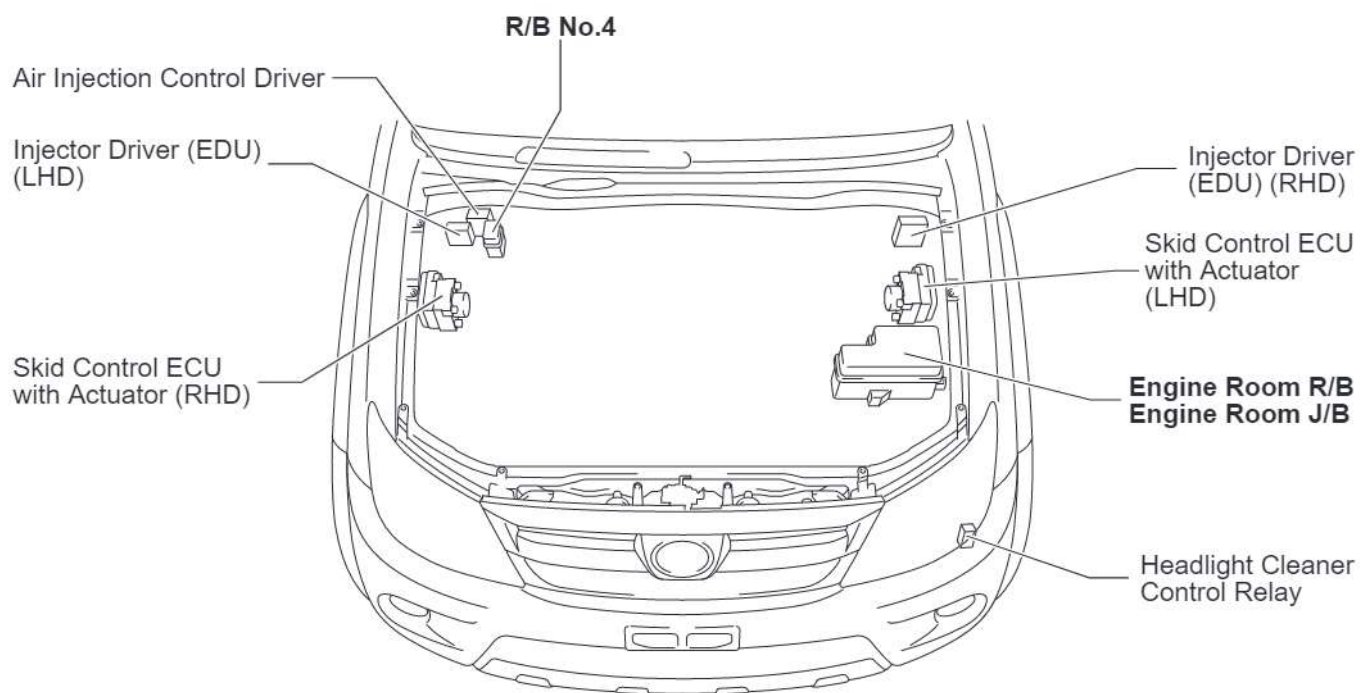

[Body]

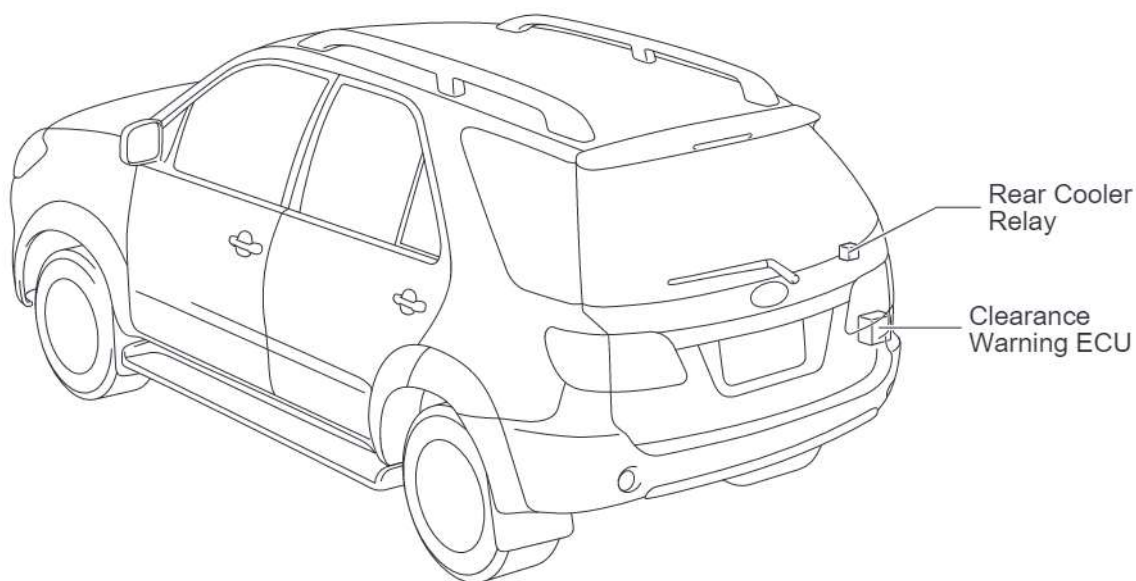



F RELAY LOCATIONS

○ : Driver Side J/B

LHD : Instrument Panel Brace LH (See Page 21)

RHD : Instrument Panel Brace RH (See Page 21)

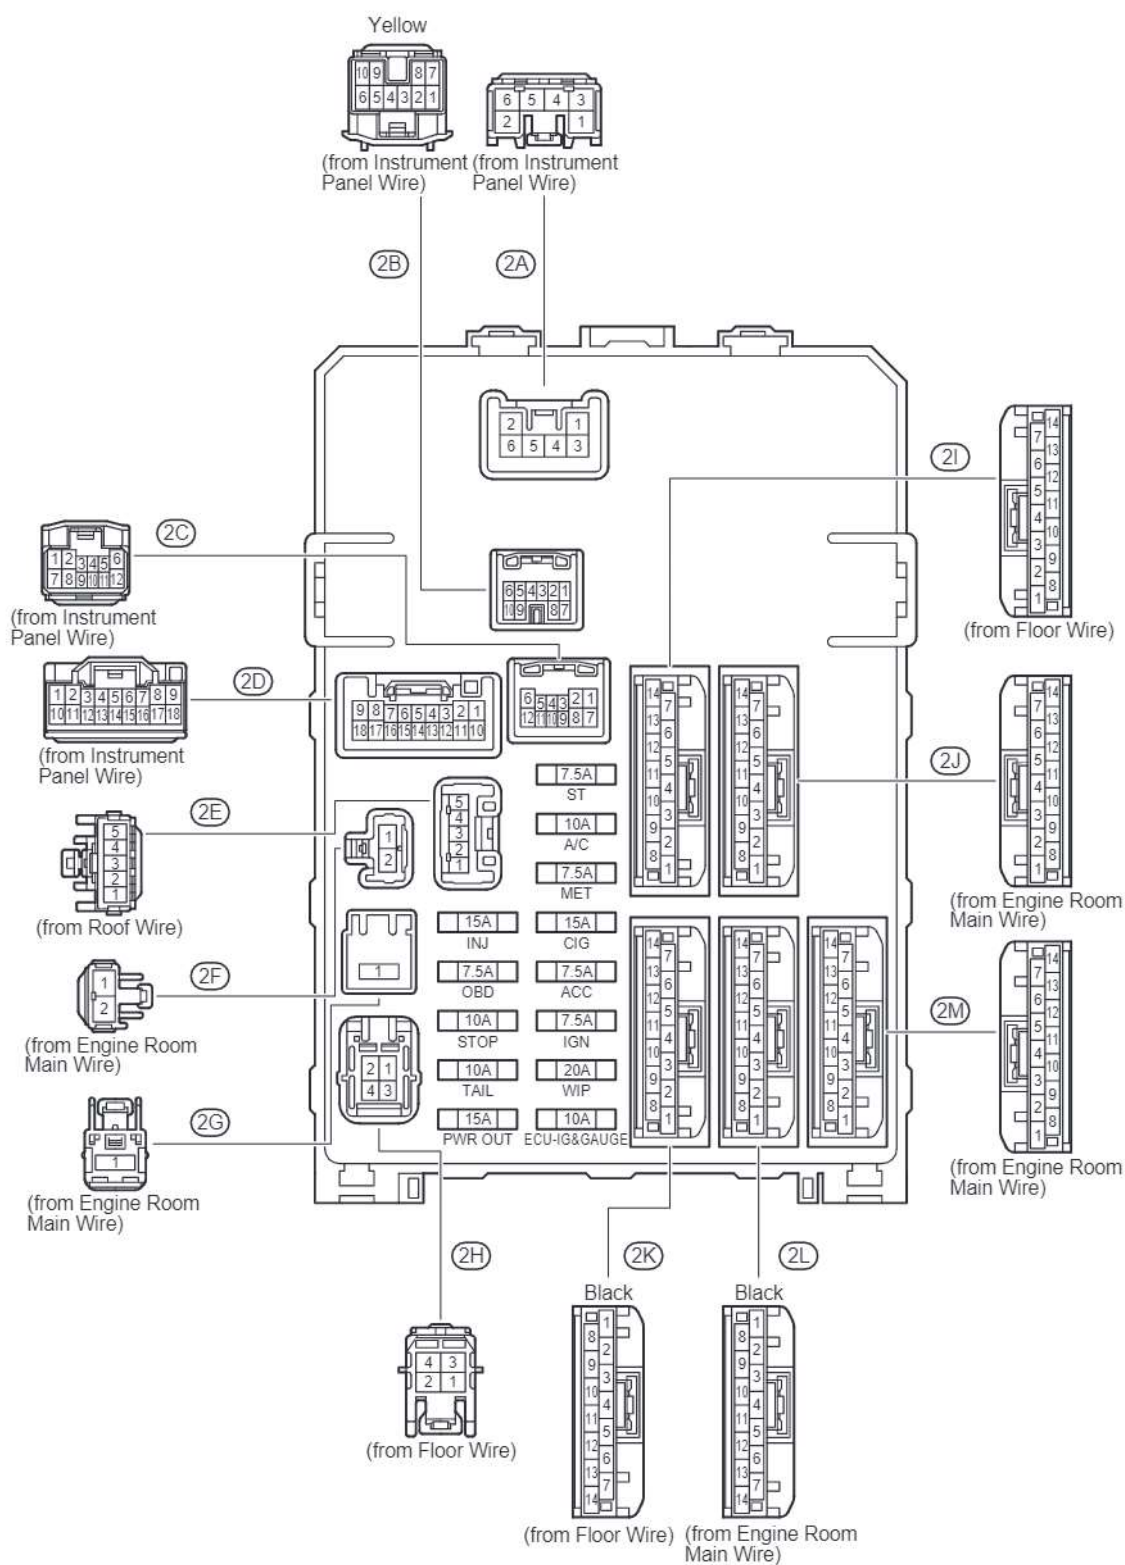


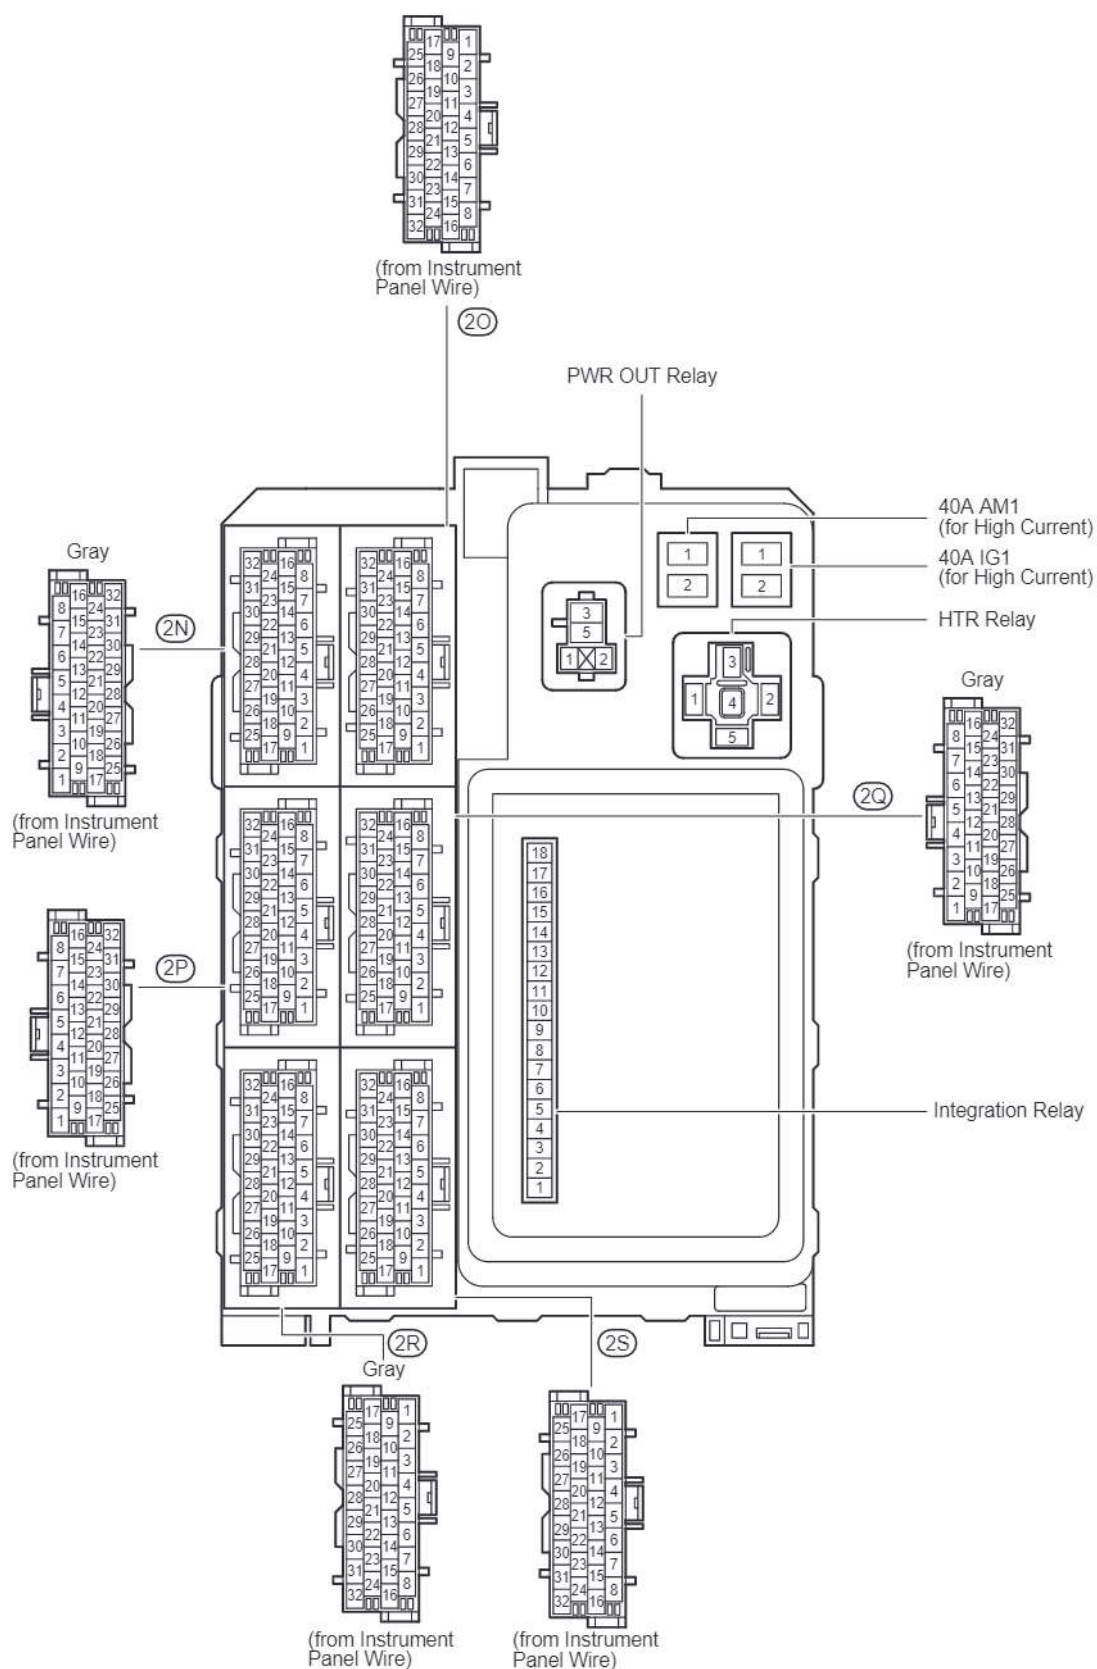

TOYOTA FORTUNER (EM21N5E)


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

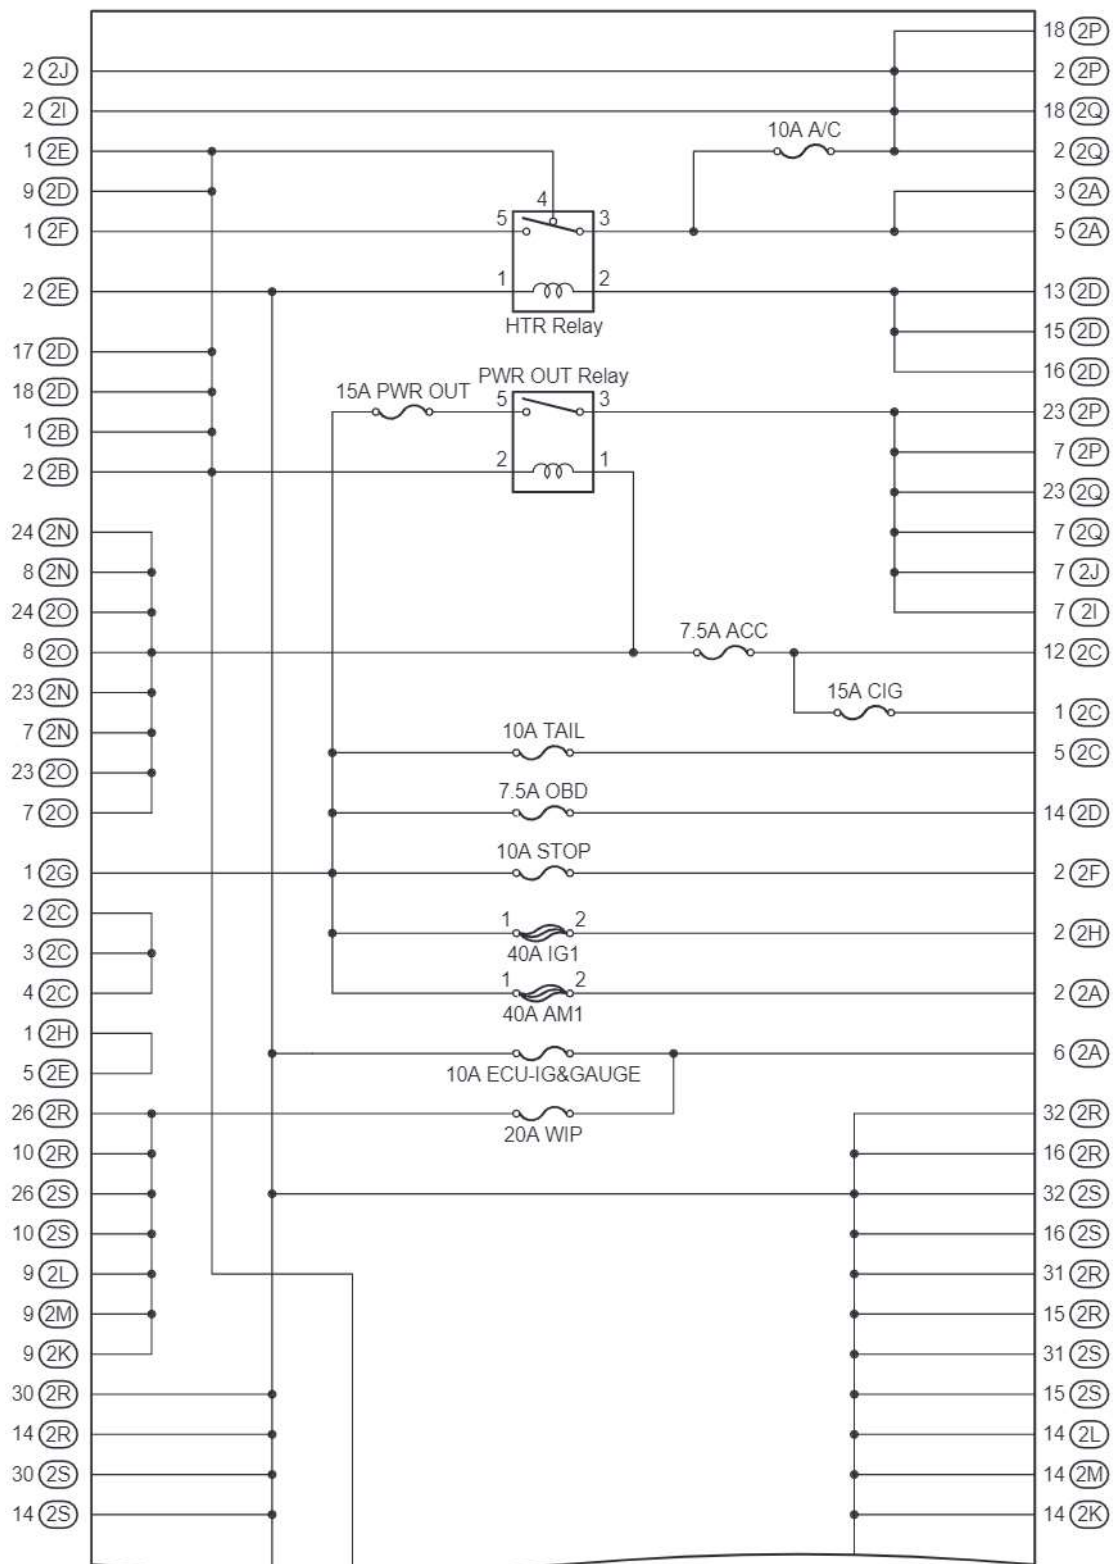

(Cont. Next Page)

(Cont'd)

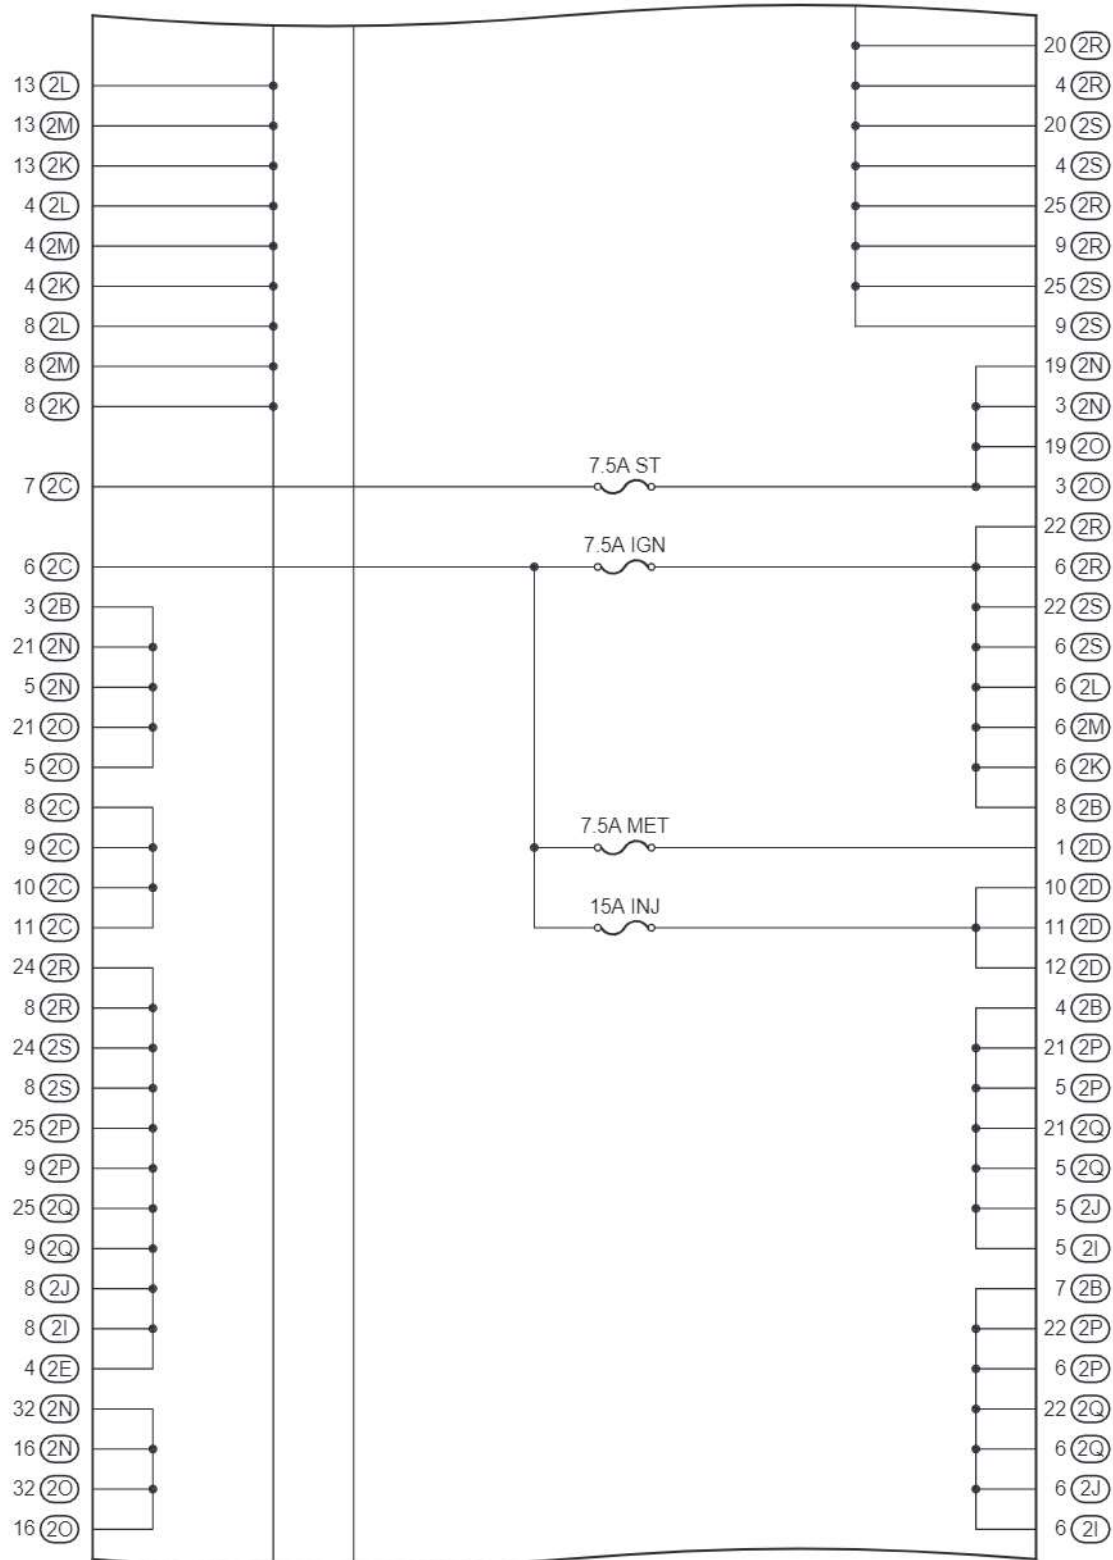


(Cont. Next Page)

F RELAY LOCATIONS


[Driver Side J/B Inner Circuit]

(Cont'd)

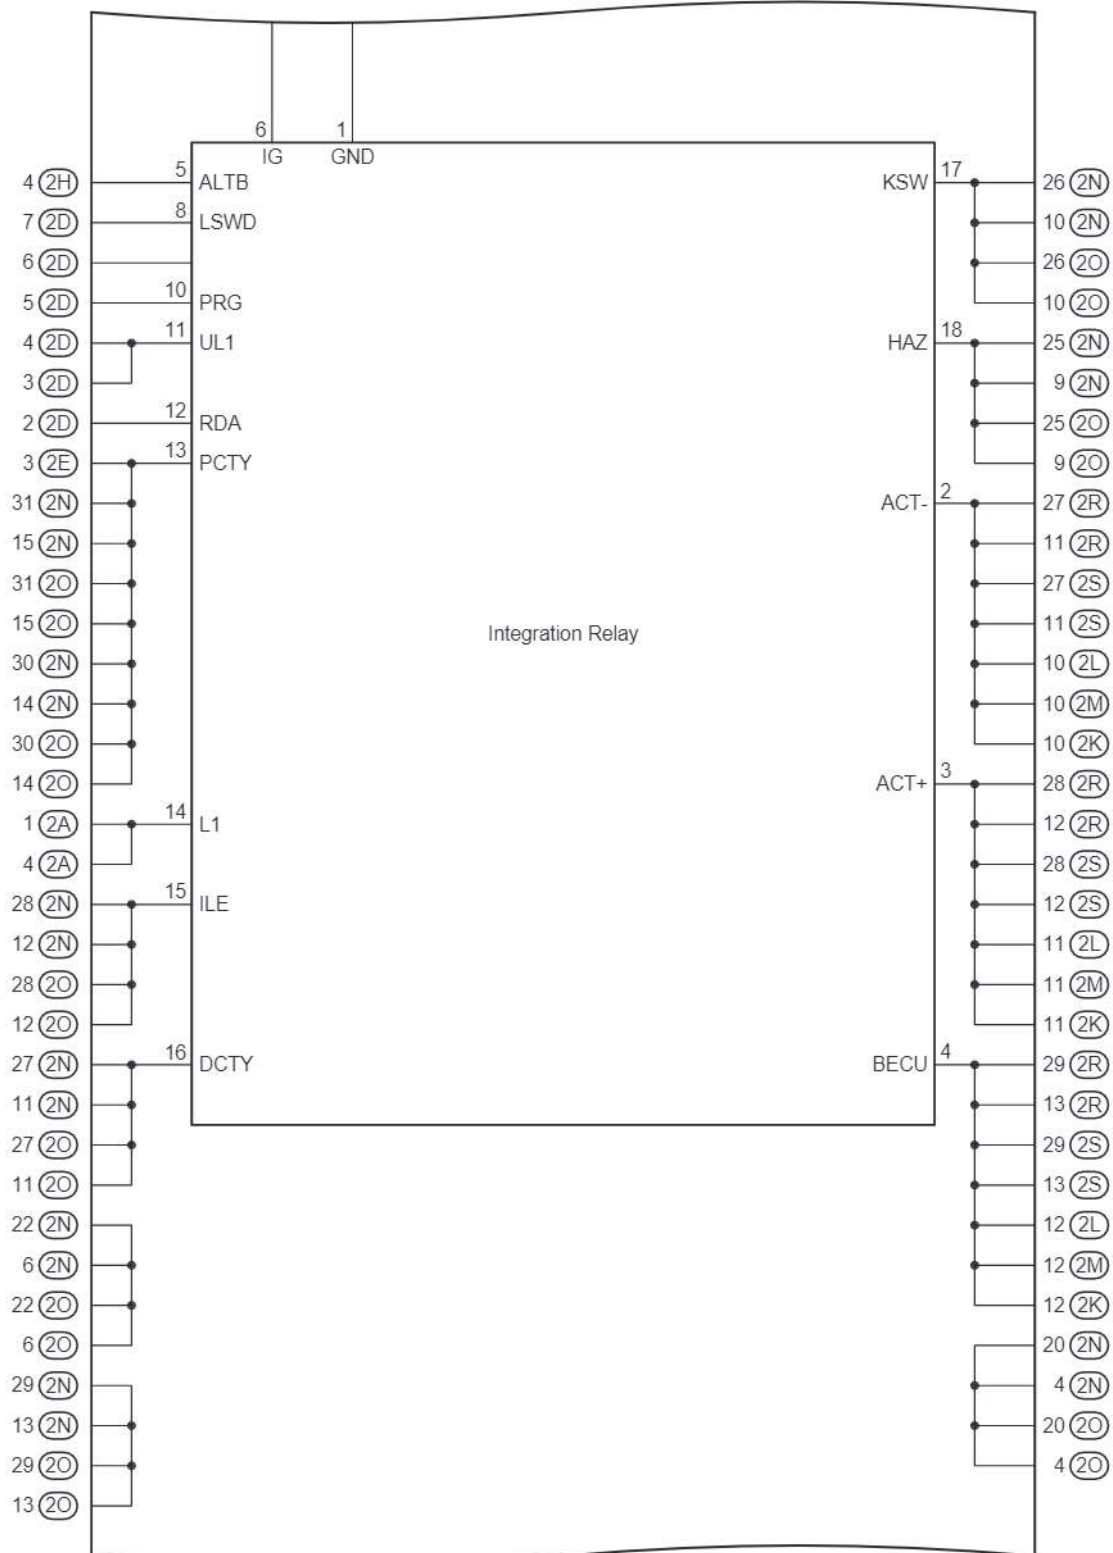

(Cont. Next Page)

(Cont'd)

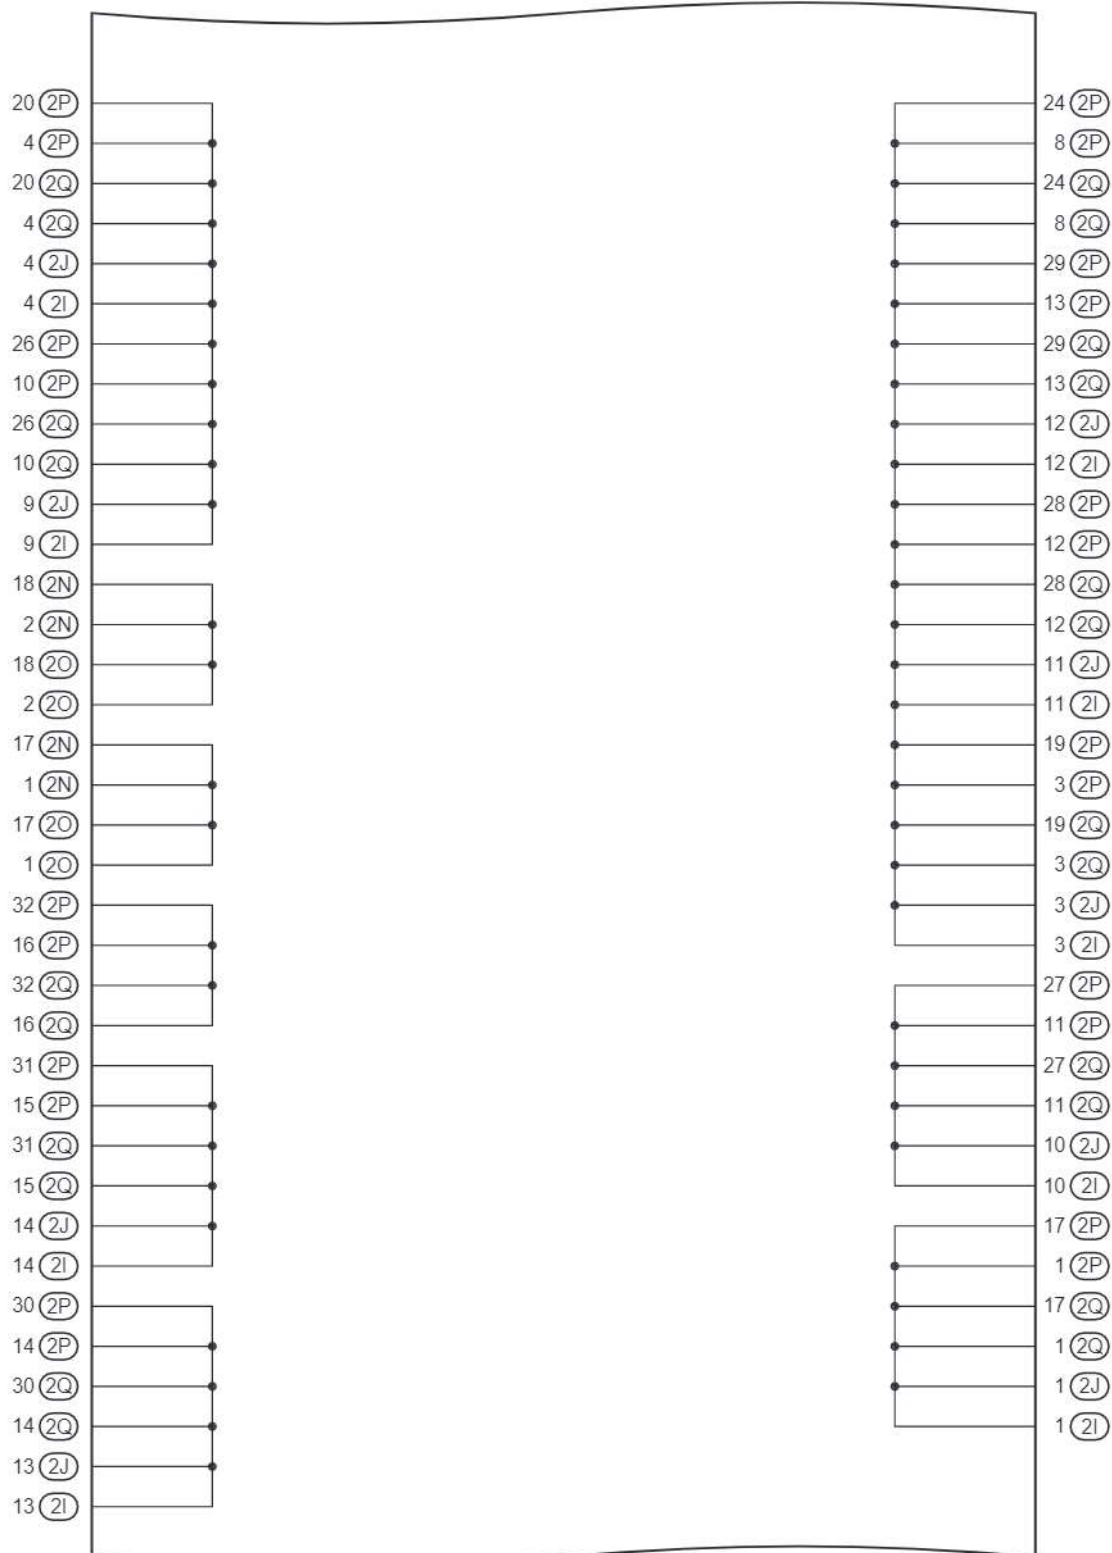


(Cont. Next Page)

F RELAY LOCATIONS


[Driver Side J/B Inner Circuit]

(Cont'd)

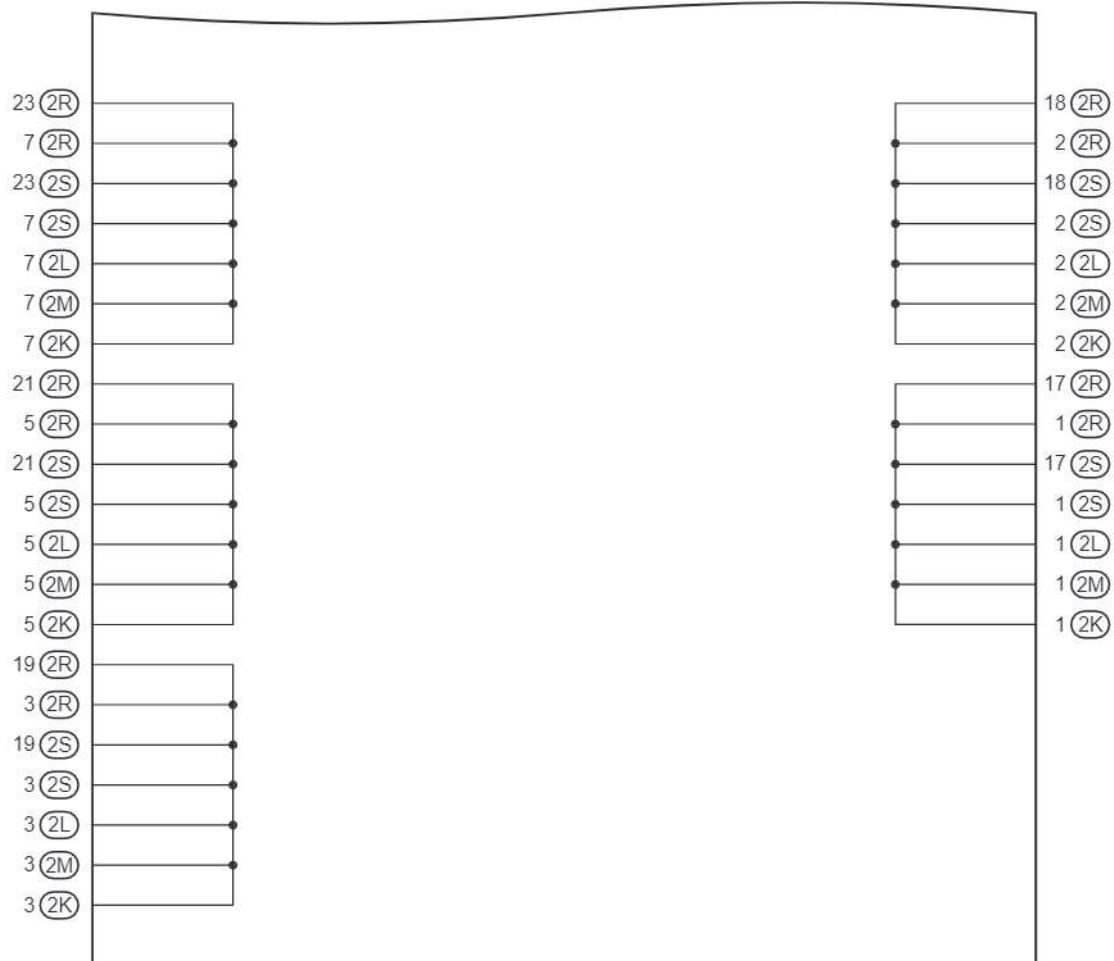


F RELAY LOCATIONS

[Engine Compartment]

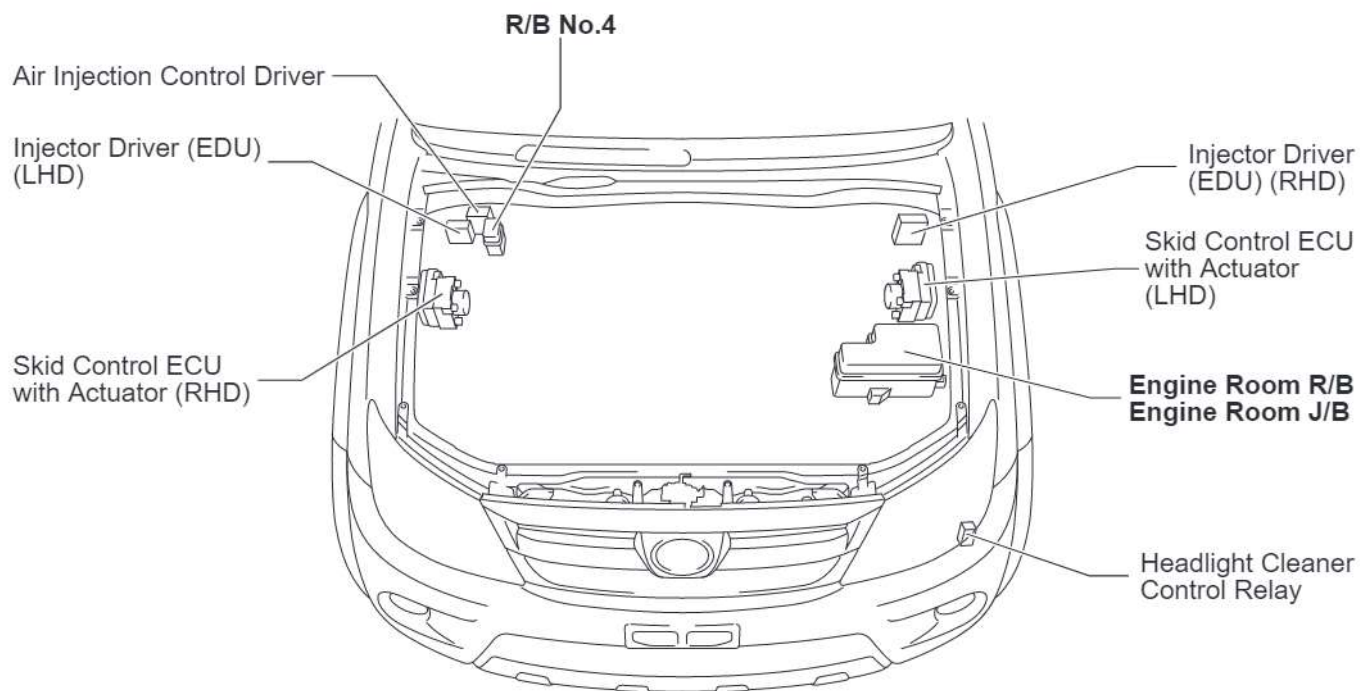


[Body]

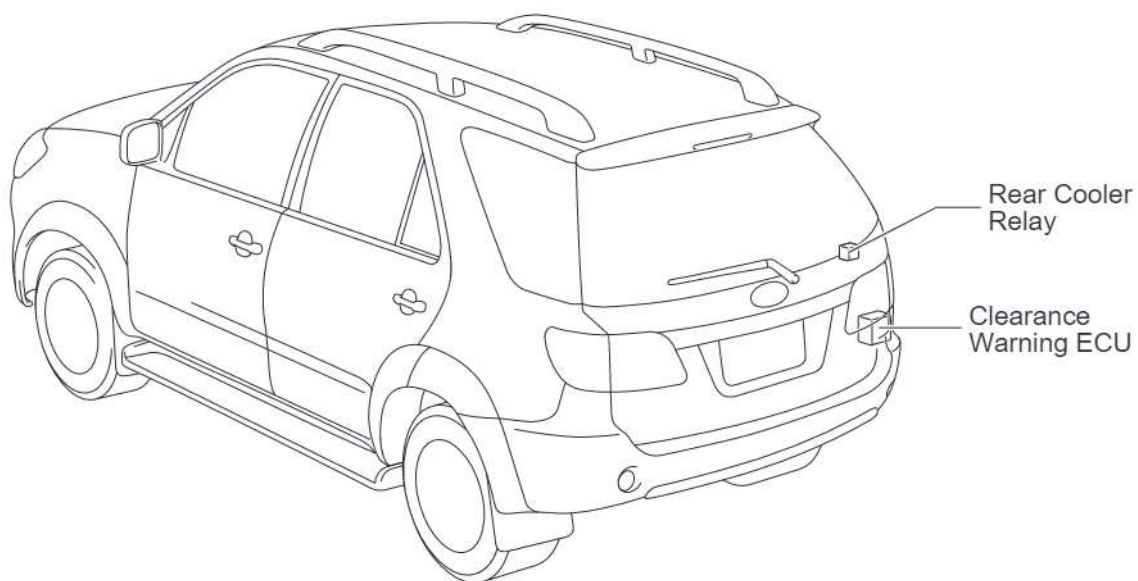


F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	

(Inner Circuit : See Page 26)

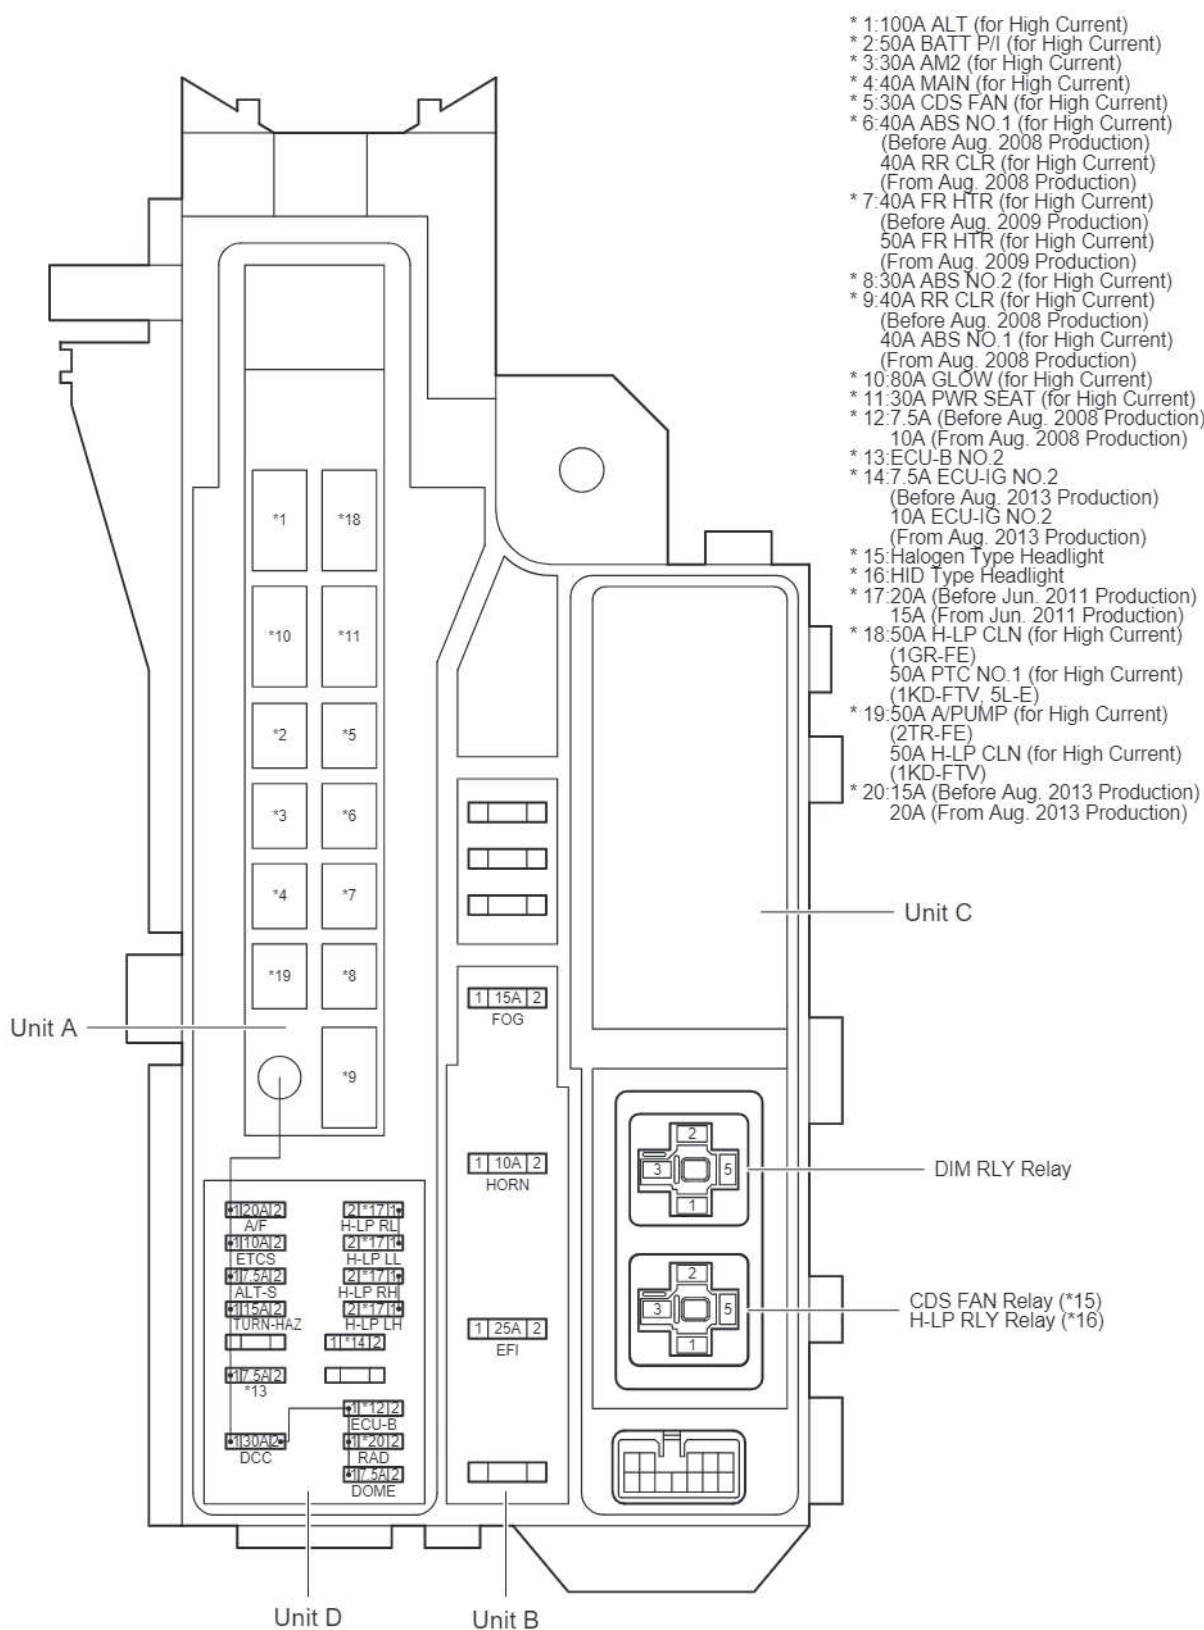

Unit A

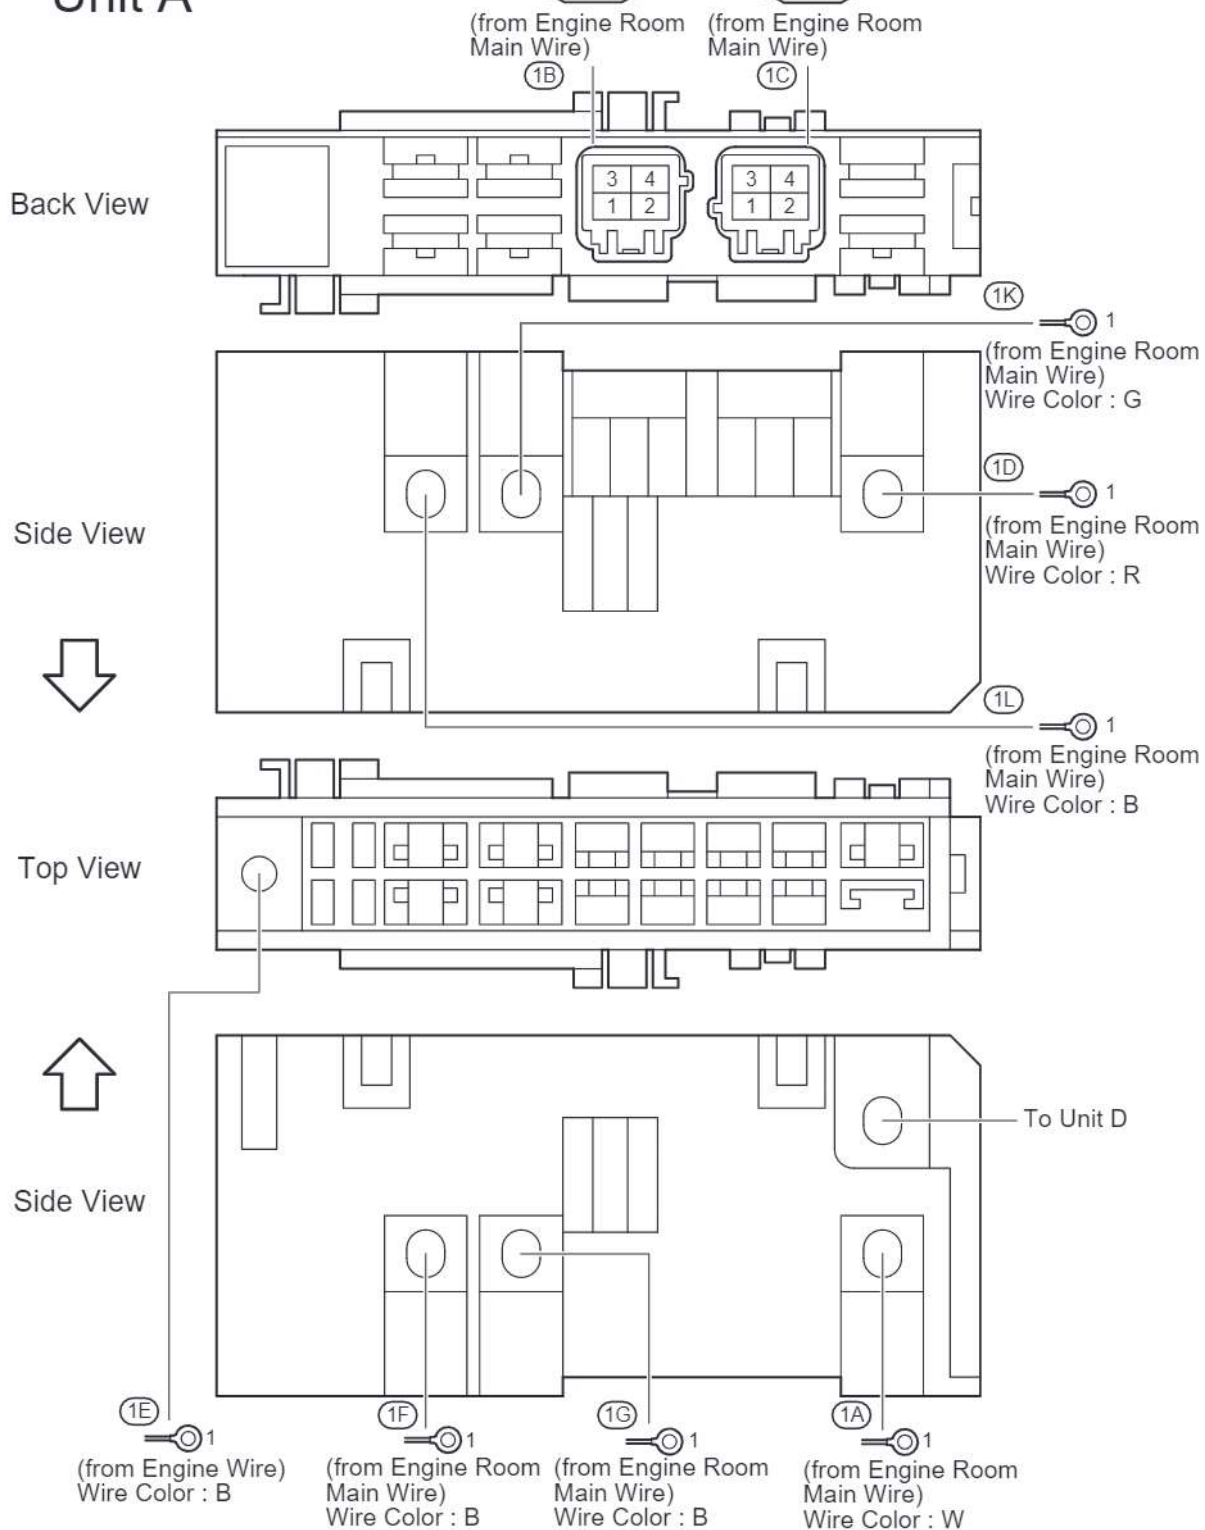


F RELAY LOCATIONS


① : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	

(Inner Circuit : See Page 27)

Unit B

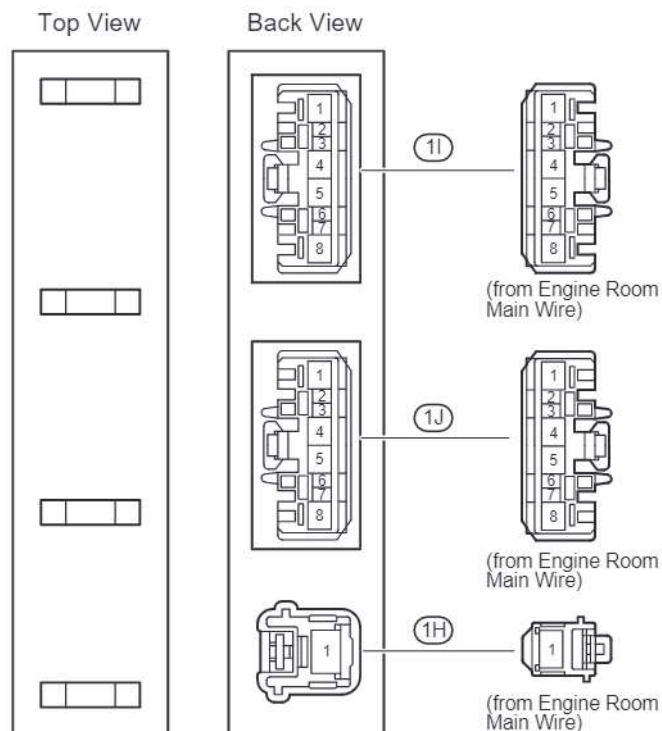

Unit C

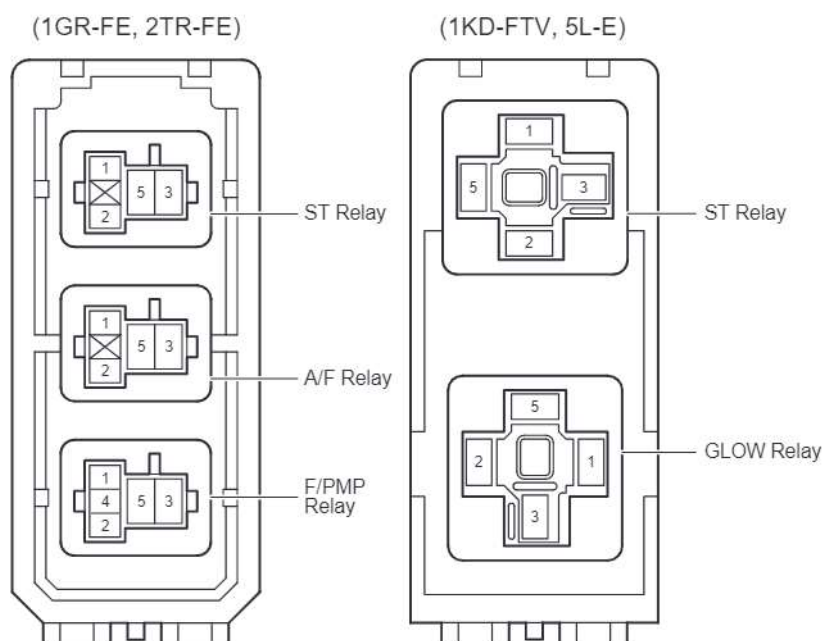


F RELAY LOCATIONS


[Engine Room R/B and Engine Room J/B Inner Circuit]

* 1: Before Aug. 2008 Production
 * 2: From Aug. 2008 Production
 * 3: Before Aug. 2009 Production
 * 4: From Aug. 2009 Production

* 5: Before Jun. 2011 Production
 * 6: From Jun. 2011 Production
 * 7: 1GR-FE
 * 8: 1KD-FTV, 5L-E


* 9: 2TR-FE
 * 10: 1KD-FTV
 * 11: Before Aug. 2013 Production
 * 12: From Aug. 2013 Production

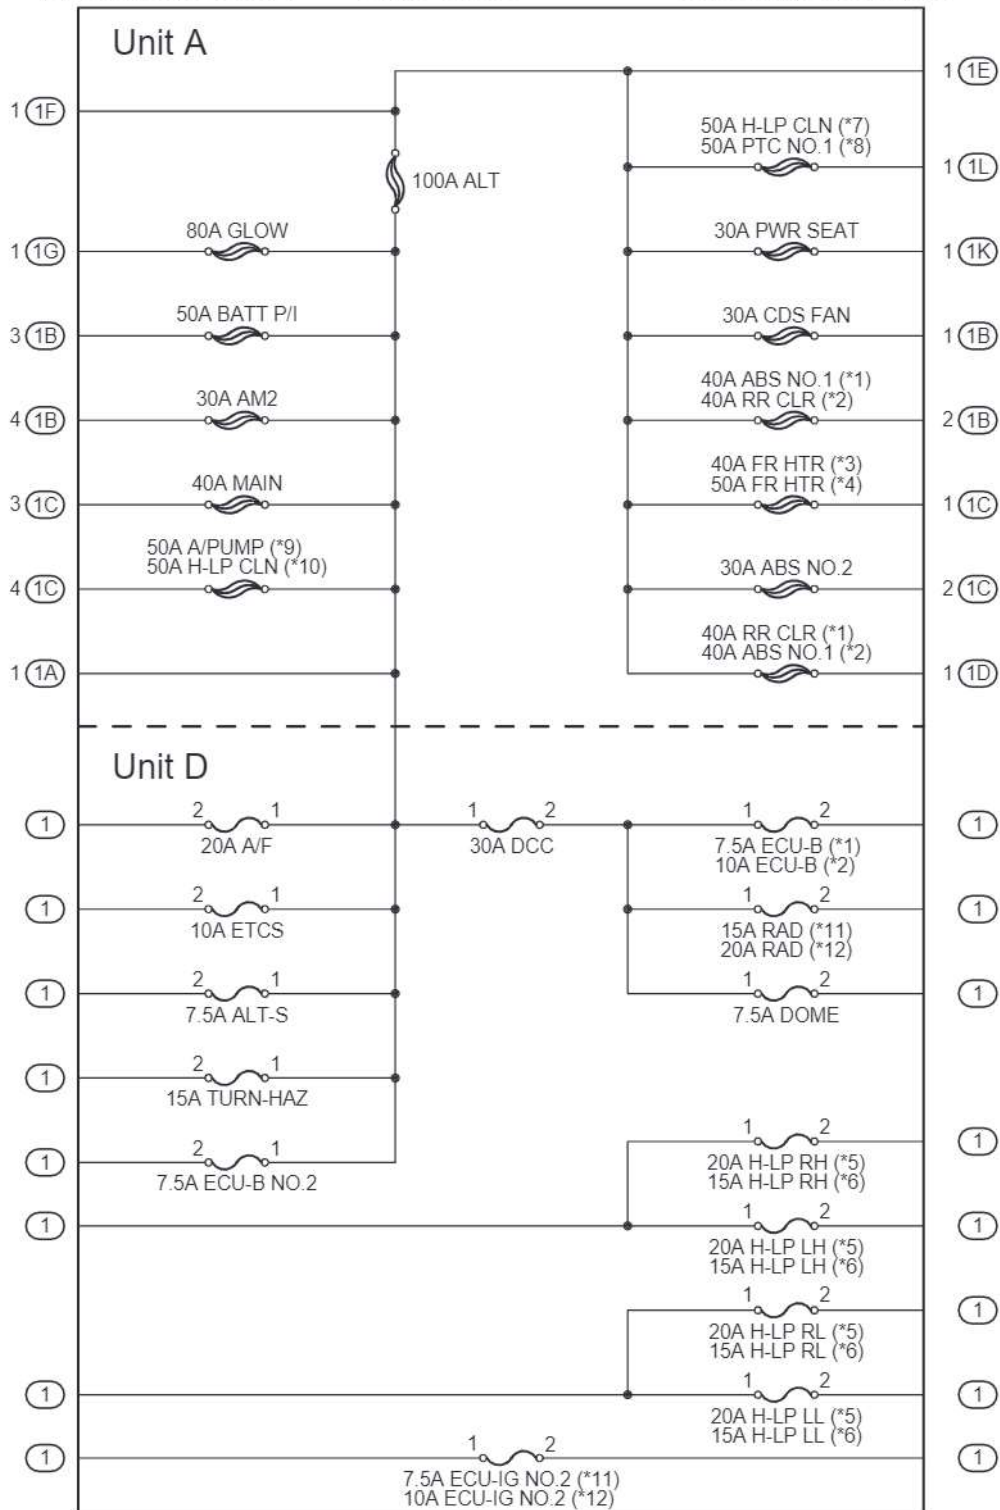

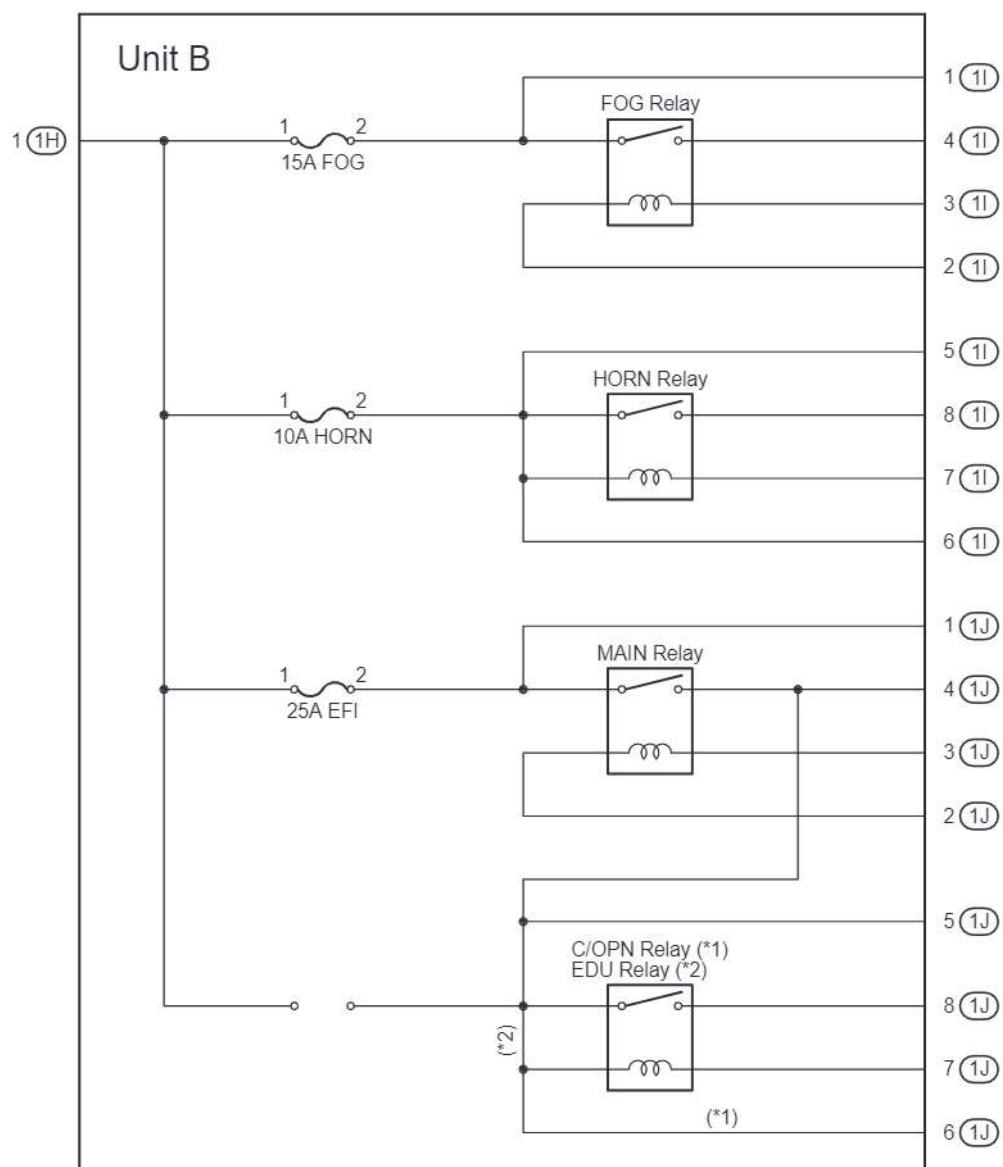


* 1: 1GR-FE, 2TR-FE
 * 2: 1KD-FTV, 5L-E


[Instrument Panel] (LHD)

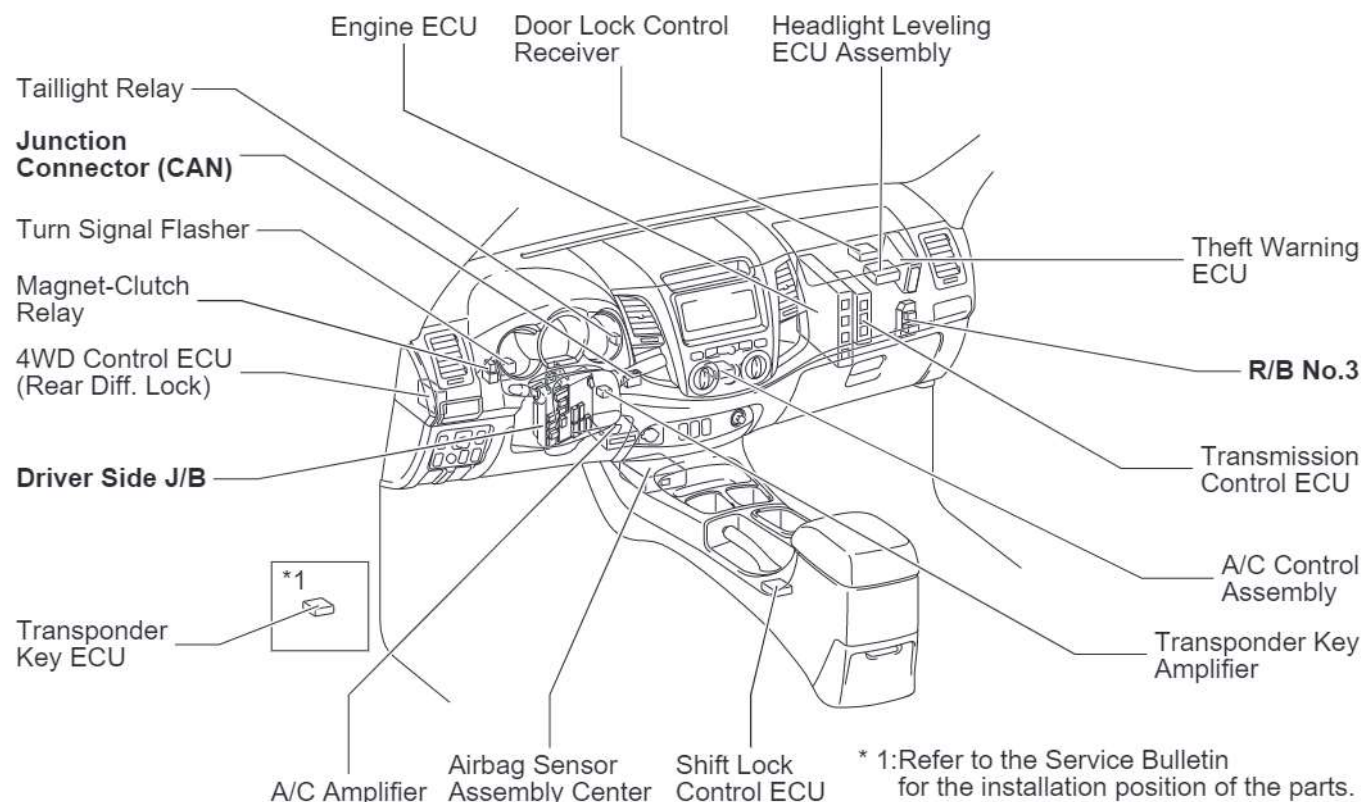


(RHD)

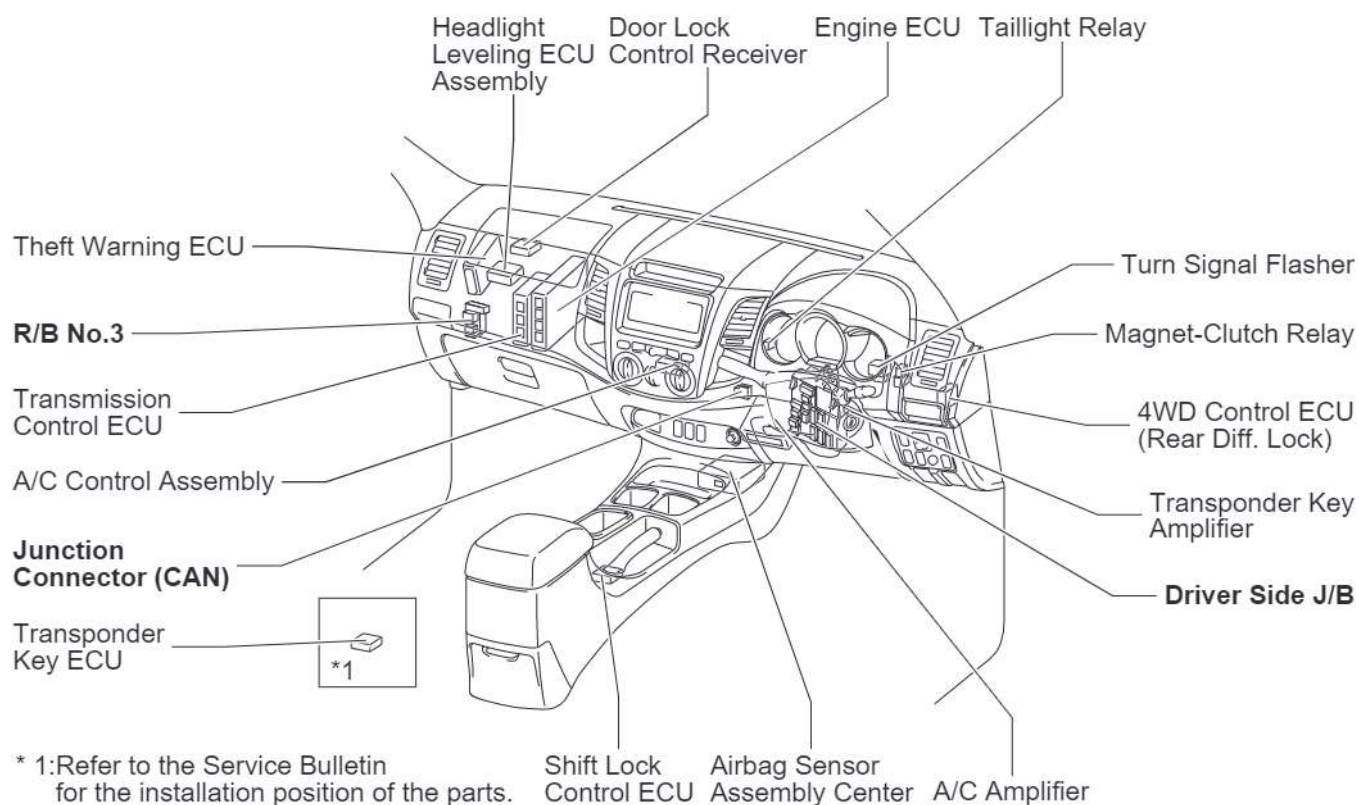

[Instrument Panel] (LHD)

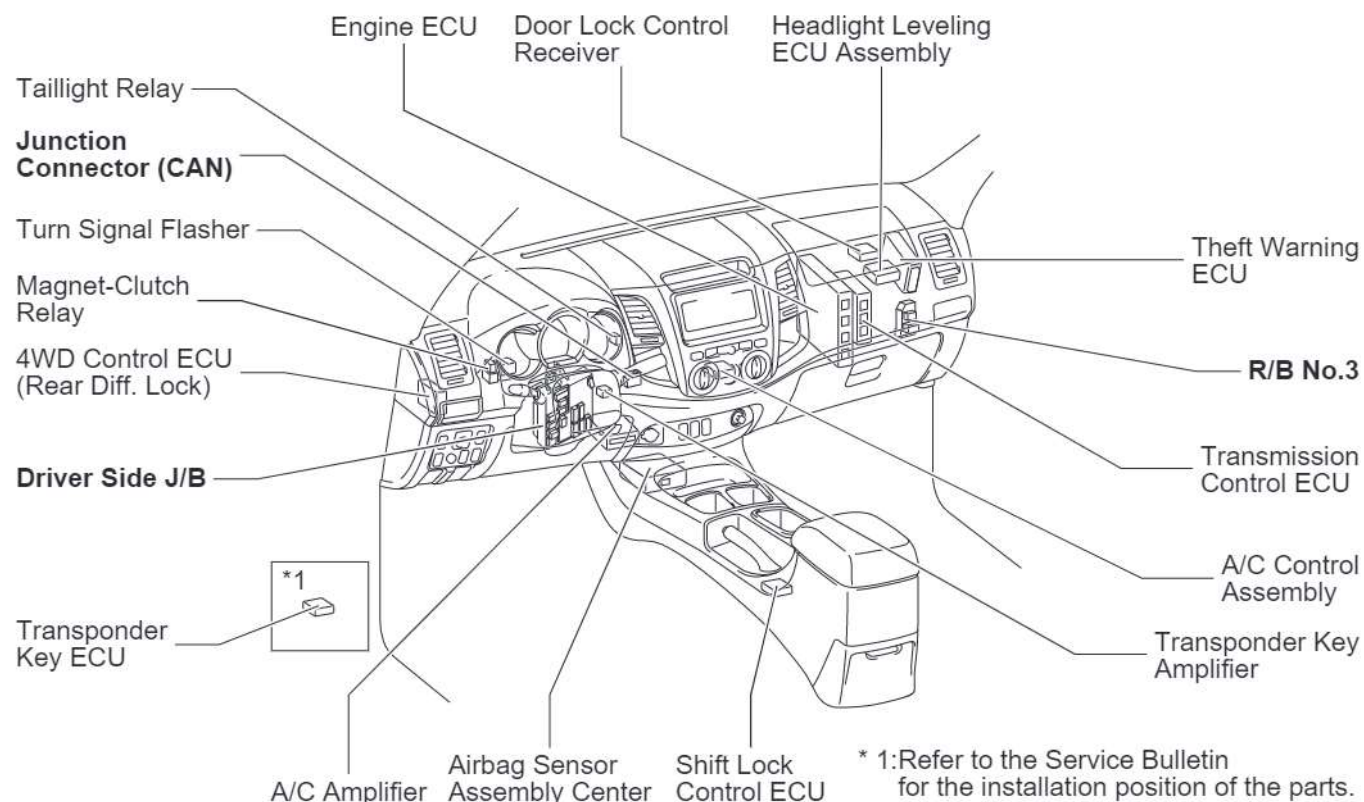


(RHD)

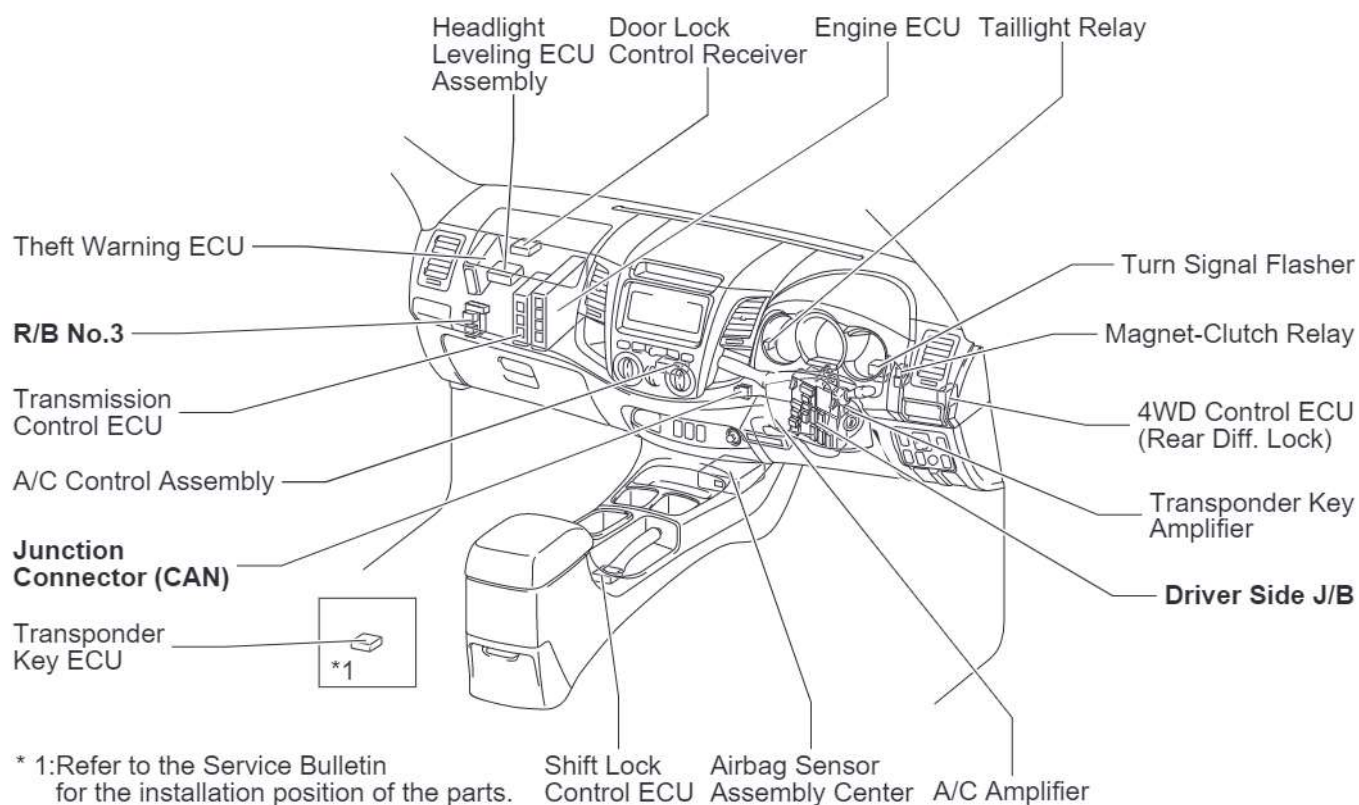


F RELAY LOCATIONS

Junction Connector (CAN)	LHD : Instrument Panel Brace LH (See Page 21)
	RHD : Instrument Panel Brace RH (See Page 21)

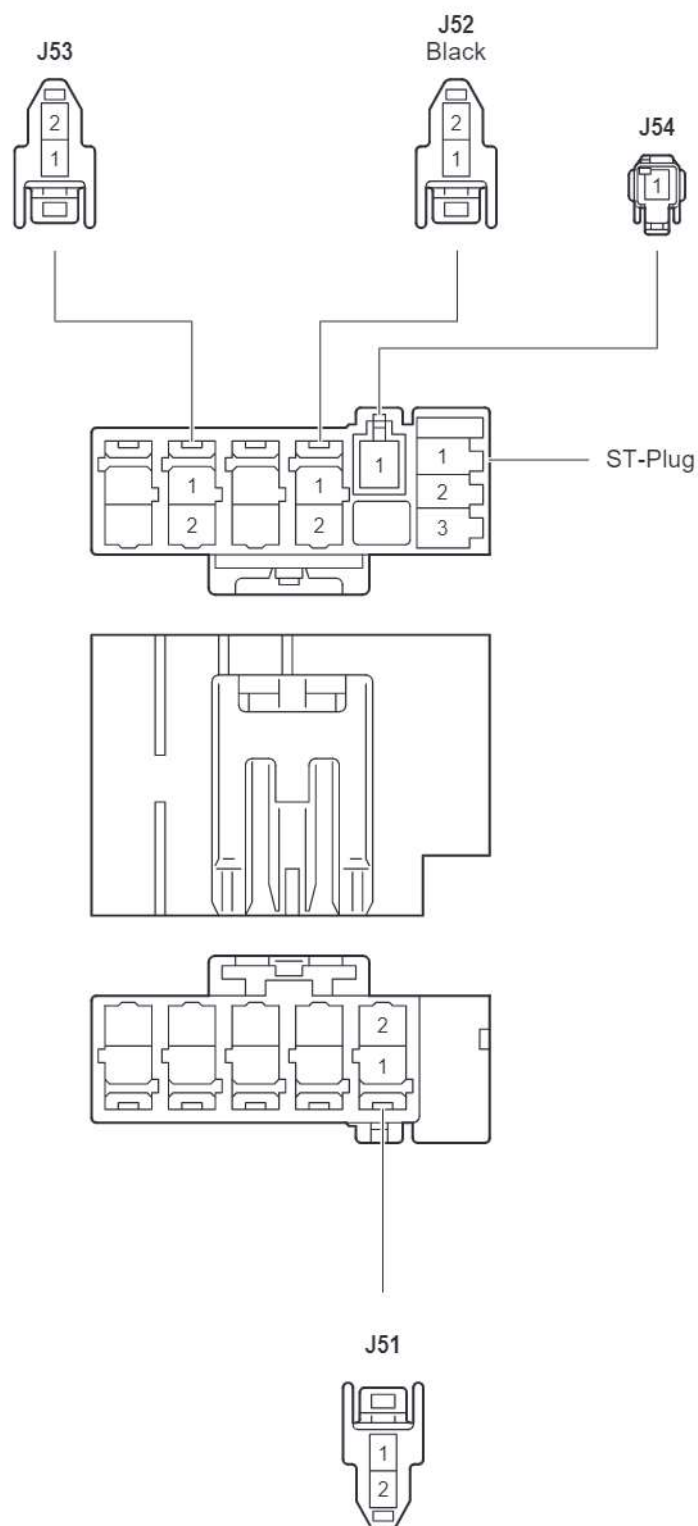


[Junction Connector (CAN) Inner Circuit]

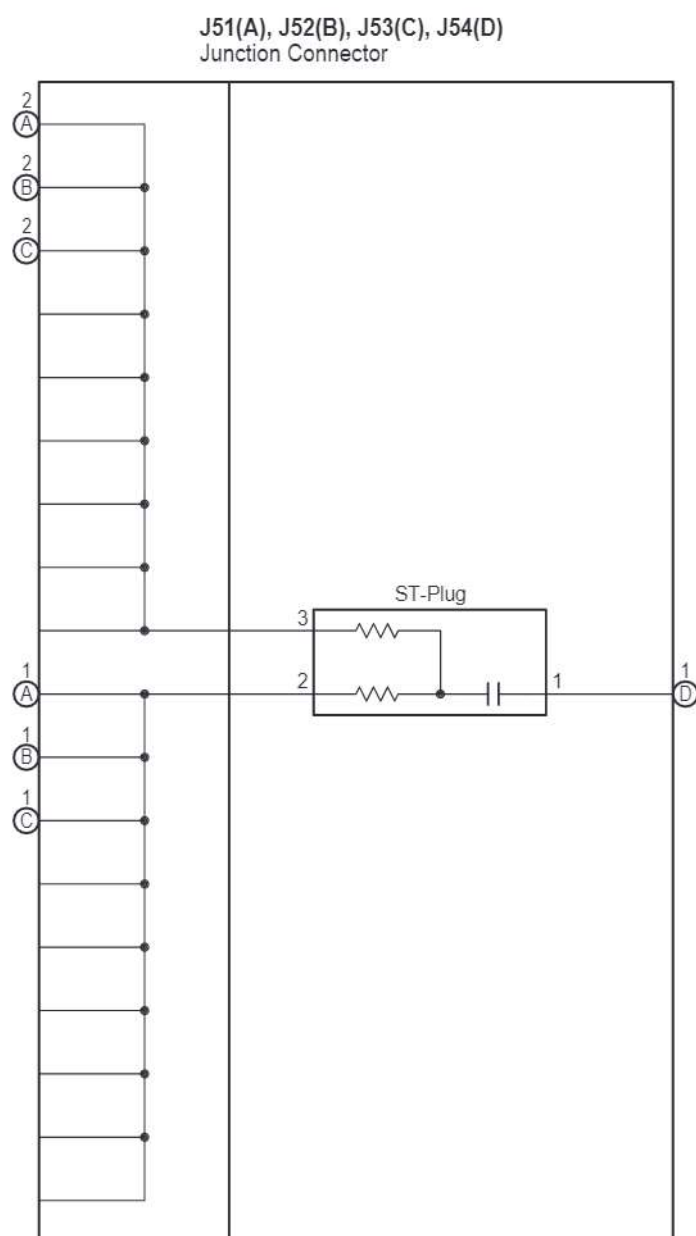

F RELAY LOCATIONS

③ : R/B No.3	LHD : Cowl Side Panel RH (See Page 21)
	RHD : Cowl Side Panel LH (See Page 21)

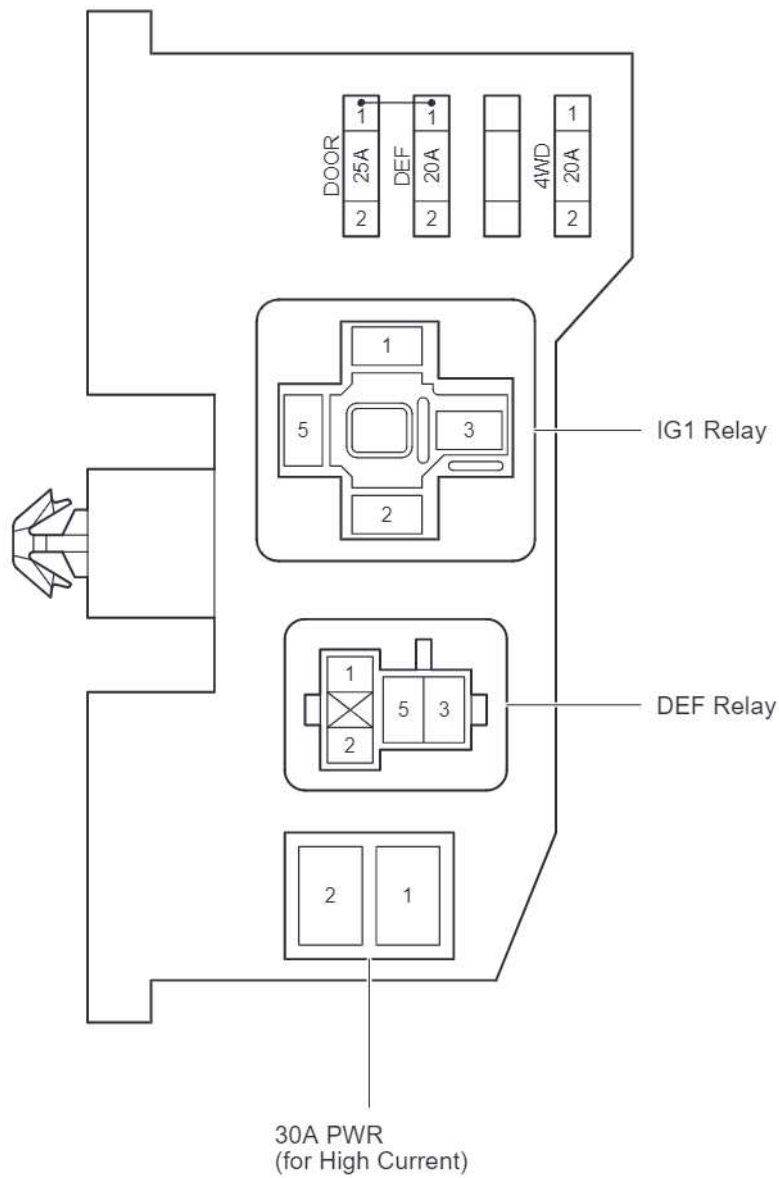

④ : R/B No.4

Dash Panel RH (See Page 20)

