

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A1	Power Steering ECU	90980-12653	B3	Throttle Body Assembly	90980-11858
A2	Brake Pedal Load Sensing SW	90980-10860	B4	Engine Coolant Temp. Sensor	90980-10735
A3	Stop Lamp SW	90980-11118	B5	Engine Oil Pressure SW	90980-11363
A4	Accelerator Position Sensor	90980-12303	B6	Camshaft Position Sensor	90980-10947
A5	Trailer Socket	90980-10871	B7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178
A6	Windshield Wiper Motor	90980-11599	B8	Noise Filter (Ignition)	90980-10843
A7	Front Wiper Deicer	90980-11132	B9	Ignition Coil (No.4)	90980-11885
A8	Brake Fluid Level Warning SW	90980-11207	B10	Ignition Coil (No.3)	
A9	Engine Control Module	90980-12461	B11	Ignition Coil (No.2)	
A10	Wireless Door Lock Buzzer	90980-11142	B12	Ignition Coil (No.1)	
A11	Fog Light (Front LH)	82824-60460	B13	Fuel Injector (No.4)	90980-11875
A12	Side Marker Lamp (Front LH)	90980-10942	B14	Fuel Injector (No.3)	
	Turn Signal Lamp (Front LH)		B15	Fuel Injector (No.2)	
A13	Headlamp (LH Low)	90980-11096	B16	Fuel Injector (No.1)	
A14	Headlamp (LH High)	90980-11095	B17	Camshaft Timing Oil Control Valve	90980-11162
A15	Airbag Sensor (Front LH)	90980-12490	B18	Knock Control Sensor (Bank 1)	90980-11875
A16	Horn (Low)	90980-10619	B19	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
A17	Ambient Temp. Sensor	90980-11070	B20	Generator (2AZ-FE)	90980-09213
A18	Horn (High)	90980-10619		Generator (2GR-FE)	90980-09983
A19	Skid Control ECU with Actuator	90980-12297	B21	Generator	90980-11964
A20	Fuel Pump Resistor	90980-11003	B22	Crankshaft Position Sensor	90980-10947
A21	A/C Pressure Sensor	90980-10845	B23	A/C Compressor	90980-11156
A22	Headlamp (RH High)	90980-11095	B24	Transmission Revolution Sensor (Counter Gear)	
A23	Headlamp (RH Low)	90980-11096	B25	Starter	90980-11400
A24	Side Marker Lamp (Front RH)	90980-10942	B26	Park/Neutral Position SW	90980-12362
	Turn Signal Lamp (Front RH)		B27	Electronically Controlled Transmission Solenoid	90980-11658
A25	Rear Washer Motor	90980-11051	B28	Transmission Revolution Sensor (Turbine)	90980-11156
A26	Washer Level Warning SW	90980-11068	B29	Battery Current Sensor	90980-12495
A27	Front Washer Motor	90980-11019	B30	Engine Control Module (2AZ-FE)	90980-12398
A28	Fog Light (Front RH)	82824-60460		Engine Control Module (2GR-FE)	90980-12396
A29	Airbag Sensor (Front RH)	90980-12490	B31	VSV (Air Intake Control)	90980-11156
A30	Cooling Fan ECU	90980-12058	B32	Electronically Controlled Transmission Solenoid	90980-12326
A31	Cooling Fan ECU (RH)	90980-10841		B33	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A32	Cooling Fan ECU (LH)		B34	VSV (Purge)	90980-11156
A33	Radiator Fan Motor	90980-10928	B35	Fuel Injector (No.6)	90980-11875
A34	A/C Condenser Fan Motor		B36	Fuel Injector (No.4)	
A35	Junction Connector	90980-11542	B37	Fuel Injector (No.2)	
A36	Junction Connector	90980-11915	B38	Noise Filter (Ignition LH)	90980-10843
A37	Junction Connector		B39	Ignition Coil (No.6)	90980-11885
A38	Junction Connector	90980-10803	B40	VVT Sensor (Bank 2 Exhaust Side)	90980-12353
A39	Junction Connector		B41	Ignition Coil (No.4)	90980-11885
A40	Junction Connector	90980-12627	B42	Ignition Coil (No.2)	
A41	Speed Sensor (Front LH)				
A42	Speed Sensor (Front RH)				
B1	Mass Air Flow Meter	90980-12292			
B2	VSV (Purge)	90980-11156			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
B43	Camshaft Timing Oil Control Valve (LH Exhaust Side)	90980-11162	E27	Front Console Illumination	90980-11918
B44	Camshaft Timing Oil Control Valve (LH Intake Side)		E28	Front Wiper Deicer SW	90980-12551
B45	VVT Sensor (Bank 2 Intake Side)	90980-12353	E29	Seat Heater SW	90980-11989
B46	Crankshaft Position Sensor	90980-12611	E30	Power Outlet Socket (Front)	90980-12498
B47	A/C Compressor	90980-11016	E31	Downhill Assist Control SW	82824-21030
B48	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	E33	A/C Thermistor	90980-11918
B49	Ignition Coil (No.5)	90980-11885	E35	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-10794
B50	Noise Filter (Ignition RH)	90980-10843	E36	A/C Amplifier	90980-12555
B51	Fuel Injector (No.5)	90980-11875	E37	A/C Amplifier	90980-12557
B52	Fuel Injector (No.3)		E39	Shift Lock Control ECU	90980-12551
B53	Fuel Injector (No.1)		E40	Transmission Control SW	
B54	VVT Sensor (Bank 1 Exhaust Side)	90980-12353	E41	Parking Brake SW	90980-10871
B55	Ignition Coil (No.3)	90980-11885	E42	Outer Mirror SW	90980-11657
B56	Ignition Coil (No.1)		E43	Power Outlet Socket (Front)	90980-12498
B57	Camshaft Timing Oil Control Valve (RH Exhaust Side)	90980-11162	E44	Stereo Jack Adapter	82824-21030
B58	VSV (ACIS)		E45	Airbag Sensor Assembly Center	90980-12391
B59	VVT Sensor (Bank 1 Intake Side)	90980-12353	E46	Transponder Key ECU	90980-12423
B60	Camshaft Timing Oil Control Valve (RH Intake Side)	90980-11162	E47	Radio Receiver Assembly	90980-10997
C1	Starter	90980-09506	E48	Radio Receiver Assembly	90980-10996
E1	Main SW	90980-12558	E49	Radio Receiver Assembly	90980-12460
E2	Light Control Rheostat	90980-12550	E50	4WD Control SW	90980-12366
E3	Ignition SW	90980-11615	E51	Auto LSD SW	90980-12558
E4	Ignition Key Cylinder Lamp	90980-11148	E53	Blower Motor	90980-11667
E5	Transponder Key Amplifier	90980-12092	E54	Blower Motor	90980-11579
E6	Unlock Warning SW	90980-12063	E55	Blower Resistor	90980-11136
E7	Spiral Cable	90980-12552	E56	Tire Pressure Warning ECU	90980-12553
E8	Airbag Squib (Steering Wheel Pad)	90980-12160	E57	4WD Control ECU	90980-12422
E9	Windshield Wiper SW Assembly	90980-12358	E58	Option Connector (TVIP)	90980-10860
E10	Windshield Wiper SW Assembly	90980-12359	E59	Option Connector (Bus Buffer)	90980-10908
E11	Steering Sensor	90980-12162	E60	A/T Shift Lever Illumination	90980-12063
E12	Headlamp Dimmer SW Assembly	90980-12460	E61	Damper Servo Motor (Air Inlet)	90980-11909
E13	Data Link Connector 3	90980-11978	E62	Radio Receiver Assembly	90980-12038
E15	Main Body ECU	90980-12561	E64	Radio Receiver Assembly	90980-12552
E16	Main Body ECU	90980-12329	E65	Short Connector	90980-11918
E17	Main Body ECU	90980-12458	E66	Short Connector	90980-11917
E18	Power Steering ECU	90980-12614	E67	Junction Connector	90980-10803
E19	Combination Meter	90980-12557	E68	Junction Connector	90980-11915
E20	Hazard Warning Signal SW	82824-21030	E69	Junction Connector	
E21	A/C Room Temp. Sensor	90980-11918	E70	Junction Connector	
E22	Clock	90980-11923	E71	Diode (Rear Wiper)	90980-10962
E23	Integration Control and Panel Assembly	90980-11911	E72	Diode (Inverter)	90980-11071
E24	Integration Control and Panel Assembly	90980-10993	E73	Junction Connector	90980-11398
E25	Air Vent Mode Control SW	90980-12550	E74	Junction Connector	
E26	A/C SW	90980-12558	E75	Diode (Heater)	90980-10962
			E76	Radio Receiver Assembly	90980-12423
			F1	A/C Solar Sensor	90980-11987

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
G1	Speaker (Front Door RH)	90980-10935	L1	Occupant Classification ECU	90980-12356
G2	Power Window Regulator Motor (Front RH)	90980-10797	L2	Front Seat Inner Belt (Front Passenger's Side)	90980-10942
G3	Power Window SW (Front Passenger's Side)	90980-10789	L3	Seat Heater (RH)	90980-10797
G4	Outer Rear View Mirror (RH)	90980-12059	L5	Video Terminal	90980-12551
G5	Door Lock Assembly (Front Passenger's Side)	90980-12226	L7	Airbag Sensor Assembly Center	90980-12390
G6	Door Lock Control SW (Front Passenger's Side)	90980-11950	L8	Door Courtesy SW (Front RH)	90980-10871
G7	Tweeter (Front RH)	90980-10860	L9	Pretensioner (RH)	90980-12253
G8	Tweeter (Front RH)	90980-12304	L10	Side Airbag Sensor (Front RH)	90980-12225
H1	Speaker (Front Door LH)	90980-10935	L11	Door Courtesy SW (Rear RH)	90980-10871
H2	Power Window SW (Driver's Side)	90980-12122	L12	Side Airbag Sensor (Rear RH)	90980-12352
H3	Outer Rear View Mirror (LH)	90980-12059	L13	Stereo Component Amplifier	90980-12554
H4	Power Window Regulator Motor (Front LH)	90980-12328	L14	Stereo Component Amplifier	90980-10803
H5	Door Lock Assembly (Driver's Side)	90980-12226	L15	Stereo Component Amplifier	90980-10801
H6	Tweeter (Front LH)	90980-10860	L16	Rear Seat Entertainment Display	90980-12556
H7	Tweeter (Front LH)	90980-12304	L17	Curtain Shield Airbag Squib (RH)	90980-12575
I1	Power Window SW (Rear RH)	90980-10789	L18	Door Control Receiver	90980-12366
I2	Speaker (Rear RH)	90980-10935	L19	Curtain Shield Airbag Squib (RH)	90980-12575
I3	Power Window Regulator Motor (Rear RH)	90980-10797	L20	Tire Pressure Warning Antenna and Receiver	90980-11909
I4	Door Lock Assembly (Rear RH)	90980-12226	L21	Junction Connector	90980-11398
J1	Power Window SW (Rear LH)	90980-10789	L22	Junction Connector	
J2	Speaker (Rear LH)	90980-10935	N1	Power Seat Motor (Driver's Seat Slide Control)	90980-10825
J3	Power Window Regulator Motor (Rear LH)	90980-10797	N2	Power Seat Motor (Driver's Seat Lifter Control)	
J4	Door Lock Assembly (Rear LH)	90980-12226	N3	Power Seat Motor (Driver's Seat Front Vertical Control)	
K1	Airbag Sensor Assembly Center	90980-12392	N4	Power Seat Motor (Driver's Seat Reclining Control)	
K3	Power Outlet Socket (115V)	90980-10601	N5	Power Seat Motor (Driver's Seat Lumbar Support Control)	
K4	Front Seat Inner Belt (Driver's Side)	90980-10942	N6	Power Seat SW (Driver's Seat)	90980-10997
K6	Yaw Rate Sensor	90980-11904	N7	Power Seat SW (Lumbar Support)	90980-10789
K7	Door Courtesy SW (Front LH)	90980-10871	N8	Junction Connector	90980-11661
K8	Pretensioner (LH)	90980-12253	N9	Seat Heater (LH)	90980-10797
K9	Side Airbag Sensor (Front LH)	90980-12225	O1	4WD Linear Solenoid	90980-11156
K10	Door Courtesy SW (Rear LH)	90980-10871	P1	Vanity Lamp SW (RH)	90980-12322
K11	Side Airbag Sensor (Rear LH)	90980-12352	P2	Vanity Lamp (RH)	-
K12	Rear Combination Lamp (RH)	90980-10797	P3	Vanity Lamp (LH)	
K13	Curtain Shield Airbag Squib (LH)	90980-12575	P4	Vanity Lamp SW (LH)	90980-12322
K14	Rear Combination Lamp (LH)	90980-10797	P5	Overhead J/B	90980-12559
K15	Voltage Inverter	90980-10799	P6	Sliding Roof Control ECU	90980-10997
K16	Diode (Room Lamp)	90980-10962	P7	Room Lamp (Front)	-
K17	Power Outlet Socket (Rear)	90980-12498	Q1	Center Stop Lamp	90980-11060
K18	Door Courtesy SW (Back Door)	90980-10871	Q2	Rear Window Defogger	90980-10916
K19	Junction Connector	90980-10803	Q3	Room Lamp (Rear)	90980-10860
K20	Junction Connector	90980-11542	Q4	Rear Wiper Motor	90980-11296
K21	Junction Connector	90980-11661			
K22	Speed Sensor (Rear LH)	90980-10859			
K23	Speed Sensor (Rear RH)				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
Q5	Speaker (Woofer)	90980-11013	a2	Occupant Classification Sensor (Front LH)	90980-12353
Q6	License Plate Lamp	90980-11003	a3	Occupant Classification Sensor (Rear LH)	
Q7	Back Door Lock Assembly	90980-12226	a4	Occupant Classification Sensor (Front RH)	
R1	Knock Control Sensor (Bank 2)	90980-11875	a5	Occupant Classification Sensor (Rear RH)	
R2	Knock Control Sensor (Bank 1)		b1	Foot Lamp (Front LH)	90980-11918
S1	Fuel Suction Pump	90980-11077	b2	Foot Lamp (Front RH)	
S2	Fuel Sender Gage	90980-11140	c1	A/C Amplifier	90980-12264
S3	Canister Pump Module	90980-12380		A/C Blower Assembly	
V1	Speed Sensor (Rear RH)	90980-12416	d1	Key Interlock Solenoid	90980-12063
W1	Speed Sensor (Rear LH)		e1	Power Steering ECU	
X1	Side Airbag Squib (LH)	Power Steering Torque Sensor			
Y1	Side Airbag Squib (RH)	90980-12452	e2	Power Steering ECU	82824-42170
Z1	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12224		Rotation Angle Sensor	
Z2	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219	e3	Power Steering ECU	82824-42240
a1	Occupant Classification ECU	90980-12357		Power Steering Motor	