 


Alfa Romeo 147 fuse box diagram

Control box on the dashboard

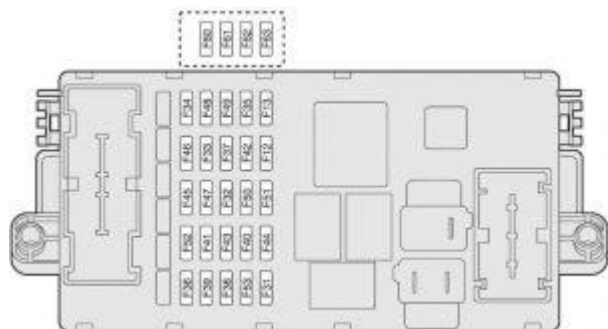

Alfa Romeo 147 – fuse box diagram –


dashboard

Nº	A	Description
12	10	Right dipped-beam headlight
13	10	Left dipped-beam headlight Headlight aiming device
31	7.5	Climate control system Heater unit relay coils
32	15	Selespeed transmission Key-operated +30
33	20	Rear left power window
34	20	Rear right power window
35	7.5	Reversing light Cruise control Climate control system control lighting

36	10	Trailer control unit
37	10	Braking light Instrument cluster
38	20	Central door locking
39	15	Climate control system Radio Navigator Services + 30 Volumetric sensors EOBD system diagnosis socket Cell phone provision Driver's door control unit Boot control unit
40	30	Rearscreen heating
41	7.5	Heated wing mirrors – heated nozzles
42	7.5	VDC system sensor Steering angle sensor ABS control unit
43	30	Windscreen – rearscreen washer (two-way pump)
44	20	Cigar lighter
45	15	Seats with electric heating
46	15	Sunroof

47	20	Driver's door control unit supply
48	20	Passenger's door control unit supply
49	7.5	Secondary services Control lighting
50	7.5	Air – bag control unit
51	7.5	Selespeed transmission
52	15	Rearscreen wiper
53	10	Hazard lights +30 direction indicators Instrument cluster
60	25	Tailgate electric unlocking
61	15	Bose system
62	15	Bose system
63	20	Sunroof

 Control box next to battery

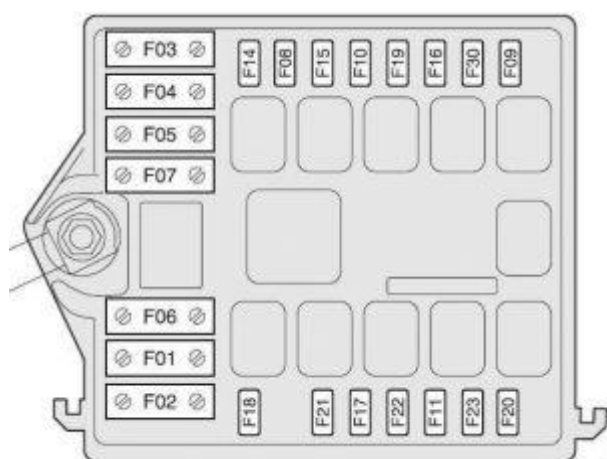


Alfa Romeo 147 – fuse box diagram –

control box next battery

Nº	A	Description
1	50	Glow plug warming (diesel versions)
2	50	Dashboard control unit
3	30	Selespeed transmission pump
4	50	ABS control unit
5	40	Climate control fan
6	30	Radiator fan (first speed – petrol versions) Radiator fan (first speed – diesel versions)
7	50 60*	Radiator fan (second speed – petrol versions) *Radiator fan (second speed – diesel versions)
8	30	Additional heater
9	20	Headlight washer

10	15	Horn
11	15	Secondary services (electronic injection)
14	10	Right main-beam headlight
15	10	Left main-beam headlight
16	7.5	Electronic injection system
17	7.5	Primary services (electronic injection)
18	7.5	Electronic injection control unit +30
19	7.5	Climate control compressor
20	20	Heated fuel oil filter (diesel versions)
21	15	Fuel pump Ignition coils
22	15 20*	Injectors (petrol versions) *Injectors (diesel versions)
23		
30	10	Foglights

 Control box on battery positive pole

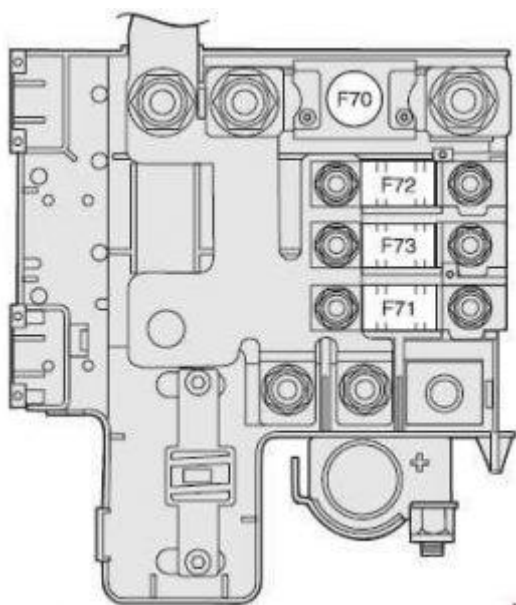

Alfa Romeo 147 – fuse box diagram – control

box on battery positive pole

Nº	A	Description
70	125 150*	Engine compartment control box (petrol versions) *Engine compartment control box (diesel versions)
71	70	Dashboard control unit
72	30	Ignition switch
73	30	Additional heater