



Suzuki Swift 2004 – 2010 fuse box diagram

Fuses in the Engine Compartment (Petrol)

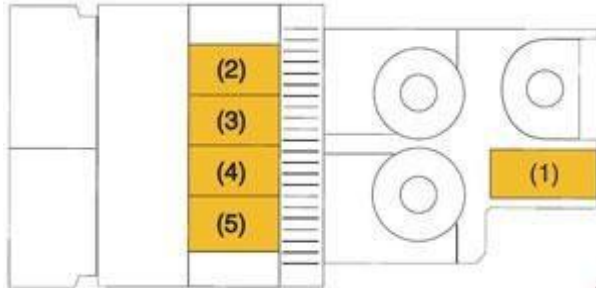

. Suzuki Swift – fuse box diagram – engine compartment (patrol)

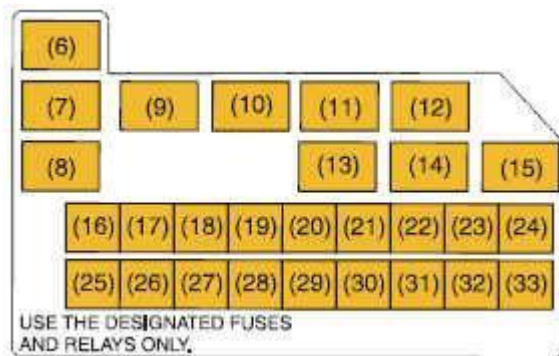


. Suzuki Swift – fuse box diagram – engine compartment (patrol)

No.	A	Function/component
1	80	All electric load
2	50	Power window, Ignition, Wiper, Starter
3	50	Tail light, Rear defogger, Door lock, Hazard/Horn, Dome
4	80	Heater, Air compressor, Power steering
5	80	Radiator fan, Front fog light, Head light


16	30	Heater
17	15	FI
18	10	Air compressor
19	–	Not used
20	15	Brake light switch
21	30	ABS control module
22	30	Starting motor
23		Not used
24	50	Power steering control module
25	30	Ignition switch
26	30	Radiator fan
27	–	Not used
28	30	ABS control module
29	–	Not used
30	–	Not used

31	15	Front fog light
32	15	Headlight (Left)
33	15	Headlight (Right)
Relay		
6	Radiator fan relay #1	
7	Radiator fan relay #2	
8	Radiator fan relay #3	
9	Starting motor relay	
10	Main relay	
11	Not used	
12	Front fog light relay	
13	Fuel pump relay	
14	Air compressor relay	
15	Not used	

Fuses in the Engine Compartment (Diesel)

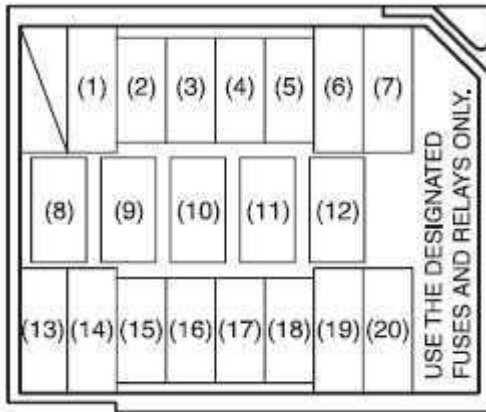


Suzuki Swift – fuse box diagram – engine

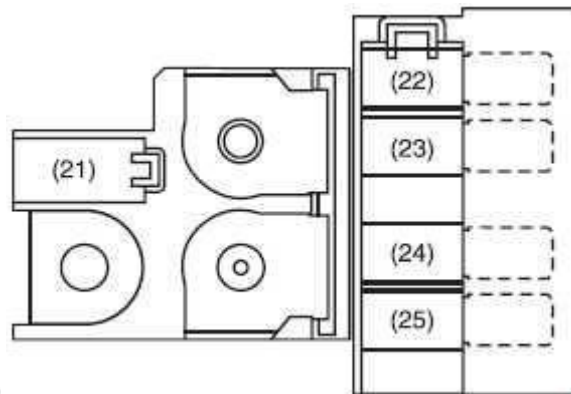

Suzuki Swift – fuse

compartment (diesel)
box diagram – engine compartment (diesel)

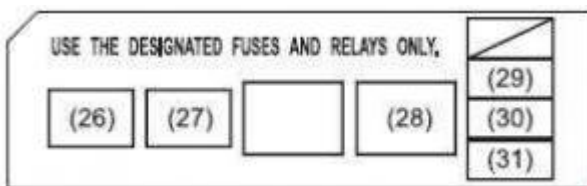

Suzuki Swift – fuse box diagram – engine


compartment (diesel)

No.	A	Function/component
1	30	A Starting motor
2	10	Air compressor
3	15	Fuel pump
4	30	FI

5	30	Heater
6	30	Radiator fan
7	50	Power steering control module
13	30	ABS control module
14	30	ABS control module
15	15	Brake light switch
16	15	Headlight (Right)
17	15	Headlight (Left)
18	15	Front fog light
19	30	Ignition switch
20	50	Power window, Ignition, Wiper, Starter
21	100	Main
22	100	EPS, A/C, Fuel pump, IG1
23	100	Lamps, ABS, ACC, IG2

24	50	Junction box
25	80	Glow controller
29	20	F.I.
30	20	ECU (if equipped)
31	10	ECU, EGR
Relay		
8	Radiator fan relay #1	
9	Radiator fan relay #2	
10	Radiator fan relay #3	
11	Air compressor relay	
12	Starting motor relay	
26	Fog Lamp relay	
27	Fuel pump relay	
28	F.I. main relay	

Fuses under the Dash Board

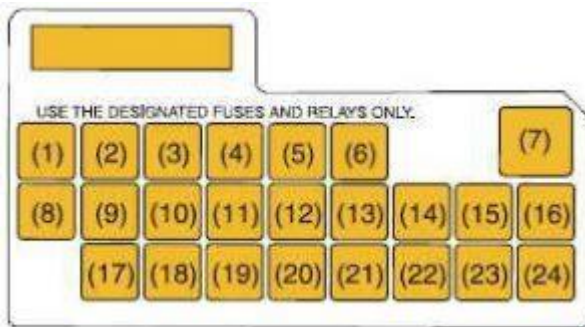

Suzuki Swift – fuse box diagram –

dashboard

No.	A	Function/component
1	–	Not used
2	15	Ignition coil
3	10	Back-up light
4	10	Meter
5	15	Cigar
6	15	Accessory
7	30	Power window
8	15	Wiper / Washer
9	10	Power steering / IG1 Signal
10	15	Air bag

11	10	Anti-lock brake system
12	10	Tail light
13	–	Not used
14	20	Door lock
15	10	Immobilizer (Diesel Engine)
16	10	Starting motor
17	–	Not used
18	10	Heater / IG2 Signal
19	15	RR fog lamp
20	15	Radio / Dome
21	20	Rear defogger
22	15	Horn / Hazard
23	–	Not used
24	–	Not used