

Power Source

Turn Signal and Hazard Warning Light

1 2 3 4

ACC IG1 1 B-Y

16 Ignition SW

40A AM1

100A ALT

15A TURN-HAZ

Battery

10A ECU-IG&GAUGE

10A ALT

T22 Turn Signal Flasher

EHW GND EL ER

8 7 5 6

G-O LG G-B G-Y

25 20 25 2N

4 2

H 5 Hazard Warning Signal SW

R

J22(A), J23(B) Junction Connector

4 4 6 B

W-B LG

IE Instrument Panel Reinforcement LH (LHD) Instrument Panel Reinforcement RH (RHD)

10A ECU-IG&GAUGE

6 2A 20 2S

R-L

1 4

B-Y

IF3

2 4

B-Y

2 20

19 18

2S 2S

3 2

2S 2S

3 2L 2M 2M 2L 2K 2K

G-B G-Y G-B G-Y G-Y G-Y

3 2 3 2 3 2

G-B G-Y G-B G-Y G-Y G-Y

24 25

Turn LH Turn RH

C 8 Combination Meter

22 Y

10 12

A B

W-B W-B

J 1 Junction Connector

4 12 1

W-B W-B W-B

T12 Turn Signal Lamp (Front LH)

2 1

W-B

T14 Turn Signal Lamp (Front Side LH)

2 1

W-B

T15 Turn Signal Lamp (Front Side RH)

2 1

W-B

T13 Turn Signal Lamp (Front RH)

2 1

W-B

R 4 Rear Combination Lamp (LH)

12 BA1

1 3

G-Y W-B W-B

R 5 Rear Combination Lamp (RH)

7 BA1

1 3

G-Y W-B W-B

8 BA1

11

J15 Junction Connector

IG

Left Side of the Fender Apron

EB

Right Side of the Fender Apron

EA

Cowl Side Panel LH

IG