


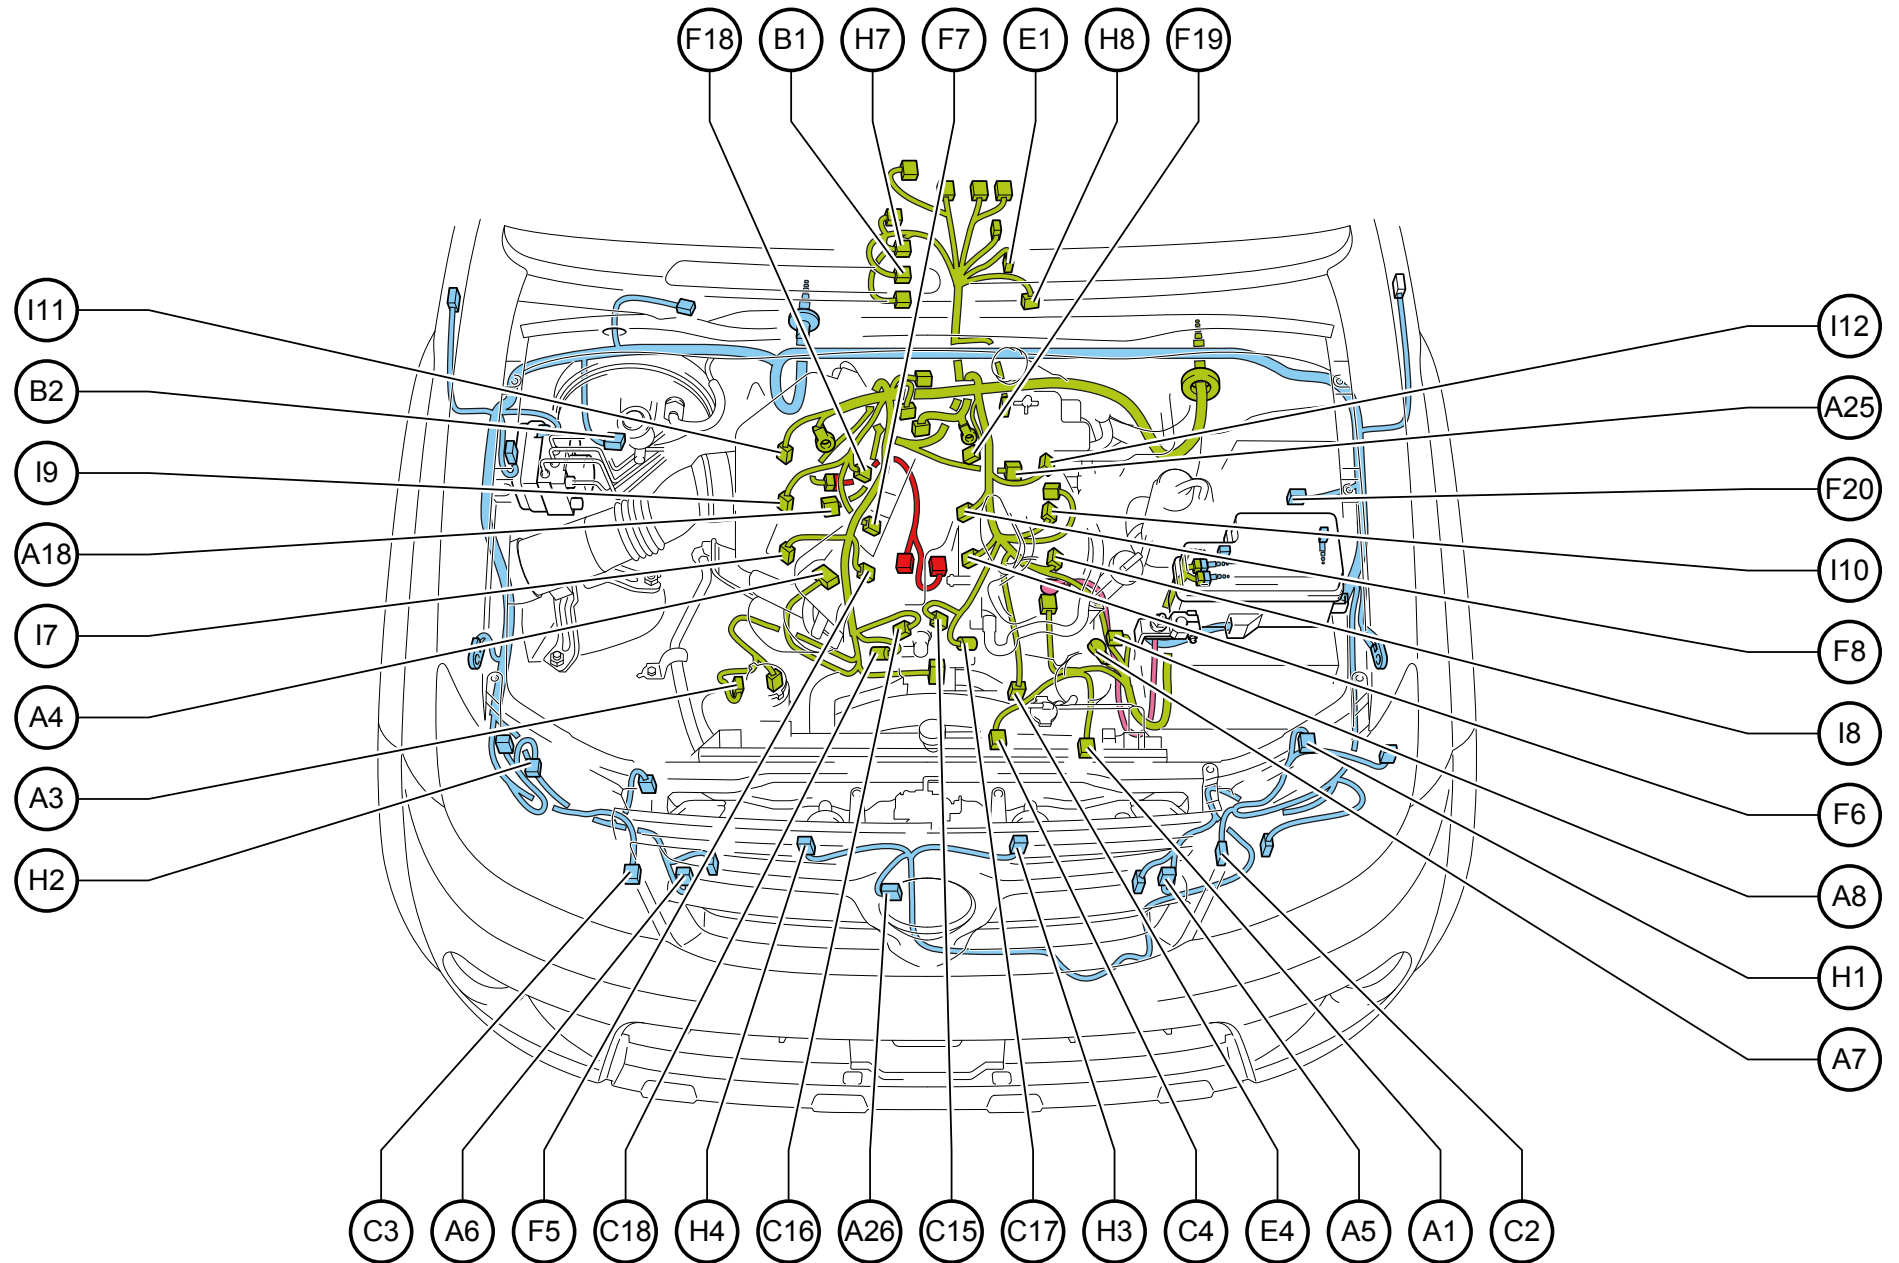

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator (1GR-FE)
- A 8 Alternator
- A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1) (1GR-FE)
- A 25 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 26 Ambient Temp. Sensor

- B 1 Back-Up Lamp SW (Except 2TR-FE)
- B 2 Brake Fluid Level Warning SW

- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor (1GR-FE)
- C 15 Camshaft Timing Oil Control Valve (LH)
- C 16 Camshaft Timing Oil Control Valve (RH)
- C 17 Crank Shaft Position Sensor No.2 (LH)
- C 18 Crank Shaft Position Sensor No.2 (RH)
























- E 1 ECT Solenoid (1GR-FE)
- E 4 Engine Oil Pressure Sensor

- F 5 Fuel Injector (No.1) (1KD-FTV, 2KD-FTV, 1GR-FE)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3) (1KD-FTV, 2KD-FTV, 1GR-FE)
- F 8 Fuel Injector (No.4)
- F 18 Fuel Injector (No.5)
- F 19 Fuel Injector (No.6)
- F 20 Fuel Pump Resistor

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 8 Heated Oxygen Sensor (Bank 2 Sensor 2) (A/T)
- H 8 Heated Oxygen Sensor (Bank 2 Sensor 2) (M/T)

- I 7 Ignition Coil (No.1)
- I 8 Ignition Coil (No.2)
- I 9 Ignition Coil (No.3)
- I 10 Ignition Coil (No.4)
- I 11 Ignition Coil (No.5)
- I 12 Ignition Coil (No.6)


Position of Parts in Engine Compartment <RHD 1GR-FE>

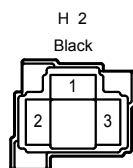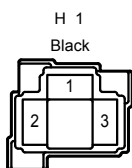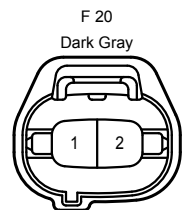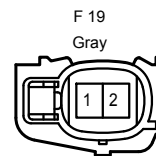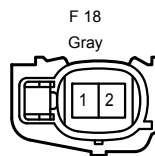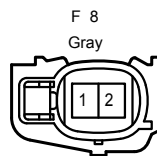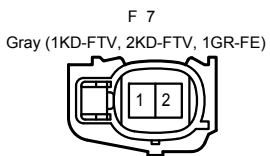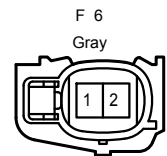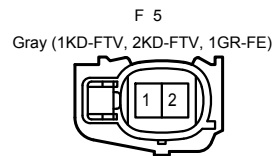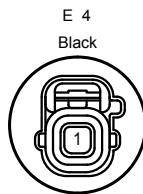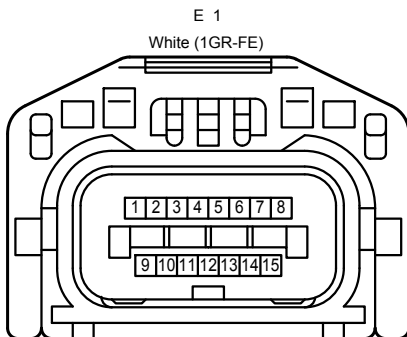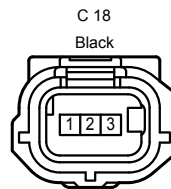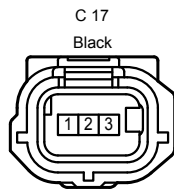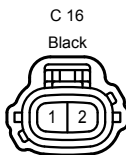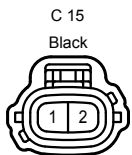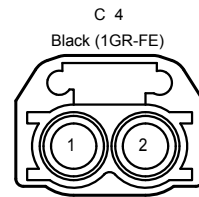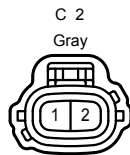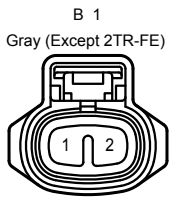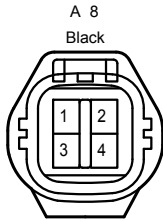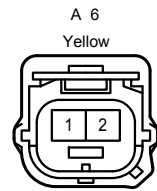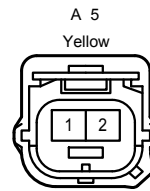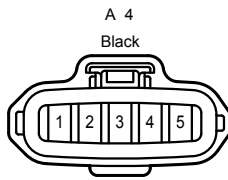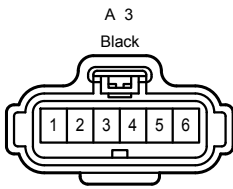


H 8
Dark Gray (M/T)



 
I 7
Black




I 8
Black

 


I 9
Black

 

I 10
Black

 

I 11
Black

 

I 12
Black

