


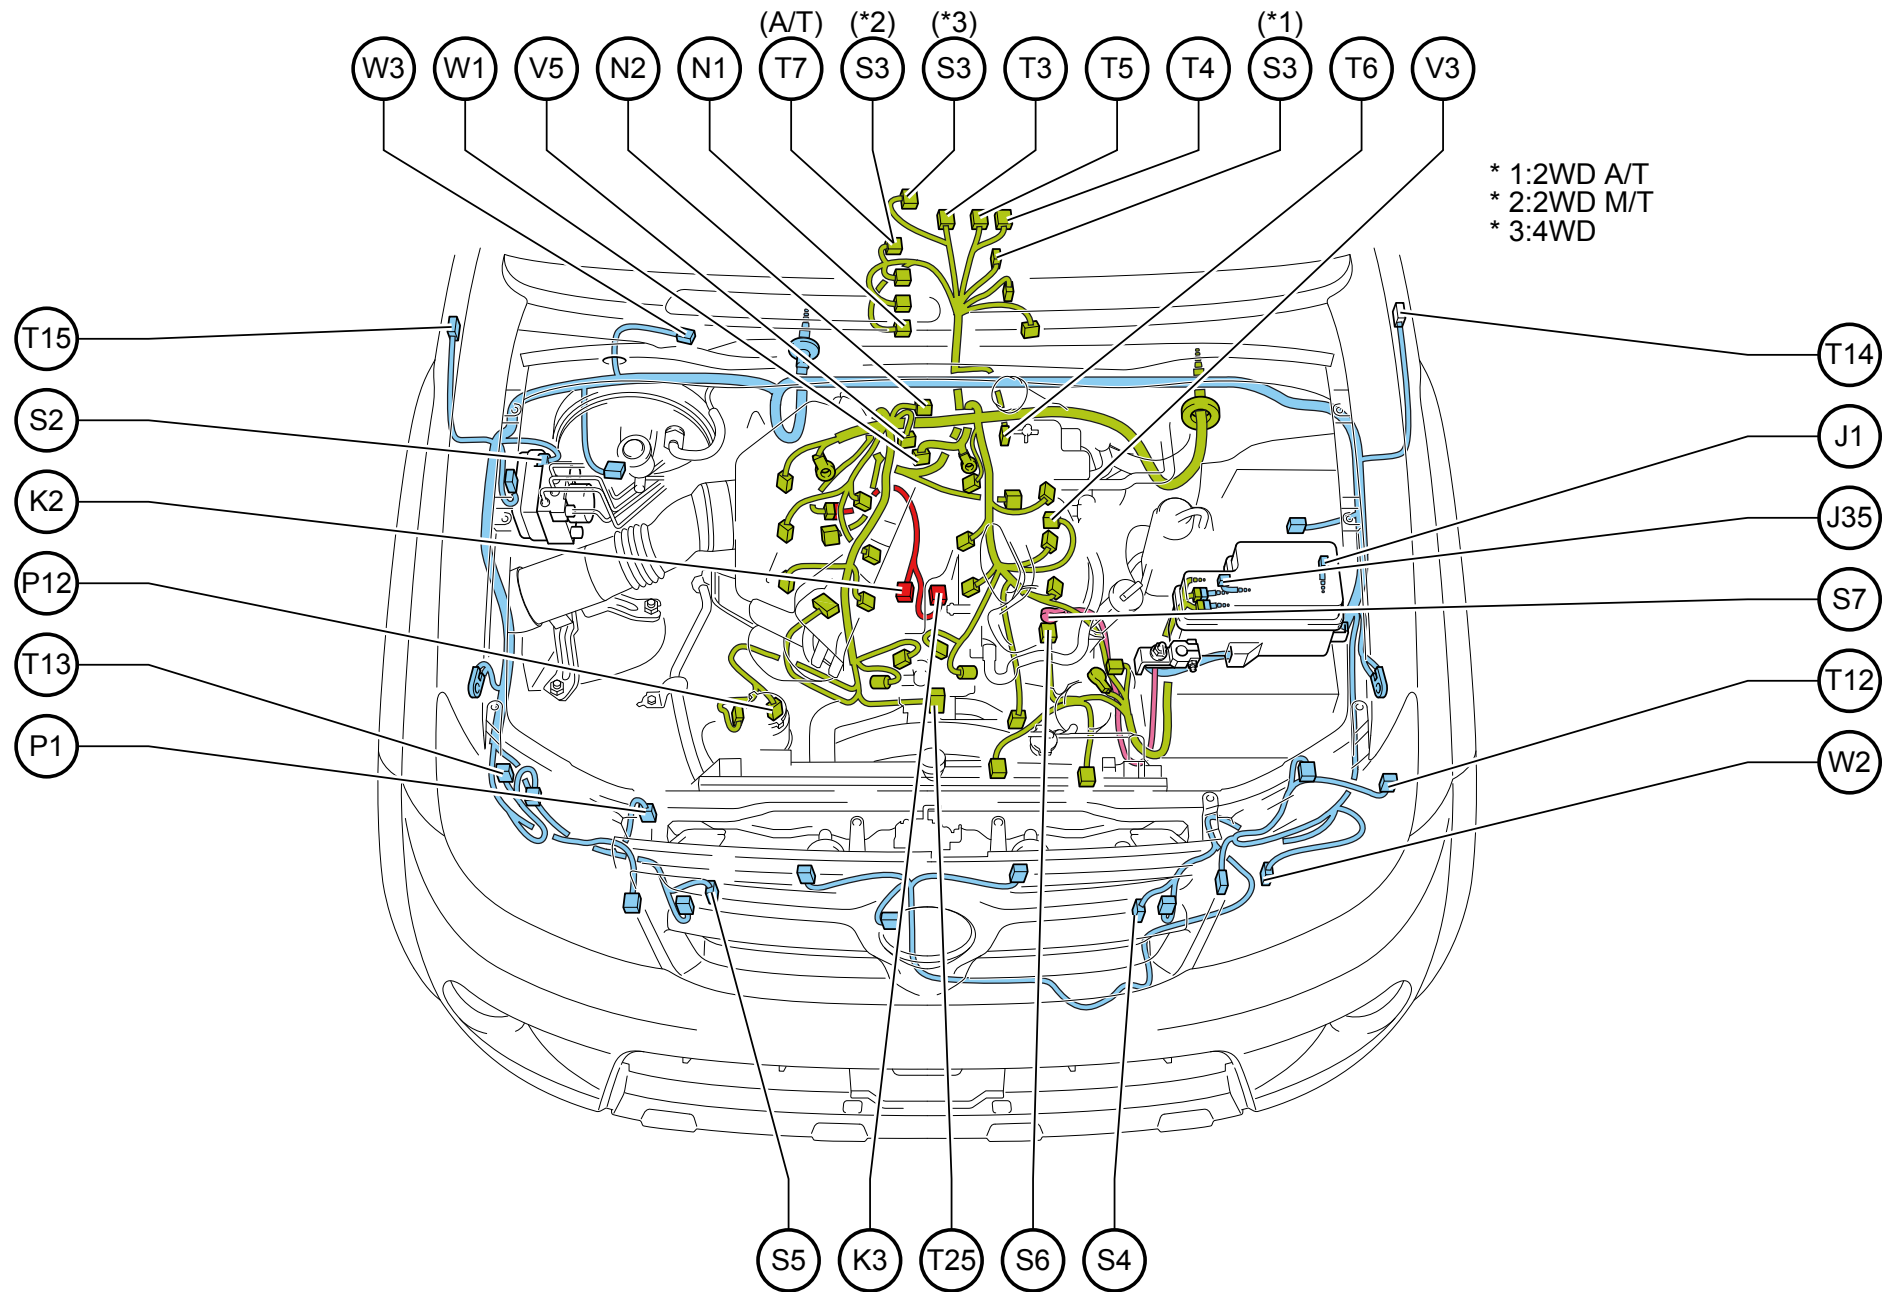

- J 1 Junction Connector
- J 35 Junction Connector

- K 2 Knock Control Sensor (Bank 1)
- K 2 Knock Control Sensor (Bank 1)
- K 3 Knock Control Sensor (Bank 2)

- N 1 Neutral Start SW
- N 2 Noise Filter (Ignition)

- P 1 Pressure SW
- P 12 Power Steering Oil Pressure SW












 








- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter (1GR-FE)

- T 3 Transfer Indicator SW (4WD Position) (1GR-FE)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly

- V 3 VSV (EVAP) (1GR-FE)
- V 5 VSV (ACIS)

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment <RHD 1GR-FE>

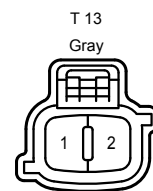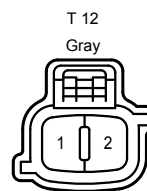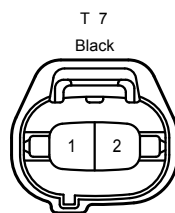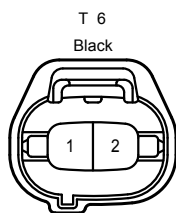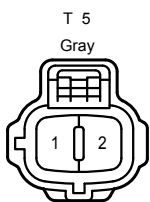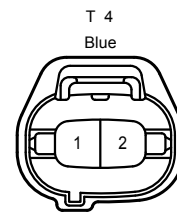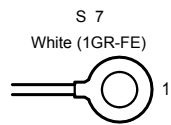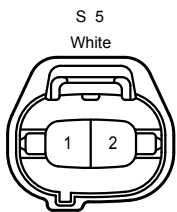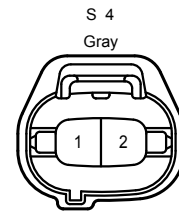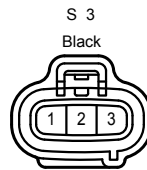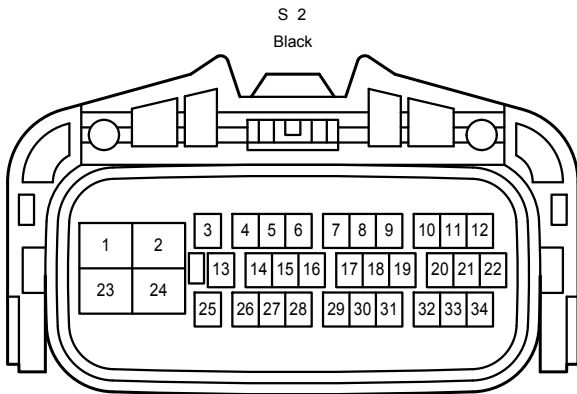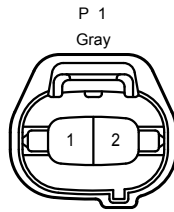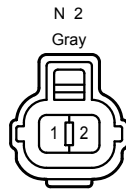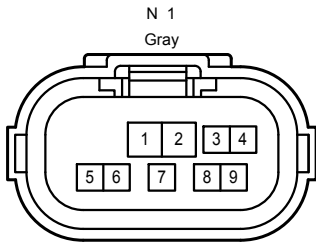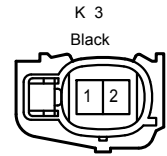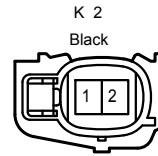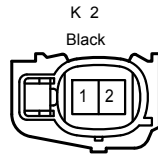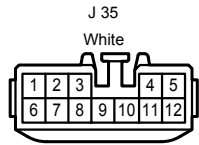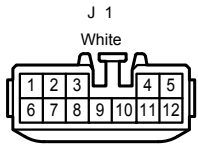

Position of Parts in Engine Compartment <RHD 1GR-FE>

