


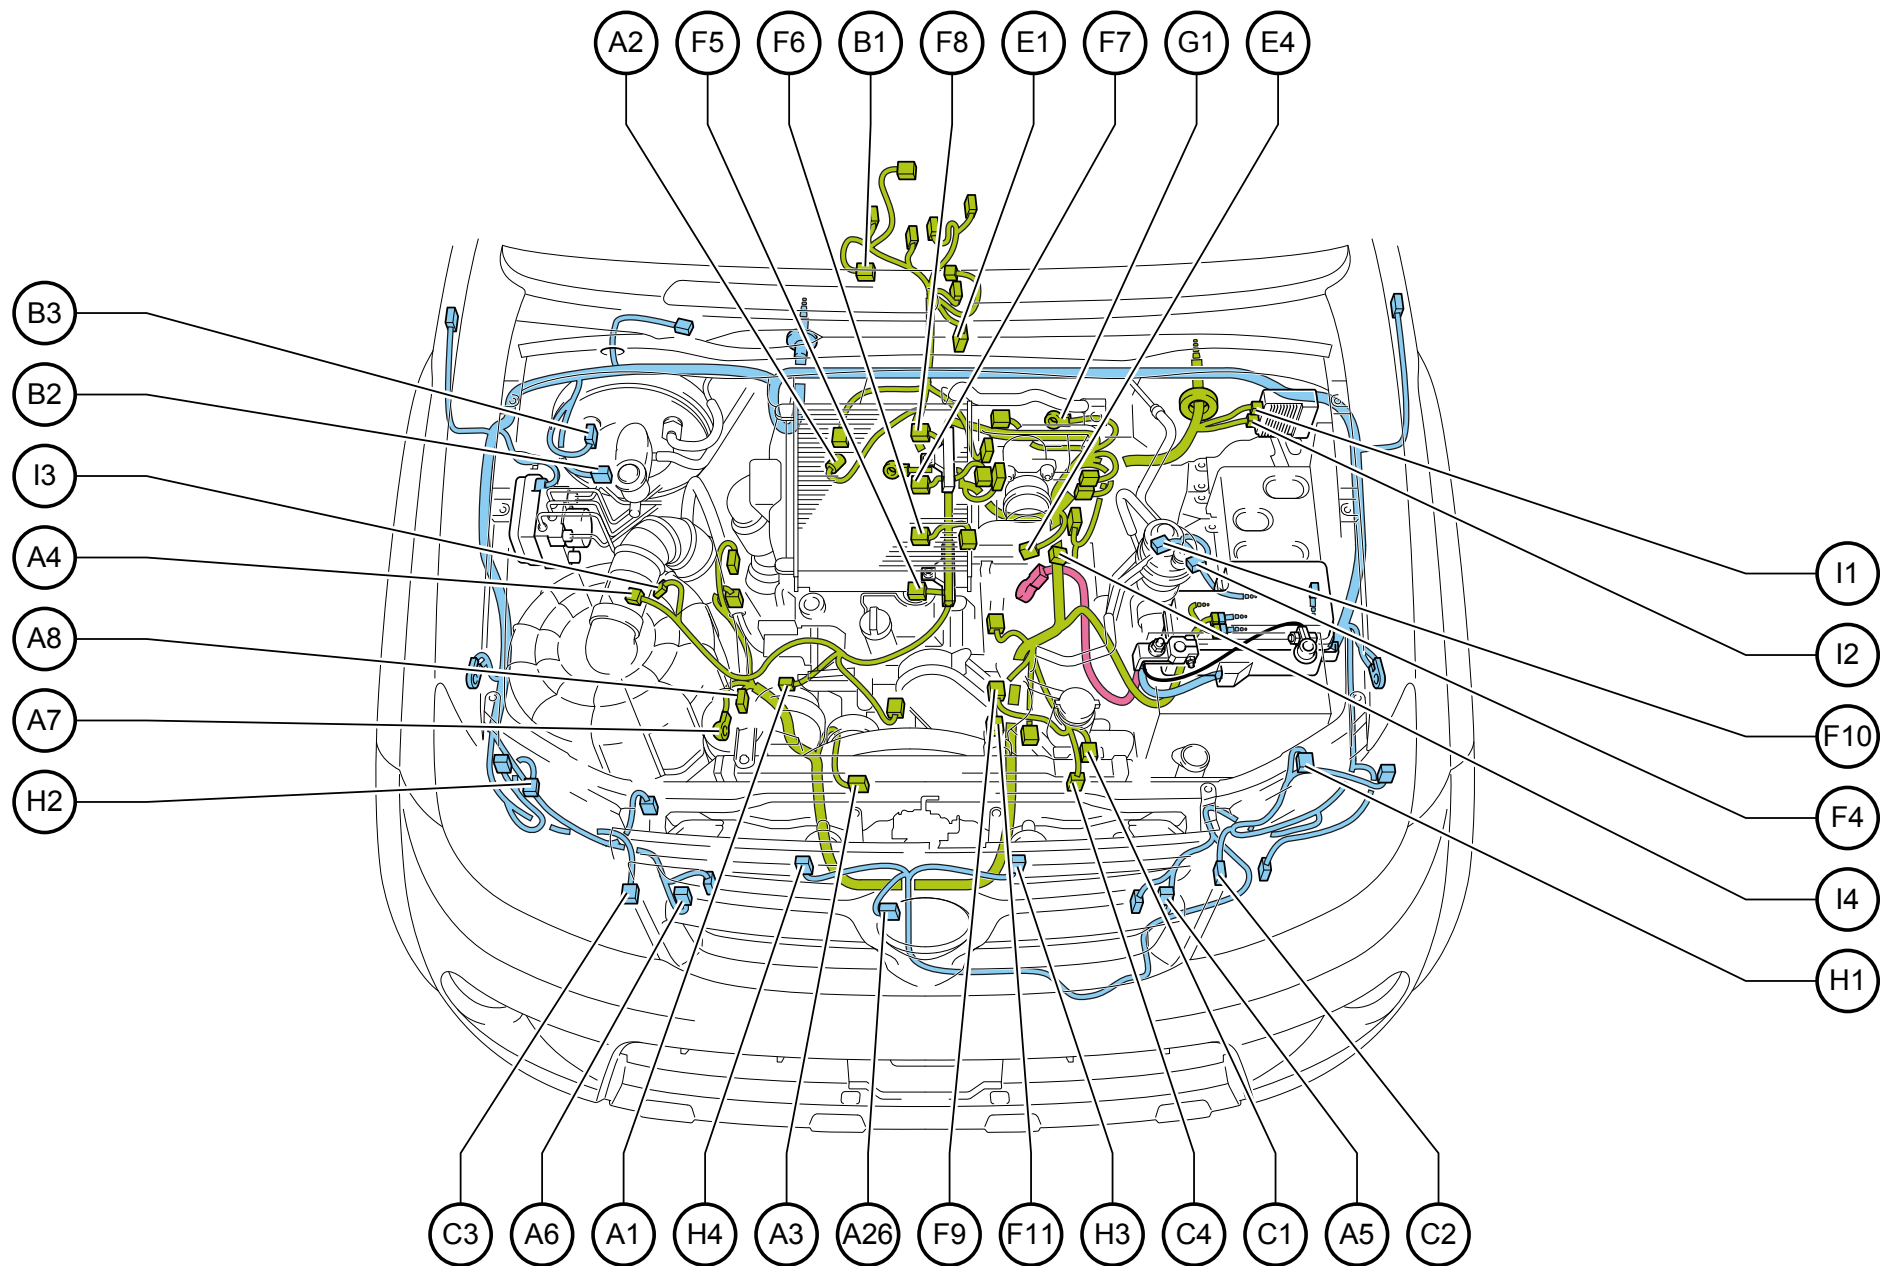

- A 1 A/C Compressor
- A 2 A/T Fluid Temp. Sensor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator (Except 1GR-FE)
- A 8 Alternator
- A 26 Ambient Temp. Sensor

- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 1 Camshaft Position Sensor
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor (Except 1GR-FE)

- E 1 ECT Solenoid (1KD-FTV)
- E 4 Engine Oil Pressure Sensor

- F 4 Fuel Filter Warning SW
- F 5 Fuel Injector (No.1) (1KD-FTV, 2KD-FTV, 1GR-FE)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3) (1KD-FTV, 2KD-FTV, 1GR-FE)
- F 8 Fuel Injector (No.4)
- F 9 Fuel Pressure Sensor
- F 10 Fuel Sedimenter Level Warning SW
- F 11 Fuel Temp. Sensor

- G 1 Glow Plug

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)

- I 1 Injector Driver (EDU)
- I 2 Injector Driver (EDU)
- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 4 Inlet Air Temp. Sensor (Inter Cooler)

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

