




- J 1 Junction Connector
- K 2 Knock Control Sensor (Bank 1)
- K 2 Knock Control Sensor (Bank 1)
- N 2 Noise Filter (Ignition)
- P 1 Pressure SW
- P 12 Power Steering Oil Pressure SW
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter (1TR-FE, 2TR-FE)
- T 3 Transfer Indicator SW (4WD Position) (Except 1GR-FE)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly
- V 4 Variable Resistor
- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

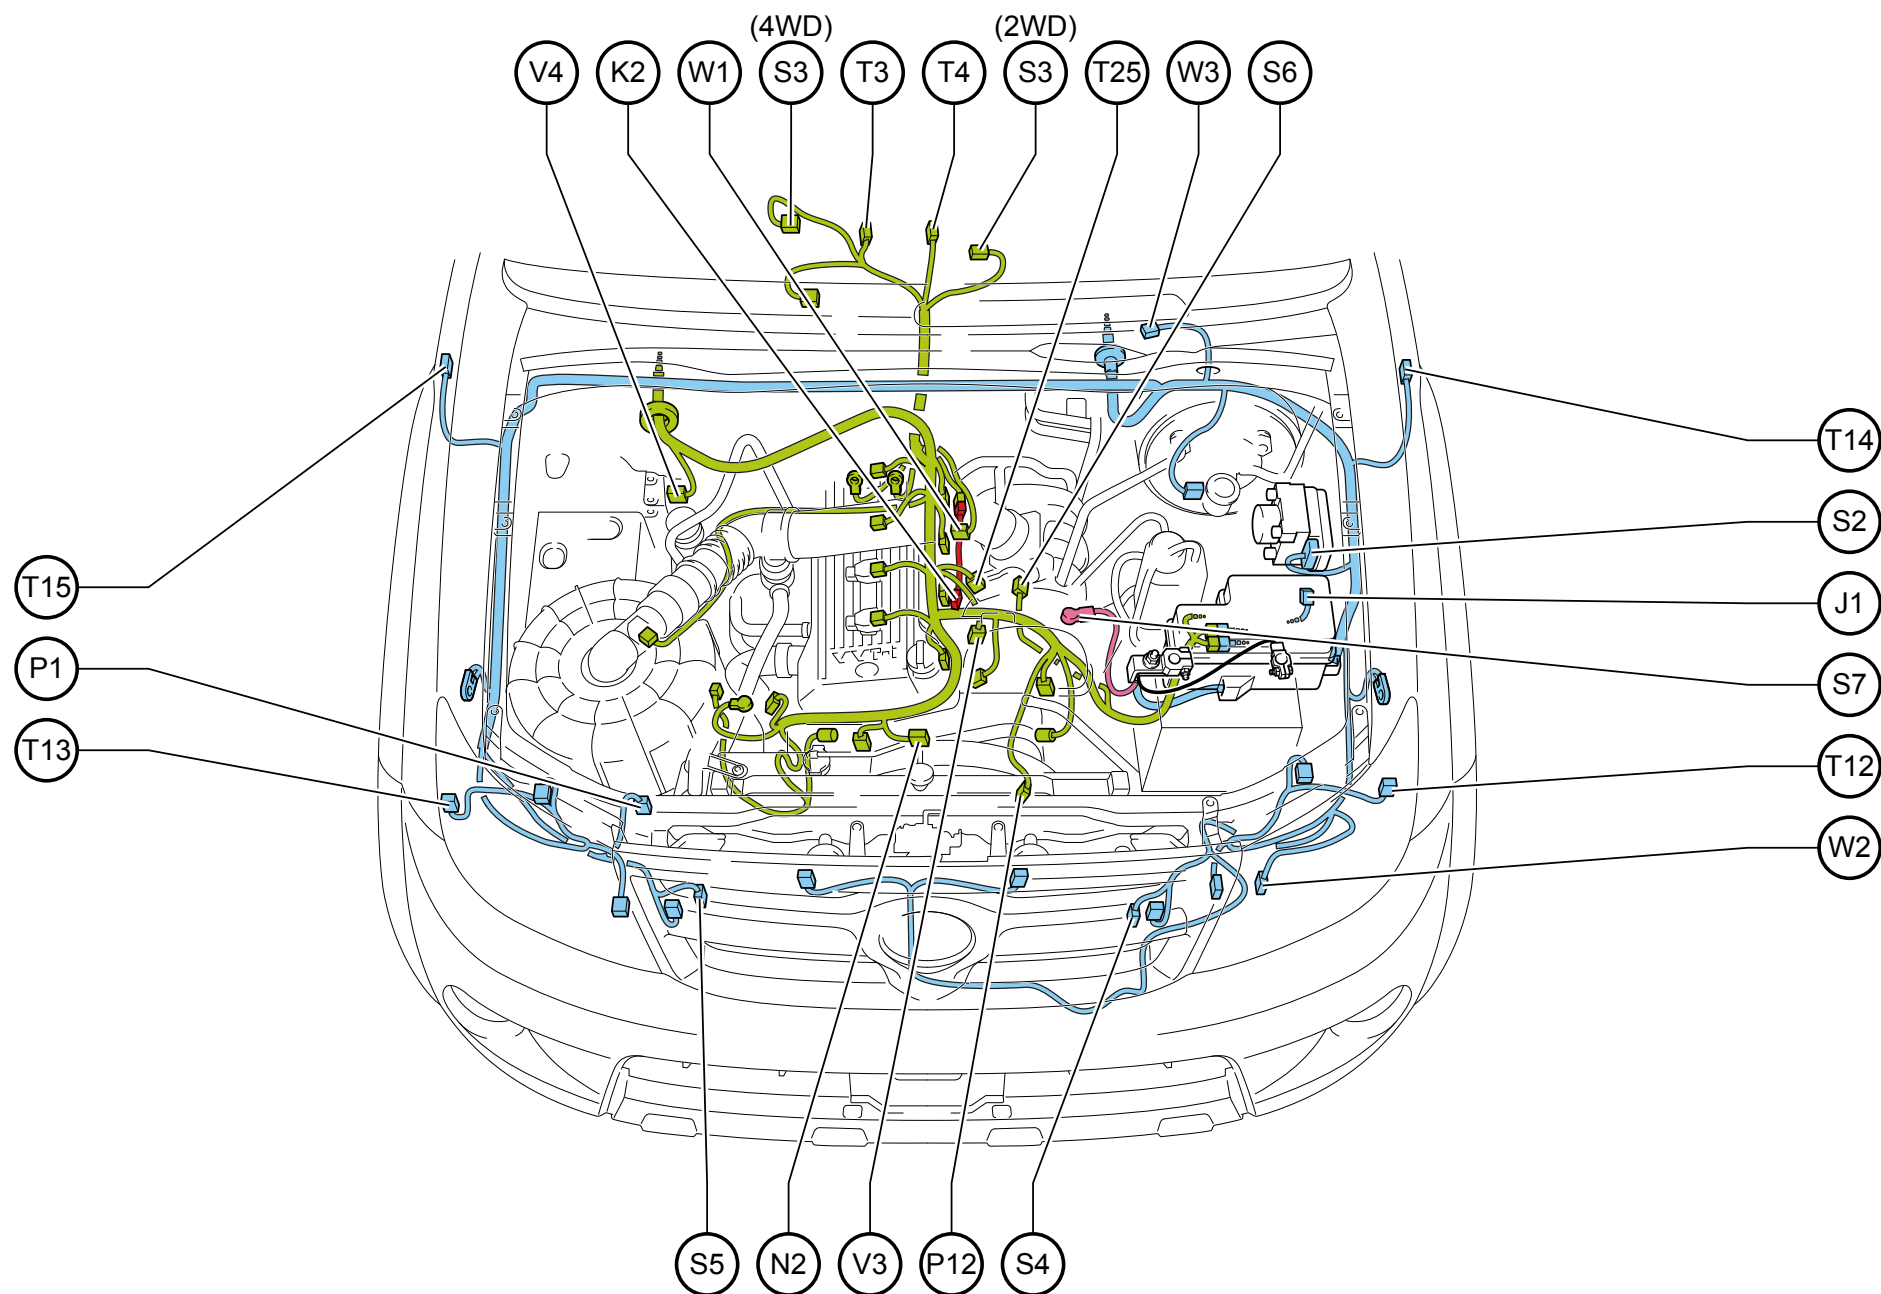