


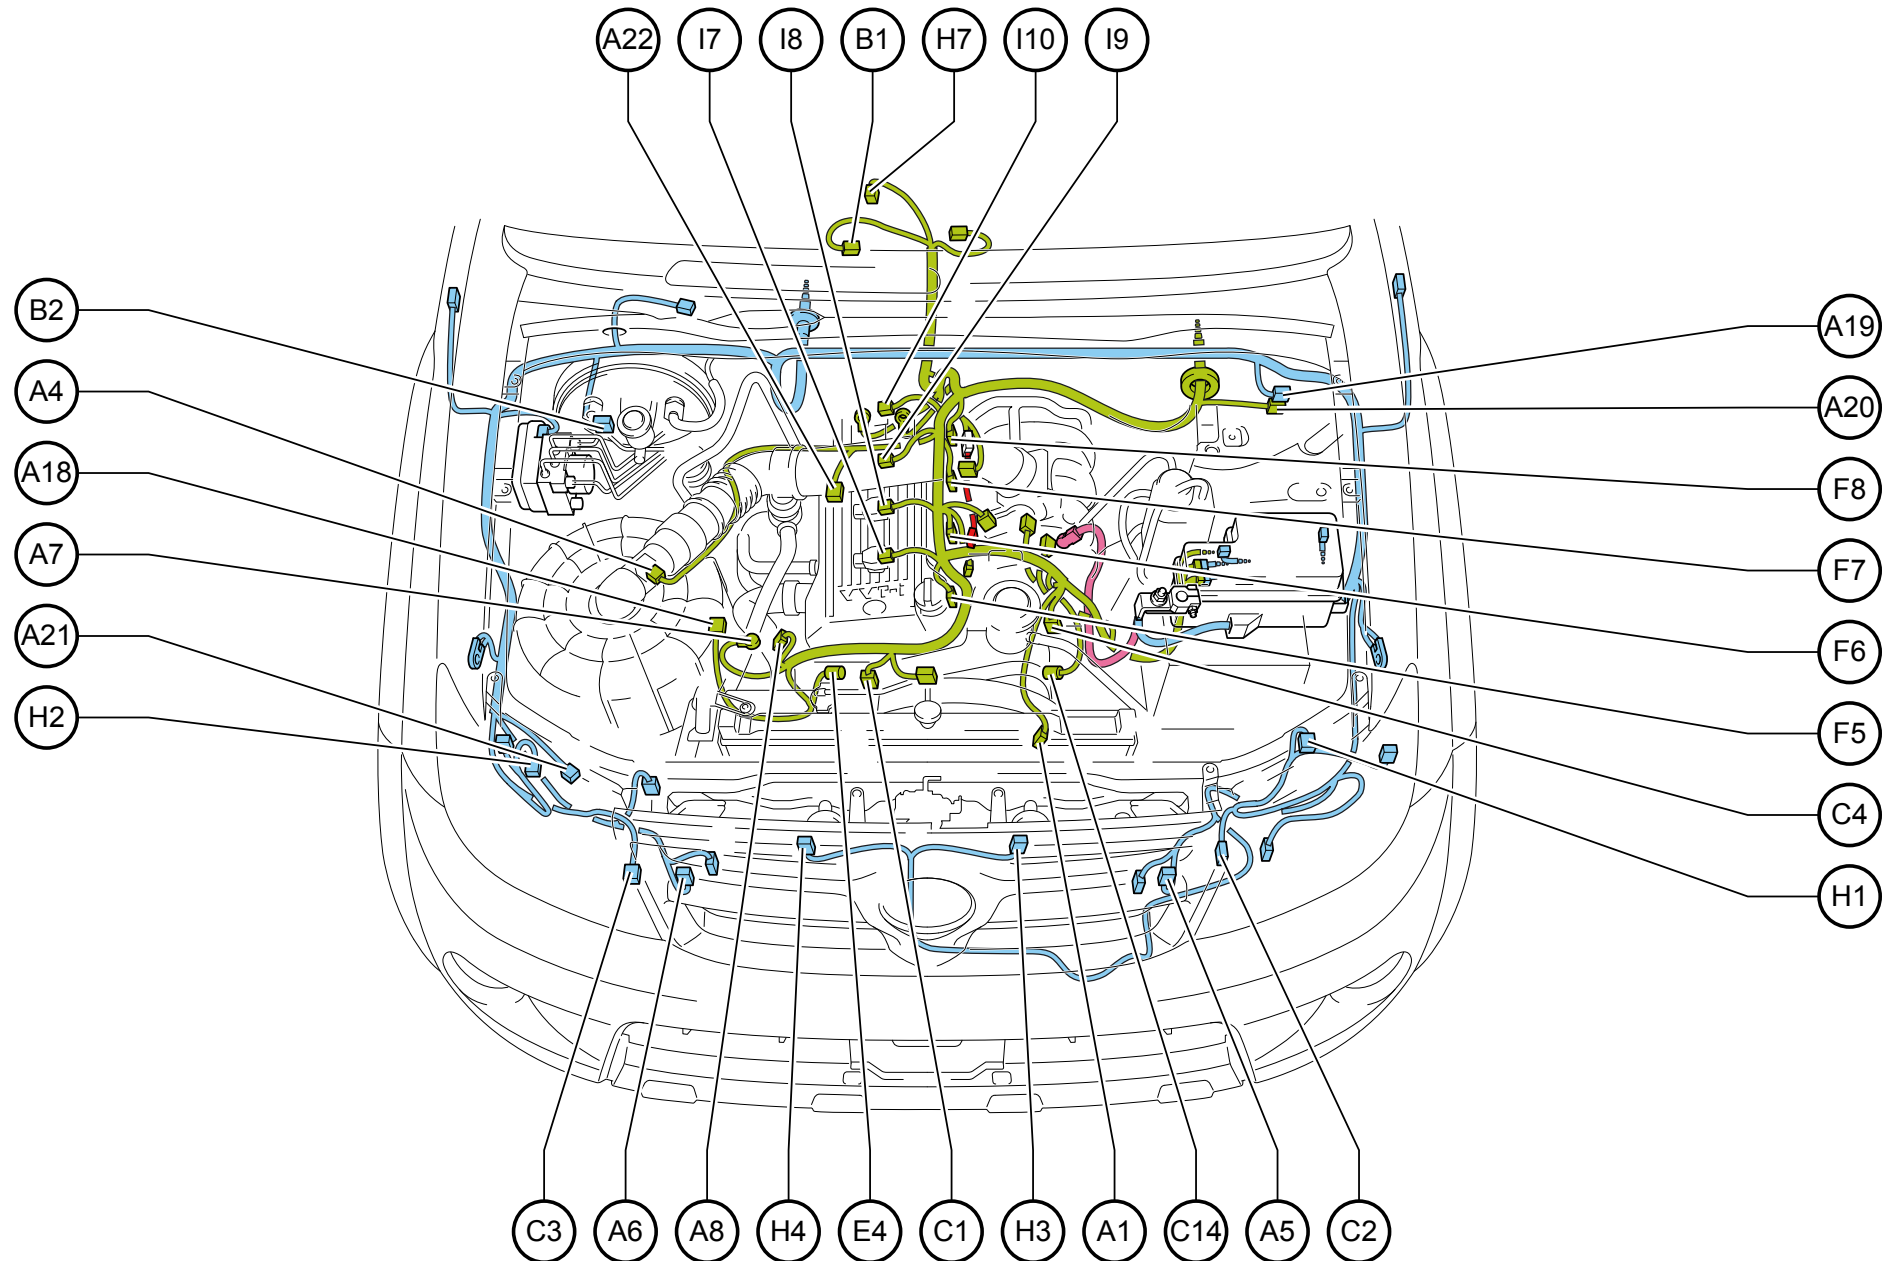

A 1 A/C Compressor
A 4 Air Flow Meter
A 5 Airbag Sensor (Front LH)
A 6 Airbag Sensor (Front RH)
A 7 Alternator (Except 1GR-FE)
A 8 Alternator
A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1) (Except 1GR-FE)
A 19 Air Injection Control Driver
A 20 Air Injection Control Driver
A 21 Air Pump
A 22 Air Switching Valve

B 1 Back-Up Lamp SW (2TR-FE)
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Clearance Lamp (Front LH)
C 3 Clearance Lamp (Front RH)
C 4 Crankshaft Position Sensor (Except 1GR-FE)
C 14 Camshaft Timing Oil Control Valve

E 4 Engine Oil Pressure Sensor

F 5 Fuel Injector (No.1) (1TR-FE, 2TR-FE)
F 6 Fuel Injector (No.2)
F 7 Fuel Injector (No.3) (1TR-FE, 2TR-FE)
F 8 Fuel Injector (No.4)

H 1 Headlamp (LH)
H 2 Headlamp (RH)
H 3 Horn (High)
H 4 Horn (Low)
H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 7 Ignition Coil (No.1)
I 8 Ignition Coil (No.2)
I 9 Ignition Coil (No.3)
I 10 Ignition Coil (No.4)

Position of Parts in Engine Compartment <RHD 2TR-FE>

