


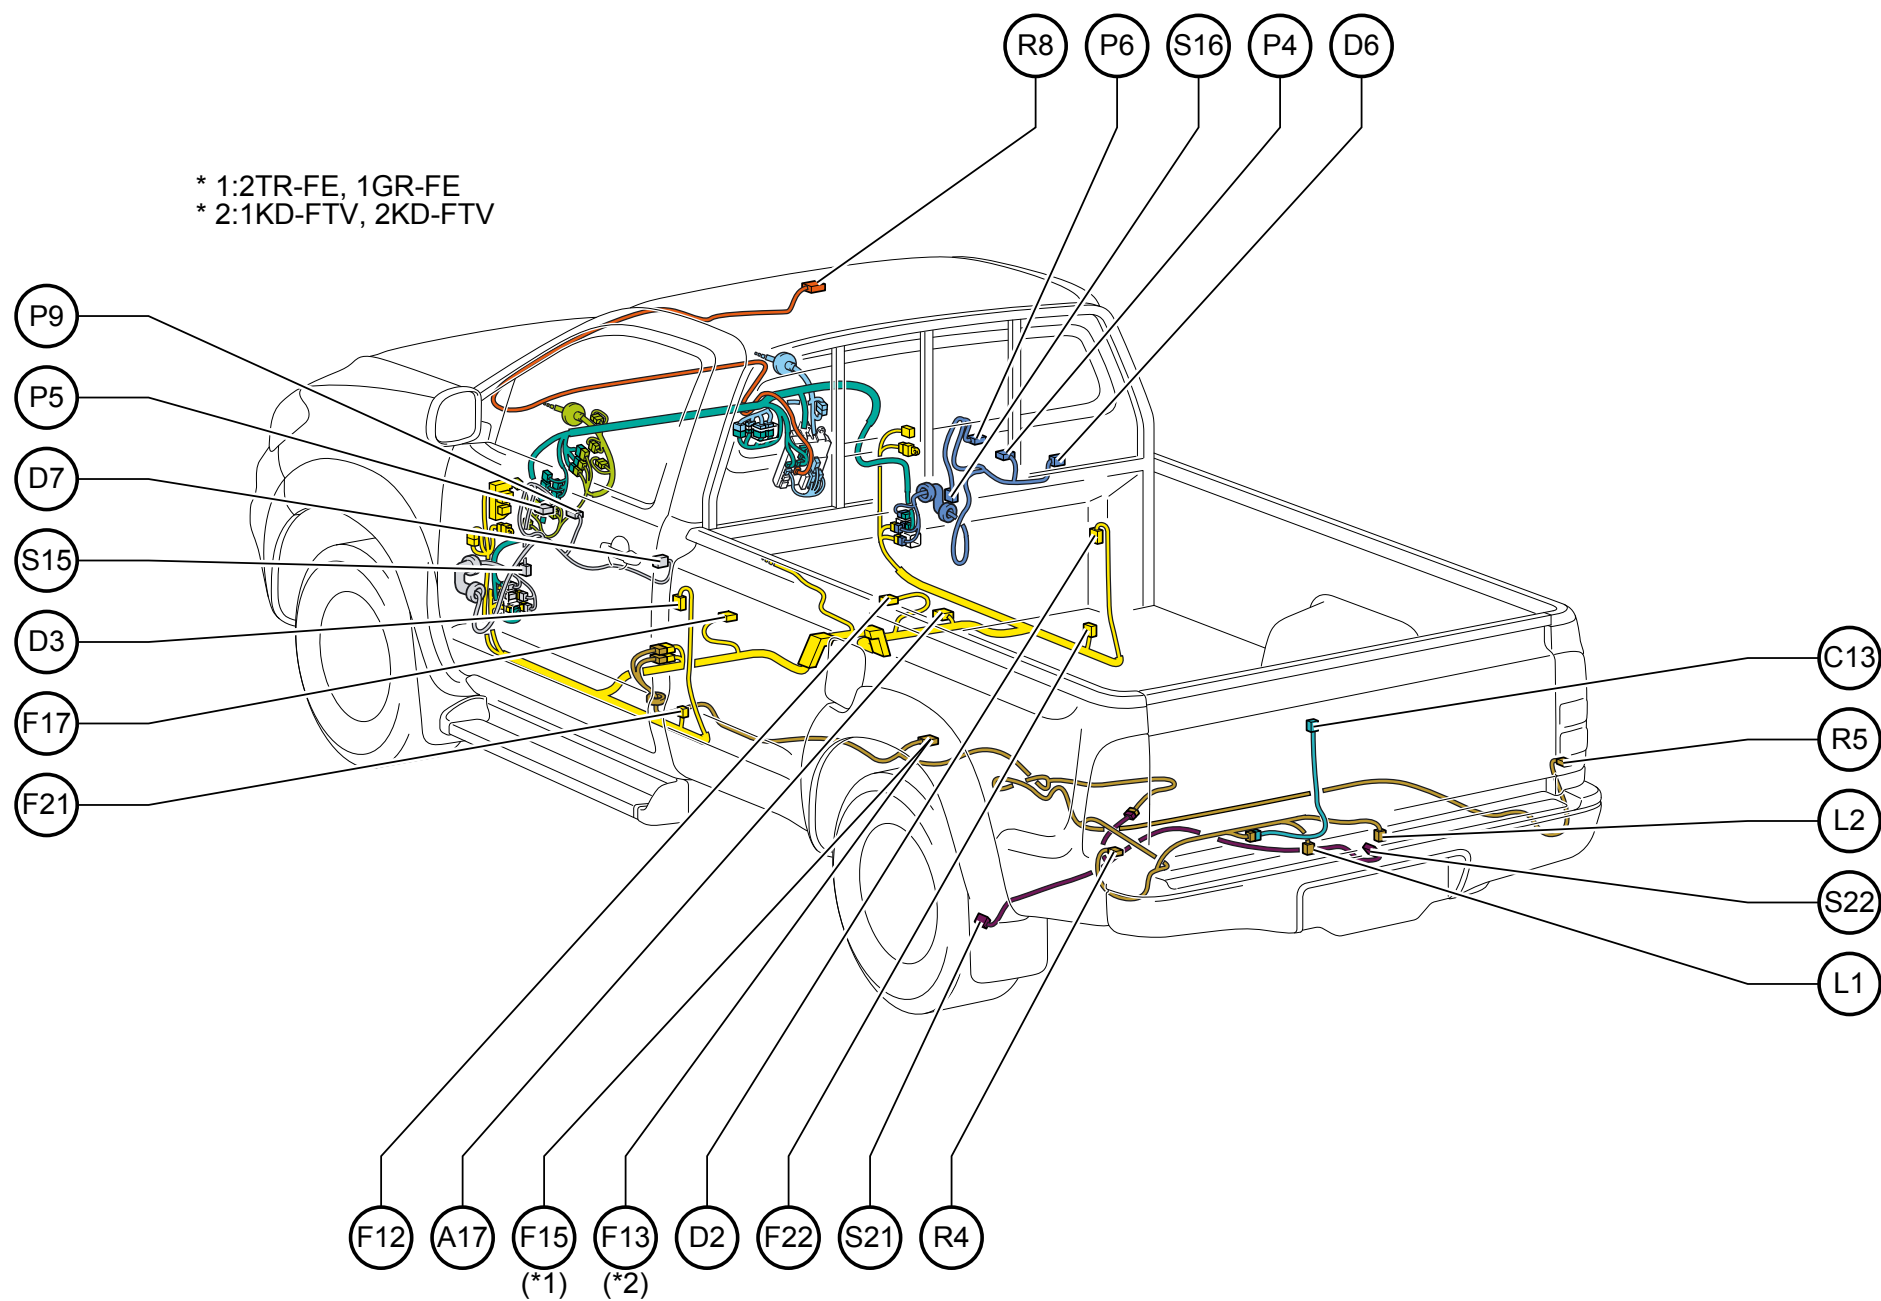

- A 17 ABS Deceleration Sensor
- C 13 Center Stop Lamp
- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH
- P 4 Power Window Master SW (Except Double Cab)
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)
- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 8 Room Lamp
- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)

Position of Parts in Body <RHD Single Cab>

