


Position of Parts in Instrument Panel <LHD>

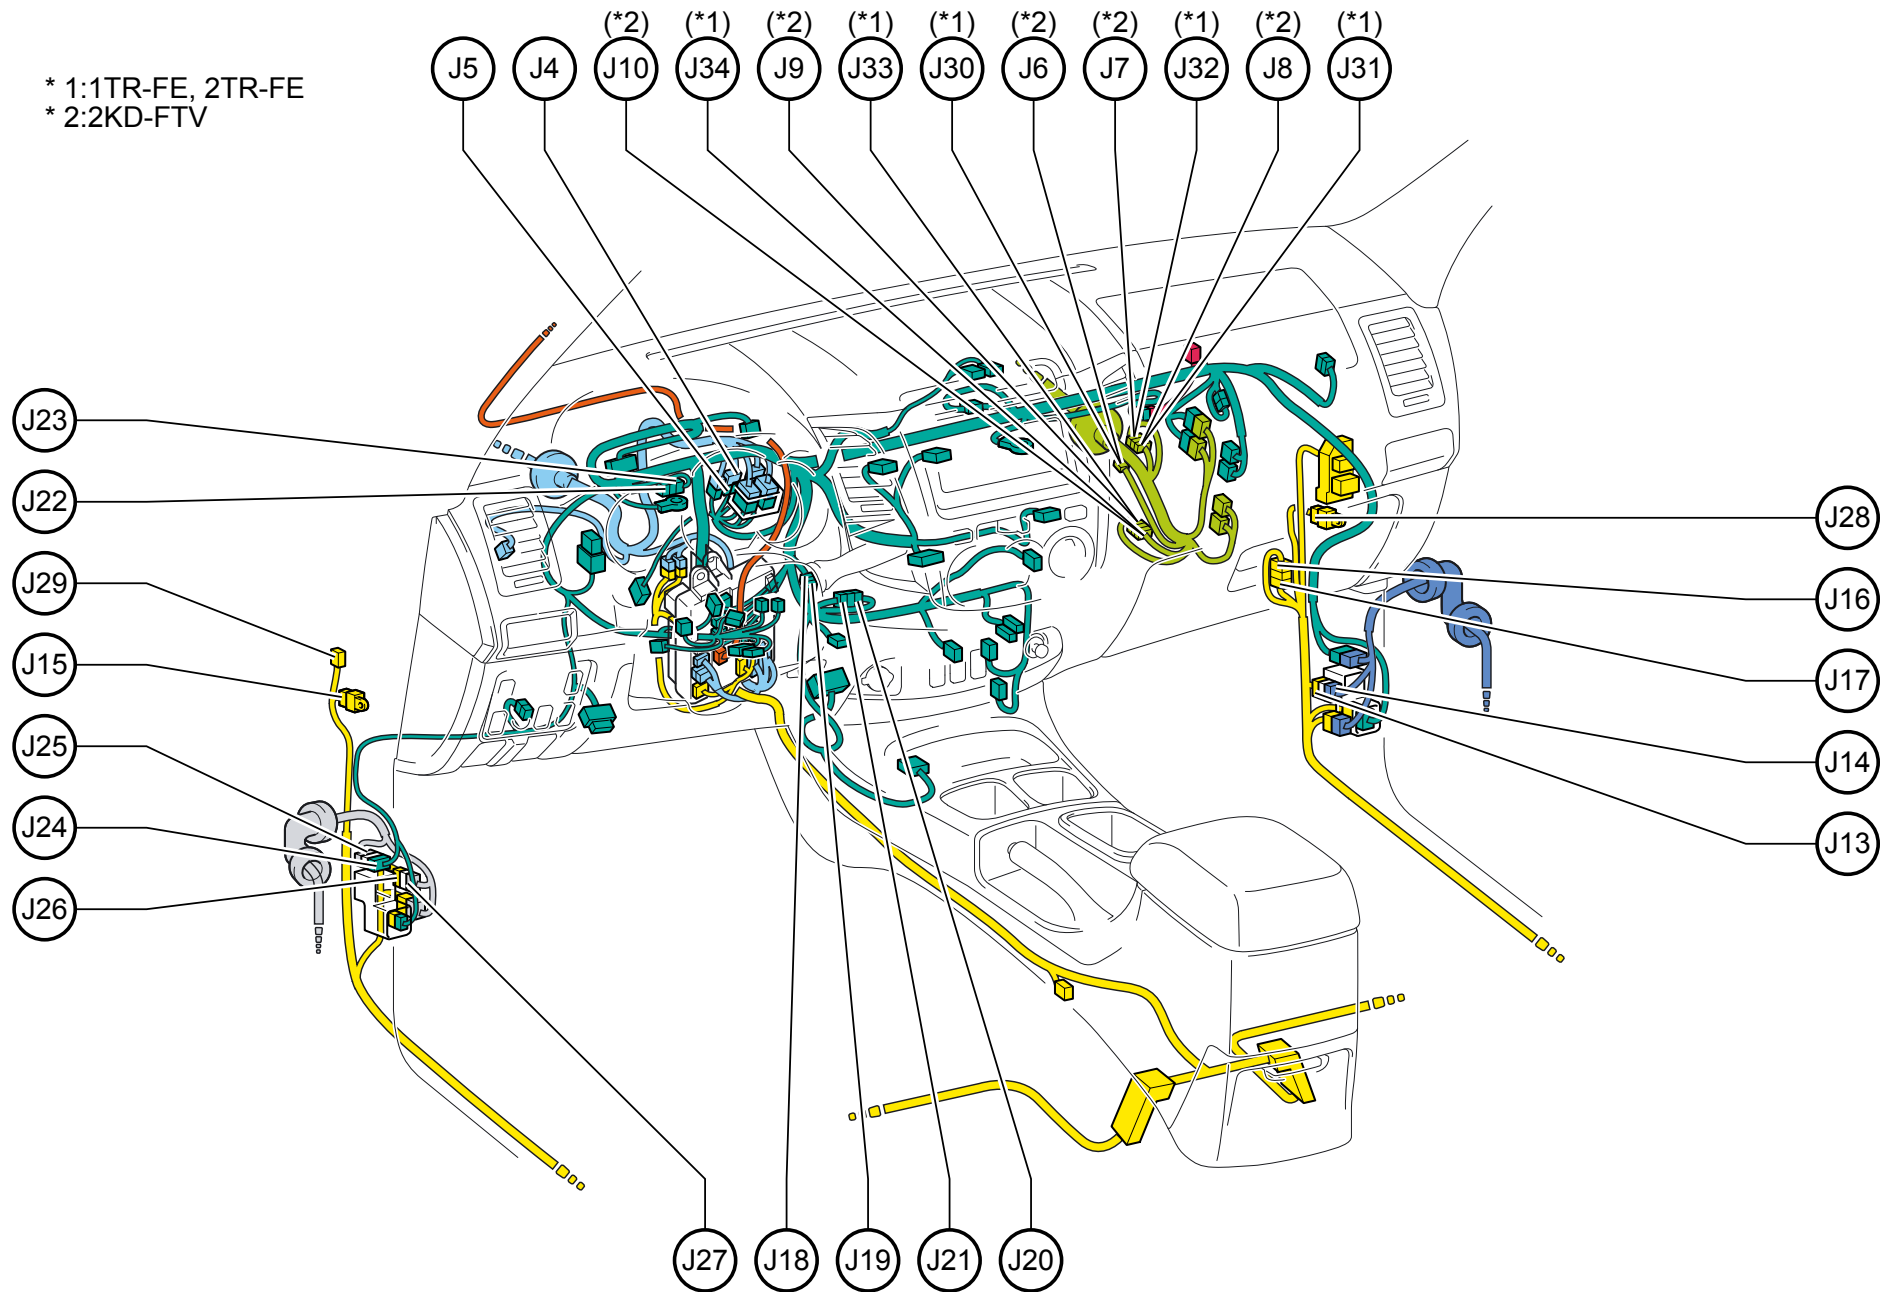

J	4	Junction Connector
J	5	Junction Connector
J	6	Junction Connector
J	7	Junction Connector
J	8	Junction Connector
J	9	Junction Connector
J	10	Junction Connector
J	13	Junction Connector
J	14	Junction Connector
J	15	Junction Connector
J	16	Junction Connector
J	17	Junction Connector
J	18	Junction Connector
J	19	Junction Connector
J	20	Junction Connector
J	21	Junction Connector
J	22	Junction Connector
J	23	Junction Connector
J	24	Junction Connector
J	25	Junction Connector
J	26	Junction Connector
J	27	Junction Connector
J	28	Junction Connector
J	29	Junction Connector
J	30	Junction Connector (1TR-FE, 2TR-FE)
J	31	Junction Connector
J	32	Junction Connector
J	33	Junction Connector
J	34	Junction Connector

Position of Parts in Instrument Panel <LHD>

