

 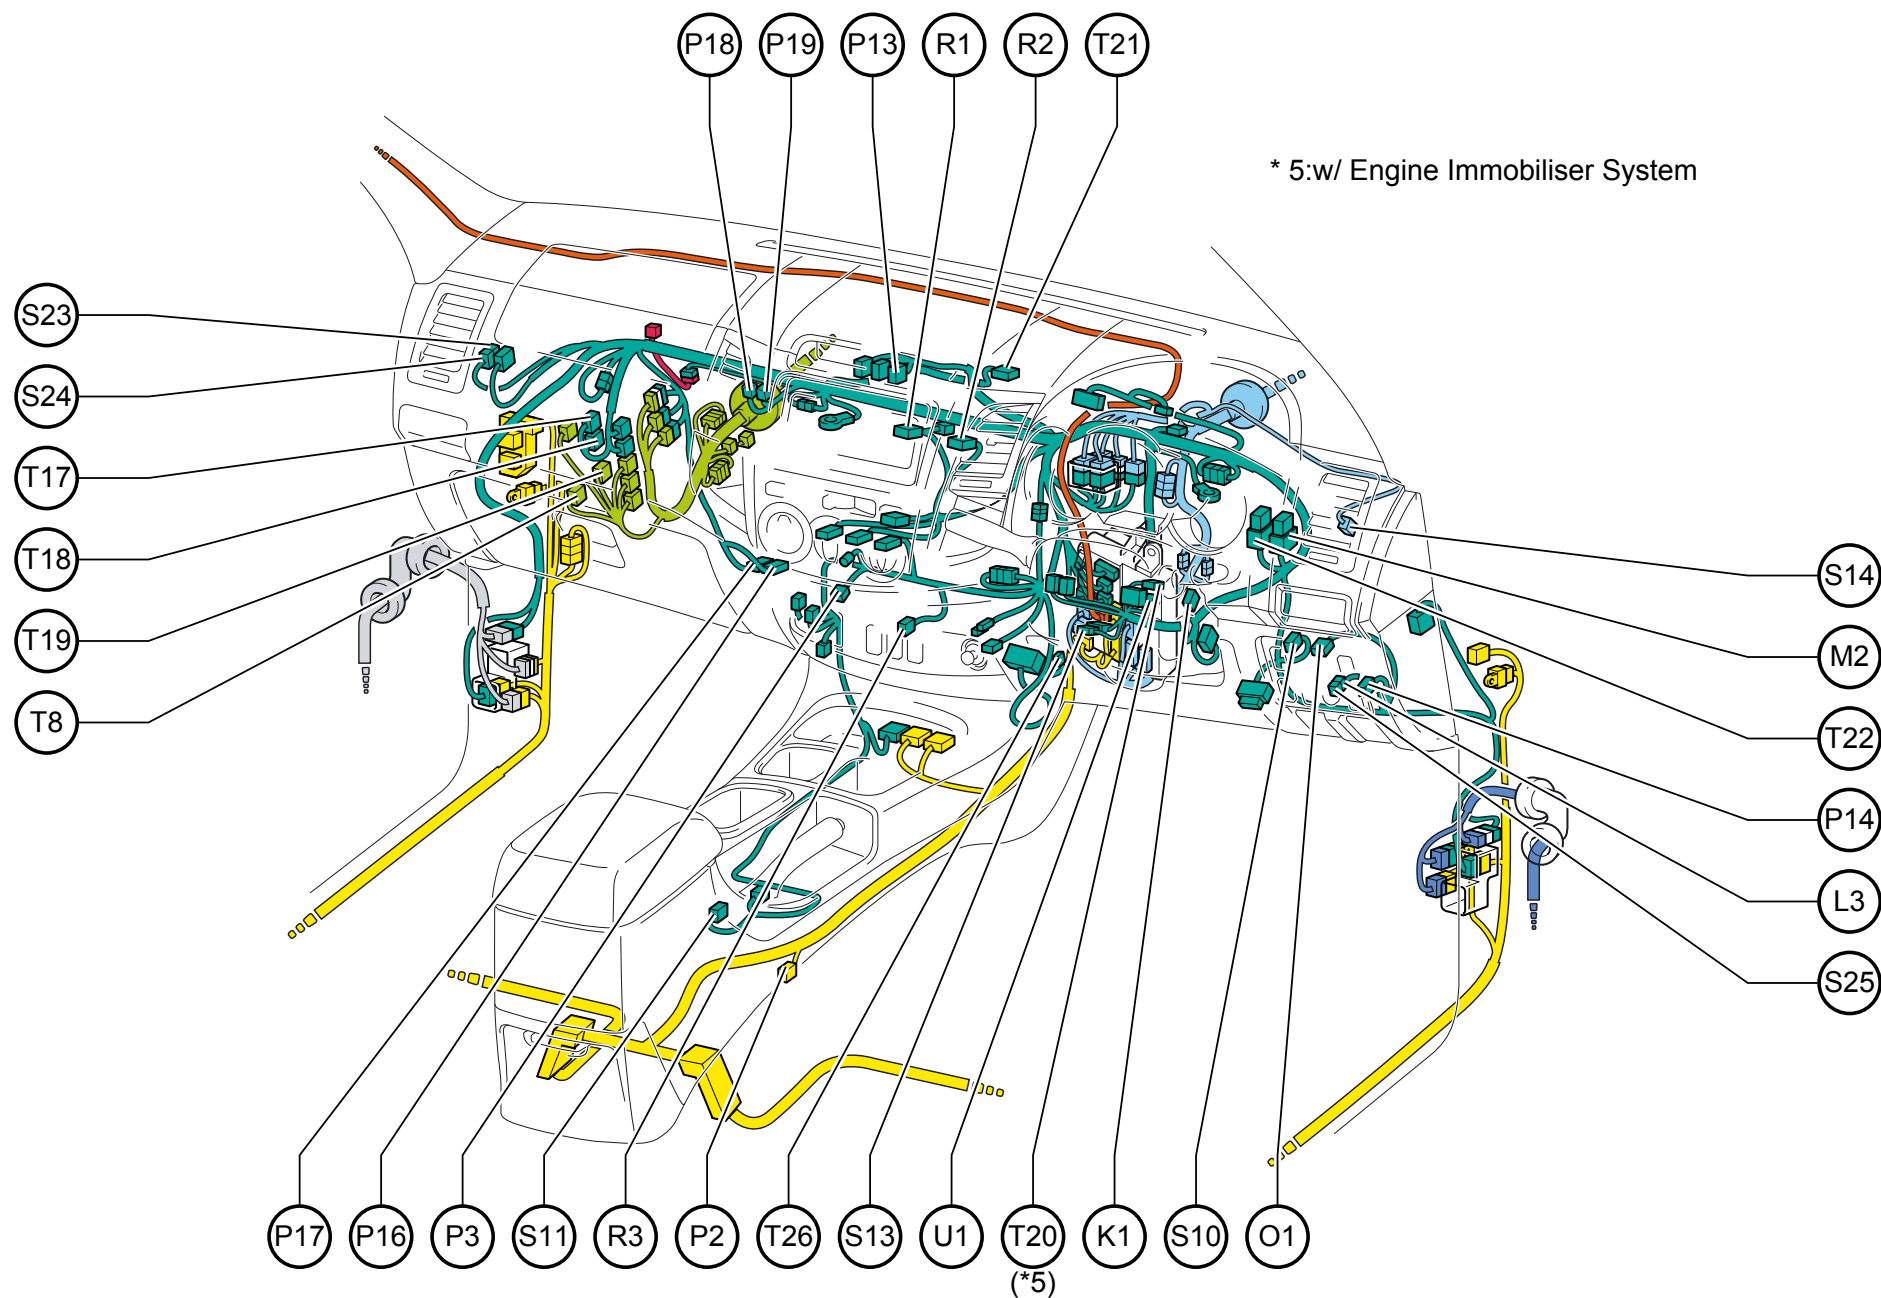
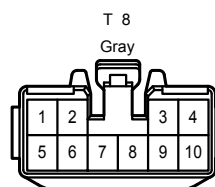

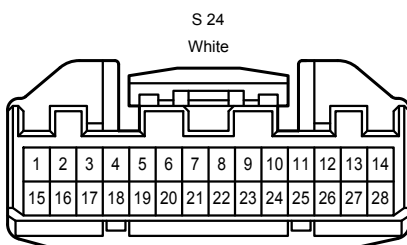
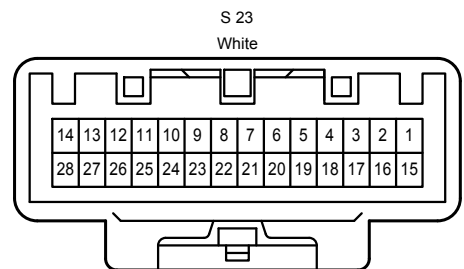
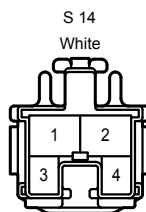
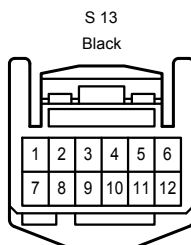
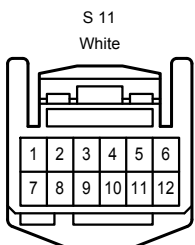
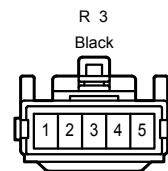
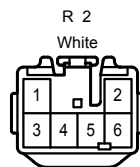
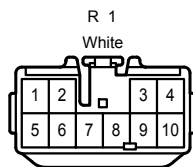
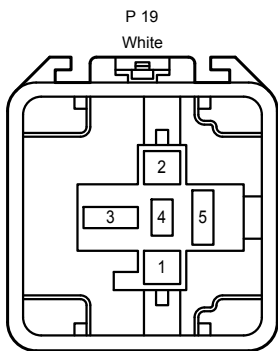
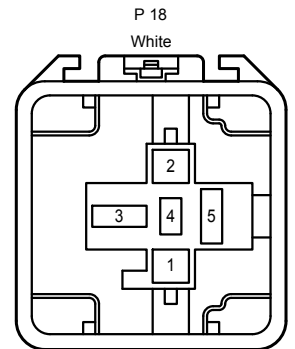
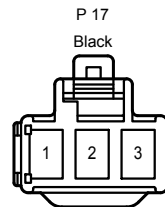
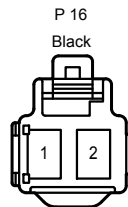
 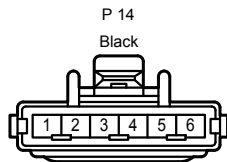
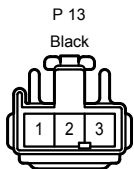

 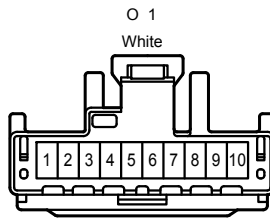
 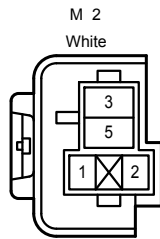




- K 1 Key Interlock Solenoid
- L 3 Light Control Rheostat
- M 2 Magnet Clutch Relay
- O 1 Outer Mirror SW
- P 2 Parking Brake SW
- P 3 Power Outlet Socket
- P 13 Passenger Seat Belt Warning Lamp
- P 14 Power Heater SW
- P 16 PTC Heater
- P 17 PTC Heater
- P 18 PTC Heater Relay (No.1)
- P 19 PTC Heater Relay (No.2)
- R 1 Radio Receiver Assembly
- R 2 Radio Receiver Assembly
- R 3 Rear Window Defogger SW
- S 10 Security Indicator Lamp
- S 11 Shift Lock Control ECU
- S 13 Spiral Cable
- S 14 Stop Lamp SW
- S 23 Short Connector
- S 24 Short Connector
- S 25 Short Connector (Light Control Rheostat)
- T 8 Turbo Motor Driver
- T 17 Transmission Control ECU
- T 18 Transmission Control ECU
- T 19 Transmission Control ECU
- T 20 Transponder Key Amplifier
- T 21 Transponder Key ECU
- T 22 Turn Signal Flasher
- T 26 Temp. Control SW (Max Hot)
- U 1 Unlock Warning SW

Position of Parts in Instrument Panel <RHD>



Position of Parts in Instrument Panel <RHD>

