




I GROUND POINT

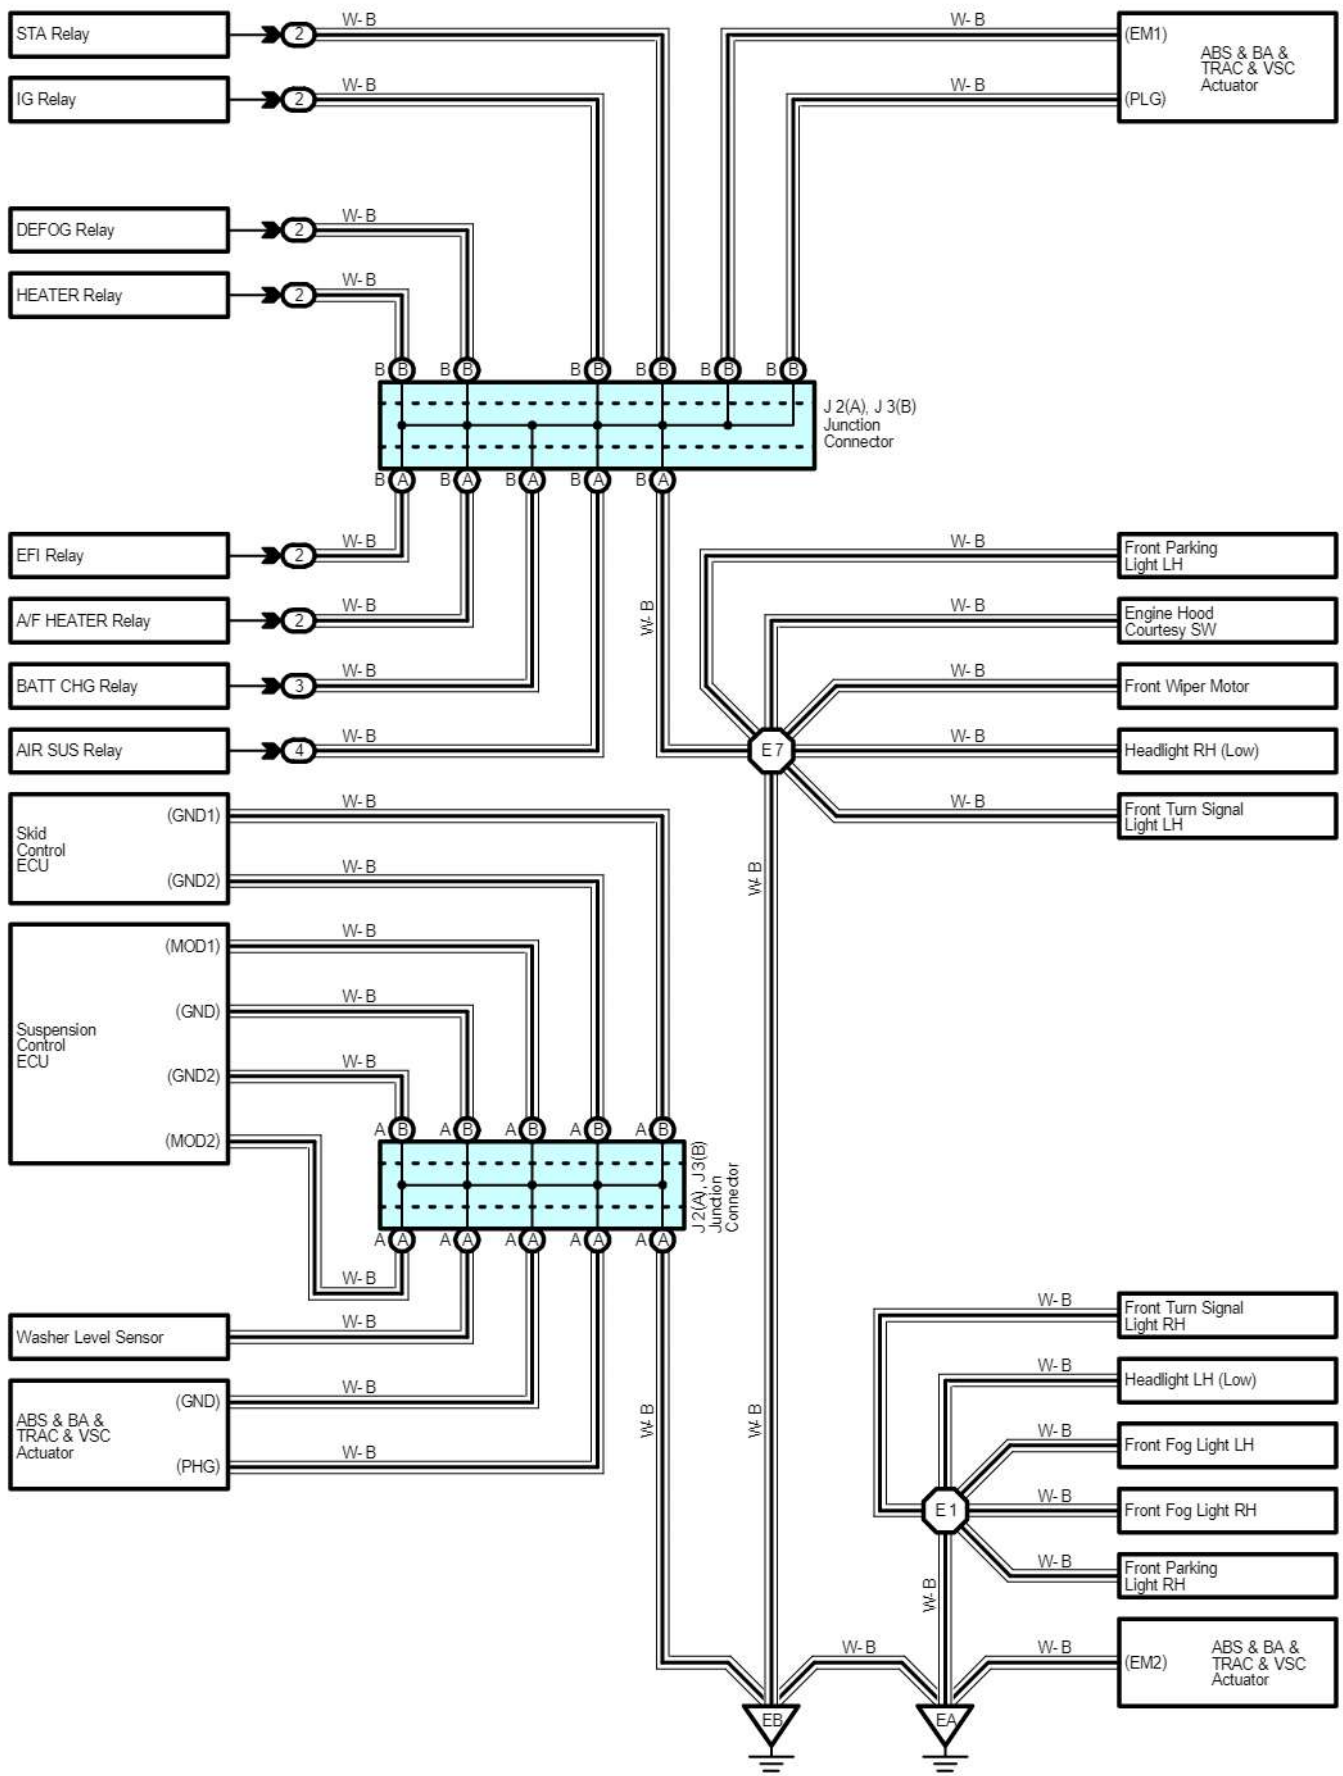


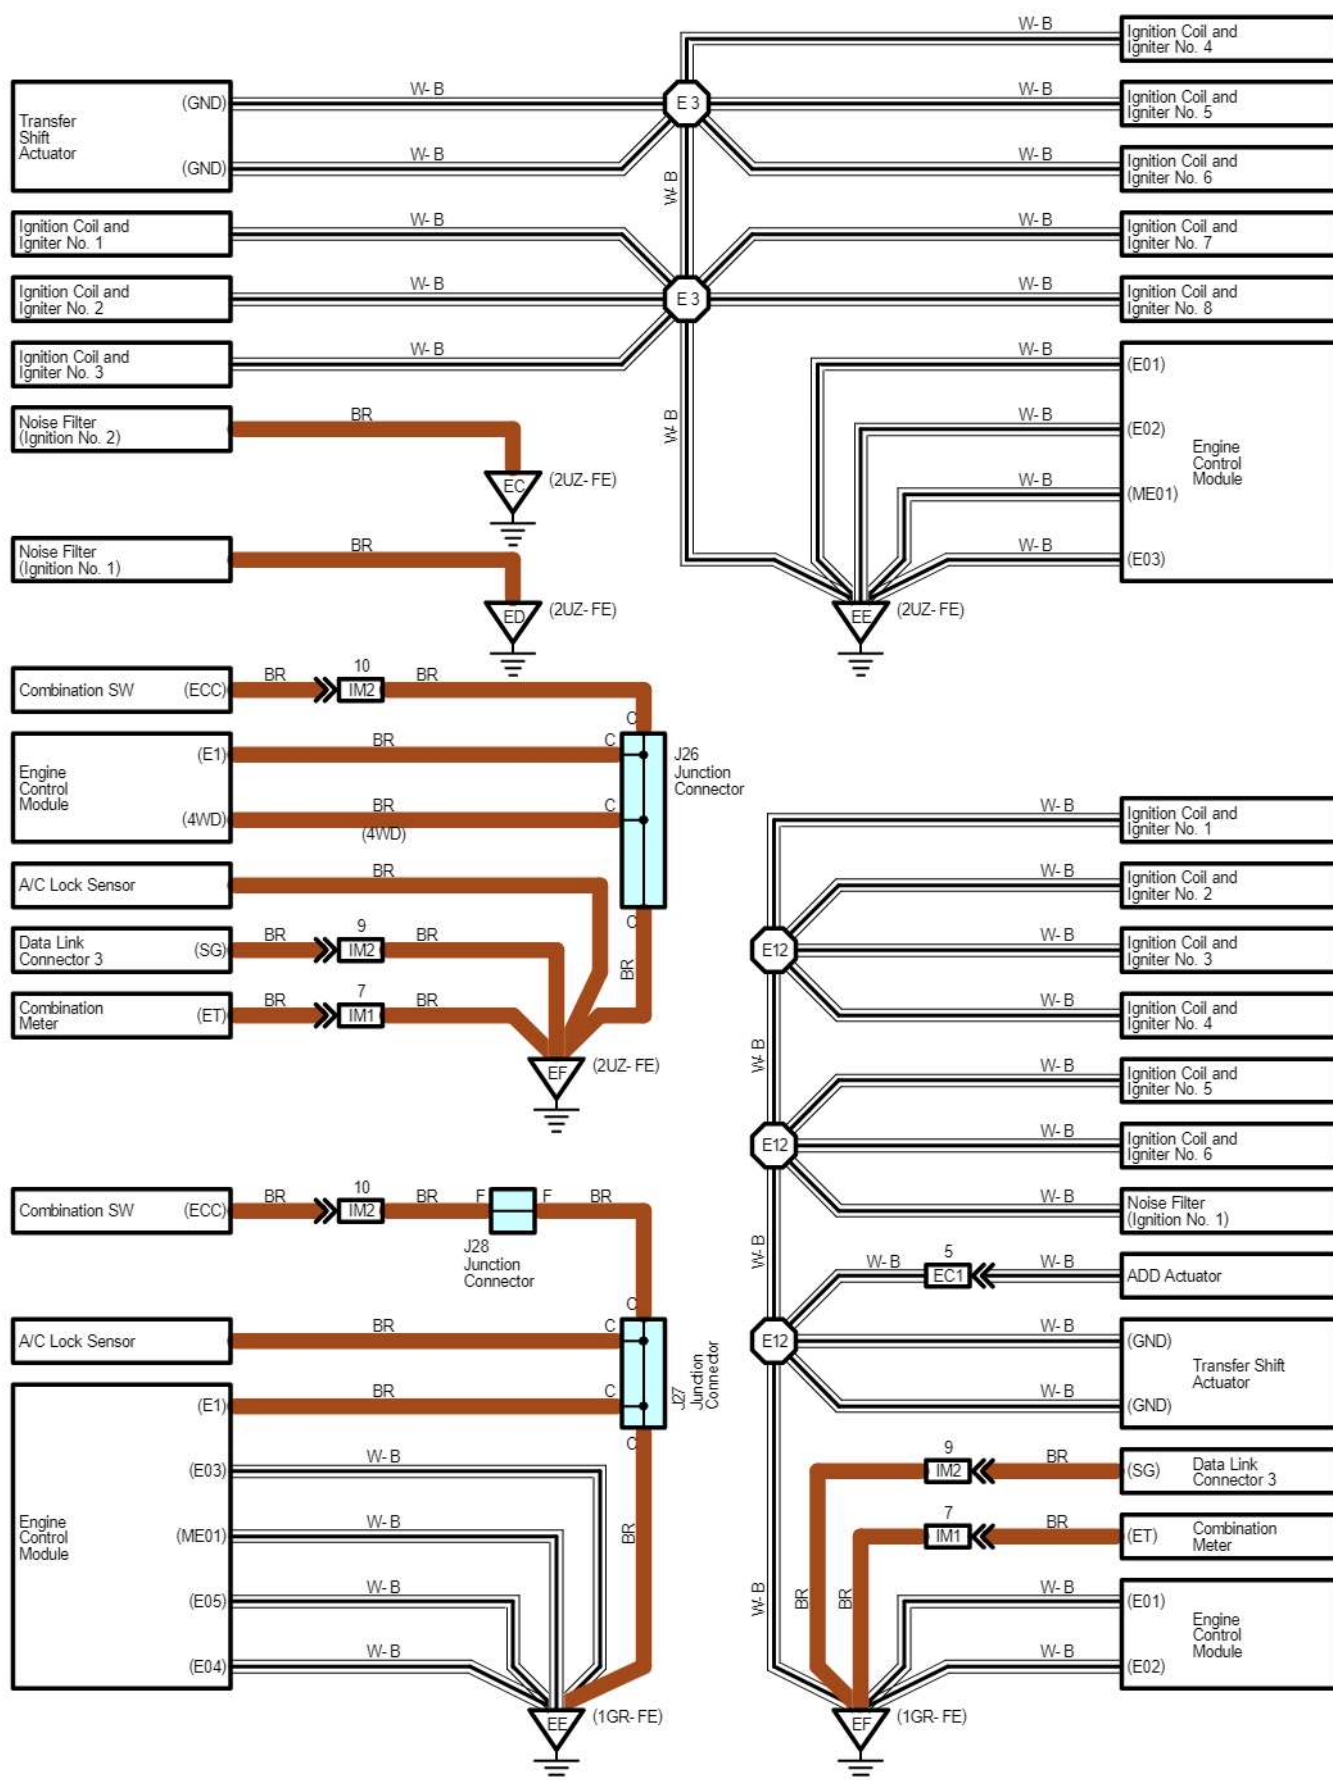


I GROUND POINT

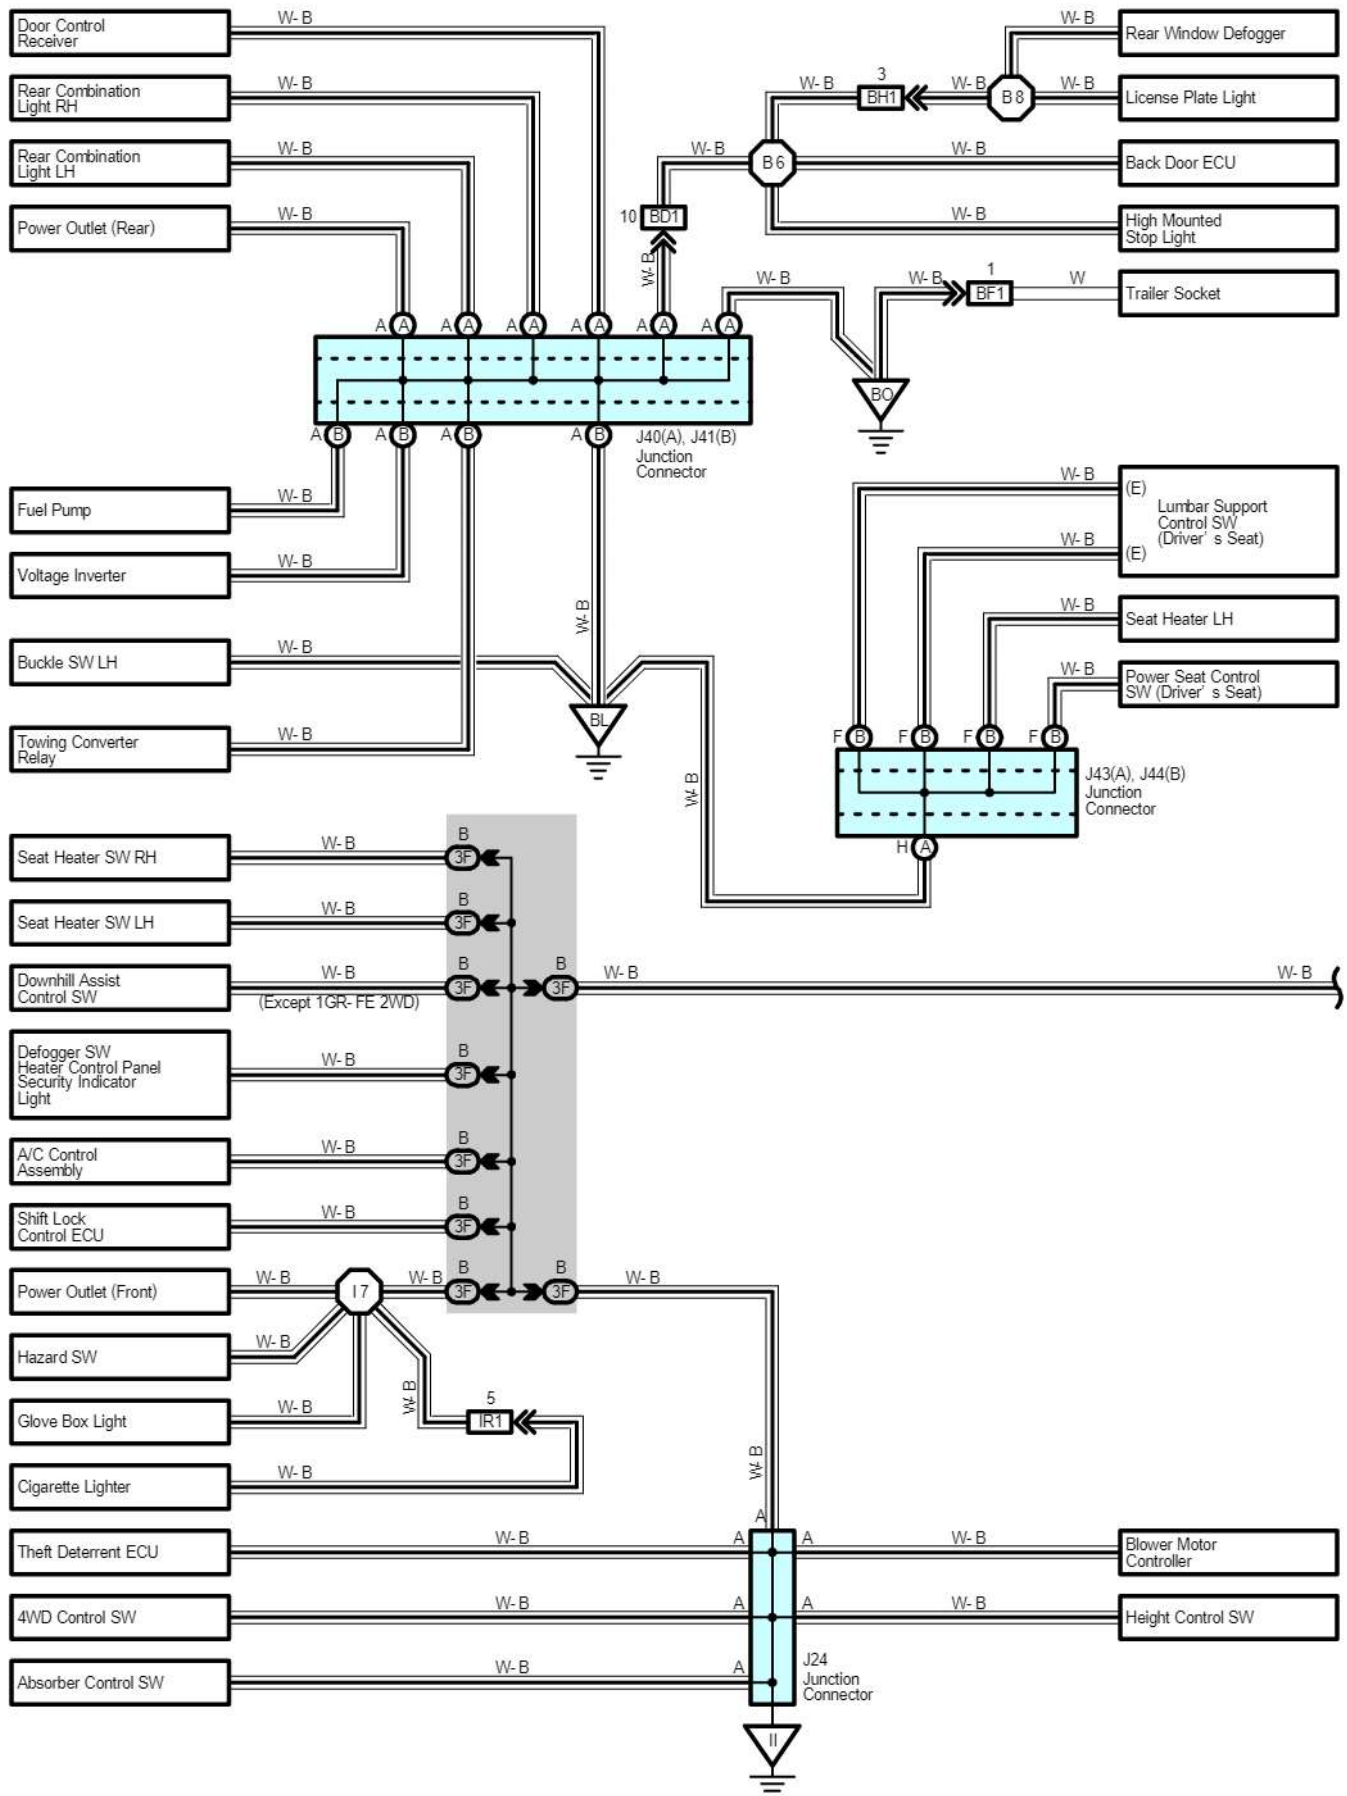

* 1 : w/ Daytime Running Light
 * 2 : w/o Daytime Running Light

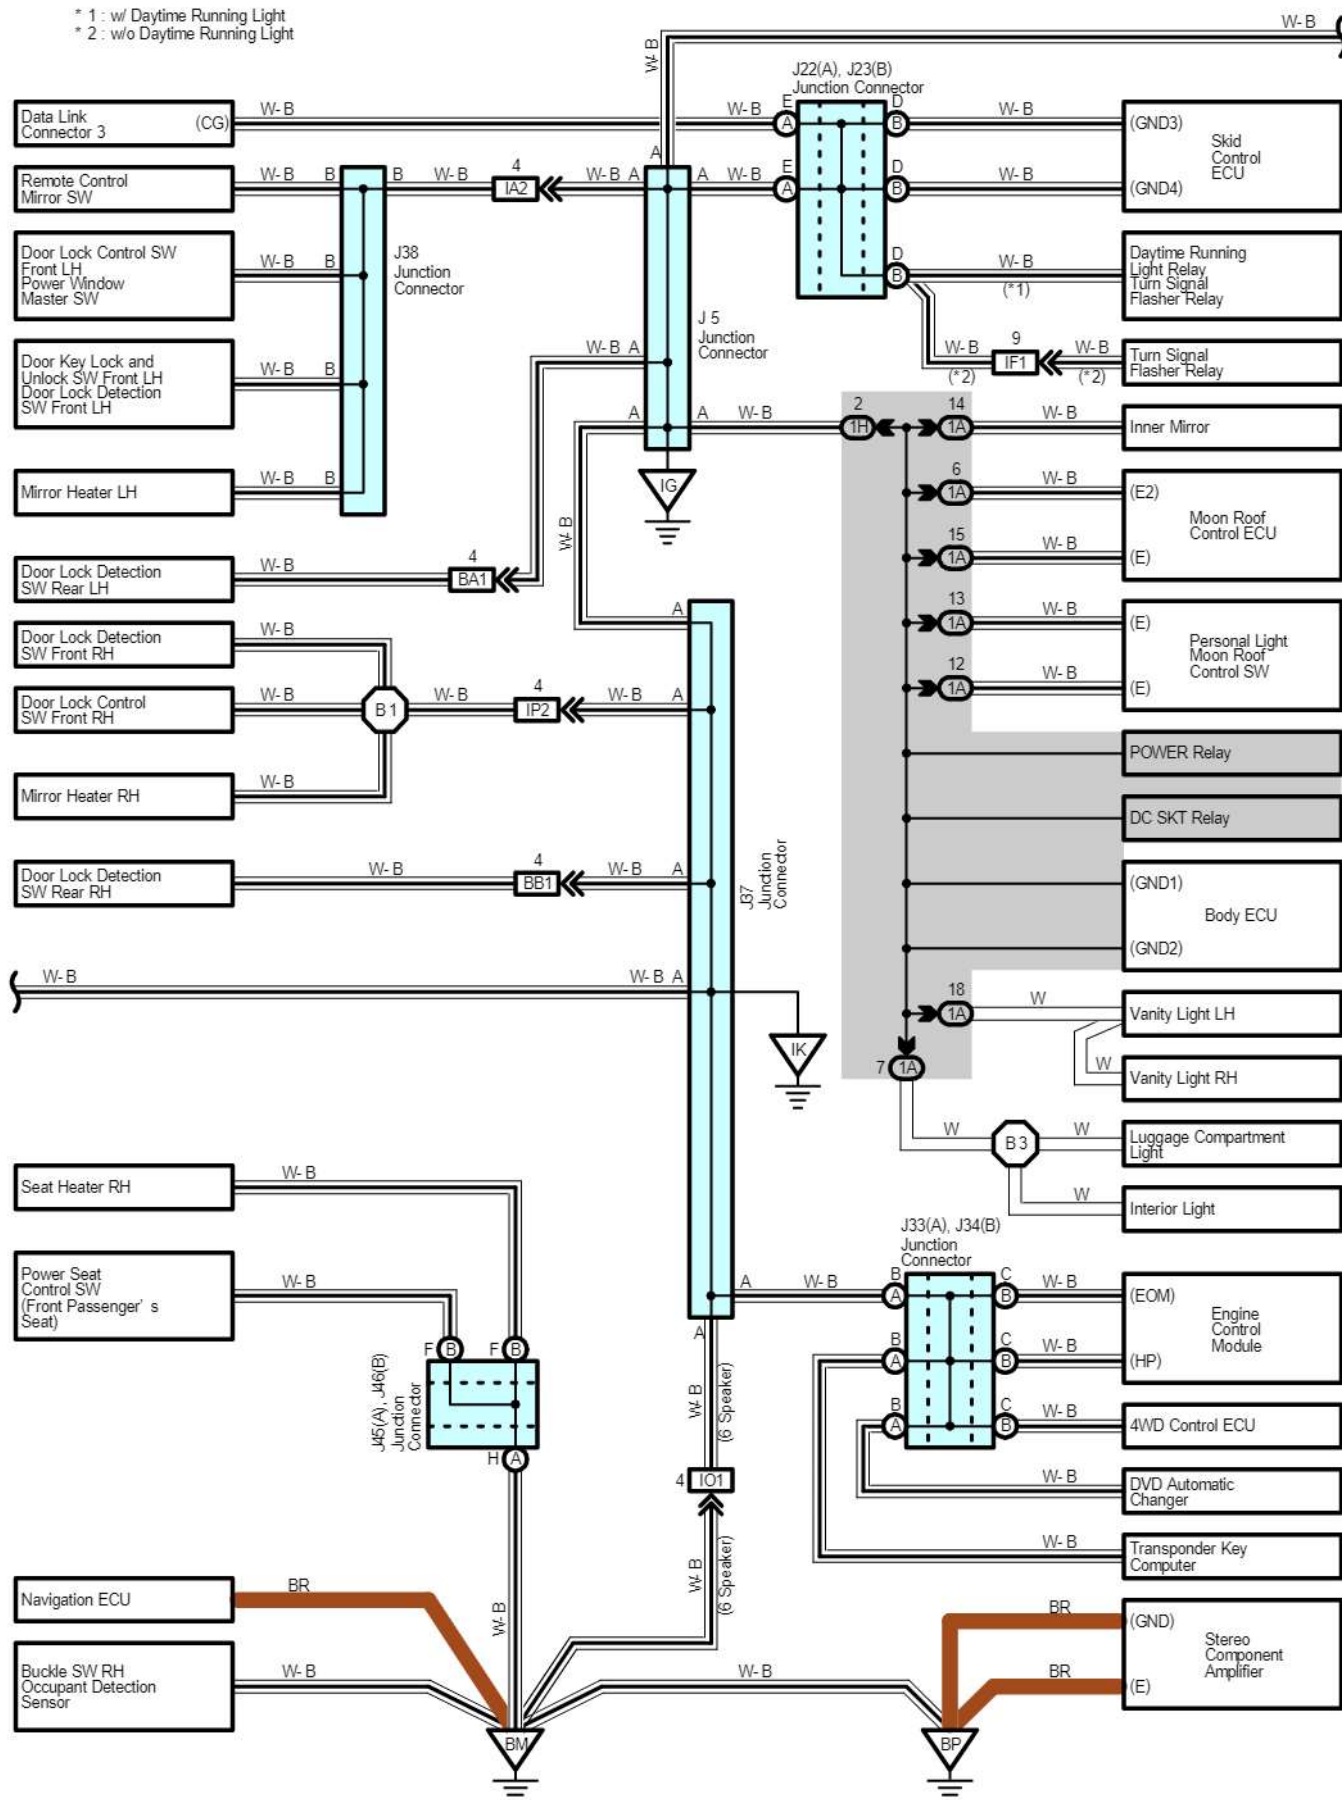

I GROUND POINT

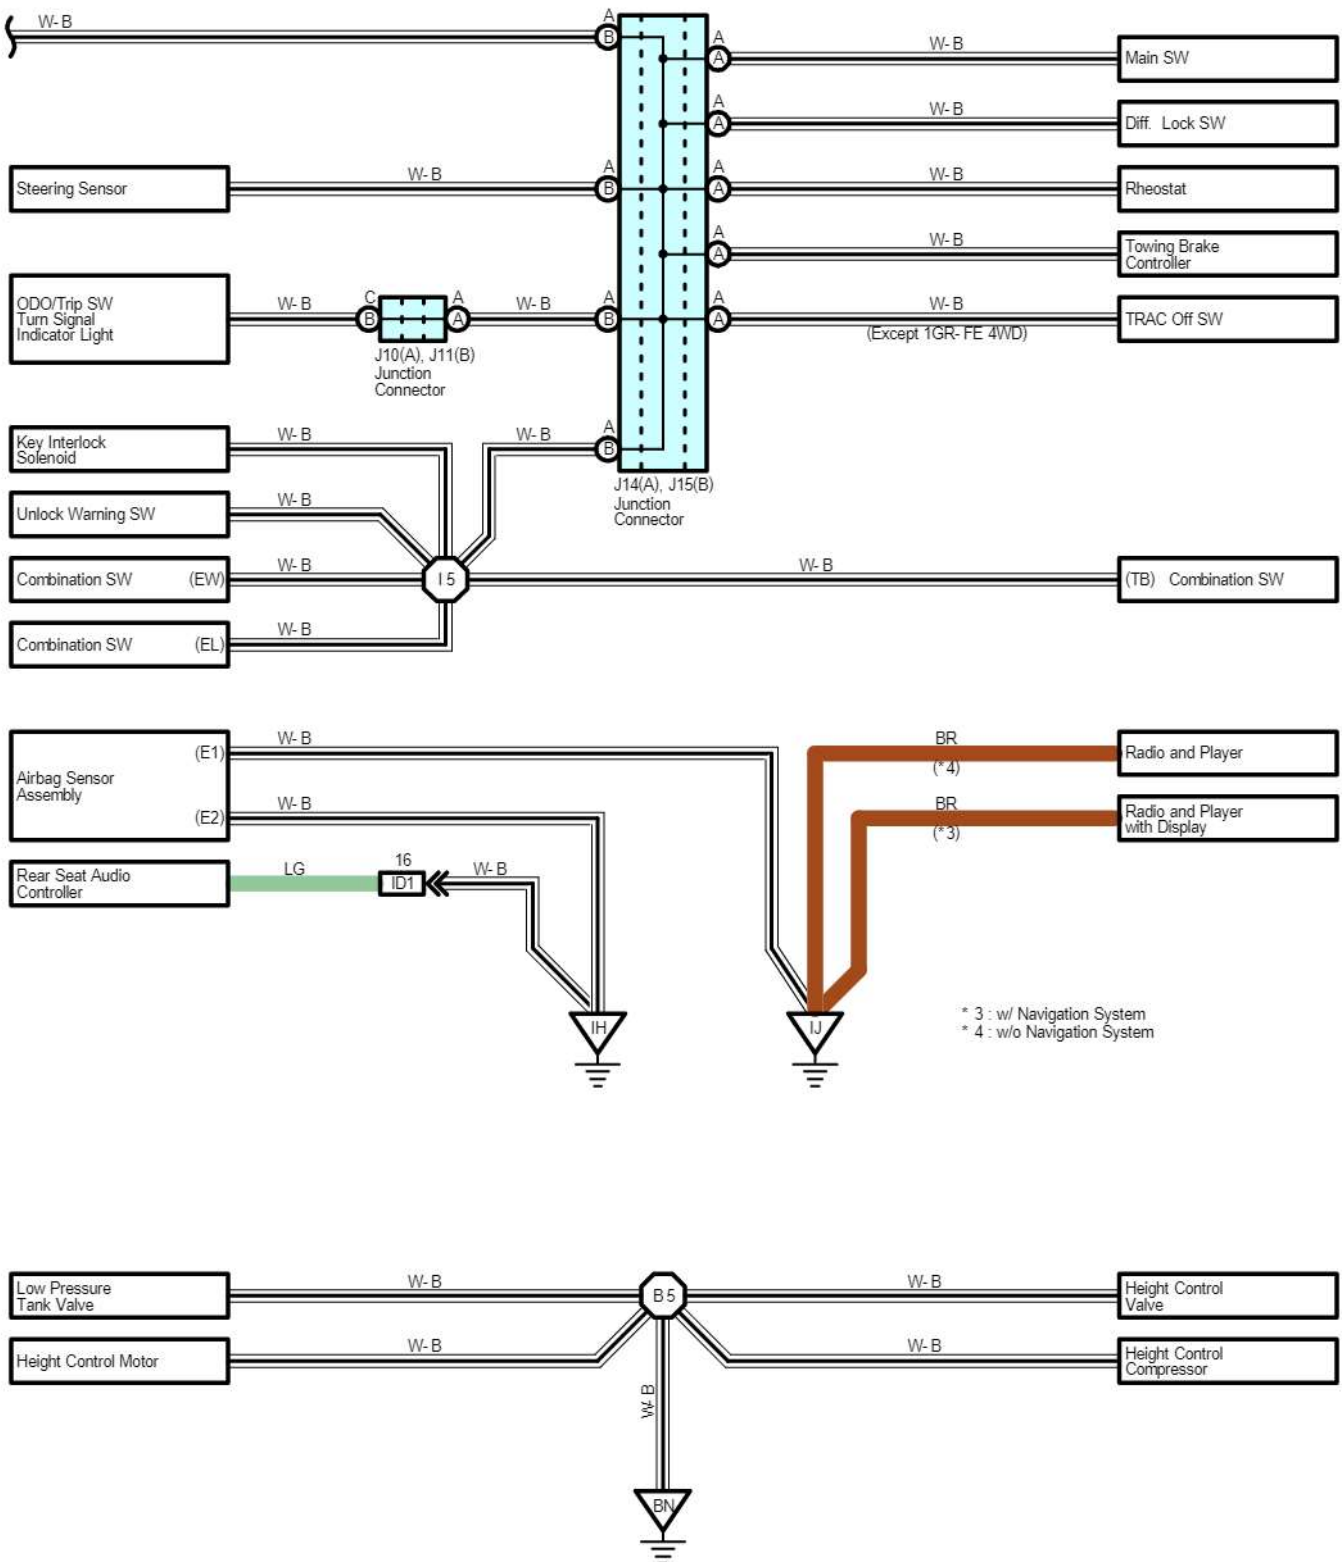

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J2	A	33 (2UZ-FE)	J22	A	38
		35 (1GR-FE)	J23	B	38
J3	B	33 (2UZ-FE)	J24		38
		35 (1GR-FE)	J26		38
J5		38	J27		38
J10	A	38	J28		38
J11	B	38	J33	A	38
J14	A	38	J34	B	38
J15	B	38	J37		38
				J38	40
				J40	A
				J41	B
				J43	A
				J44	B
				J45	A
				J46	B

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Left)
4	23	Engine Room R/B No.4 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3F	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	46 (1GR-FE)	Engine Wire and Differential Wire (Near the Front Differential)
IA2	48	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	48	Radio Installation Sub Assy Wire and Instrument Panel Wire (Left Kick Panel)
IF1	50	Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
IM2		
IO1	52	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IP2	52	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IR1	52	Instrument Panel Wire and Cigarette Wire (Rear Console)
BA1	54	Rear Door No.2 Wire and Instrument Panel Wire (Left Center Pillar)
BB1	54	Rear Door No.1 Wire and Instrument Panel Wire (Right Center Pillar)
BD1	54	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BF1	54	Frame No.3 Wire and Floor No.2 Wire (Rear Side of Side Frame LH)
BH1	54	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of Back Door)

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
EA	44 (2UZ-FE)	Front Right Fender
	46 (1GR-FE)	
EB	44 (2UZ-FE)	Front Left Fender
	46 (1GR-FE)	
EC	44 (2UZ-FE)	Right Bank Cylinder Head
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Right Bank Cylinder Block
	46 (1GR-FE)	
EF	44 (2UZ-FE)	Rear Side of Left Bank Cylinder Block
	46 (1GR-FE)	
IG	48	Left Kick Panel
IH	48	Instrument Panel Brace LH
II	48	Instrument Panel Brace RH
IJ		
IK	48	Right Kick Panel
BL	54	Floor Seat Crossmember LH
BM	54	Floor Seat Crossmember RH
BN	54	Near the No.5 Crossmember of Side Frame LH
BO	54	Rear Pillar LH
BP	54	Rear Pillar RH



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	44 (2UZ-FE)	Engine Room Main Wire	I7	50	Instrument Panel Wire
	46 (1GR-FE)		B1	54	Front Door RH Wire
E3	44 (2UZ-FE)	Engine Wire	B3	54	Roof Wire
E7	44 (2UZ-FE)	Engine Room Main Wire	B5	54	Frame Wire
	46 (1GR-FE)		B6	54	Back Door No.1 Wire
E12	46 (1GR-FE)	Engine Wire	B8	54	Back Door No.2 Wire
I5	50	Instrument Panel Wire			

