

Dodge Viper 2003 – 2007 fuse box diagram

Fuse box diagram



Dodge Viper – fuse box diagram

No.	A	Protected Component
1	40	Blower Motor Relay
2	40	Starter Relay, ABS
3	30	Body Control Module
4	20	Amplifier
5	30	Adjustable Pedals Switch, Passenger Window Up Relay, Passenger Window Down Relay
6	40	Headlamp Relay, Body Control Module
7	30	ABS

8	30	Run/Accessory Relay
9	40	Headlamp Relay (Fuse: "24", "25")
10	30	Ignition Switch (Fuse: "27", "28", "29")
11	20	Auto Shut Down Relay, Powertrain Control Module, Fuel Injectors, Oxygen Sensor, Hydraulic Cooling Module, Ignition Coil Pack
12	20	Cigar Lighter, Data Link Connector
13	15	Multi-Function Switch (Flasher, Hazard)
14	15	Oxygen Sensor Relay, Skip Shift Solenoid, Reverse Lock-Out Solenoid
15	20	Rear Window Defogger Relay
16	20	Power Outlet
18	15	Radio, Power Mirror Switch
19	15	Horn Relay
20	15	Air Conditioner Compressor Clutch Relay, Courtesy Lamp, Dome Lamp, Visor amp, Illuminated Entry, Reading Lamp
21	15	Stop Lamp Switch
22	15	Fuel Pump Relay
23	10	Airbag Control Module

24	20	Right Headlamp (HID)
25	20	Left Headlamp (HID)
26	20	Wiper Control Module, Wiper Motor
27	10	Airbag Control Module
28	15	Gauge Cluster, Tire Pressure Monitor Module, Body Control Module, Push Button Starter Switch
29	15	Powertrain Control Module, Air Conditioner Compressor Clutch Relay, EVAP/Purge Solenoid, Oxygen Sensor Relay, Fuel Pump Relay
Relay		
R1	Starter	
R2	Horn	
R3	Air Conditioner Compressor Clutch	
R4	Auto Shut Down	
R5	Headlamp	
R6	Oxygen Sensor	
R7	Blower Motor	
R8	Fuel Pump	

R9	Rear Window Defogger
R10	–
R11	Run/Accessory