


Chevrolet Tracker 2003 – 2004 fuse box diagram

Instrument panel fuse block

This fuse box is under the left side of the instrument panel.

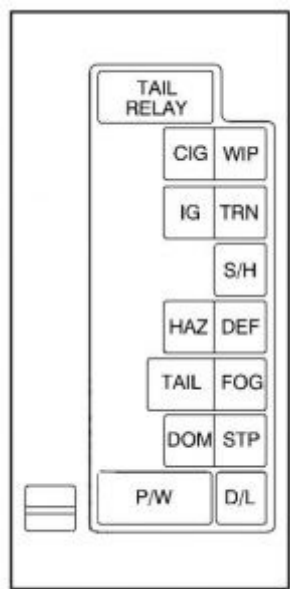


Chevrolet Tracker – fuse box diagram – instrument panel

Fuses	Usage
P/W	Power Windows
DOM	Dome Light, Radio Memory
TAIL	License Plate Light, Clearance/Marker Lights, Instrument Panel Illumination, Warning Tone
HAZ	Hazard Lights, Turn Signal
IG	O2 Sensor Heater, Cruise Control, Ignition Coil, Meter, G Sensor
CIG	Cigar/Cigarette Lighter, Radio, Power Mirror
D/L	Door Locks
STP	Brake Light, Horn, Center High-Mounted Stop Lamp, Cruise Control
FOG	Not Used
DEF	Rear Window Defogger, DRL, Heater, Air Conditioning
S/H	Not Used
TRN	Turn Signal, Back-Up Light, Hazard Lights
WIP	Windshield Wiper/Washer, Rear Window Wiper/Washer

Fuses for the air bags are located next to the instrument panel fuse block.

Engine Compartment Fuse Block

The main fuse box in your engine compartment protects all electrical loads.

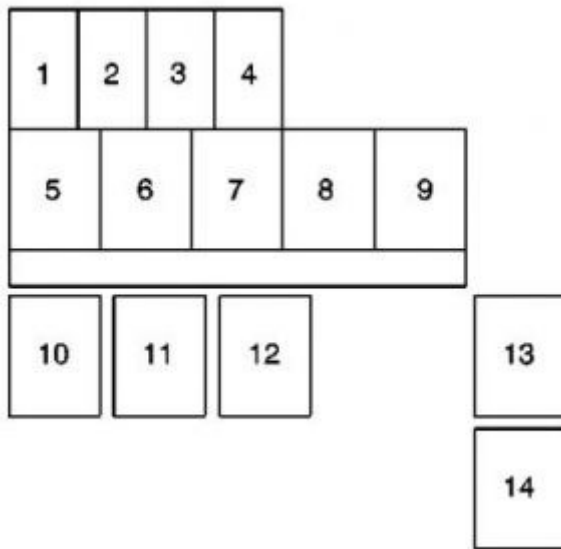

Chevrolet Tracker – fuse box diagram –

engine compartment

Fuses	Usage
1	Accessory Power Outlet
2	Electronic Fuel Injection System
3	Right Headlamp
4	Left Headlamp, High-Beam Indicator
5	Heater
6	Hazard Lamps, Rear Combination Lamps, Dome Light, Horn
7	Cigar Lighter, Radio, I.G. Coil, Meter, Wiper, Washer, Rear Defroster, Turn Signals, Back-Up Lamps
8	Anti-Lock Brake System
9	All Electrical Loads
10	Shift Lock (Relay)
11 (2.5L Engine only)	Horn (Relay)
12	Air Conditioning Compressor (Relay)
13	Air Conditioning Condenser Fan (Relav)
14	Air Conditioning