


Lexus SC 300 1991 – 2000 fuse box diagram

Passenger compartment fuse box

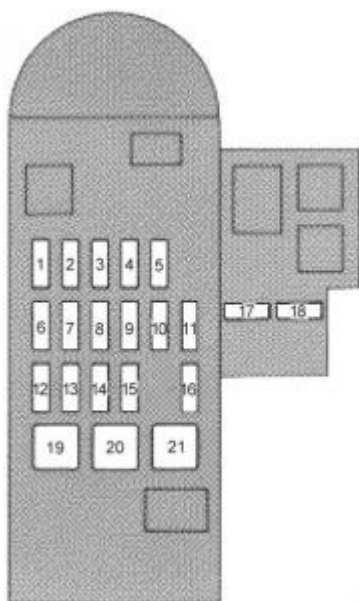


Lexus SC 300 – fuse box diagram – passenger compartment

Number	Fuse	Ampere rating [A]	Protected circuit
1	ENGINE	7,5	Charging system
2	HTR	10	Air conditioner system, rear window defogger
3	WIPER	20	Windshield wipers and washer
4	ST	7,5	Starting system, cruise control system, multiport fuel injection system/sequential multiport fuel injection system, instrument panel lights
5	IGN	7,5	Discharge warning light, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
6	PANEL	7,5	Instrument panel lights, glovebox light
7	MIR-HTR	10	Outside rear view mirror defogger
8	TURN	20	1991-1994: Turn signal lights, cornering lights
	TURN	7,5	1995-2000: Turn signal lights
9	STOP	15	Stop lights, cruise control system cancel device
10	CIG	15	Cigarette lighter , theft deterrent system, shift lock system, SRS airbag system, instrument panel lights
11	RADIO NO. 2	7,5	Radio, cassette tape player, compact disc player, power antenna, power rear view mirrors
12	TAIL	15	Tail lights, parking lights, side marker lights, license plate lights

13	15	ECU-IG	Cruise control system, power steering control system, shift lock system, anti-lock brake system, SRS airbag system, power door lock system, preset steering system, traction control system, electronically controlled hydraulic-driven cooling system, passenger's seat control system
14	GAUGE	10	Gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), back-up lights, electronically controlled automatic transmission system, automatic transmission overdrive system, headlight
15	ECU-B	15	SRS airbag system, power rear view mirrors
16	OBD	7,5	1996-2000: On-board diagnosis system
17	FOG	15	1995-2000: Fog lights
18	ST-HTR	15	Seat heater
19	PWR	30	Preset steering, electronic moon roof, power windows, theft deterrent system.
20	IG SW	40	Starting system
21	DOOR	30	Theft deterrent system, seat control system, fuel opener control system, power door lock system.

Engine compartment fuse box

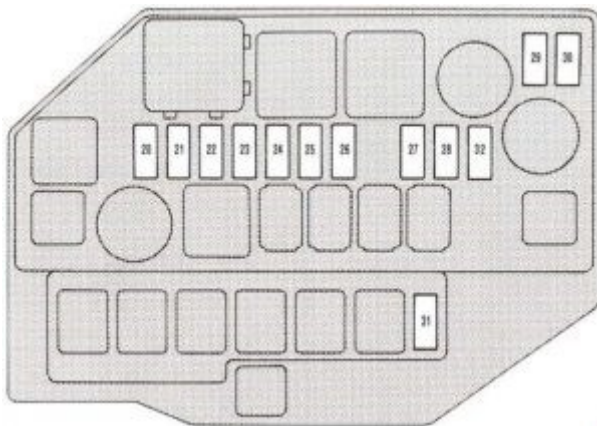

Lexus SC 300 – fuse box diagram – engine

compartment

Number	Fuse	Ampere rating [A]	Protected circuit
20	DOME	10	Interior light, personal lights, door courtesy lights, ignition switch light, open door warning light, trunk room light, electronic moon roof system, preset steering system, seat belt warning system, cruise control system, air conditioner system, inside rear view mirror, door lock and theft deterrent system, foot light, power rear view mirror, locking with wireless remote control system, passenger's seat control system

21	EFI	30	Multiport fuel injection system/sequential multiport fuel injection system
22	HAZ-HORN	25	1991-1994: Emergency flashers, horns
	HAZ-HORN	15	1995-2000: Emergency flashers, horns
23	RADIO NO. 1	20	Radio, cassette tape player, compact disc player, power antenna
24	TEL	15	Telephone
25	ALT-S	7,5	Charging system
26	TRAC	7,5	1991-1998: Traction control system
	TRAC	15	1999-2000: Traction control system
27	HEAD. R	15	Right-hand headlight (low beam)
28	HEAD. L	15	Left-hand headlight (low beam)
29	HEAD R. UP	15	Right-hand headlight (high beam)
30	HEAD L. UP	15	Left-hand headlight (high beam)
31	INJ	30	Starting system
32	DRL	7,5	Daytime Running Light System