


Lincoln MKC 2014 – 2019 fuse box diagram

Engine Compartment Fuse Box

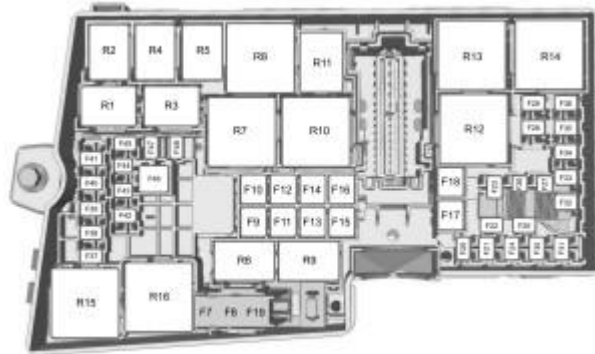

E157389

Lincoln MKC – fuse box diagram – engine

compartment

The power distribution box is in the engine compartment. It has high-current fuses that protect your vehicle's main electrical systems from overloads.

No.	A	Protected components
F7	50	Anti-lock brake system module
F8	30	Anti-lock brake system module
F9	20	Fuel pump relay
F10	40	Blower motor relay
F11	30	Run start relay
F12	40	Powertrain control module relay
F13	30	Starter relay

F14	30	Memory seat
F15	30	Wipers and washers relay
F16	25	Cooling fan
F17	40	Cooling fan 1 (600W)
	50	Cooling fan 1 (750W)
F18	40	Cooling fan 2 (600W)
	50	Cooling fan 2 (750W)
F19	5	Anti-lock brake system module run/start
F20	20	'15-'18: Horn relay
	7.5	'19: Horn relay
F21	10	Brake pedal switch
F22	25	Windshield wipers and washer
F23	5	Run/start relay coil
F24	20	Transmission range control module
F25	10	Air conditioning clutch relay

F26	5	Powertrain control module relay coil
F27	10	Washer pump relay
F28	10	Alternator sensor
F29	15	Rain sensor, Rear wiper, Washer pump relay coil
F30	20	'15-'18: Left-hand headlamp
F31	20	'15-'18: Right-hand headlamp
F32	15	Vehicle power 1 (powertrain control module)
F33	15	Vehicle power 2 (canister vent solenoid, universal exhausted gas oxygen sensor, variable camshaft timing, catalyst monitor sensor, canister purge solenoid)
F34	15	Vehicle power 3 (A/C clutch control relay coil, variable A/C compressor, fan control relay coil, engine charge air bypass valve solenoid, active grill shutters)
F35	15	Vehicle power 4 (ignition coils)
F36	–	Not used
F37	–	Not used
F38	15	'17-'19: Voltage quality module run/start (vehicles equipped with stop/start)

F39	5	Powertrain control ignition start power – run
F40	10	Electronic power assist steering run/start
F41	10	'17-'19: Extended power module run/start
F42	10	Adaptive cruise control, Blind spot information system, Heads-up display, Rear video camera
F43	–	Not used
F44	5	Heated rear window relay coil, Heated wiper park ('16-'19), Electronic transmission pump run/stop feed (('17-'19) vehicles equipped with stop/start)
F45	5	Transmission range control module run/start
F46	40	Heated rear window relay, Heated wiper park ('16-'19)
F47	30	'17-'19: Electronic transmission pump B+ feed (vehicles equipped with stop/start)
F48	–	Not used
Relay		
R1	Run start	
R2	Horn	
R3	Fuel pump	

R4	Rear window washer pump
R5	Cooling fan relay 3 (750W)
R6	Windshield wipers
R7	Cooling fan relay 1 (600W) Cooling fan relay 5 (750W)
R8	Starter
R9	Not used
R10	Cooling fan relay 4 (750W)
R11	Air conditioning clutch
R12	Cooling fan relay 1 (750W) Cooling fan relay 3 (600W)
R13	Cooling fan relay 2
R14	Powertrain control module
R15	Heated rear window, Heated wiper park.
R16	Blower motor

Passenger compartment fuse box



E10904

Lincoln MKC – fuse box diagram –

passenger compartment


The fuse panel is behind the lower end of the glove box.

No.	A	Protected components
1	10	Lighting (ambient, glove box, vanity, dome, cargo)
2	7.5	Memory seats
3	20	Driver door unlock
4	5	Not used (spare)
5	20	Subwoofer amplifier, THX amplifier
6	10	Not used (spare)
7	10	Not used (spare)
8	10	Not used (spare)
9	10	Not used (spare)
10	5	Keypad, Power liftgate logic

11	5	Not used (spare)
12	7.5	Climate control, Gear shift control, Push-button ignition
13	7.5	Cluster, Datalink module logic, Steering column module logic
14	10	'18-'19: Extended Power Module (supplies power for Restraint Control Module and Occupant Classification System)
15	10	Datalink module
16	15	Not used (spare)
17	5	Cellphone passport module
18	5	Not used (spare)
19	5	Not used (spare)
20	5	Not used (spare)
21	5	Humidity and in-car temperature
22	5	'15-'17: Occupant classification sensor
23	10	Delayed accessory (driver window switch, moonroof logic, power inverter logic)
24	20	Central lock and unlock

25	30	Driver door (window, mirror)
26	30	Front passenger door (window, mirror)
27	30	Moonroof
28	20	THX amplifier
29	30	Rear driver side door (window)
30	30	Rear passenger side door (window)
31	15	Not used (spare)
32	10	Display, GPS, Radio frequency receiver, Voice control
33	20	Radio and active noise control
34	30	Run/start bus (fuse #19,20,21,22,35,36,37, circuit breaker)
35	5	'15-'17: Restraints control module
36	15	Auto-dimming rear view mirror, Continuous control damping suspension, Lane keeping system module, Rear heated seats module
37	15	'15: All-wheel drive relay, Heated steering wheel
	20	'16-'19: All-wheel drive relay, Heated steering wheel
38	30	Not used (spare)

Rear cargo fuse box

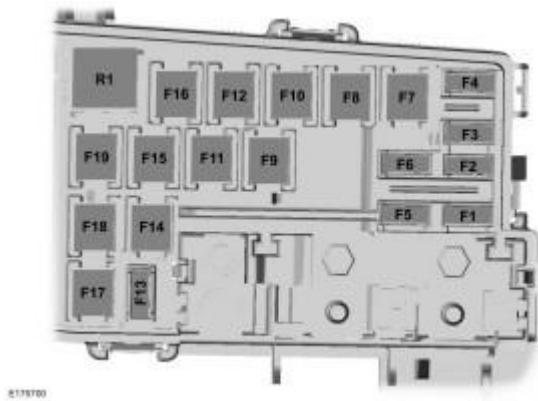

Lincoln MKC – fuse box diagram – rear

cargo

The fuse panel is located in the cargo area on the passenger side.

No.	A	Protected components
F1	–	Not used
F2	–	Not used
F3	5	Hands-free liftgate module
F4	–	Not used
F5	–	Not used
F6	–	Not used
F7	30	Rear heated seats
F8	30	Power cinch latch, Power liftgate
F9	20	Heated front seats

F10	40	Trailer tow
F11	30	Climate control seats
F12	20	'15-'17: Auxiliary power point – instrument panel
F13	–	Not used
F14	30	Power seats
F15	20	Auxiliary power point – inside of floor console
F16	20	Auxiliary power point – rear of floor console
F17	–	Not used
F18	20	Auxiliary power point – cargo area
F19	40	Inverter power outlet