



[Body]

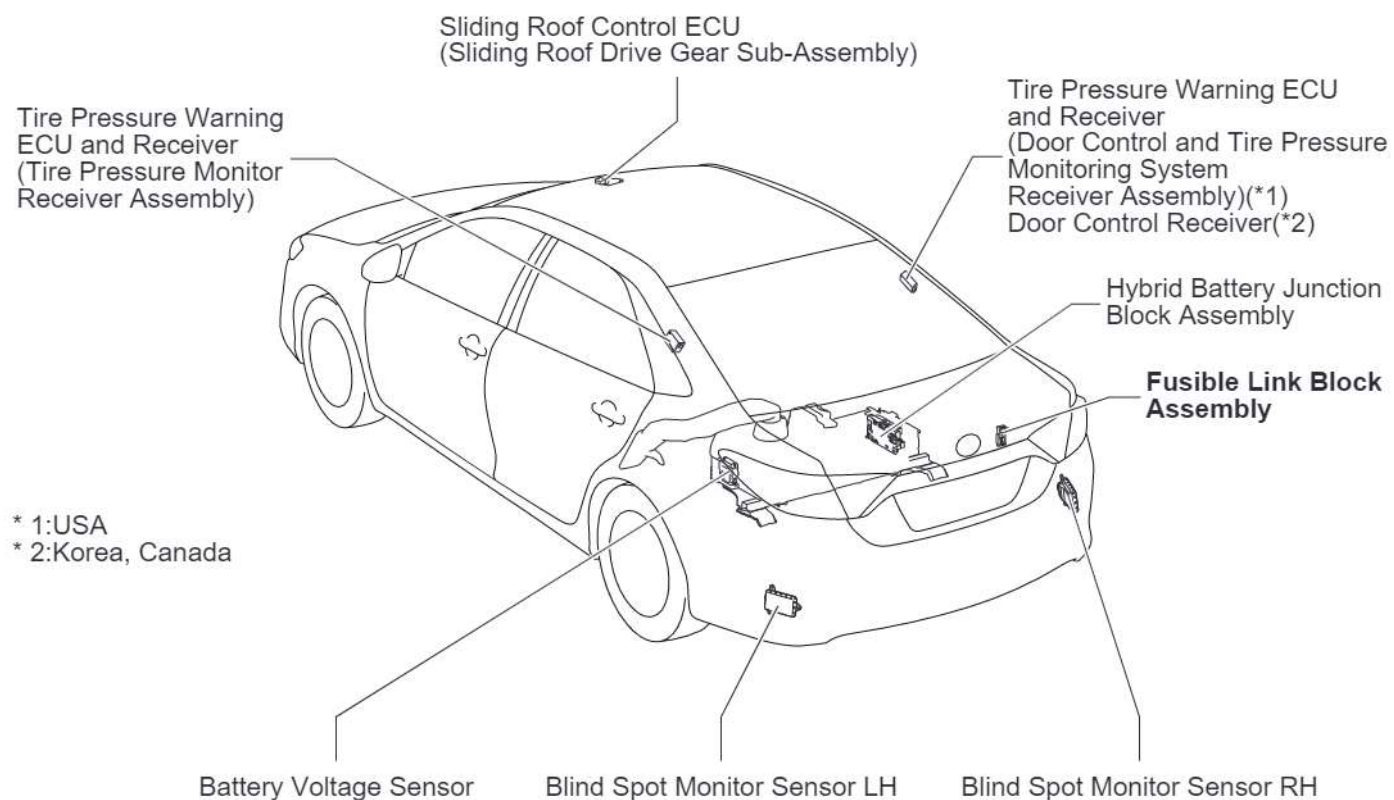


[Seat]

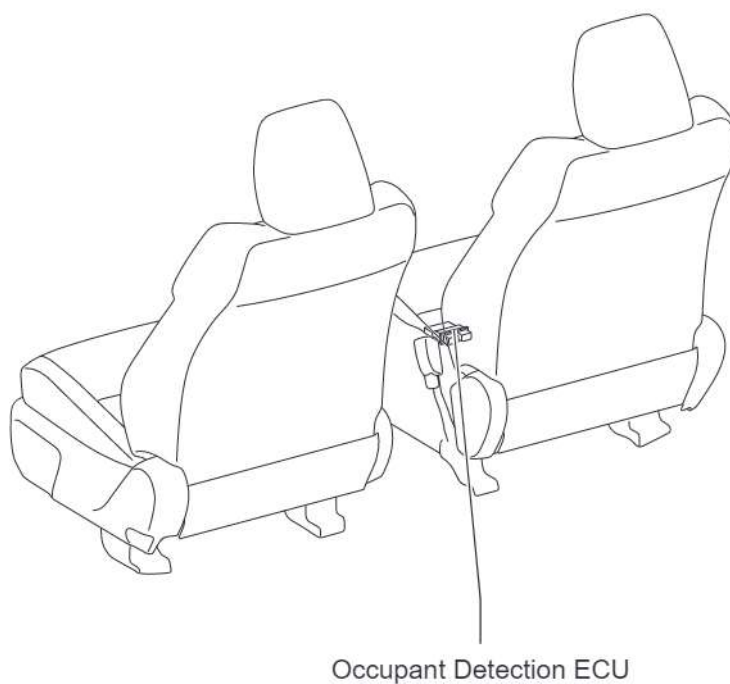

F RELAY LOCATIONS

② : Engine Room R/B No. 2 Front Fender Apron RH (See Page 20)

* 1:10A H-LP LH-HI
* 2:10A H-LP RH-HI

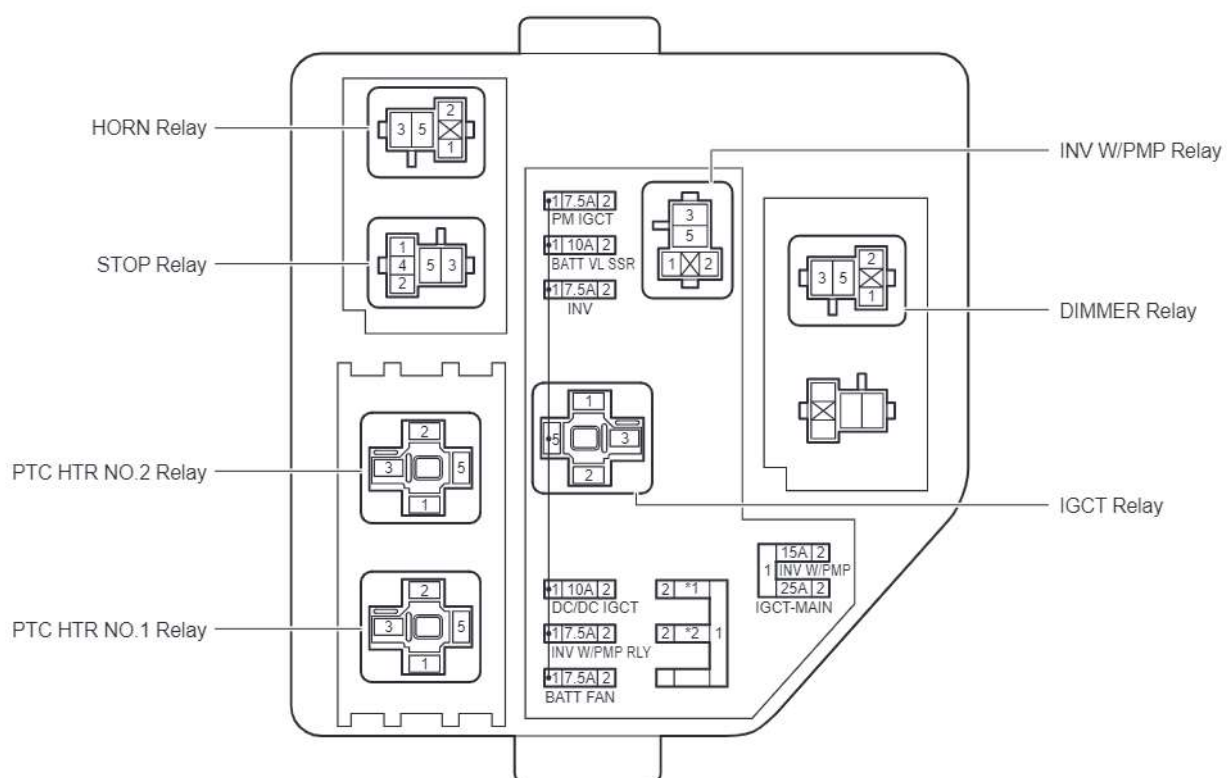


F RELAY LOCATIONS


① : Engine Room R/B Assembly

○ : Engine Room J/B Assembly

Front Fender Apron LH (See Page 20)

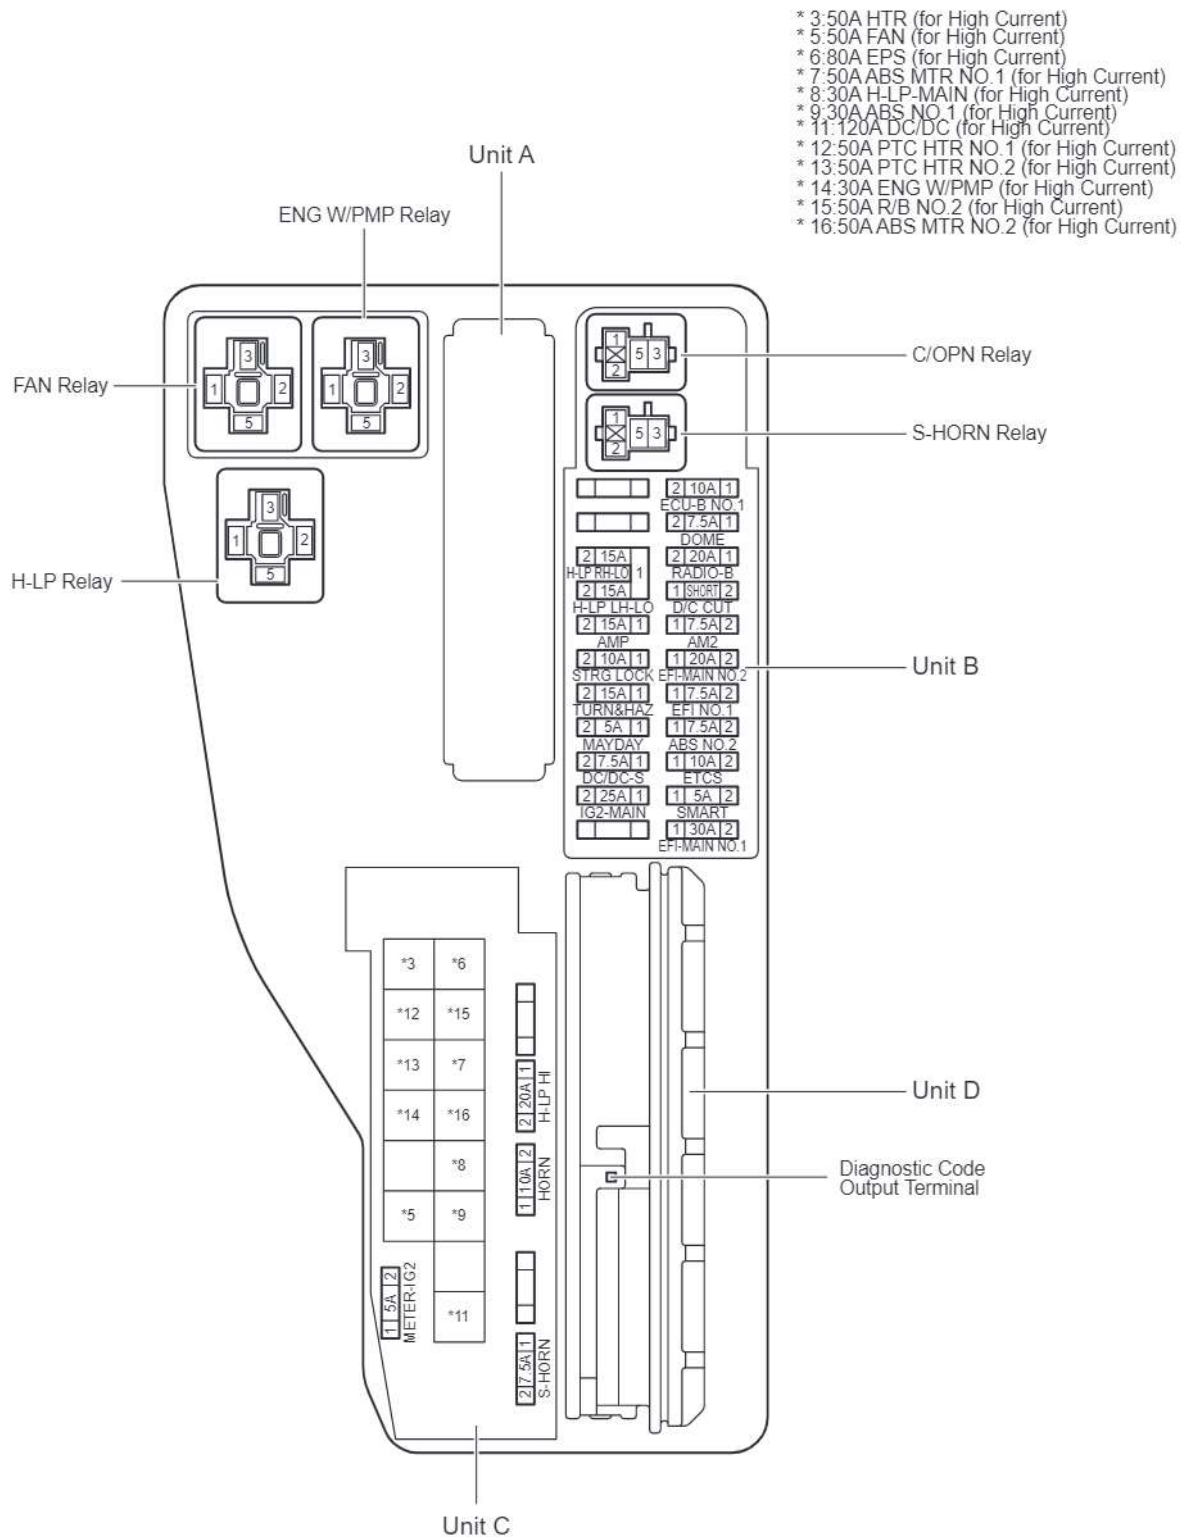


Unit A

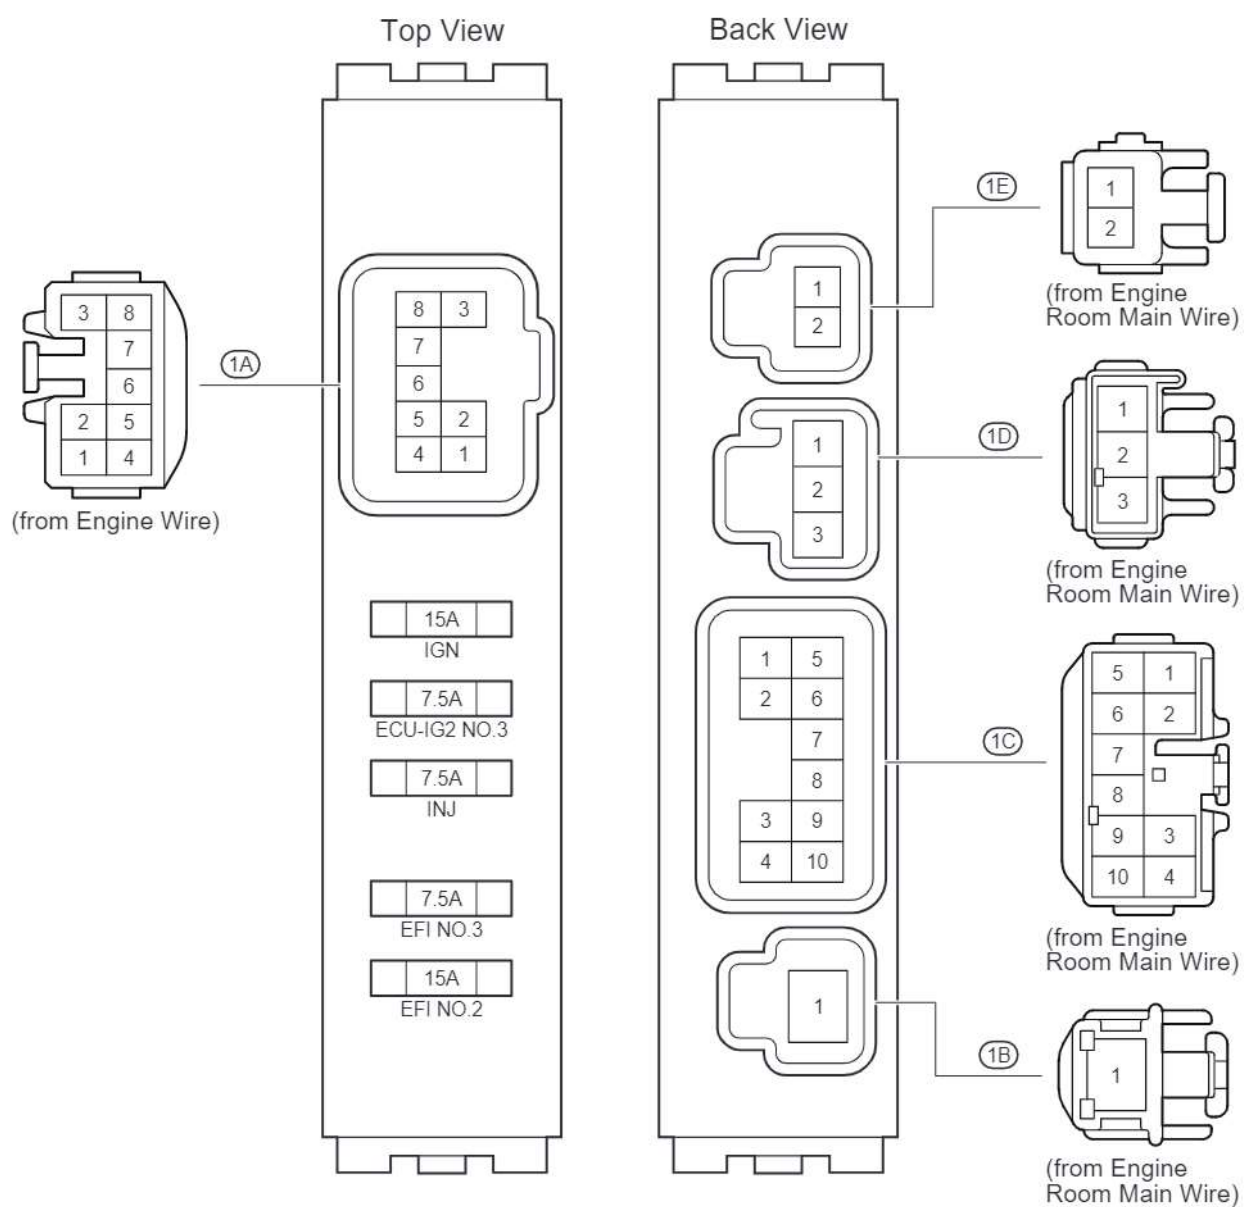

F RELAY LOCATIONS


① : Engine Room R/B Assembly	Front Fender Apron LH (See Page 20)
○ : Engine Room J/B Assembly	

Unit C

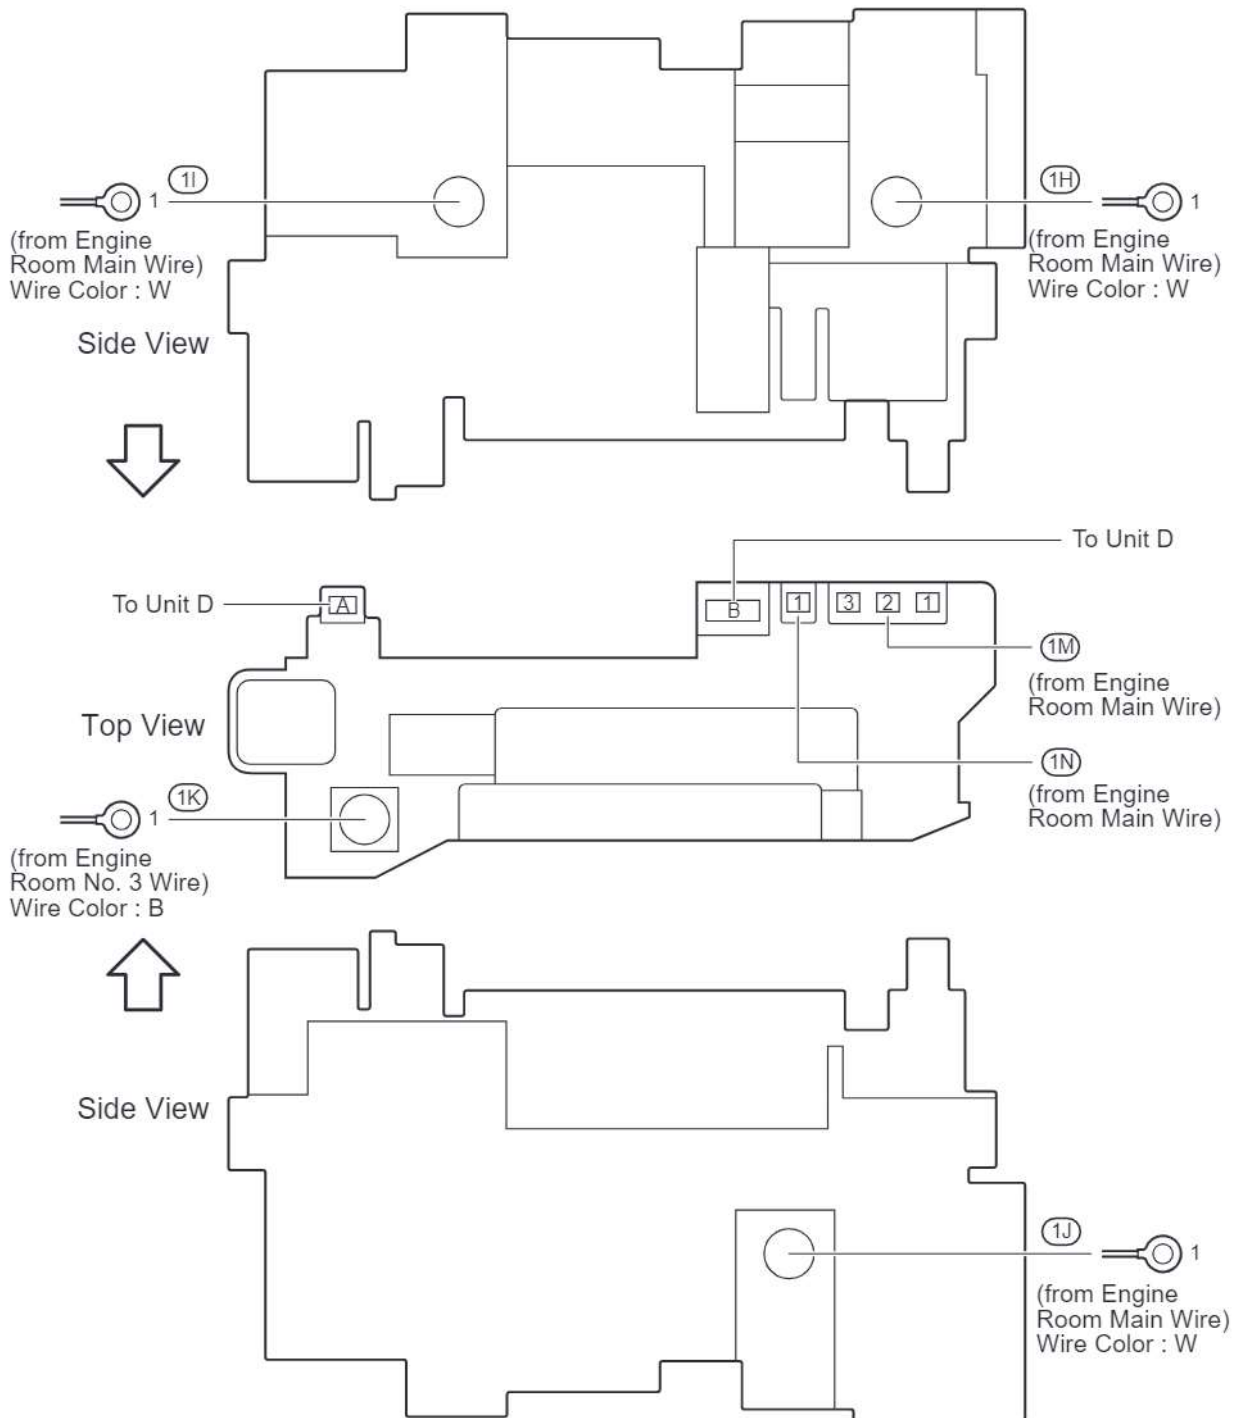


Unit D


Back View

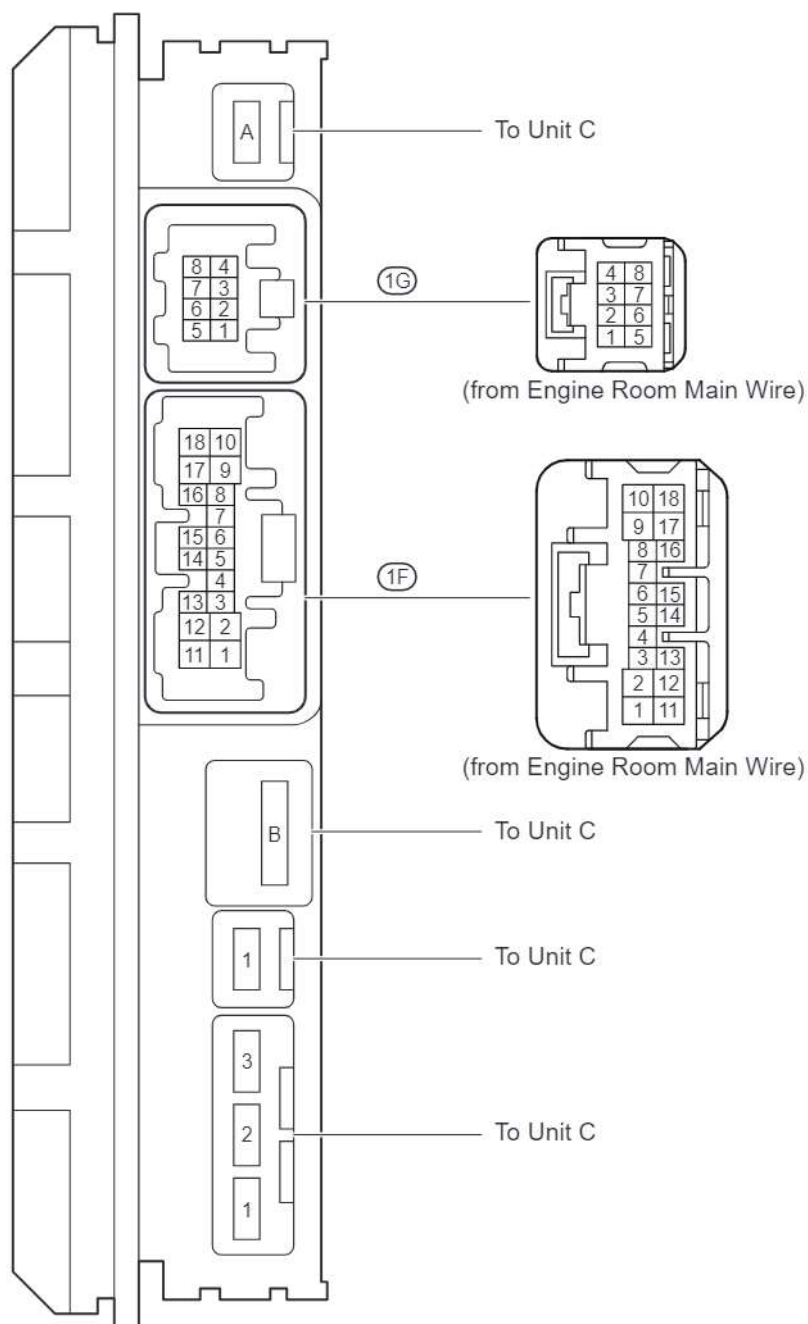

F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

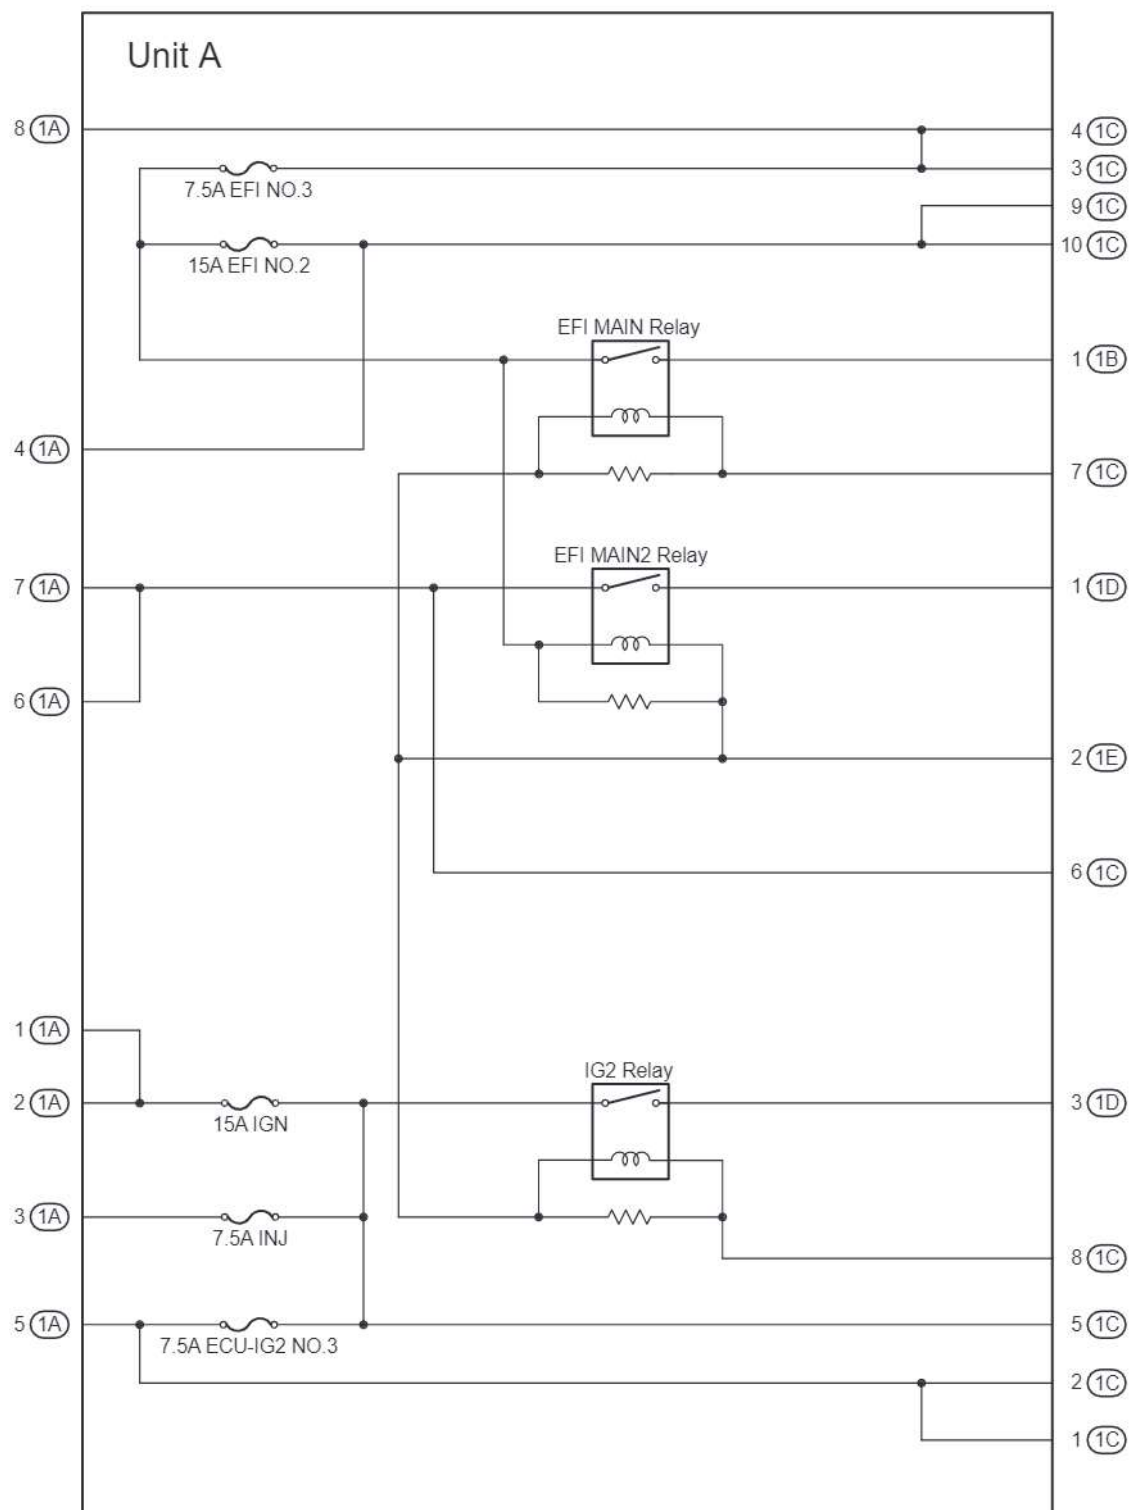


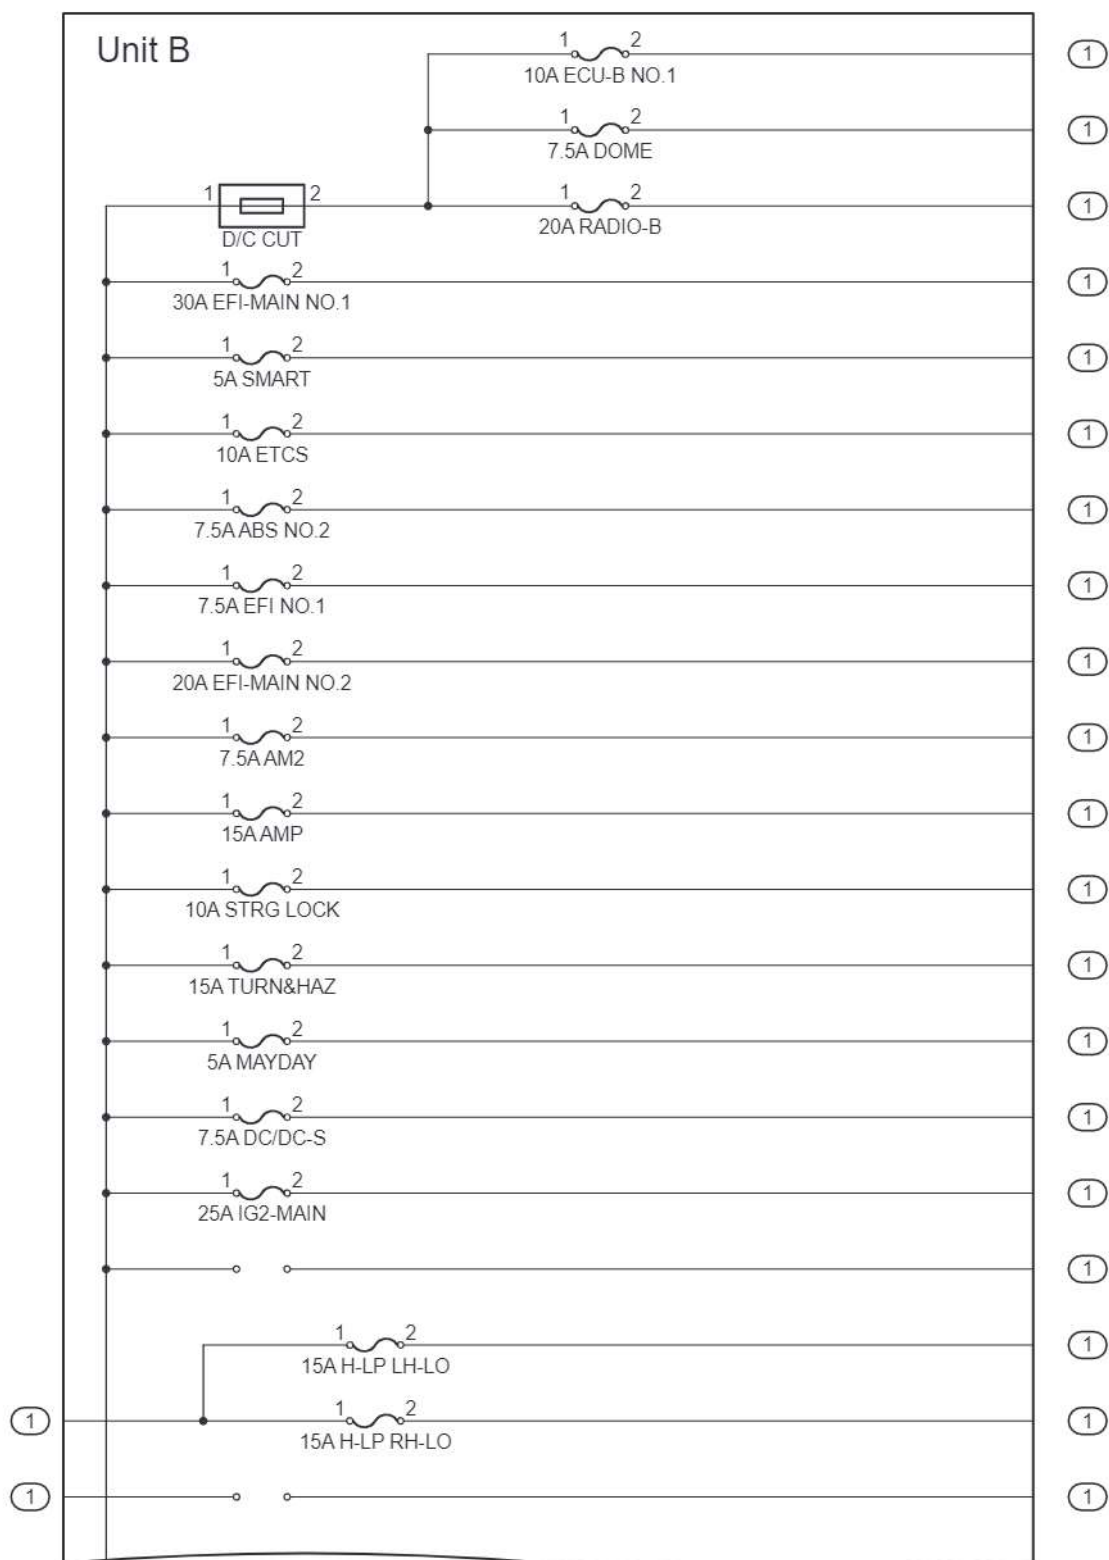

(Cont. Next Page)


F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

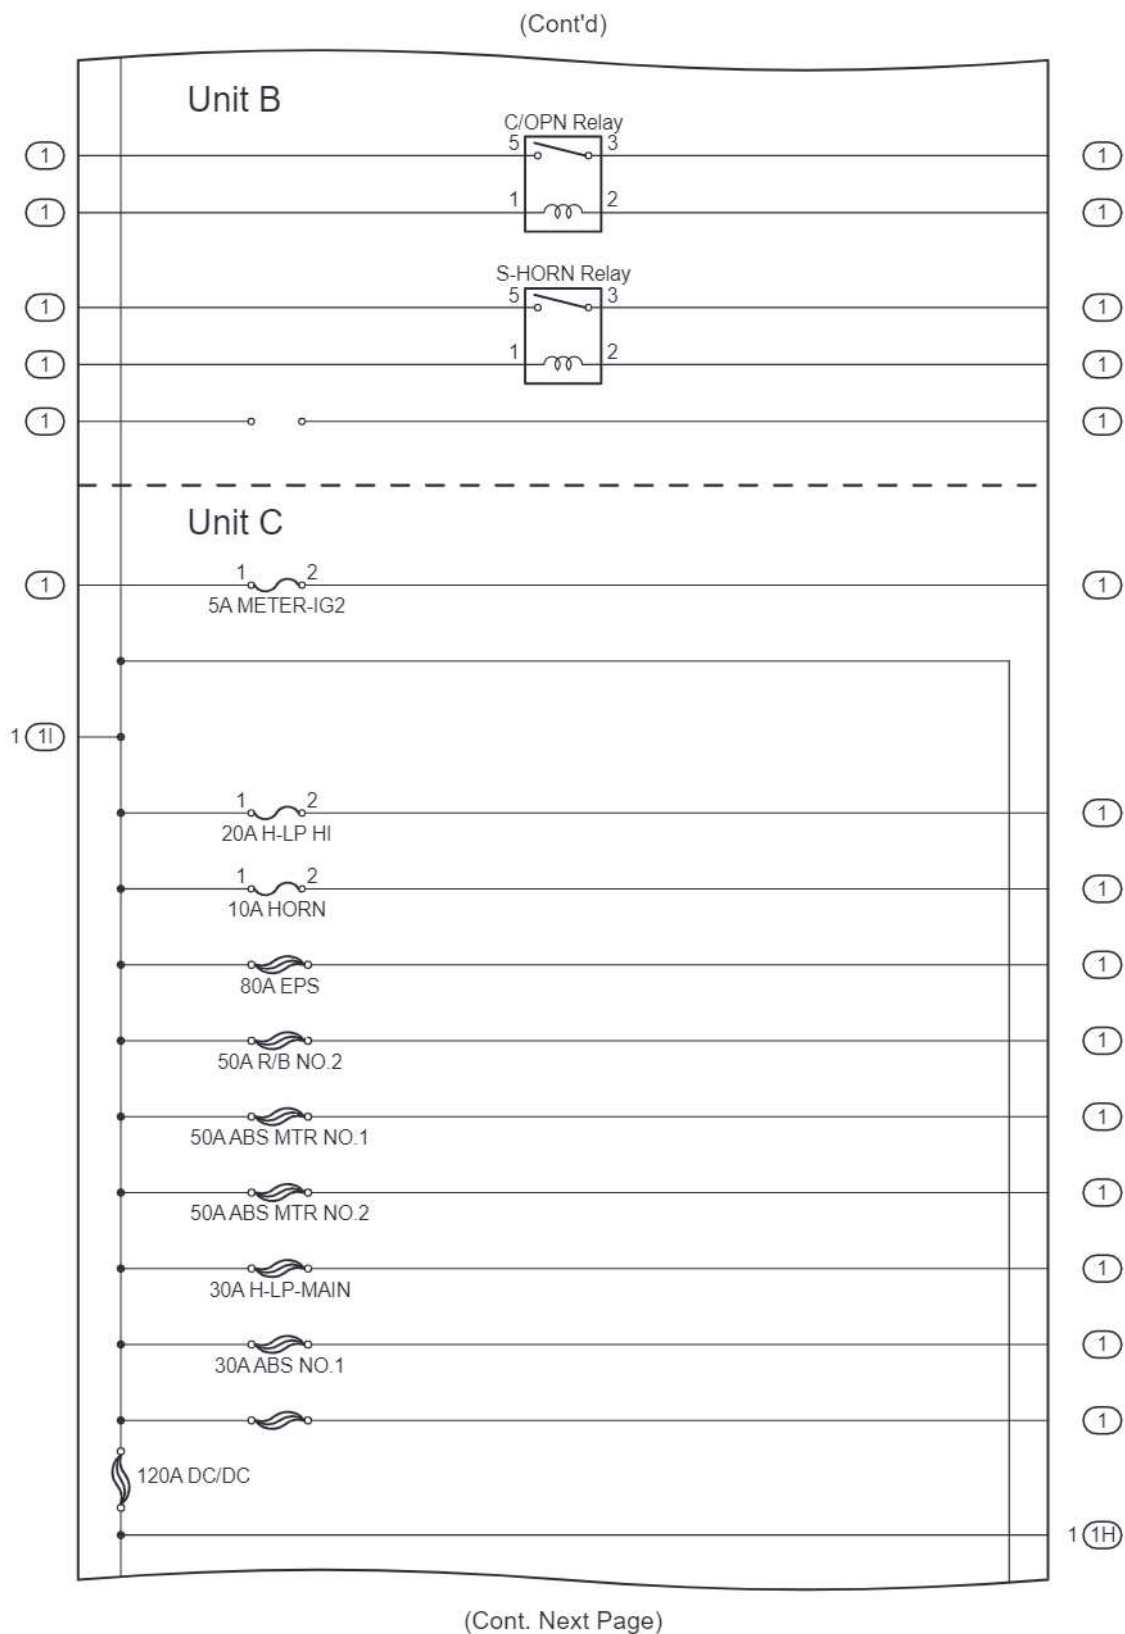


* 3:w/ LED Daytime Running Light
 * 4:w/o LED Daytime Running Light

(Cont'd)

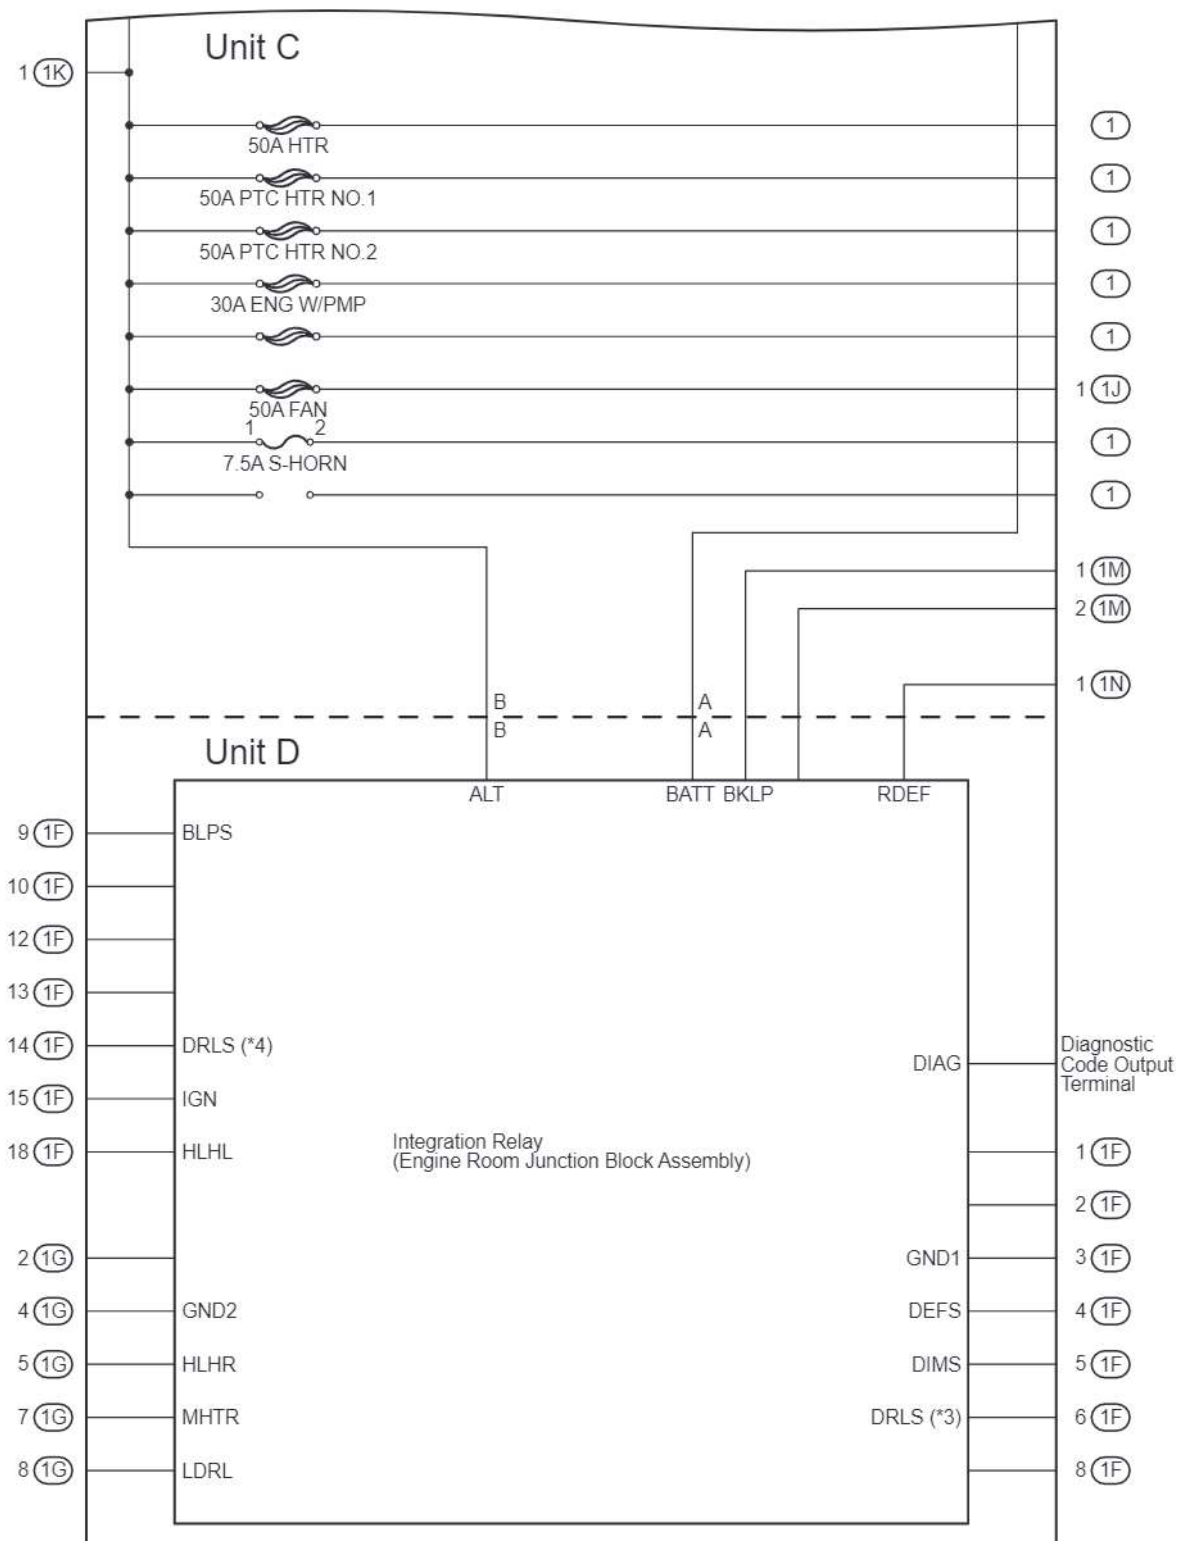


F RELAY LOCATIONS

Fusible Link Block Assembly	Right Luggage Compartment (See Page 21)
-----------------------------	---

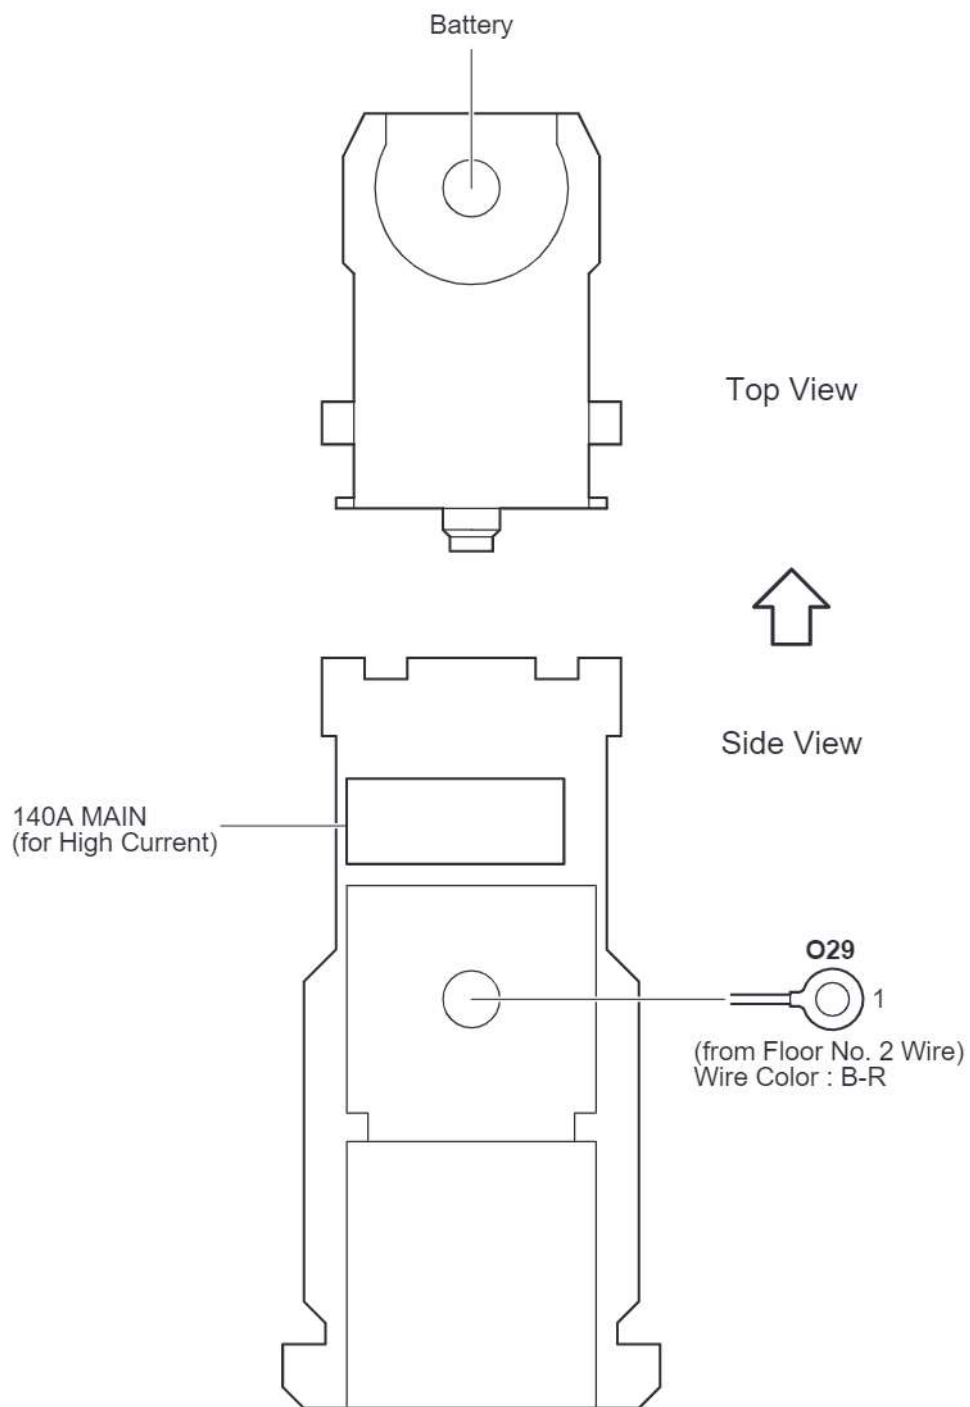


[Fusible Link Block Assembly Inner Circuit]

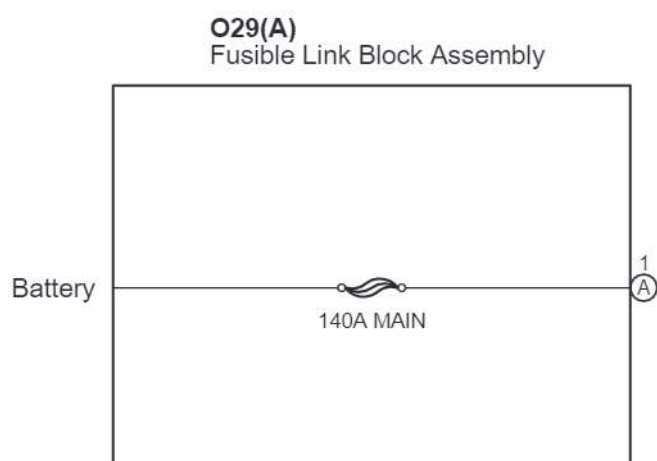


F RELAY LOCATIONS

[Engine Compartment]

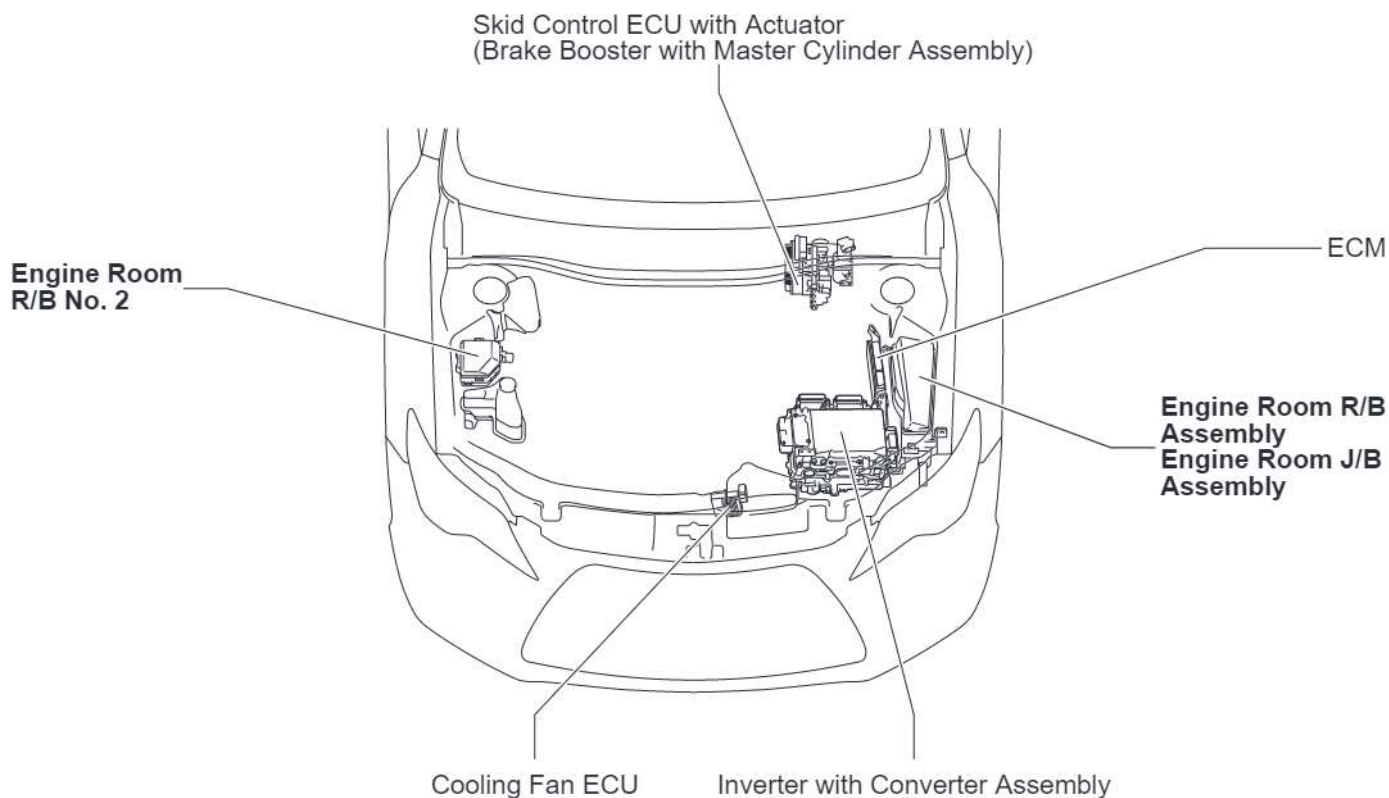

[Instrument Panel]

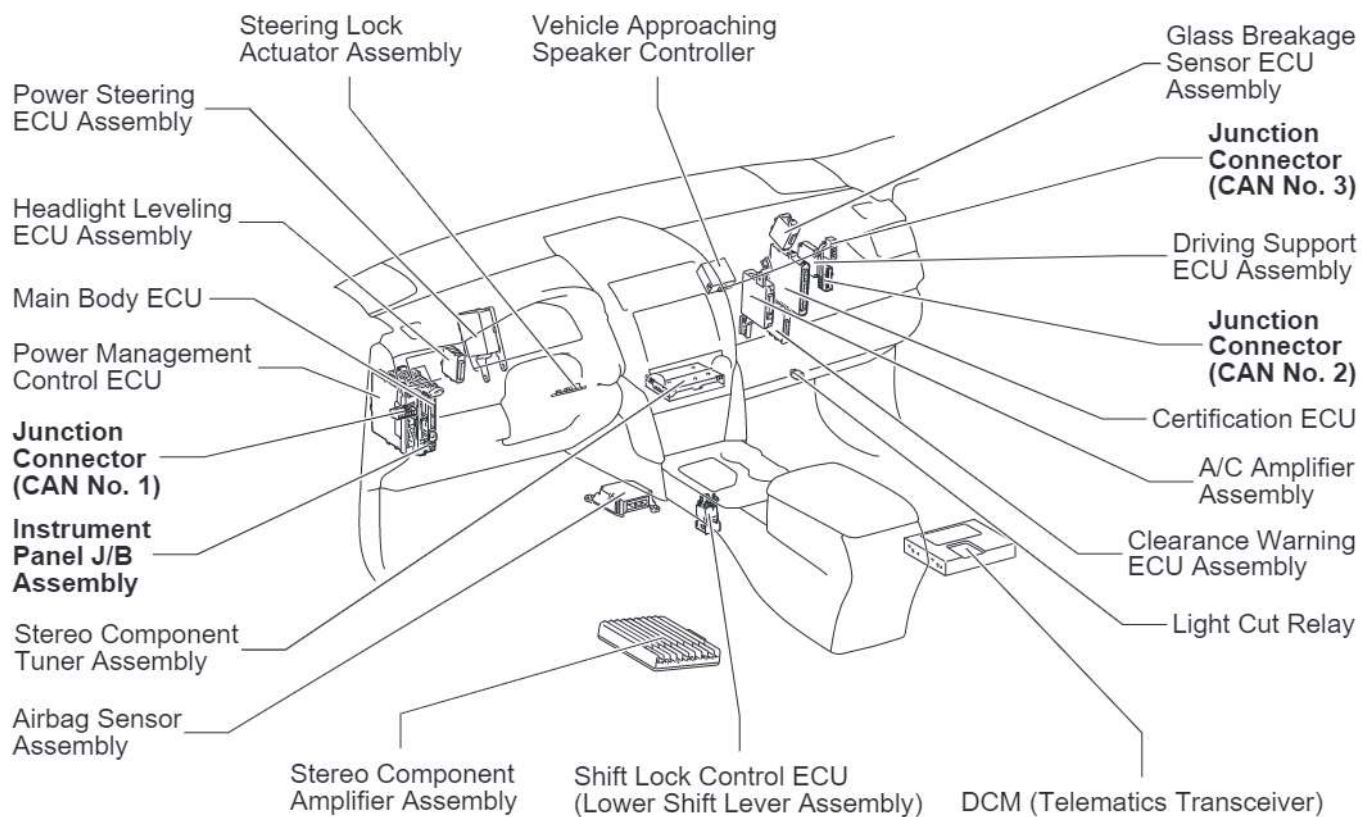


F RELAY LOCATIONS




: Instrument Panel J/B Assembly

Instrument Panel Reinforcement (See Page 20)

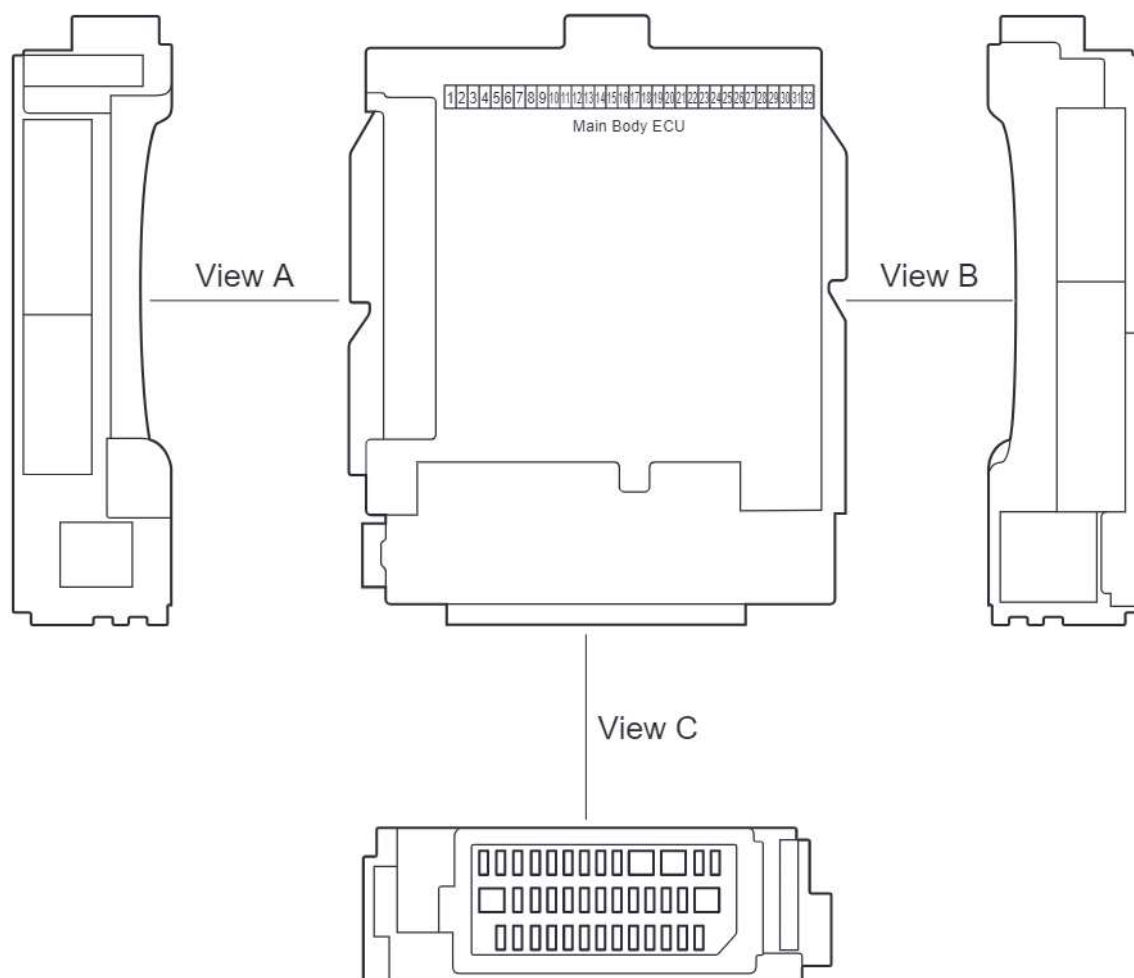

View A

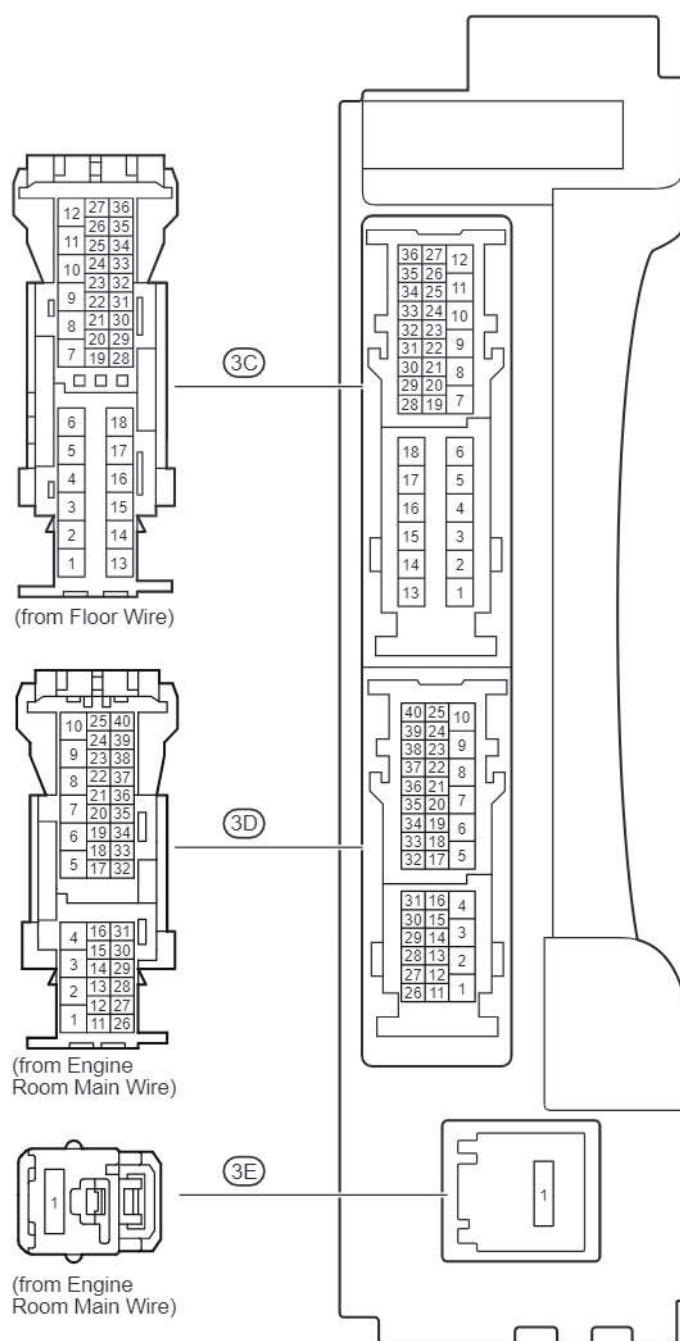


F RELAY LOCATIONS




: Instrument Panel J/B Assembly

Instrument Panel Reinforcement (See Page 20)

View B

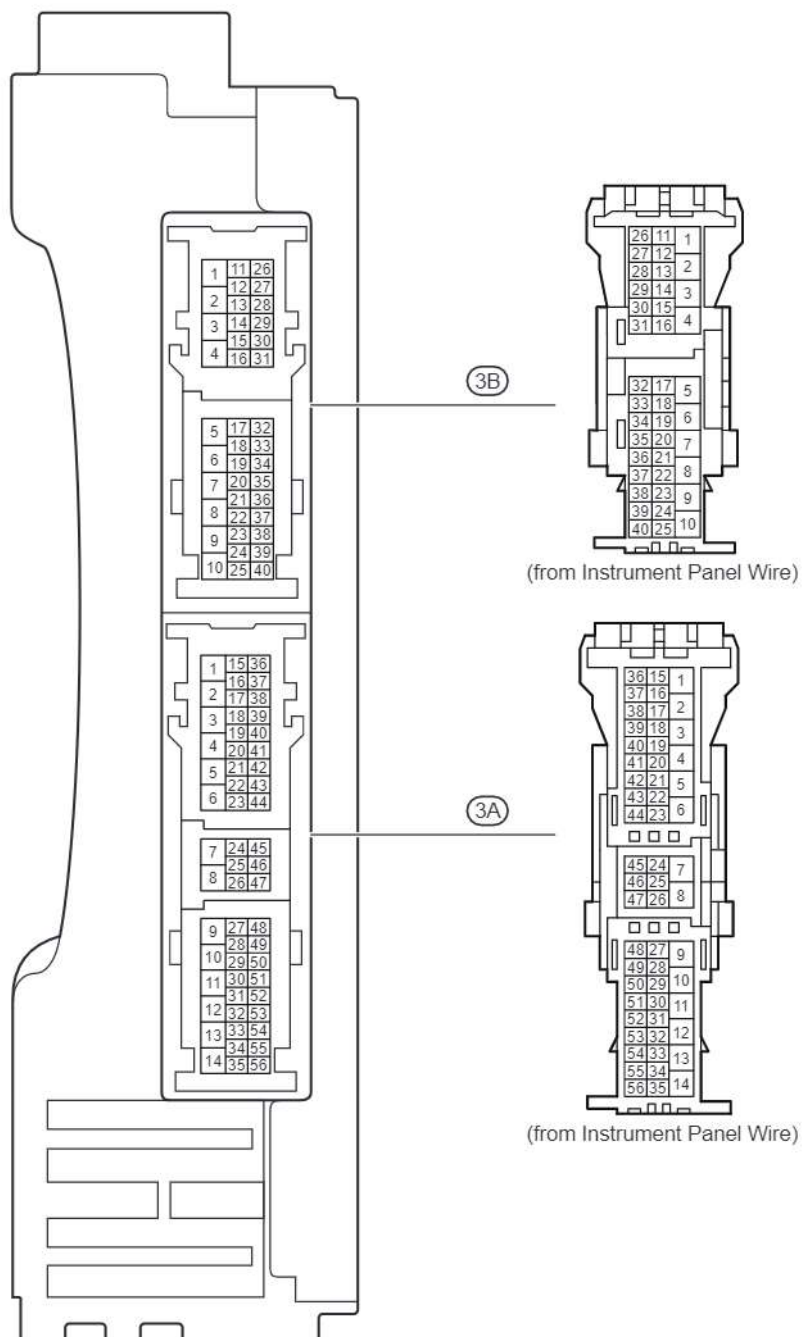


View C

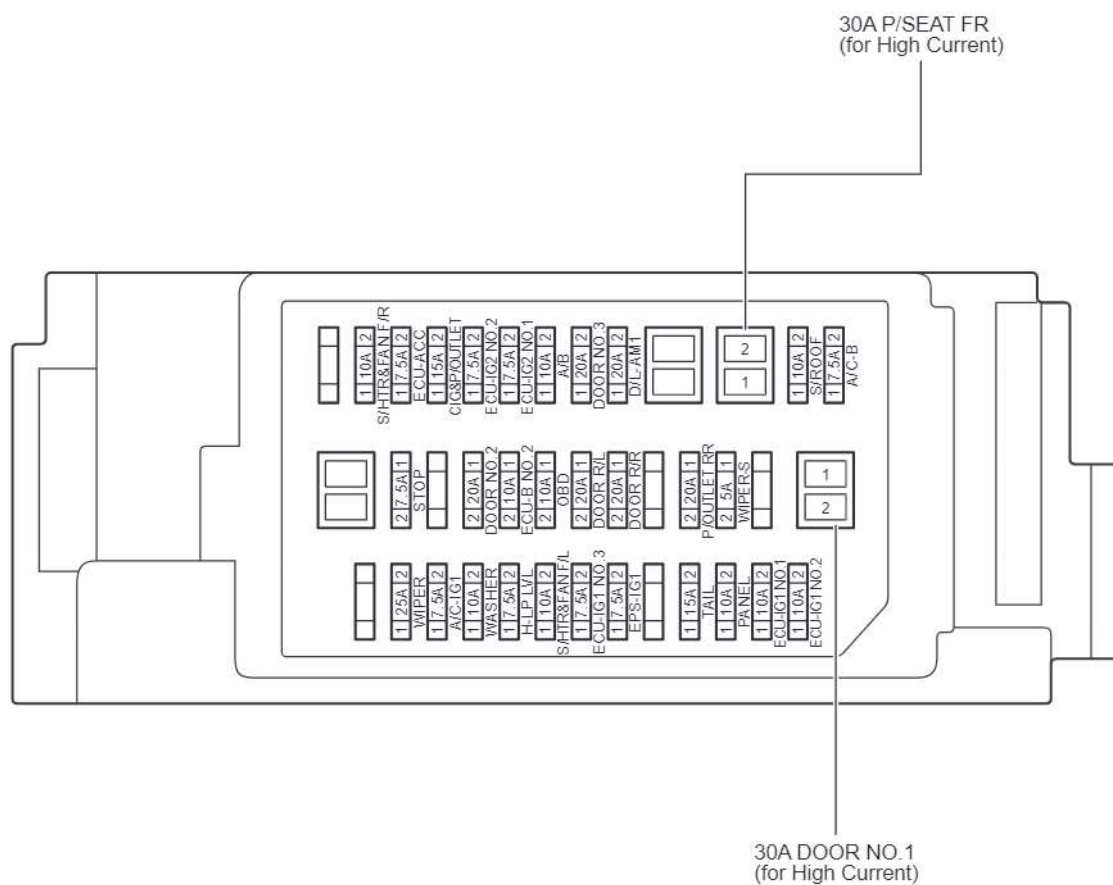


F RELAY LOCATIONS

[Instrument Panel J/B Assembly Inner Circuit]

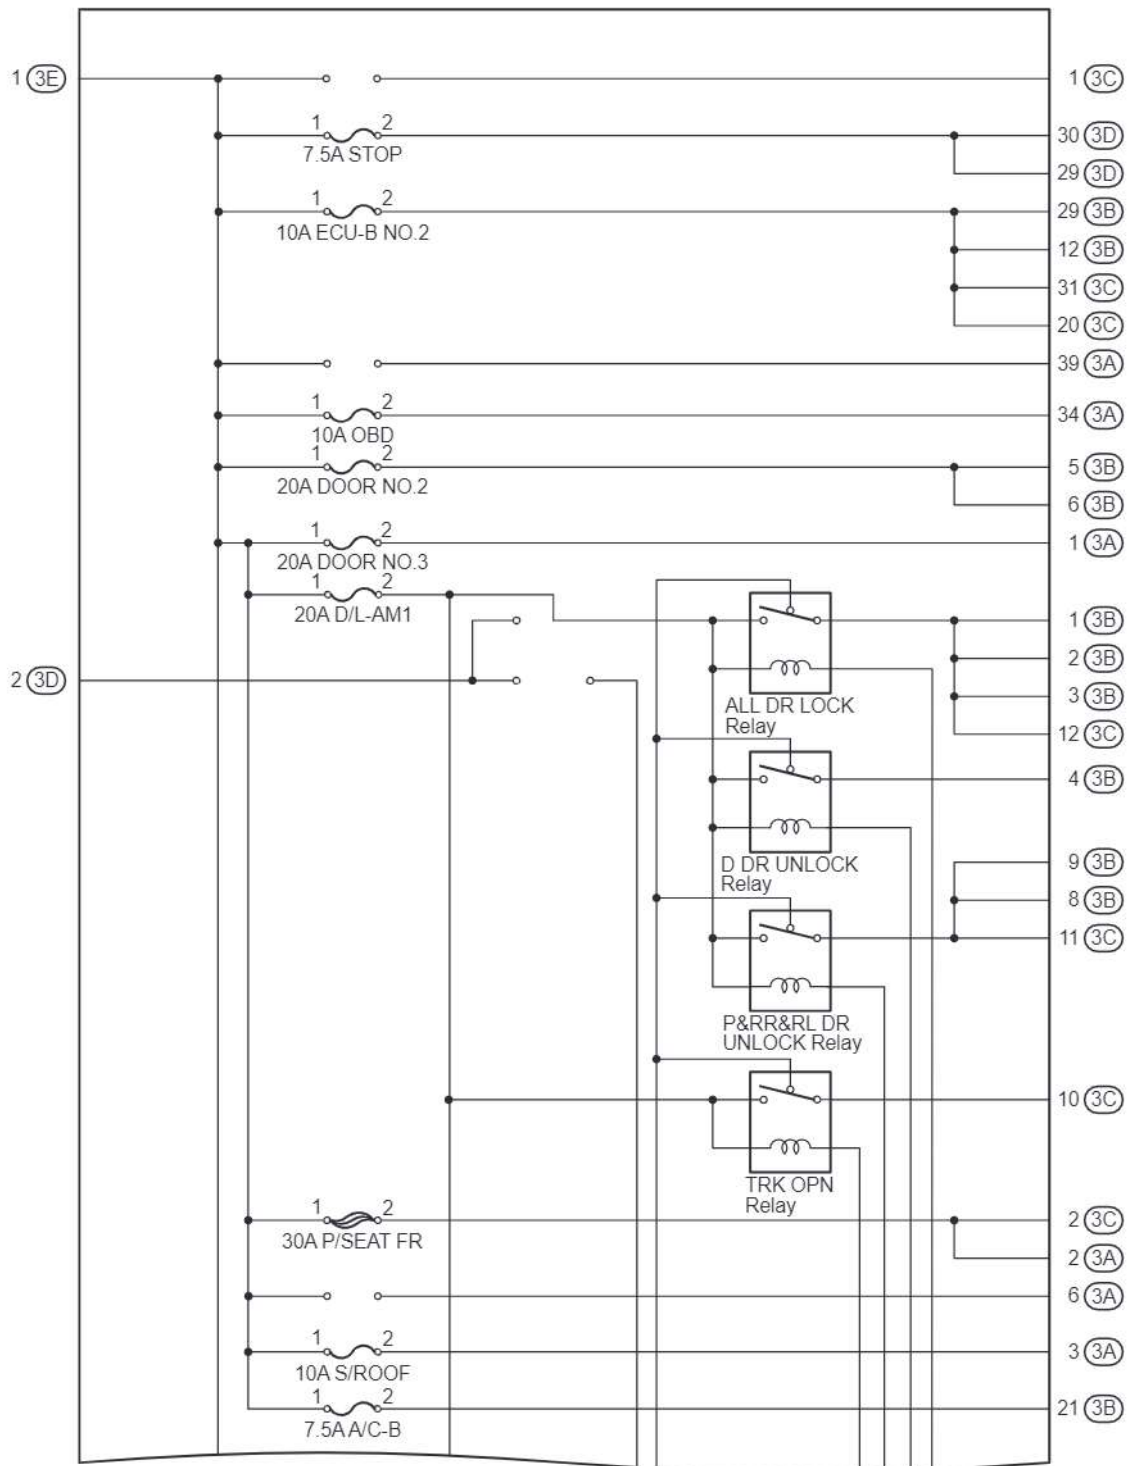

(Cont. Next Page)

(Cont'd)

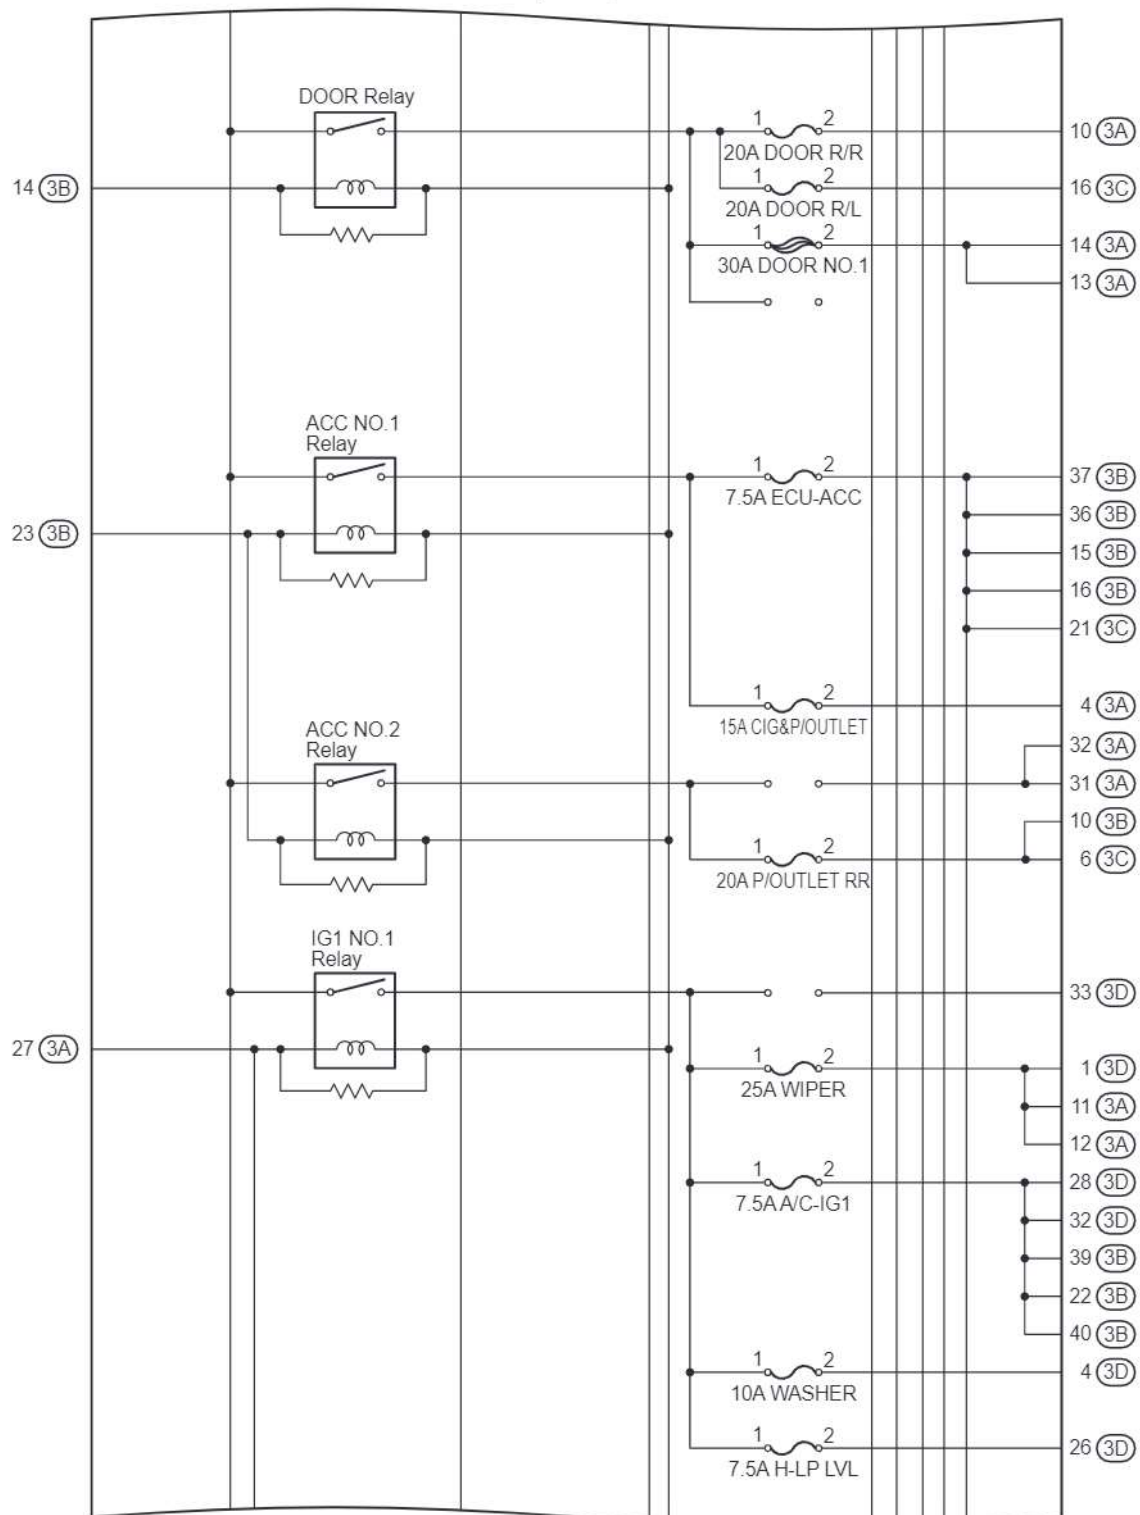


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Assembly Inner Circuit]

(Cont'd)

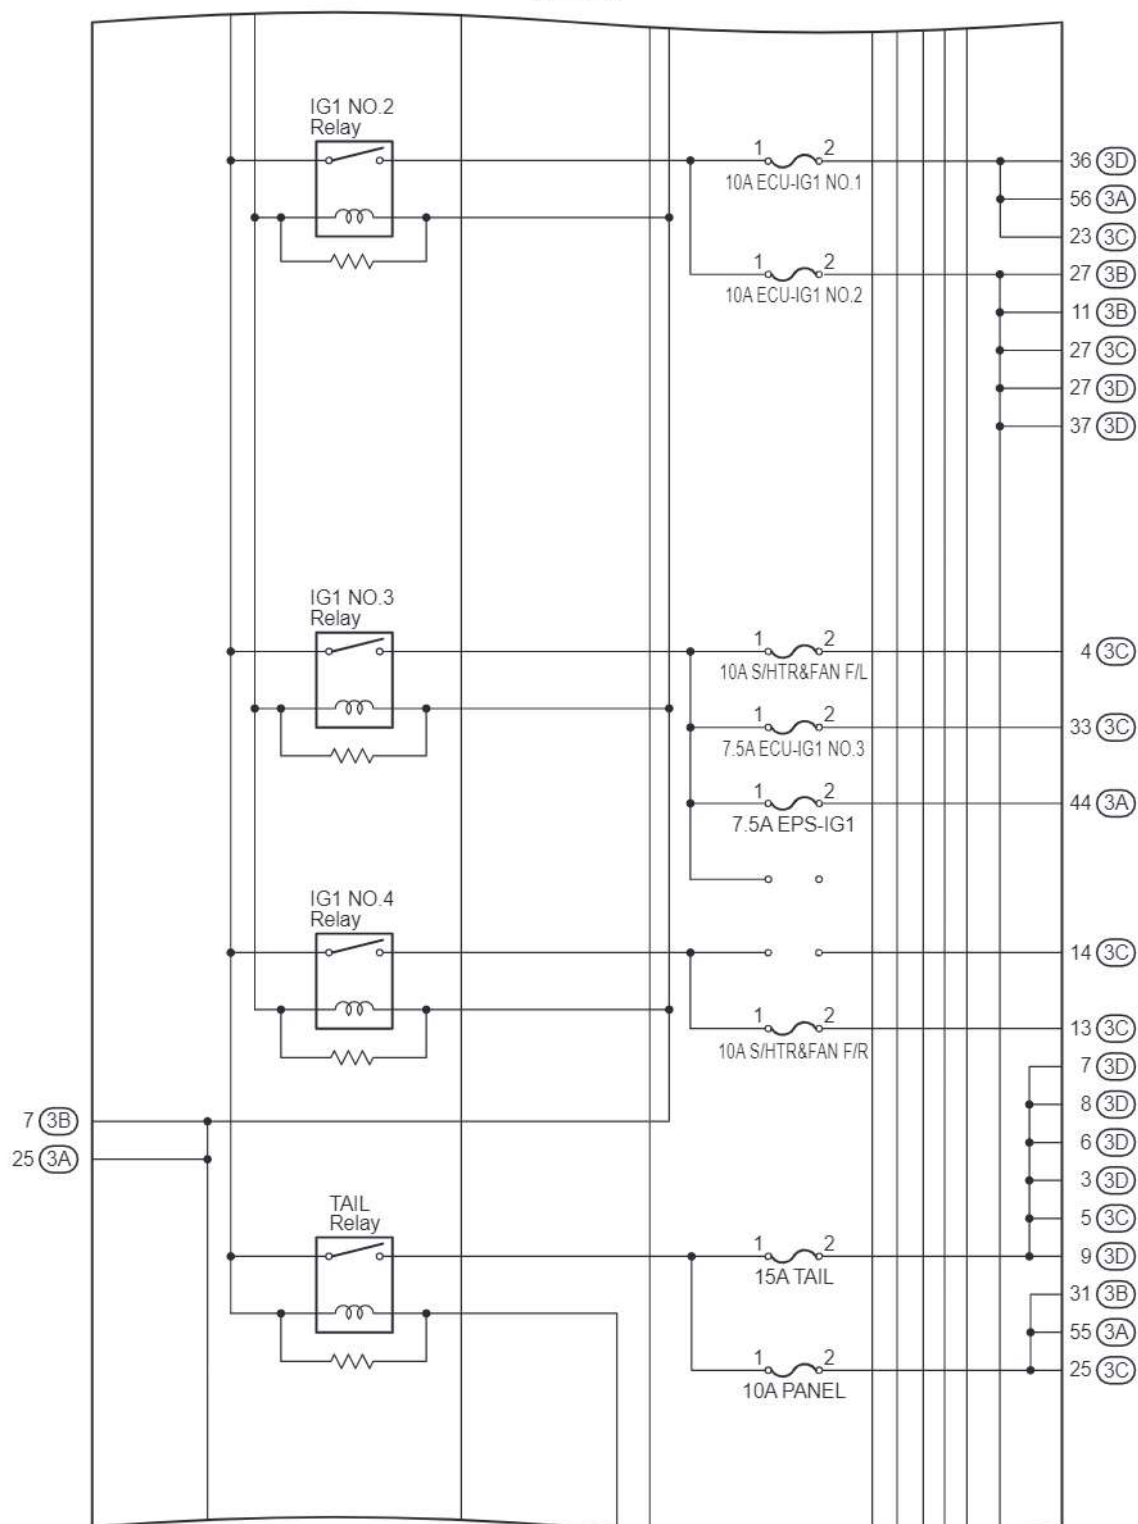

(Cont. Next Page)


(Cont'd)

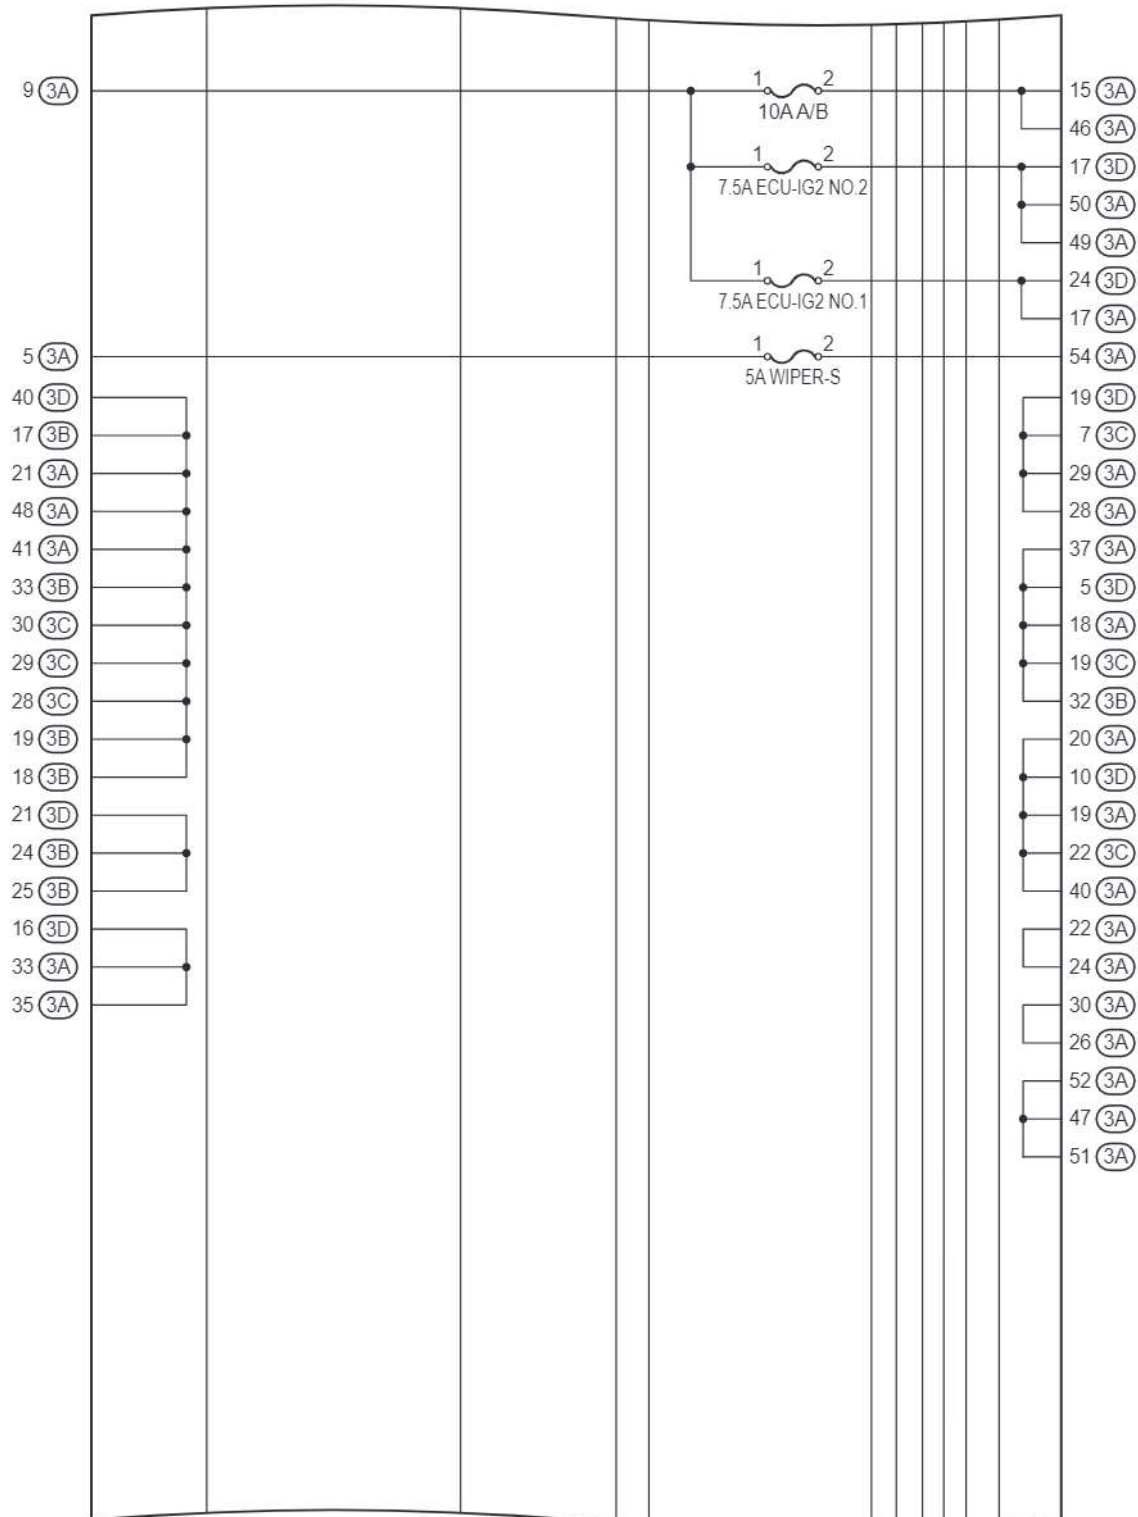

(Cont. Next Page)


F RELAY LOCATIONS

[Instrument Panel J/B Assembly Inner Circuit]

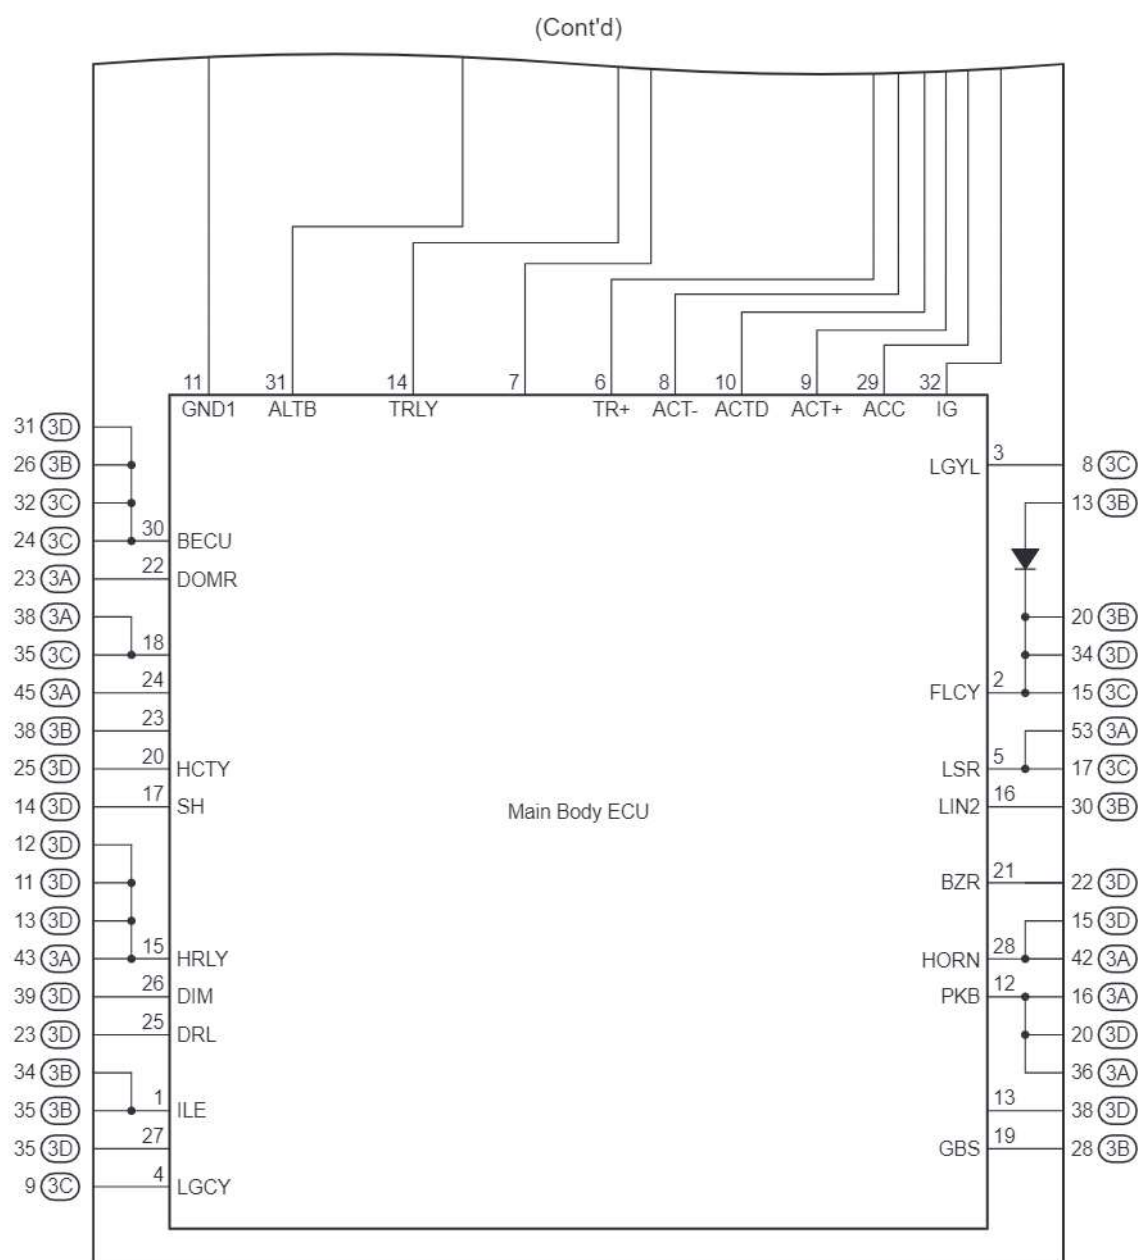


F RELAY LOCATIONS

[Engine Compartment]

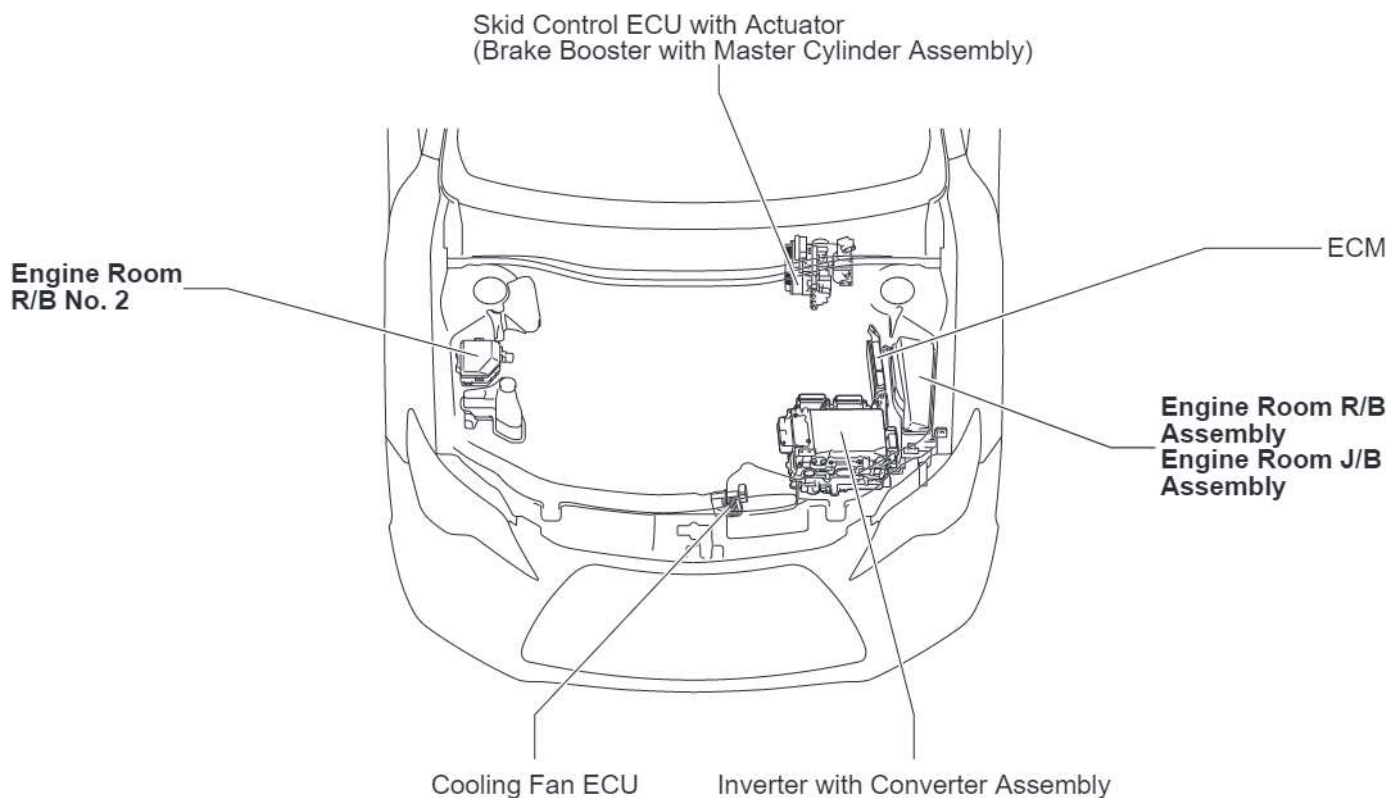


[Instrument Panel]

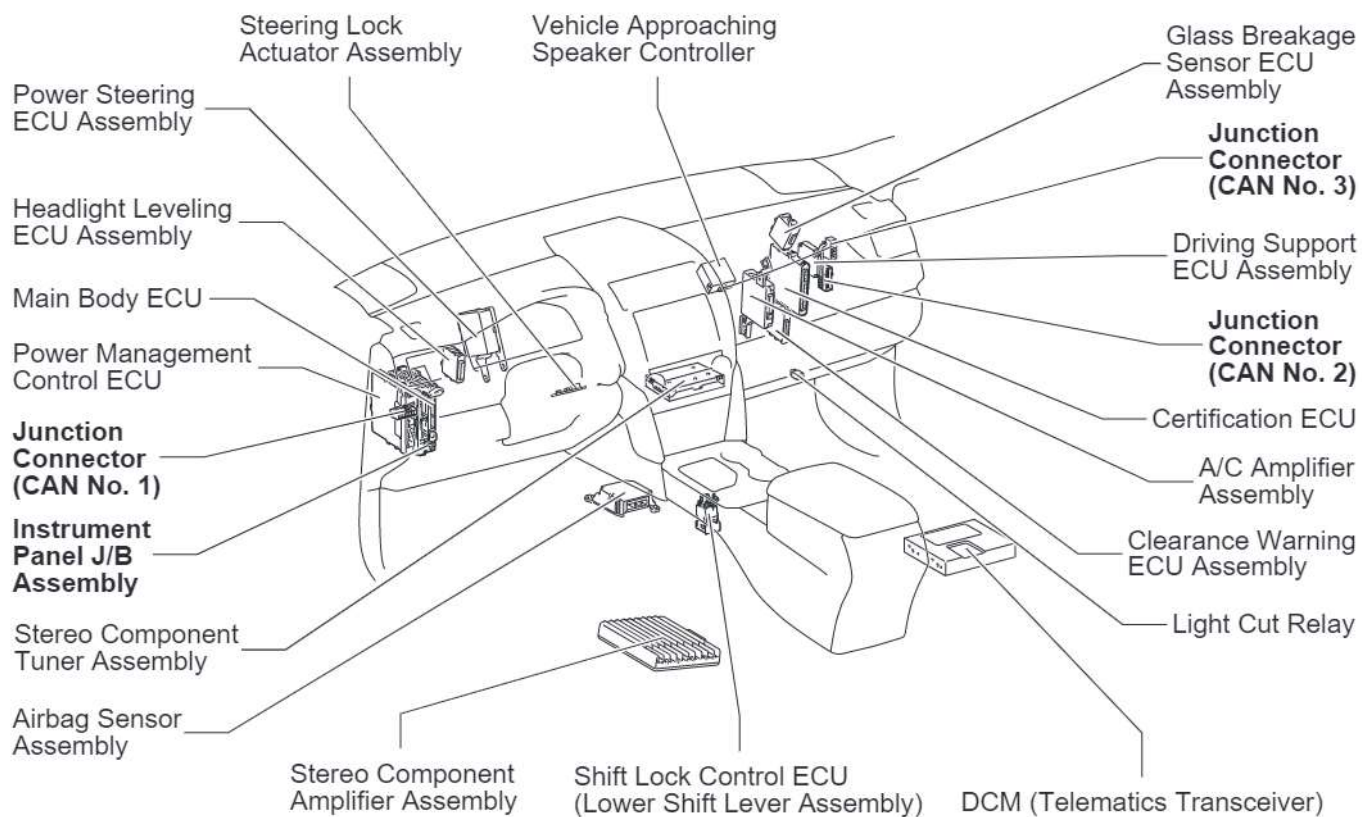

F RELAY LOCATIONS

Junction Connector (CAN No. 1)


Instrument Panel Reinforcement (See Page 20)

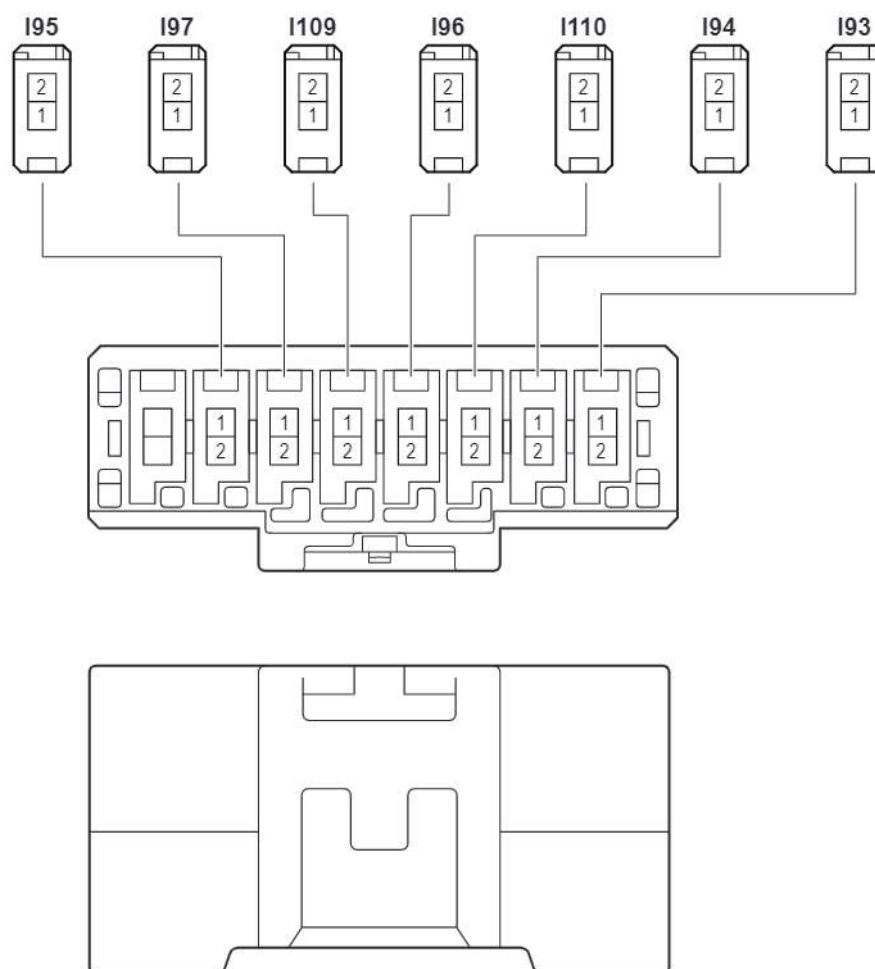

* I93, I94, I95, I96, I97, I109 and I110 are Interchangeable.

[Junction Connector (CAN No. 1) Inner Circuit]


I93(A), I94(B), I95(C), I96(D), I97(E), I109(H),
I110(I)
Junction Connector

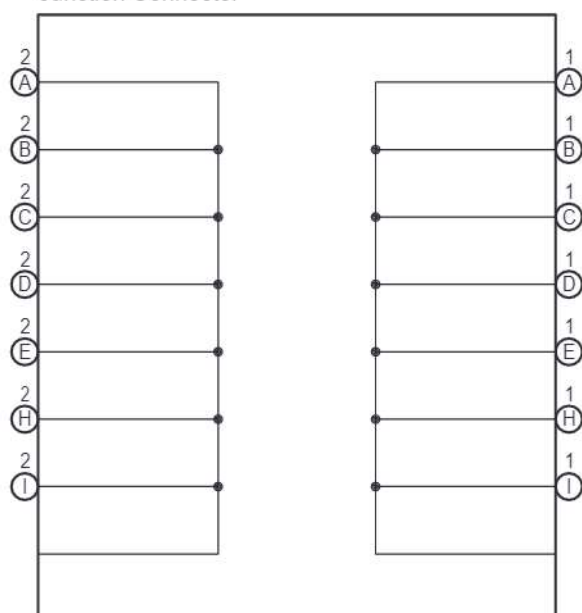

F RELAY LOCATIONS

Junction Connector (CAN No. 2)

Instrument Panel Reinforcement (See Page 20)

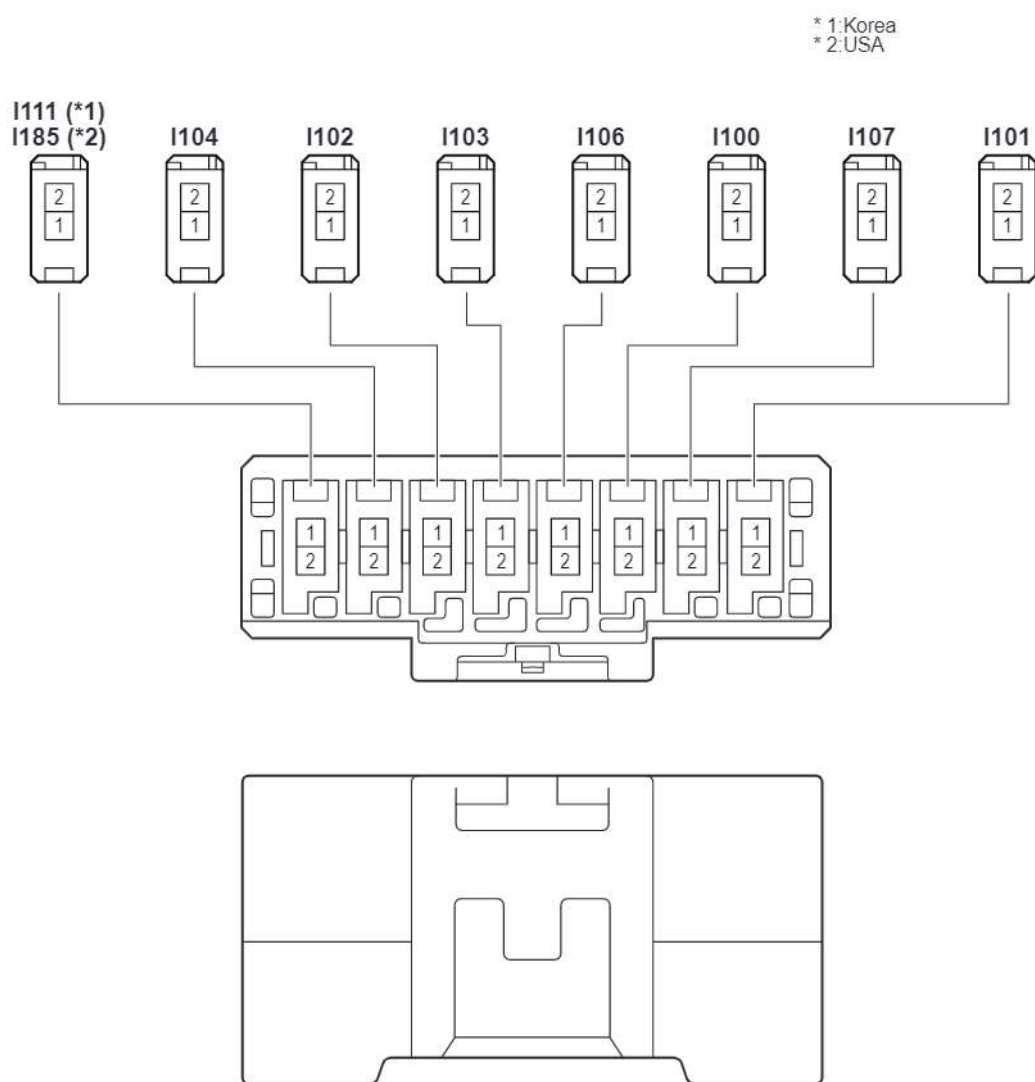


* I100, I101, I102, I103, I104, I106, I107, I111 and I185 are Interchangeable.

[Junction Connector (CAN No. 2) Inner Circuit]

* 1: Korea
* 2: USA


I100(A), I101(B), I102(C), I103(D), I104(E), I106(G),
I107(H), I111(J), I185(K)
Junction Connector

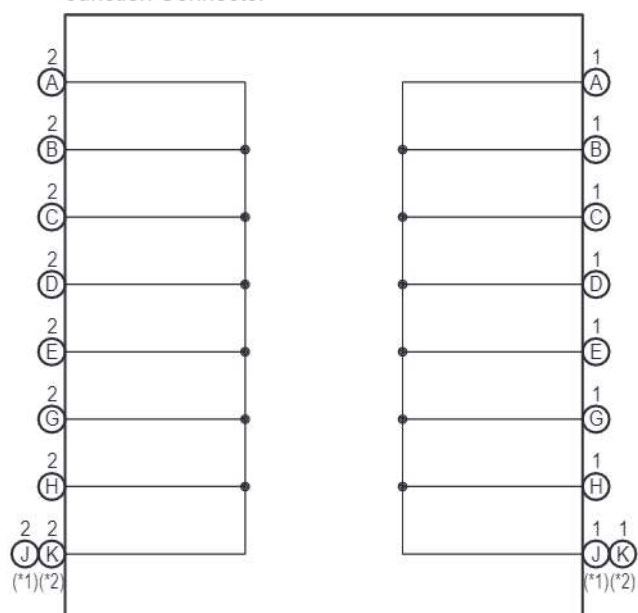

F RELAY LOCATIONS


Junction Connector (CAN No. 3)

Instrument Panel Reinforcement (See Page 20)

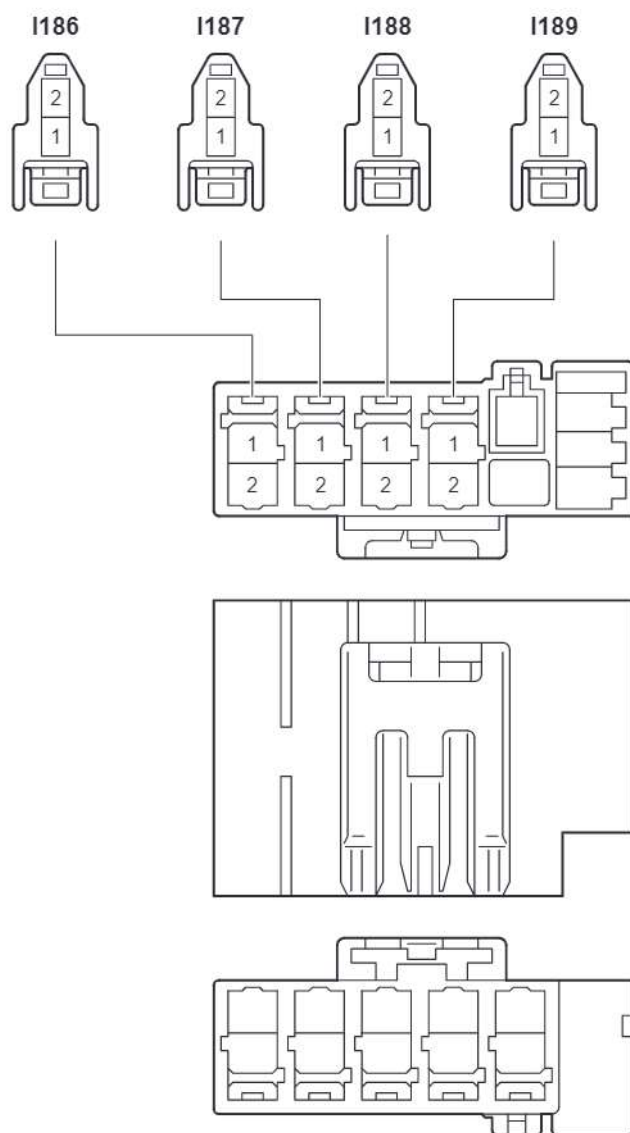


* I186, I187, I188 and I189 are Interchangeable.

[Junction Connector (CAN No. 3) Inner Circuit]

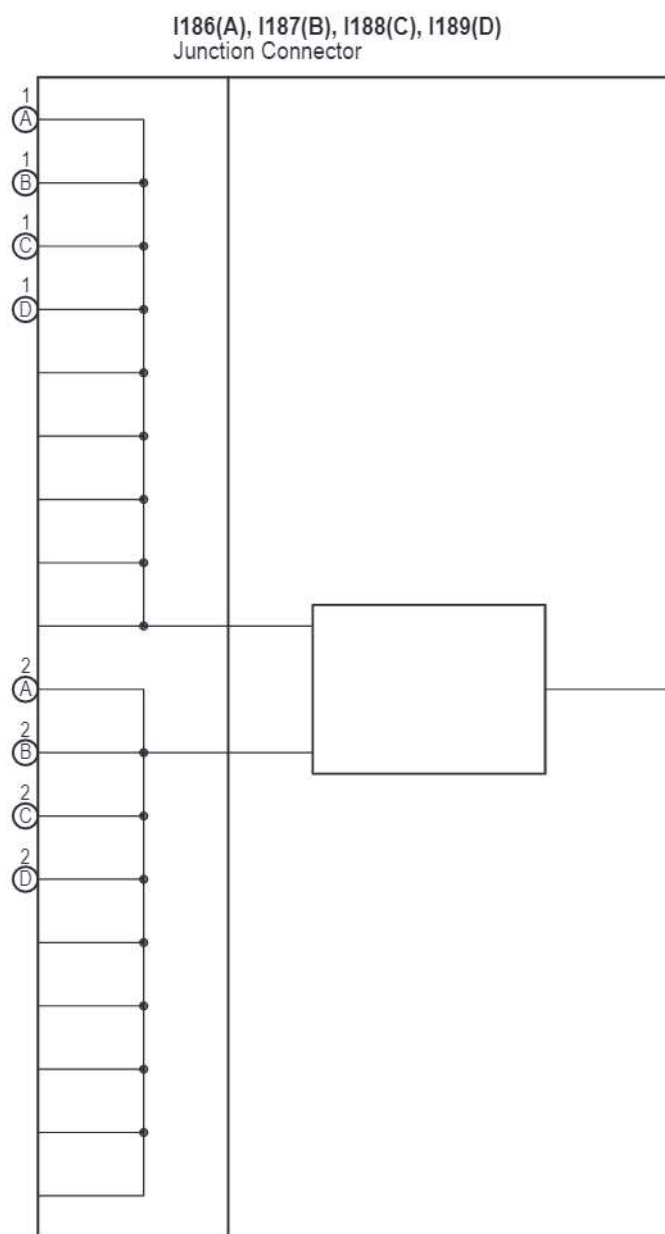

[Body]

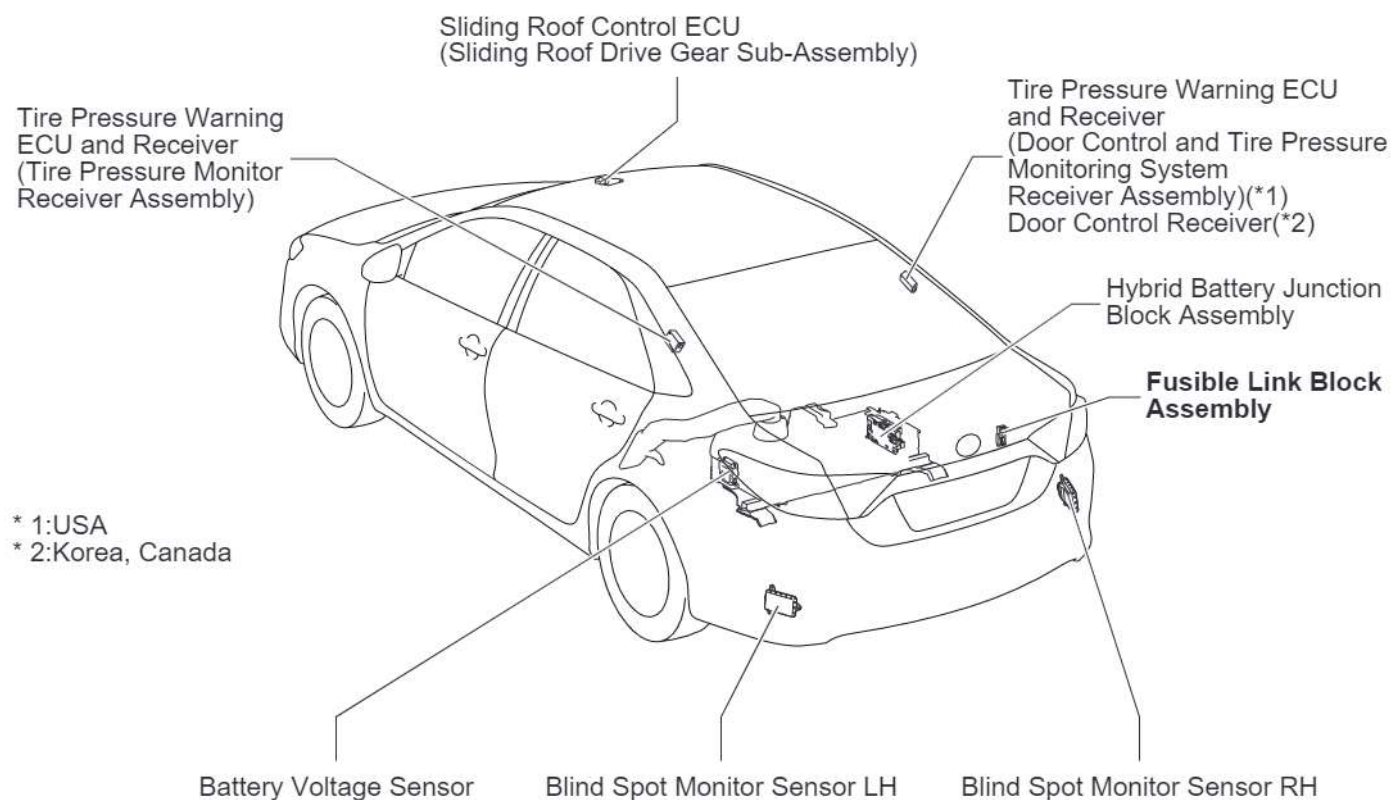

[Seat]

