

Dodge Magnum SRT 2008 fuse box diagram

Front Power Distribution Center

A power distribution center is located in the engine compartment. Interior Fuses

Cavity	Cartridge fuse	Mini fuse	Description
1	—	15	Washer Motor
2	—	25	Powertrain Control Module (PCM)
3	—	25	Ignition Run/Start
4	—	25	Alternator
5	—	—	—
6	—	25	Ignition Coils/Injectors
7	—	—	—
8	—	25	Starter
9	—	—	—
10	30	—	Windshield Wiper
11	30	—	Anti-Lock Brake System (ABS) Valves
12	40	—	Radiator Fan

13	50	—	Anti-Lock Brake System (ABS) Pump Motor
14	—	—	—
15	50	—	Radiator Fan
16	—	—	—
17	—	—	—
18	—	—	—
19	—	—	—
20	—	—	—
21	—	—	—
22	—	—	—

Rear Power Distribution Center

There is also a power distribution center located in the trunk under the spare tire access panel.

Cavity	Cartridge fuse	Mini fuse	Description
1	60	—	Ignition Off Draw (IOD)

2	40	—	Integrated Power Module (IPM)
3	—	—	—
4	40	—	Integrated Power Module (IPM)
5	40	—	Heated Seats – if equipped
6	—	20	Fuel Pump
7	—	20	Sub Amp – if equipped
8	—	15	Diagnostic Link Connector (DLC)/Wireless Control Module (WCM)/Wireless Ignition Node (WIN)
9	—	20	Power Outlet
10	—	—	—
11*	—	—	—
12*	—	—	—
13*	—	—	—
14	—	10	AC Heater Control/Cluster/Security Module – if equipped
15	—	20	Trailer Tow Brake Module – if equipped
16	—	20	Rear Power Outlet

17	—	20	Cluster
18	—	20	Selectable Power Outlet
19	—	10	Stop Lights
20	—	20	Rear Wiper Motor
21	—		—
22	—		—
23	—		—
24	—		—
25	—		—
26	—		—
27	—	10	Occupant Restraint Controller (ORC)
28	—	10	Ignition Run
29	—	5	Cluster/Electronic Stability Program (ESP)/Powertrain Control Module (PCM)/STOP LIGHT Switch
30	—	10	Door Modules/Power Mirrors/Steering Control Module (SCM)
31	—		—

32	—		—
33	—		—
34	—		—
35	—	5	Antenna Module – if equipped/Power Mirrors
36	—	20	Hands-Free Phone – if equipped/Video Monitor – if equipped/Radio
37	—	15	Transmission
38	—	10	Cargo Light/Satellite Receiver (SDARS) Video – if equipped/Vehicle Information Module – if equipped
39	—	10	Heated Mirrors – if equipped
40	—	5	Auto Inside Rearview Mirror/Heated Seats – if equipped/Switch Bank
41	—	10	AC Heater Control/Headlights/Tire Pressure Monitoring – if equipped
42	30	—	Front Blower Motor
43	30	—	Rear Window Defroster
44	20	—	Amplifier – if equipped/Sunroof – if equipped

* Cavities 11, 12, and 13 contain self-resetting fuses (circuit breakers. The cluster and the driver SEAT switch are fused by the 25-amp circuit breaker in cavity 11. The passenger SEAT switch is fused by the 25-amp circuit breaker in cavity 12. The door modules, the driver power WINDOW switch, and the passenger power WINDOW switch are fused by the 25-amp circuit breaker in cavity 13.