


Dodge Dakota 2000 – 2004 fuse box diagram

Passenger Compartment Fuse Box

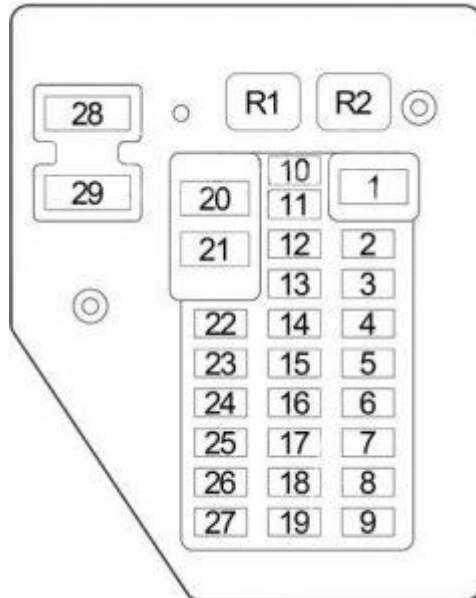


Dodge Dakota – fuse box diagram – passenger compartment

No.	A	Protected Component
1	15	Sentry Key Immobilizer Module, Instrument Cluster, Dome Lamp, Glove Box Lamp and Switch, Driver Door Module, Data Link Connector, Overhead Console, Cargo Lamp, Radio ('00-'01), Center Console Lamp ('00-'01)
2	20	Horn Relay
3	20	Radio ('02-'04)
4	20	Park Lamp Relay (Front Park/Turn Signal Lamp, Front Side Marker Lamp, License Lamp, Rear Tail/Stop/Turn Signal Lamp, Central Timer Module, Fuse (Engine Compartment): "T")
5	20	Front Wiper Relay, Central Timer Module, Multi-Function Switch, Wiper Motor

6	-	-
7	-	-
8	10	Instrument Cluster, Powertrain Control Module, Transmission Control Module
9	5	Instrument Cluster, A/C Heater Control, Radio, Transfer Case Selector Switch, Overhead Console, Shift Bezel Lamp, Cigar Lighter
10	10	Powertrain Control Module, Fuel Pump Relay, Radiator Fan Relay, Sentry Key Immobilizer Module
11	10	Air Conditioner Compressor Clutch Relay, Automatic Day/Night Mirror, Overhead Console, Central Timer Module, Transfer Case Selector Switch, Duty Cycle EVAP/Purge Solenoid ('00-'01)
12	10	Starter Relay, Powertrain Control Module
13	20	Amplifier ('02-'04)
	15	Amplifier ('00-'01)
14	10	Instrument Cluster
15	10	Power Mirror
16	-	-
17	15	Cigar Lighter/Power Outlet
18	10	Radio

19	10	Combination Flasher
20	10	Airbag Control Module, Passenger Airbag On/Off Switch
21	10	Airbag Control Module
22	–	–
23	–	–
24	15	Rear Window Defogger Relay
25	10	Heating and Air Conditioning Control
26	15	Back-Up Lamp, Transmission Solenoid/TRS Assembly (4.7L + Automatic Transmission), Back-Up Lamp Switch (Manual Transmission), Passenger Door Power Lock Switch, Automatic Day/Night Mirror, Trailer Tow Connector
27	10	ABS
28	25	Driver Door Module (Power Window)
29	–	–
Relay		
R1	Horn	
R2	Park Lamp	

Engine Compartment Fuse Box

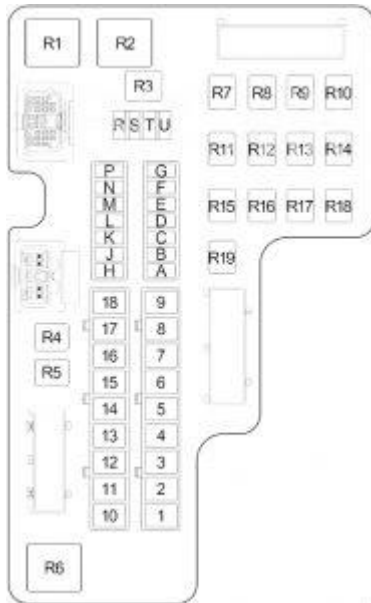

Dodge Dakota – fuse box diagram – engine compartment

No.	A	Protected Component
1	20	Combination Flasher ('02-'04)
	30	Combination Flasher ('00-'01)
2	20	Fuel Pump Relay, Powertrain Control Module
3	20	Central Timer Module
4	40	Rear Window Defogger Relay, Fuse (Passenger Compartment): "15"
5	20	Stop Lamp Switch
6	30	Electric Brake (Trailer Tow)
7	40	Fuse (Passenger Compartment): "1", "2", "3", "4", "13"
8	40	ABS

9	50	Ignition Switch (Fuse (Passenger Compartment): "21", "24", "25", "26", "27")
10	40	Ignition Switch (Fuse (Passenger Compartment): "17", "18", "19")
11	30	Automatic Shut Down Relay (Powertrain Control Module, Capacitor, Ignition Coil, Fuel Injector)
12	20	Central Timer Module
13	40	Ignition Switch (Blower Motor)
14	50	Power Seat Switch
15	40	Radiator Fan Relay
	50	Radiator Fan Relay
16	50	Starter Relay
17	50	Ignition Switch (Fuse (Passenger Compartment): "5", "28")
18	–	–
A	20	Transfer Case Control Module
B	10	Air Conditioner Compressor Clutch Relay
C	20	Trailer Tow Connector
D	20	Center Power Outlet

E	20	Ignition Switch (Fuse (Passenger Compartment): "8", "10", "11", "12", "14", "20")
F	20	Transmission Control Relay (Transmission Range Sensor (3.7L), Transmission Solenoid/Pressure Switch Assembly (3.7L), Transmission Solenoid/TRS Assembly (4.7L), Powertrain Control Module)
G	–	–
H	20	Fog Lamp Relay (Fog Lam, Headlamp Switch, Central Timer Module)
J	–	–
K	–	–
L	–	–
M	–	–
N	–	–
P	–	–
R	–	–
S	–	–
T	10	Trailer Tow Connector
U	20	Oxygen Sensor
TRelay		

R1	Radiator Fan
R2	Automatic Shut Down
R3	–
R4	–
R5	–
R6	EBL
R7	Fuel Pump
R8	–
R9	Air Conditioner Compressor Clutch
R10	Fog Lamp
R11	–
R12	Oxygen Sensor
R13	–
R14	Transmission Control
R15	–

R1 6	–
R1 7	Starter
R1 8	Wiper
R1 9	–