

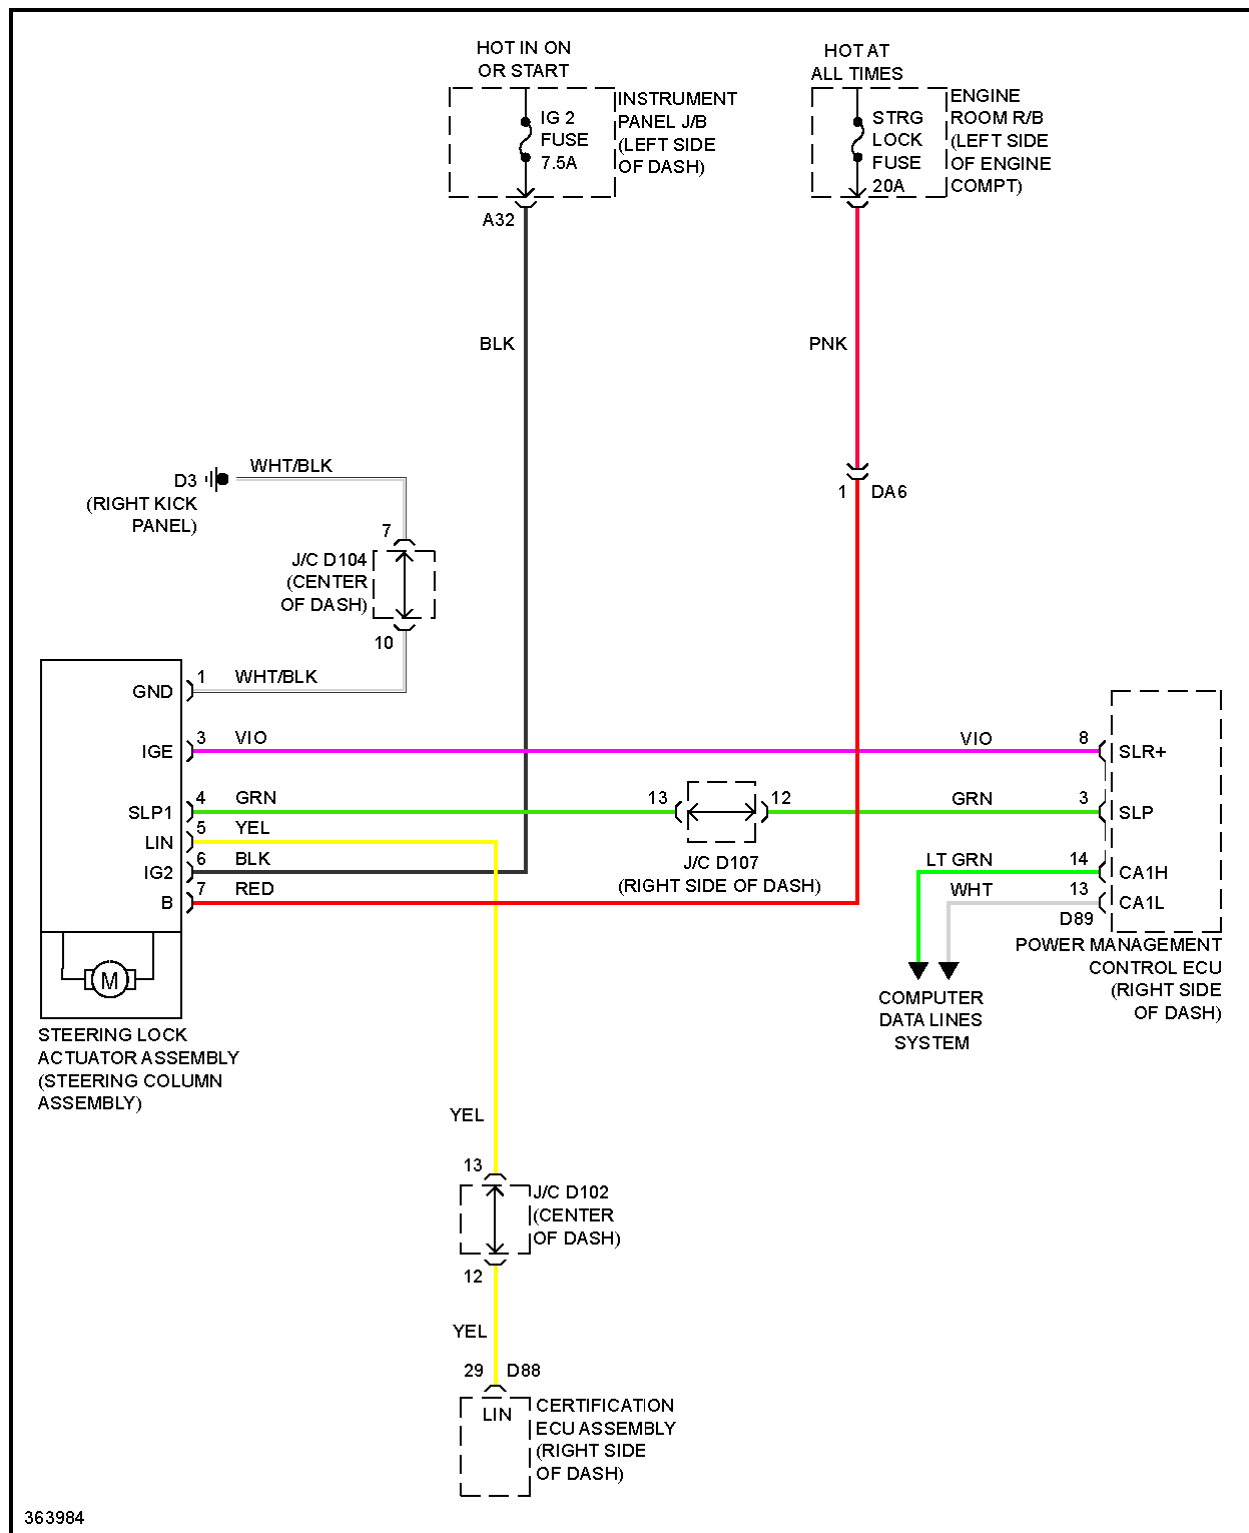


Fig. 104: Steering Column Circuit

STARTING/CHARGING