



Fuses and relay Honda CR-V 2002-2006

For the Honda CR-V 2002, 2003, 2004, 2005, 2006 model year.

Fuse box located.

Engine bay.

The under-hood fuse box is located in the engine compartment on the driver's side.



FUSE BOX DIAGRAM.




R1	Headlamp relay-left
R2	Electrical load sensor
R3	Engine coolant blower motor relay
R4	Horn relay
R5	Engine coolant blower motor relay
R6	AC compressor clutch relay
R7	Heated windscreen relay
R8	AC/heater blower motor relay
R9	Headlamp relay – right
F1	(20A) AC condenser blower motor/AC compressor clutch
F2	(15A) Parking lamps (front), fog lamp switch, front side lamps, licence plate lamp, tail lamps, tailgate release relay, multifunction control module, instrument panel lamp(s)
F3	(15A) Alarm system siren, interior lamp, ignition switch illumination lamp, rear screen wash/wipe control module, interior lamp
F4	(20A) Engine coolant blower motor
F5	(15A) Hazard warning lamps, alarm system control module, indicator signal, hazard warning lamps relay
F6	(15A) Crankshaft position (CKP) sensor, engine control module(ECM),multifunction control module, injectors, idleair control (IAC) valve, immobilizer control module, engine control (EC) relay 1/2
F7	(15A) ABS control module, brake system warning lamp, engine control module (ECM), cruise control, multifunction control module, horn, horn relay

F8	—
F9	(10A) Datalink connector (DLC), audio unit (without navigation system), instrument panel, alarm system in car movement sensor, multifunction control module, alarm system control module, central locking infrared receiver, navigation system control module
F10	(30A) ABS control module
F11	(20A) Heated rear window
F12	(40A) AC/heater blower motor
F13	(40A) Fuse box/relay plate, fascia (F7/F22-F25)
F14	(40A) Fuse box/relay plate, fascia (F2/F3/F5/F15/F16)
F15	(15A) Headlamp washer control module, headlamp, left, head lamp high beam
F16	(20A) Multifunction control module
F17	(15A) Headlamp, right
F18	(30A) ABS control module
F19	(100A) Battery, power distribution
F20	(50A) Ignition switch


Fuses in the vehicle passenger compartment CR-V 2002-2006.

Fuse box located.

The interior fuse box is underneath the steering column. To remove the fuse box lid, pull it toward you and take the lid out of its hinges.

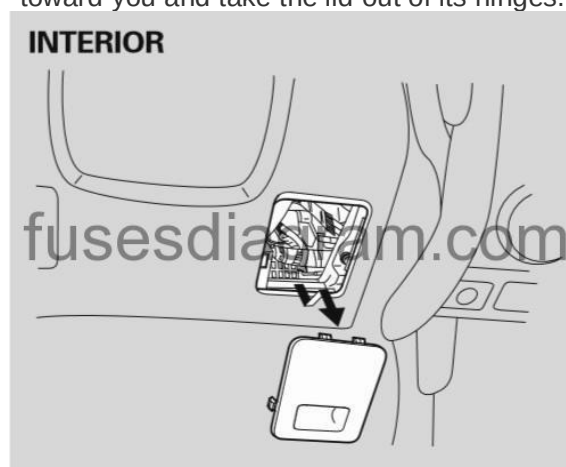

FUSE BOX DIAGRAM.

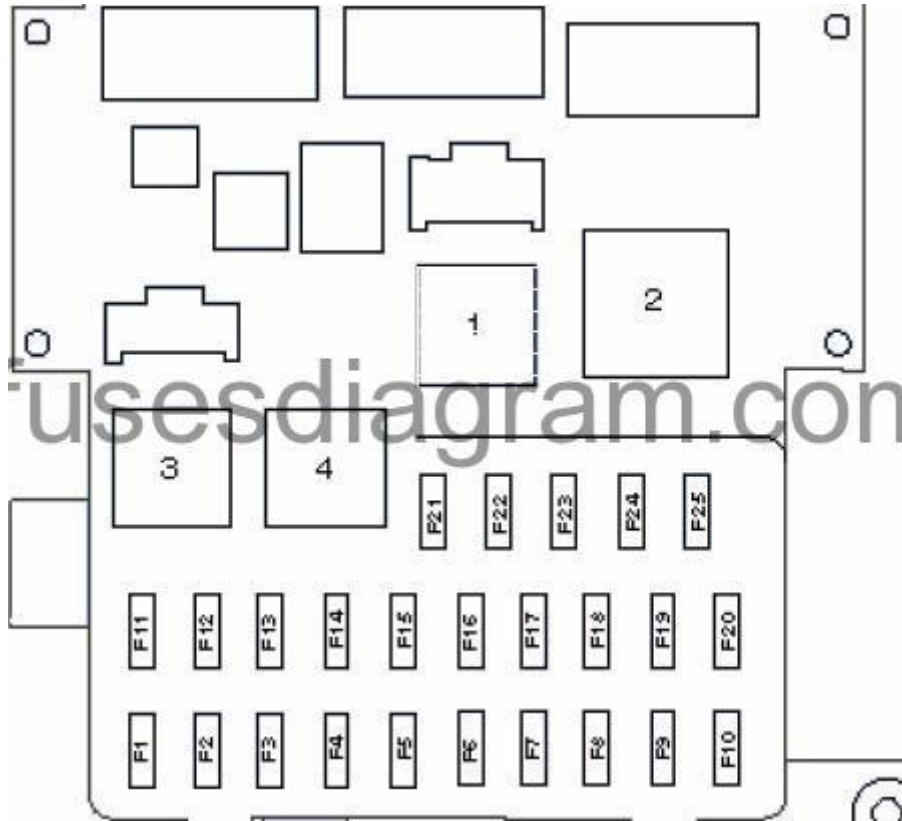

codes as follows,

1	Electric window relay
2	Hazard warning lamps relay/indicator relay
3	Starter motor inhibitor switch relay
4	Tailgate release relay
F1	(15A) Ignition coils
F2	(10A) Auxiliary power socket
F3	(10/20A) Multifunction control module, front fog lamp
F4	(10A) Alternator, camshaft position (CMP) sensor, cruise control master switch, cruise control module, electrical load sensor, evaporative mission (EVAP) canister purge valve, intake manifold runner control (IMRC) module, heated oxygen sensor (HO2S), vehicle speed sensor(VSS)
F5	(7,5A) Multifunction control module

F6	(7,5A) Headlamp adjustment switch, electric window relay, sunroof relay
F7	(20A) Sunroof motor
F8	(7,5A) Multifunction control module, navigation system control module, ignition key inter lock solenoid, ignition key inter lock solenoid relay
F9	(7,5A) Seat occupation control module, rear screen wiper motor control module, rear screen wiper motor, rear screen washer pump
F10	(7,5A) Multifunction control module, ABS control module, reversing lamp relay, reversing lamp, instrument panel, central locking infrared receiver, alarm/central locking control module, transmissions hift hold relay
F11	—
F12	(7,5A) Multifunction control module
F13	(10A) SRS control module
F14	(10A) AC compressor clutch relay, AC/heater blower motor relay, AC control module, heater control lamp(s), in-car temperature sensor, electric mirrors, heated door mirrors, engine coolant blower motor relay-engine bay fuse box/relay plate, heated rear window, AC recirculation motor
F15	(30A) Head lamp washer pump
F16	(20A) Heated front seats, heated rear seats
F17	(15A) Engine control module(ECM), fuel pump (FP), inertia fuel shut-off (IFS) switch, SRS control module
F18	(15A) Auxiliary power socket relay, cigarette lighter
F19	(7,5A) Hazard warning lamps/indicator relay
F20	(20A) Multifunction control module, wind screen wiper motor, wind screen washer pump
F21	—
F22	(20A) Electric window motor, passenger
F23	(20A) Electric window motor, driver
F24	(20A) Electric window motor, rear left
F25	(20A) Electric window motor, rear right