





Fuse box diagram Astra G



For the Opel/Vauxhall Astra G fourth generation 1998, 1999, 2000, 2001, 2002, 2003, 2004 model year.

Fuses in the vehicle passenger compartment.

fuse box diagram (Astra G pre 2001).

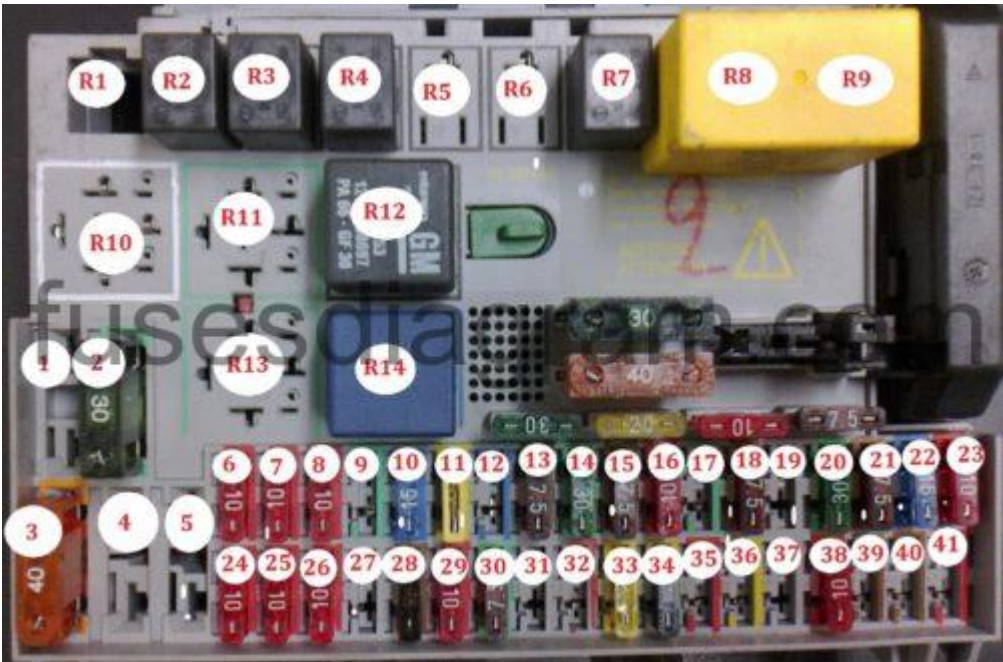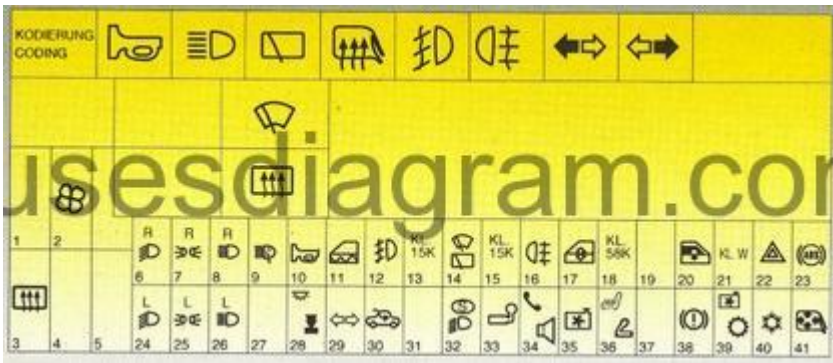

legend.

R1	
R2	Horn relay
R3	Headlamp high beam relay
R4	Rear screen wiper relay
R5	Door mirror heater relay
R6	Fog lamps relay


R7	Rear fog lamp relay
R8	Indicator relay-RH
R9	Indicator relay-LH
R10	Telephone audiosignal transmitter
R11	
R12	Windscreen wiper motor relay
R13	
R14	Heated rear window relay
R15	Multifunction control module
F1	
F2	(30A) Heater/air conditioning (AC),heated seats
F4	
F5	
F6	(10A) RH headlamp-low beam, head lamp adjustment
F7	(10A) RH side/tail lamps, licence plate lamp
F8	(10A) RH headlamp-high beam

F9	(30A) Head lamp washer pump
F10	(15A) Horn
F11	(20A) Central locking
F12	(15A) Front fog lamps
F13	(7,5A) Digital multifunction display
F14	(30A) Windscreen wiper motor
F15	(7,5A) Electric windows, sunroof, electric door mirrors
F16	(10A) Rear fog lamp
F17	(30A) Electric windows
F18	(7,5A) Head lamp adjustment
F19	—
F20	(30A) Electric windows
F21	(7,5A) Ignition switch key hold solenoid (AT), alarm system, audio system
F22	(15A) Indicators/hazard warning lamps, digital multifunction display, trip computer, warning lamps
F23	(10A) Anti-lock brake system (ABS), power steering
F24	(10A) LH headlamp- low beam, head lamp adjustment

F25	(10A) LH side/tail lamps, licence plate lamp
F26	(10A) LH headlamp-high beam
F27	—
F28	(7,5A) Interior lamp
F29	(10A) Indicators/hazard warning lamps, interior lamp
F30	(30A)Sunroof
F31	—
F32	(10A) Daytime running lamps, alarm system
F33	(20A) Trailersocket-terminal30
F34	(20A) Audio system, digital multifunction display
F35	(10A) Automatic transmission(AT), engine coolant blower motor control module, air conditioning (AC)
F36	(20A) Heated seats, cigarette lighter
F37	—
F38	(10A) Stop lamps, automatic transmission (AT), digital multifunction display, cruise control
F39	(7,5A) Automatic transmission (AT), engine coolant blower motor control module, air conditioning (AC)
F40	(7,5A) Engine coolant blower motor control module, air conditioning (AC)

F41	(10A) Heated door mirror
-----	--------------------------

Fuse box diagram (Astra G since 2001).

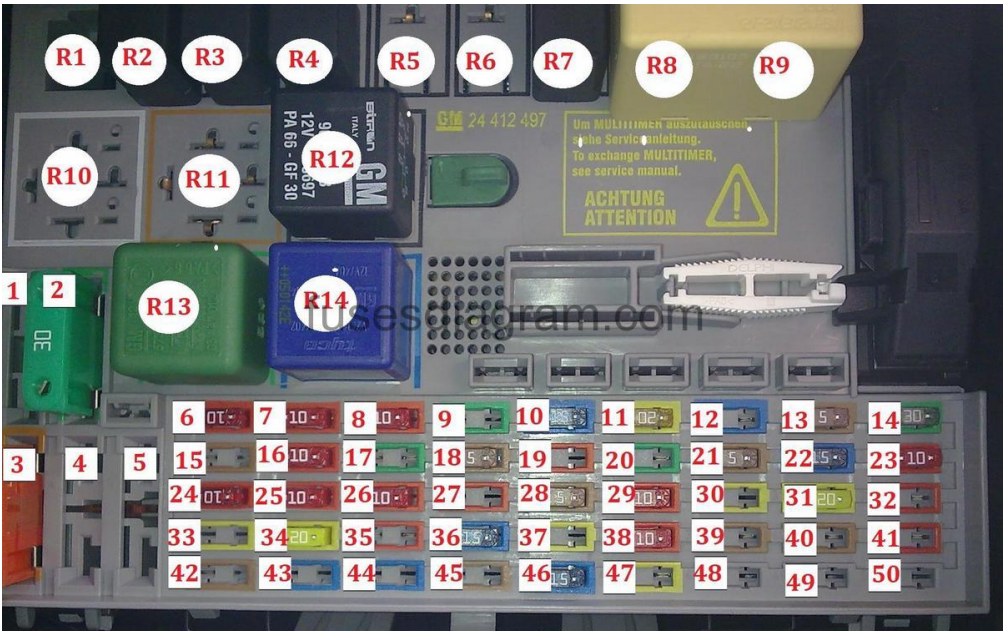

fuses and relays are coded as follows.

--	--

R1	
R2	Horn relay
R3	Headlamp high beam relay
R4	Rear screen wiper relay
R5	Door mirror heater relay
R6	Fog lamps relay
R7	Rear fog lamp relay
R8	Indicator relay
R9	Indicator relay
R10	Telephone audiosignal transmitter
R11	Wheel speed sensor signal converter
R12	Windscreen wiper motor relay
R13	Interior lamp relay
R14	Heated rear window relay
R15	Multifunction control module
F1	
F2	(30A) Heater/air conditioning (AC), heated seats


F3	(40A) Heated rear window
F4	
F5	
F6	(10A) RH headlamp-low beam, head lamp adjustment
F7	(10A) RH side/tail lamps, licence plate lamp
F8	(10A) RH headlamp-high beam
F9	(30A) Head lamp washer pump
F10	(15A) Horn
F11	(20A) Central locking
F12	(15A) Front fog lamps
F13	(5A) Digital multifunction display
F14	(30A) Windscreen wiper motor, sunroof(Coupe)
F15	(5A) Electric windows, sunroof, electric door mirrors, interior lamp, alarm system
F16	(10A) Rear fog lamp
F17	(30A) Electric windows
F18	(5A) Head lamp adjustment, licence plate lamp

F19	(10A) Audio system, telephone, digital multifunction display
F20	(30A) Electric windows
F21	(5A) Ignition switch key hold solenoid (AT), alarm system, audio system, telephone
F22	(15A) Indicators/hazard warning lamps, digital multifunction display, trip computer, warning lamps
F23	(10A) Anti-lock brake system (ABS), power steering
F24	(10A) LH headlamp- low beam, head lamp adjustment
F25	(10A) LH side/tail lamps, licence plate lamp
F26	(10A) LH headlamp-high beam
F27	(2A) Convertible top
F28	(5A) Interior lamp
F29	(10A) Indicators/hazard warning lamps, interior lamp, automatic transmission (AT)
F30	(30A) Sunroof
F31	(2A) Convertible top (semi-automatic)
F32	(10A) Daytime running lamps, lamps 'on' warning, alarm system, immobilizer control module
F33	(20A) Trailersocket-terminal30
F34	(20A) Audio system, digital multifunction display, telephone

F35	(10A) Automatic transmission(AT), engine coolant blower motor control module, air conditioning (AC)
F36	(15A) Heated seats, cigarette lighter
F37	(20A) Heated seats
F38	(10A) Stop lamps, automatic transmission (AT), digital multifunction display, cruise control
F39	(5A) Automatic transmission (AT), engine coolant blower motor control module, air conditioning (AC)
F40	(5A) Engine coolant blower motor control module, air conditioning (AC)
F41	(10A) Heated door mirrors
F42	(5A) Seat occupation sensor, interior lamp
F43	(20A) RH headlamp-Xenon2002^
F44	(20A) LH headlamp-Xenon2002^
F45	(5A) Heatedseats2002^
F46	(15A) Enginemanagement2002^
F47	(20A) Auxiliary heater-Diesel
F48	(5A) Convertible top
F49	—
F50	(40A) Engine coolantblowermotor-2,0 Diesel/1,7 Diesel with AC


Fuse and relay box in the engine compartment Astra G.

located.

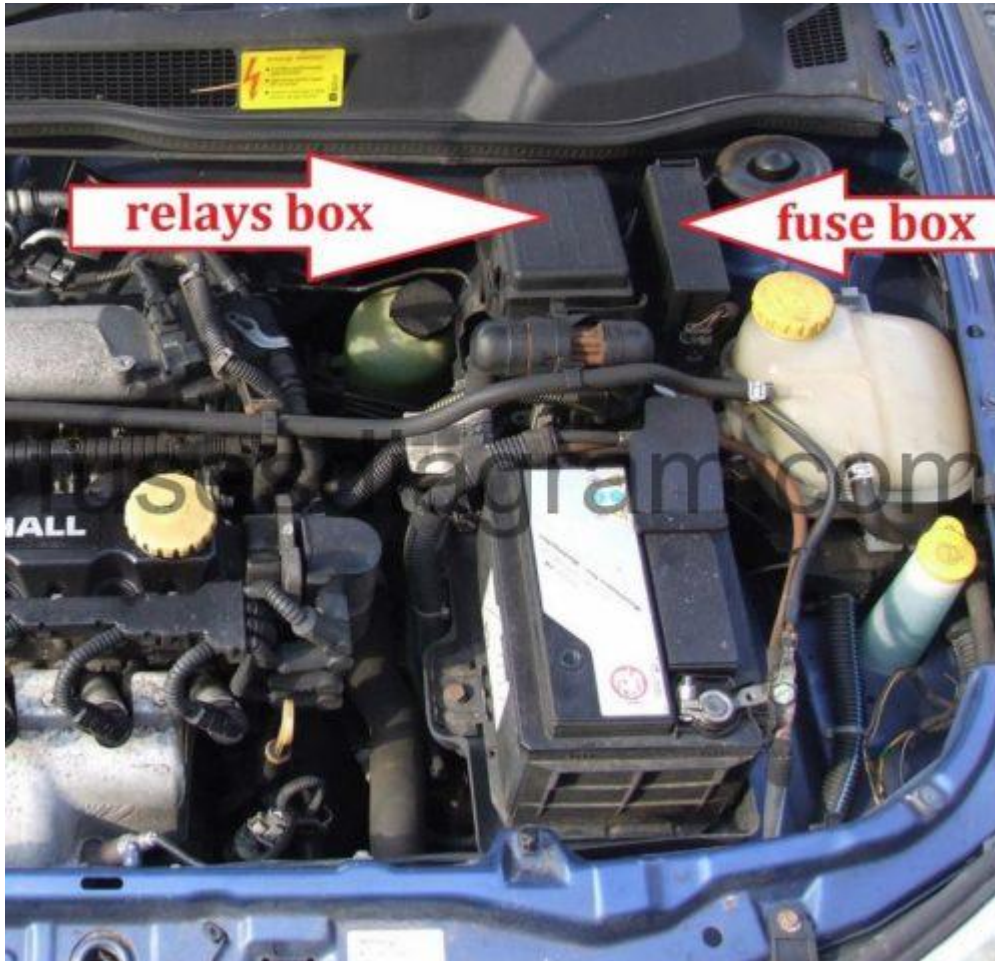

fuse box diagram.

early models.

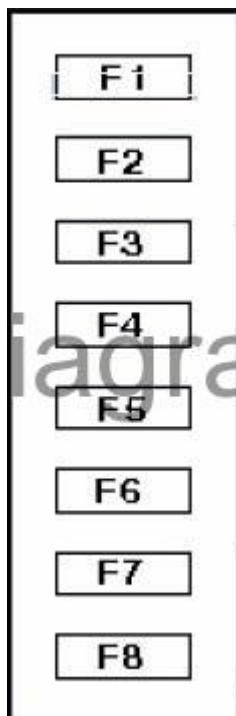


late models.



legend early and late models.

F1	(60A) Ignition switch
F2	(60A) Fuse box/relay plate-fascia 1, headlamps-low beam, daytime running lamps, alarm system, immobilizer control module, engine management
F3	(60A) Fuse box/relay plate-fascia 1
F4	(20A) Engine coolant blower motors (X12XE-withoutAC)
F5	(60A)ABS
F6	(20A) Engine management
F7	(80A) Power steering
F8	(20A) Engine coolant blower motors (petrol – except X20XE with AC)

Relay box diagram.

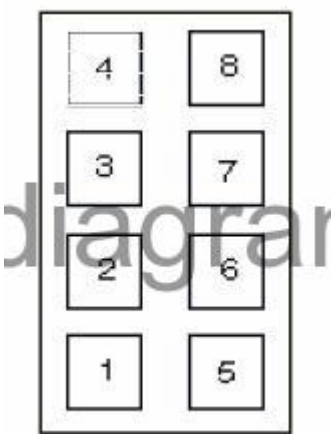

Legend (Astra G per 2001).

1	—
2	Engine coolant blower motor relay (X16SZR, X18XE1, X20XEV)
3	Engine coolant blower motor relay (X14XE, X16XEL)
4	Fuel pump relay
5	—
6	Engine coolant blower motor relay
7	Head lamp washer pump delay relay
8	—

Legend (Astra G since 2001).

1	
2	Engine coolant blower motor relay (except Z12XE)
3	Fuel pump relay (except Z20LET/Z22SE)
4	Fuel pump relay (Z22SE/Z20LET)
5	Engine coolant pump relay (Z20LET)
6	Engine coolant blower motor relay
7	Head lamp washer pump delay relay
8	

Posted in [Opel/Vauxhall](#) Tagged [Fuse box diagram Opel/Vauxhall](#)

[« FUSE BOX DIAGRAM ASTRA H](#)

[FUSES AND RELAY CORSA B »](#)

Ads

 Ads by Google

[Fuse Box Diagram](#)

[Relay Location](#)

[Fuse Layout](#)

[Rear Window Replacement](#)

Search ...

Categories

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Chevrolet](#)

[Chrysler](#)

[Dodge](#)

[Fiat](#)

[Ford](#)

[Honda](#)

[Hyundai](#)

[Jeep](#)

[Kia](#)

[Land Rover](#)

[Mazda](#)

[Mercedes](#)

[Mercury](#)

[Nissan](#)

[Opel/Vauxhall](#)

[Peugeot](#)

[Range Rover](#)

[Renault](#)

[Toyota](#)

[Volkswagen](#)

Recent Posts

[Fuses and relay Toyota Yaris](#)

[Fuses and relay Toyota Avensis 1997-2003](#)

[Fuses and relay Honda Odyssey 2003-2008](#)

[Fuses and relay Honda Odyssey 1999-2004](#)

[Fuses and relay Honda Odyssey 1994-1998](#)

[Fuses and relay Audi A3 8P](#)

[Fuses and relay Audi A3 8L](#)

[Fuse box diagram Ford Taurus 1996-1999](#)

[Fuses and relay Kia Cerato Spectra](#)

[Fuses and relay Honda Jazz Fit](#)

You may also enjoy...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...



Fuses and relay Opel/Vauxha...