

Lexus IS F 2008 – 2010 fuse box diagram

Engine compartment (type A)




Lexus IS F – fuse box –

engine compartment (type A)

Fuse	Ampere rating [A]	Circuit protected
1 ABS 3	25	VDIM
2 ALT-S	7,5	Charging system
3 TURN-HAZ	15	Emergency flashers, turn signals
4 IG2 MAIN	20	IG2, IGN, GAUGE
5 RAD NO. 2	30	Audio system
6 D/C CUT	20	DOME, MPX-B
7 RAD NO. 1	30	Audio system
8 MPX-B	10	Headlights, front fog lights, parking lights, license plate lights, windshield washer, horns, power door lock system, power windows, power seats, electric tilt and telescopic steering column, meters and gauges, smart access system with push-button start, outside rear view mirrors, air conditioning system, security system
9 DOME	10	Interior lights, meters and gauges
10 CDS	10	Electric cooling fans
11 E/G-B	60	FR CTRL-B, ETCS, A/F, STR LOCK, INJ2
12 P/I-B	60	EFI, F/PMP, INJ
13 ABS 1	50	VDIM
14 RH J/B-B	30	FR DOOR RH, RR DOOR RH, AM2
15 VVT	40	Multiport fuel injection system/sequential multiport fuel injection system
16 MAIN	30	H-LP R LWR, H-LP L LWR, headlight low beams

17	STARTER	30	Smart access system with push-button start
18	LH J/B-B	30	FR DOOR LH, RR DOOR LH, SECURITY
19	EPS	80	Electric power steering
20	ALT	180	LH J/B-AM, E/G-AM, HEATER, FAN1, FAN2, DEFOG, RH J/B-AM
21	LH J/B-AM	80	S/ROOF, FR P/SEAT LH, TV NO.1, A/C, FUEL OPEN, PSB, FR WIP, H-LP LVL, LH-IG, ECU-IG LH, PANEL, TAIL, MIR HTR, TV NO. 2, FR S/HTR LH
22	RH J/B-AM	80	OBD, STOP SW, TI&TE, FR P/SEAT RH, RAD NO. 3, ECU-IG RH, RH-IG, FR S/HTR RH, ACC, CIG, PWR OUTLET
23	DEFOG	50	Rear window defogger
24	FAN2	40	Electric cooling fans
25	FAN1	40	Electric cooling fans
26	HEATER	50	CDS, air conditioning system
27	E/G-AM	60	H-LP CLN, FR CTRL-AM

Engine compartment (type B)

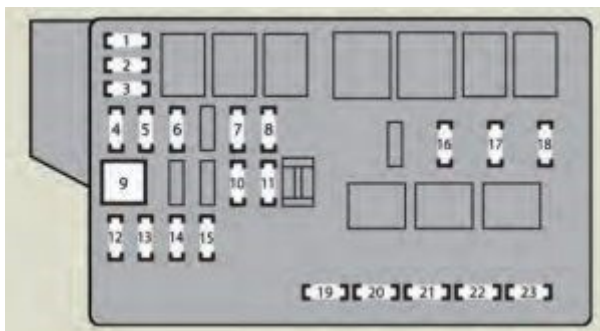


Lexus IS F – fuse box –

engine compartment (type B)

Fuse	Ampere rating [A]	Circuit protected
1 SPARE	30	Spare fuse
2 SPARE	25	Spare fuse
3 SPARE	10	Spare fuse
4 FR CTRL-B	25	HORN, headlight high beams
5 A/F	15	Exhaust system
6 ETCS	10	Multiport fuel injection system/sequential multiport fuel injection system

7	INJ2	25	Multiport fuel injection system/sequential multiport fuel injection system
8	STR LOCK	25	Steering lock system
9	H-LP CLN	30	Headlight cleaner
10	DEICER	25	—
11	FR CTRL-AM	30	FR FOG, WASHER, FR TAIL
12	IG2	10	Ignition system
13	EFI NO. 2	10	Fuel system, exhaust system, multiport fuel injection system/sequential multiport fuel injection system
14	H-LP R LWR	15	Headlight low beam (right)
15	H-LP L LWR	15	Headlight low beam (left)
16	F/PMP	25	Fuel system
17	EFI	25	Multiport fuel injection system/sequential multiport fuel injection system
18	INJ	25	Multiport fuel injection system/sequential multiport fuel injection system
19	H-LP UPR	15	Headlight beams
20	HORN	10	Horns
21	WASHER	20	Windshield washer
22	FR TAIL	10	Parking lights, side marker lights
23	FR FOG	15	Front fog lights

Driver's side instrument panel

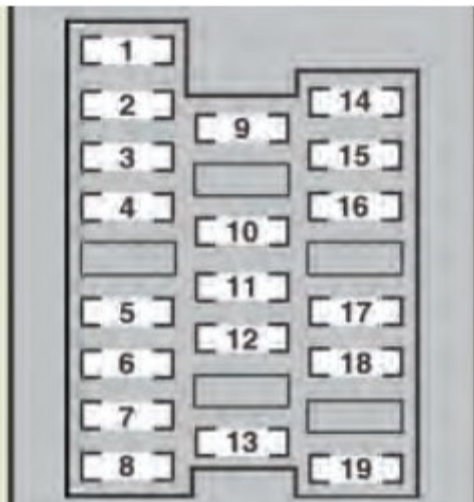


Lexus IS F – fuse box –

driver's side instrument panel

Fuse		Ampere rating [A]	Circuit protected
1	FR P/SEAT LH	30	Power seat
2	A/C	7,5	Air conditioning system
3	MIR HTR	15	Outside rear view mirror defoggers
4	TV NO. 1	10	Display
5	FUEL OPEN	10	Fuel filler door opener
6	TV NO. 2	7,5	—
7	PSB	30	Pre-collision seat belt
8	S/ROOF	25	Moon roof
9	TAIL	10	Tail lights, license plate lights, parking lights, rear side marker lights
10	PANEL	7,5	Switch illumination, air conditioning system, display
11	RR FOG	7,5	—
12	ECU-IG LH	10	Cruise control, air conditioning system, electric power steering, shift lock system, moon roof, tire inflation pressure warning system
13	FR S/HTR LH	15	Seat heaters and ventilators
14	RR DOOR LH	20	Power windows

15	FR DOOR LH	20	Power windows, outside rear view mirror (left)
16	SECURITY	7,5	Smart access system with push-button start
17	H-LP LVL	7,5	AFS
18	LH-IG	10	Charging system, headlight cleaner, rear window defogger, electric cooling fans, emergency flashers, turn signal lights, back-up lights, stop lights, outside rear view mirror defoggers, seat belts, intuitive parking assist, air conditioning system
19	FR WIP	30	Windshield wipers

Passenger's side instrument panel

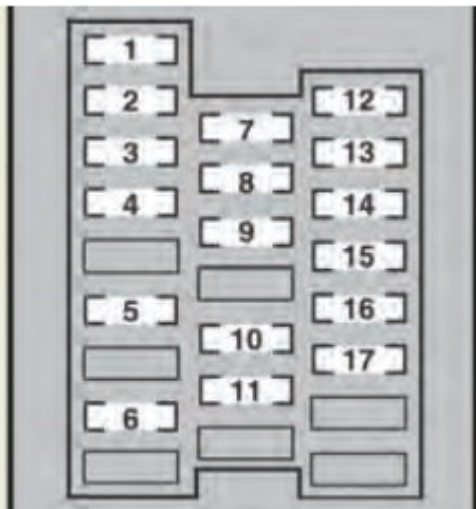

Lexus IS F – fuse box –

passenger's side instrument panel

Fuse	Ampere rating [A]	Circuit protected
1 FR P/SEAT RH	30	Power seat
2 DOOR DL	15	—
3 OBD	7,5	On-board diagnosis system
4 STOP SW	7,5	Stop lights, VDIM
5 TI & TE	20	Electric tilt and telescopic steering column
6 RAD NO. 3	10	Audio system
7 GAUGE	7,5	Meters and gauges

8	IGN	10	SRS airbag system, stop lights, steering lock system, fuel system, front passenger occupant classification system
9	ACC	7,5	Clock, air conditioning system, audio system, navigation system, display, outside rear view mirrors, smart access system with push-button start, glove box light, console box light
10	CIG	15	Cigarette lighter
11	PWR OUTLET	15	Power outlet
12	RR DOOR RH	20	Power windows
13	FR DOOR RH	20	Power windows, outside rear view mirrors
14	AM2	7,5	Smart access system with push-button start
15	RH-IG	7,5	Seat belts, intuitive parking assist, automatic transmission, seat heaters and ventilators
16	FR S/HTR RH	15	Seat heaters and ventilators
17	ECU-IG RH	10	Power seats, smart access system with push-button start, outside rear view mirrors, VDIM, air conditioning system, pre-collision seat belt, electric tilt and telescopic steering, power windows, navigation system