


Buick Century 1993 fuse box diagram

Instrument Panel Fuse Block

The fuse panel is located inside the glove box, on the left side.

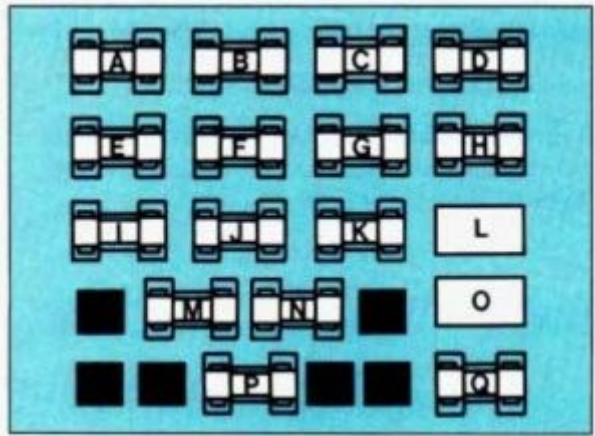

Buick Century – fuse box diagram – instrument

panel		
Fuse	Ampere rating [A]	Usage
A	15	ECM; MAF Sensor (3300 Engine only)
B	20	ECM Injectors/Coil
C	10	Eng. A/C Relay; EGR Solenoid; Canister Purge Solenoid
D	10	Fan/Elect; Generator; DRL Module
E	15	Turn Signal Flasher; Back-up Lights; Trunk/Liftgate Release
F	10	Supplemental Inflatable Restraint (Air Bag)
G	20	Tail; Park; Side Marker; License Plate; Stop/Turn Signa
H	20	Heater/Air Conditioner
I	10	Gages; Warning Indicators; Torque Convert Clutch; Audible Warning System; Computer Command Control; Trunk Release; Brake Warning Indicator; Rear Defog Switch; Speedometer
J	20	Stop Lights; Hazard Flashers
K	20	Interior, Underhood, Courtesy, I/P, Trunk Lights; Door Locks; Horn Relay, Passive Restraint System, Deck Lid Release, Power Antenna
L	30*	Liftgate Release; Power Windows
M	5	Illumination for: I/P, Radio, Pod Lights, Ashtray, Console Light, Heater-A/C Control, Defog Switch, Headlight Switch
N	10	Radio, Cruise Control
O	30*	Seats, Door Locks, Rear Defog
P	25	Windshield Wipe/Was
Q	20	Cigarette Lighter
	15	Safety Belt/Chirne (ICAM) Module (Located behind the fuse block, above the hush panel.

	15	Remote Lock Control (Located behind the fuse block, above the hush panel.
	15	Fuel Pump, ECM (Located under the hood.)
*Circuit Breaker		