


COMPONENTS
ILLUSTRATION

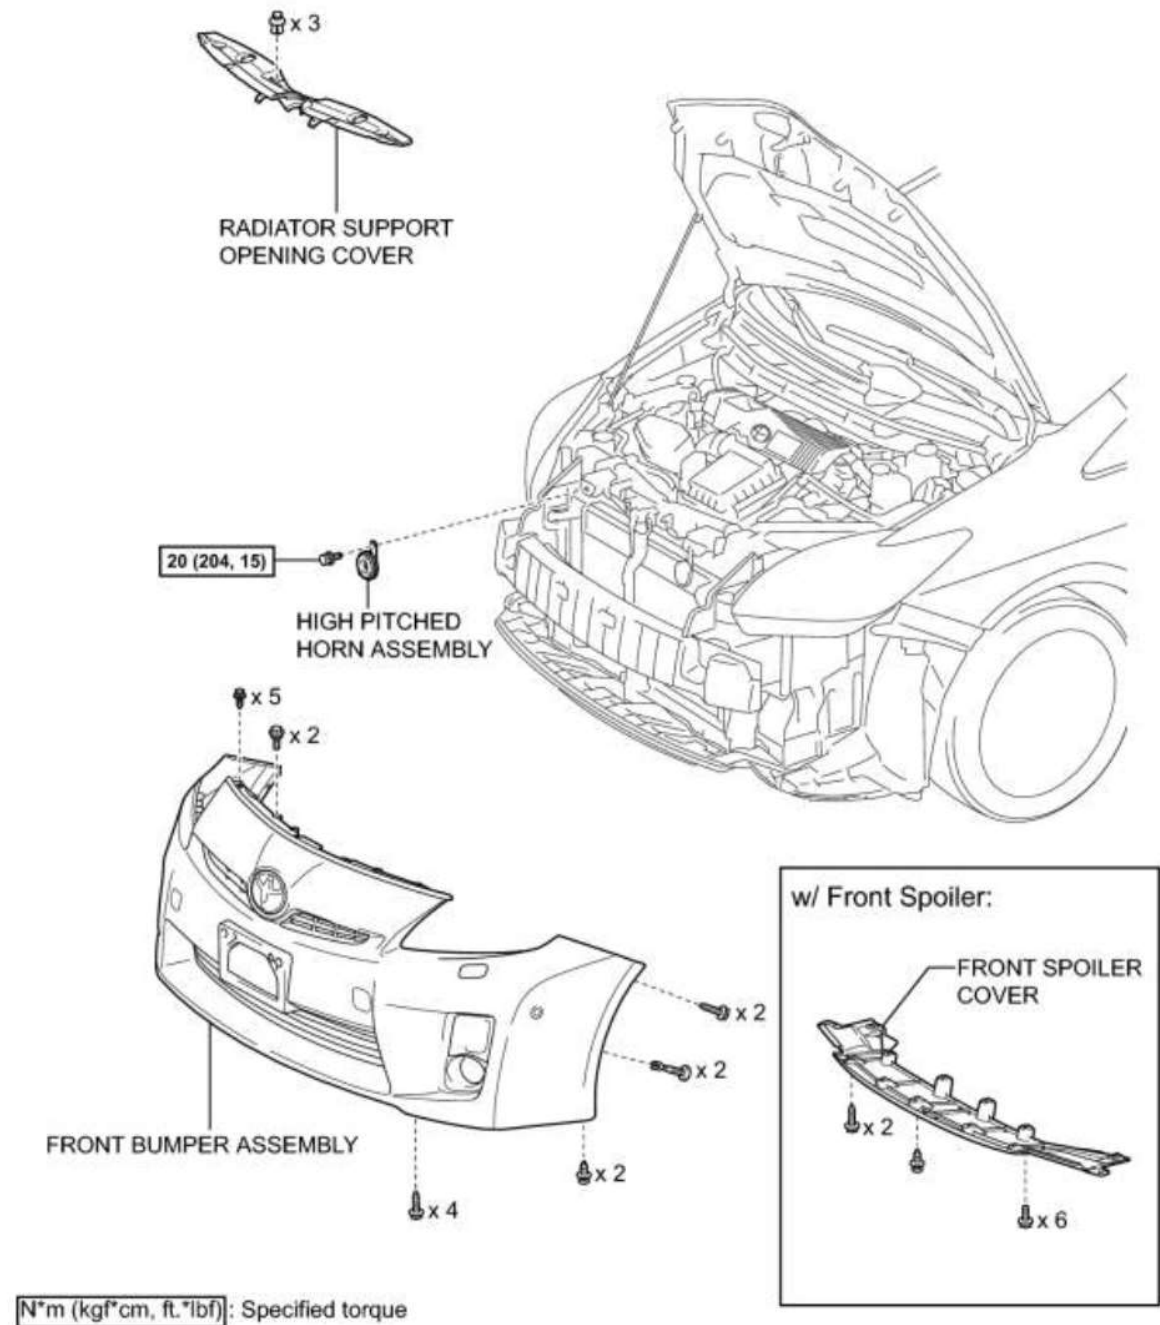


P

REMOVAL

1. REMOVE RADIATOR SUPPORT OPENING COVER_ INFO

2. REMOVE FRONT BUMPER ASSEMBLY_ INFO

3. REMOVE HIGH PITCHED HORN ASSEMBLY

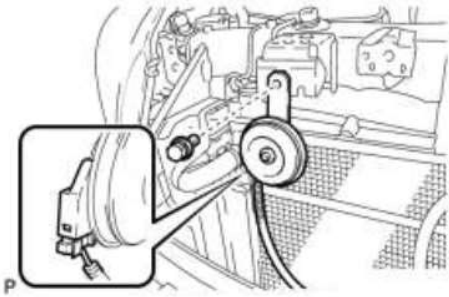

(a) Disconnect the connector.


(b) Remove the bolt and high pitched horn assembly.

INSPECTION

1. INSPECT HIGH PITCHED HORN ASSEMBLY

(a) Apply battery voltage and check the operation of the horn according to the table below.

OK:

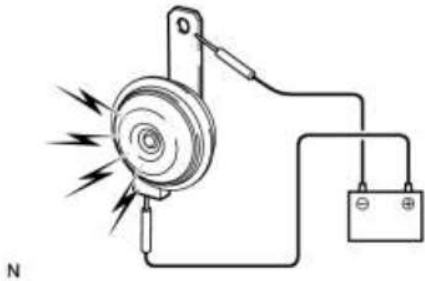


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1	Horn sounds
Battery negative (-) → Body ground	

If the result is not as specified, replace the high pitched horn assembly.

cardiagn.com

INSTALLATION

1. INSTALL HIGH PITCHED HORN ASSEMBLY

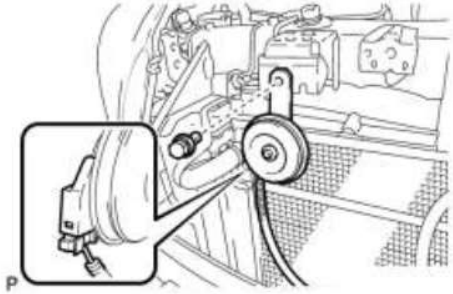

(a) Install the high pitched horn assembly with the bolt.

Torque: **20 N·m (204 kgf·cm, 15ft·lbf)**

(b) Connect the connector.

2. INSTALL FRONT BUMPER ASSEMBLY_ [INFO](#)

3. INSTALL RADIATOR SUPPORT OPENING COVER_ [INFO](#)

4. ADD WASHER FLUID (w/ Headlight Cleaner System)_ [INFO](#)

5. ADJUST FOG LIGHT AIMING (w/ Fog Light)

[INFO](#)

PRECAUTION

NOTICE:


When disconnecting the cable from the negative (-) battery terminal, initialize the following system after the cable is reconnected.

System Name	See Procedure
Advanced Parking Guidance System	INFO

cardiagn.com


PARTS LOCATION

ILLUSTRATION

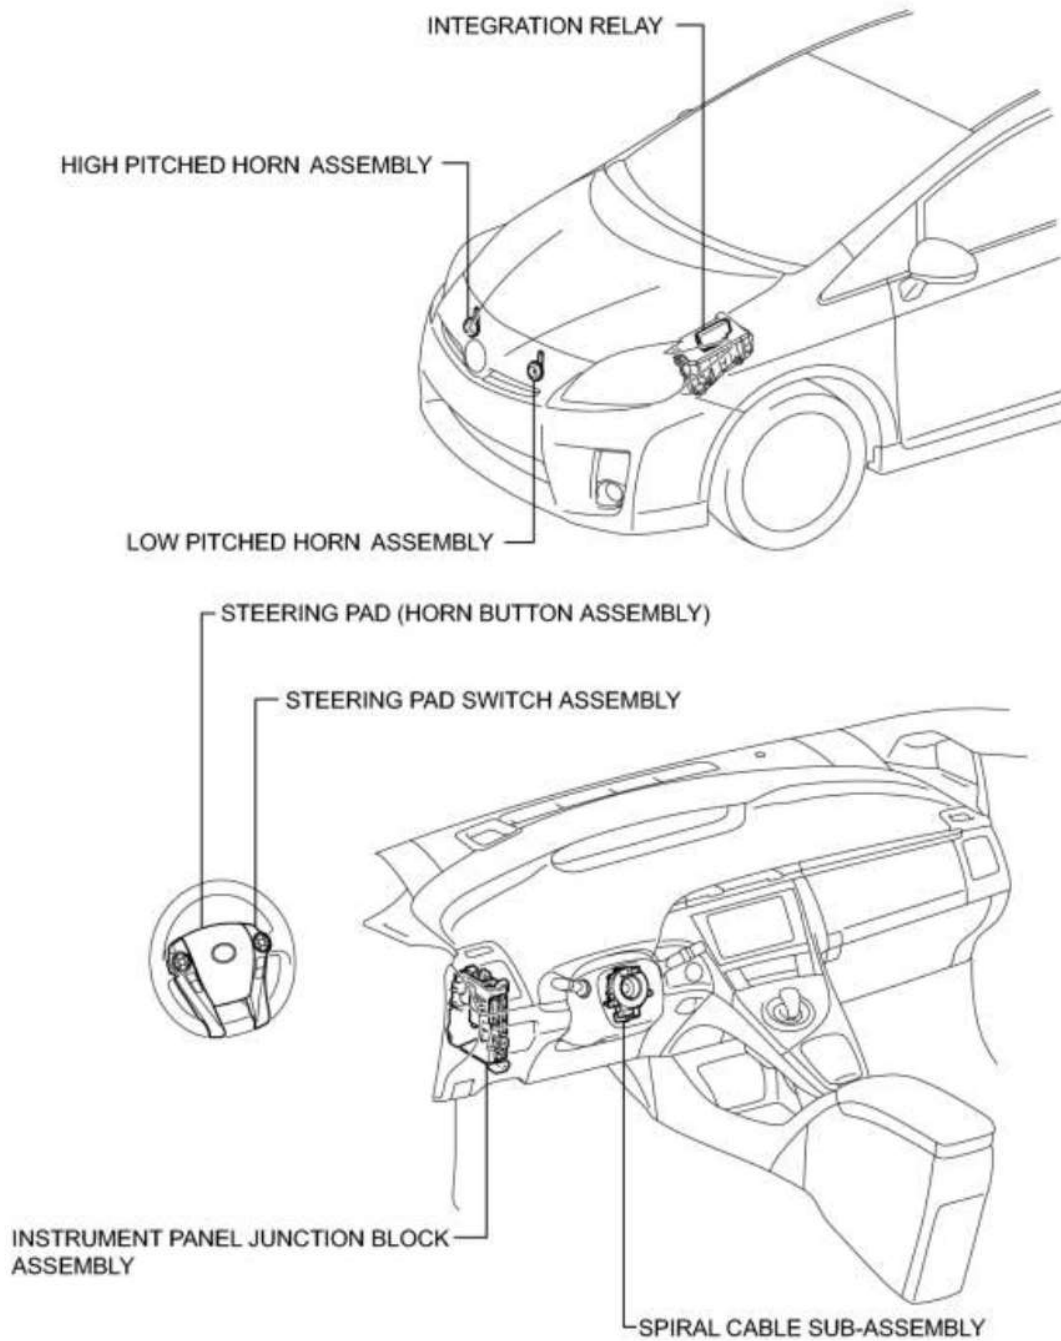

H

SYSTEM DIAGRAM

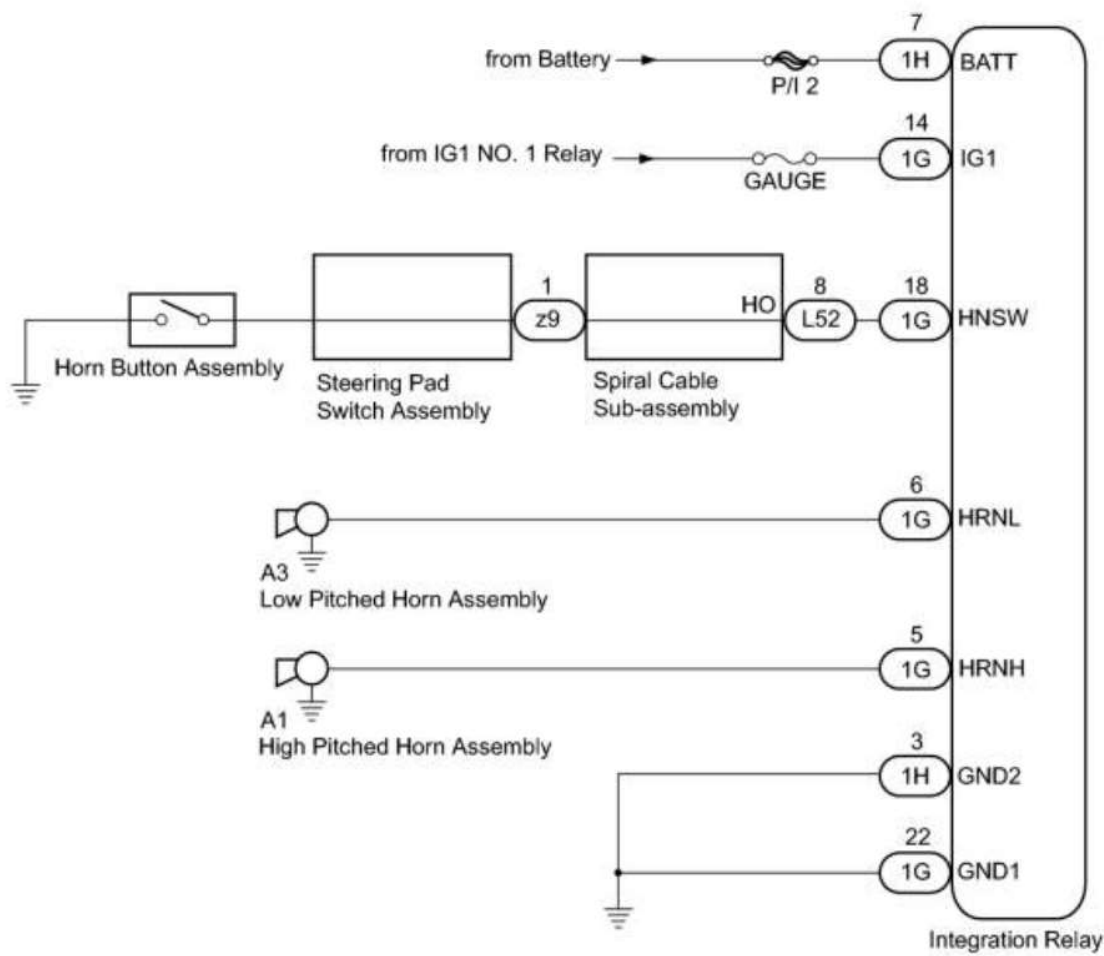

cardiagn.com

PROBLEM SYMPTOMS TABLE

HINT:


Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Horn System

Symptom	Suspected Area	See page
Horn does not sound	HORN fuse	-
	Low pitched horn assembly	INFO
	High pitched horn assembly	INFO
	Integration relay	INFO
	Steering pad (Horn button assembly)	INFO
	Steering pad switch assembly	INFO
	Spiral cable sub-assembly	INFO
	Wire harness	-
Horn blows all the time	Integration relay	INFO
	Steering pad (Horn button assembly)	INFO
	Steering pad switch assembly	INFO
	Spiral cable sub-assembly	INFO
	Wire harness	-
Low pitched horn operates but high pitched horn does not operate	High pitched horn assembly	INFO
	Wire harness	-
High pitched horn operates but low pitched horn does not operate	Low pitched horn assembly	INFO
	Wire harness	-

COMPONENTS

ILLUSTRATION

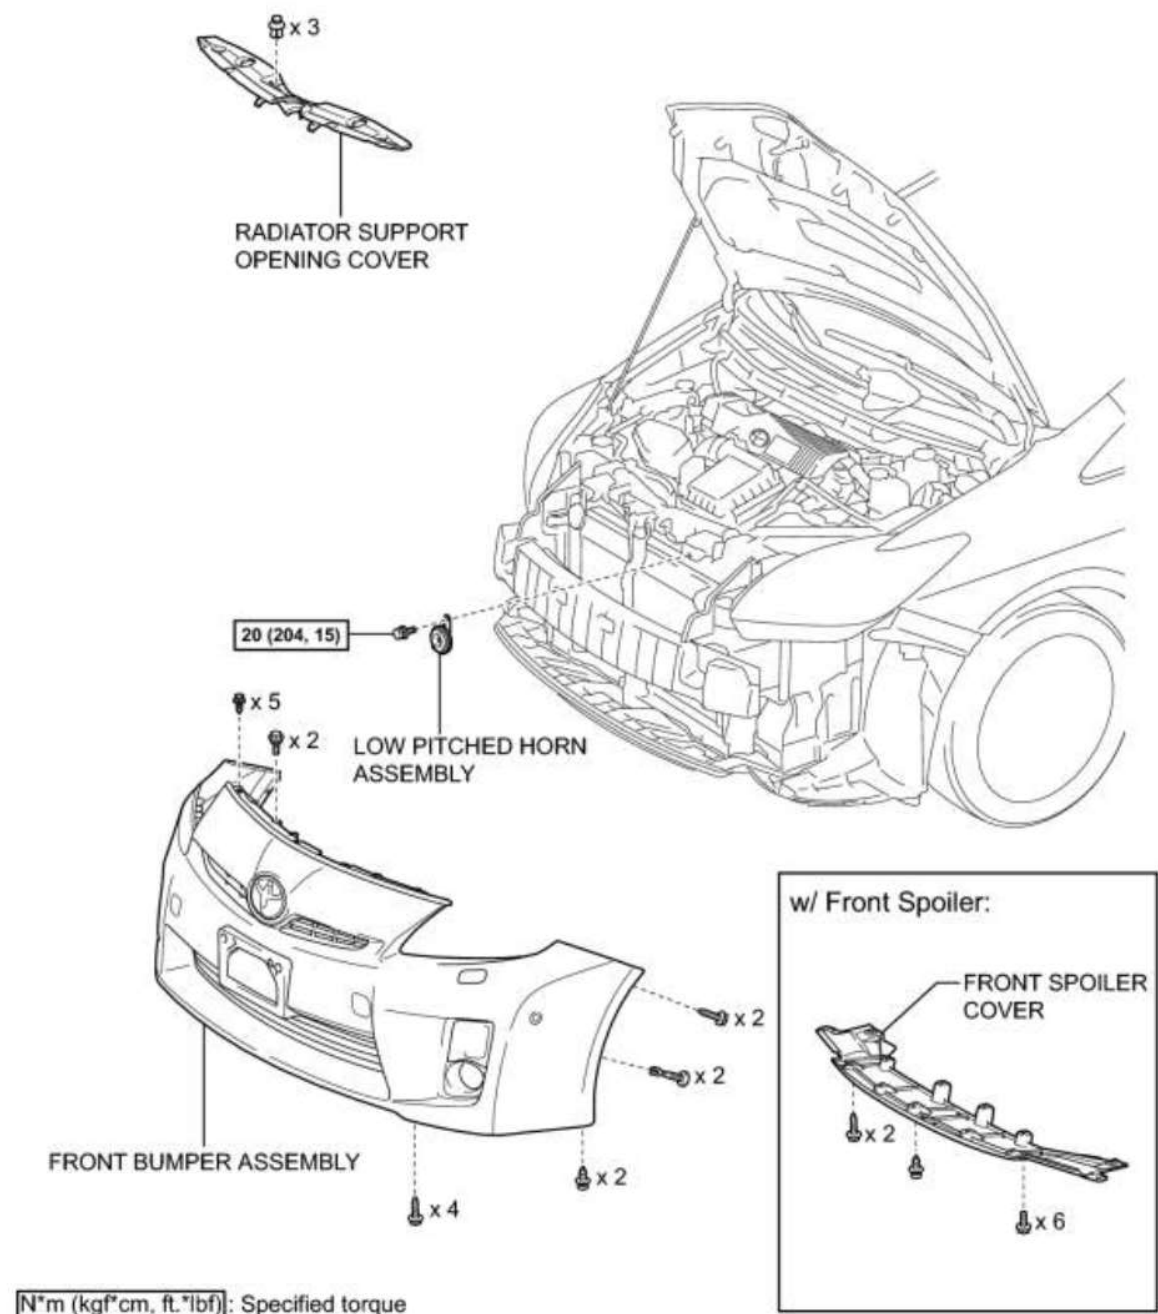


P

REMOVAL

1. REMOVE RADIATOR SUPPORT OPENING COVER_ INFO

2. REMOVE FRONT BUMPER ASSEMBLY_ INFO

3. REMOVE LOW PITCHED HORN ASSEMBLY

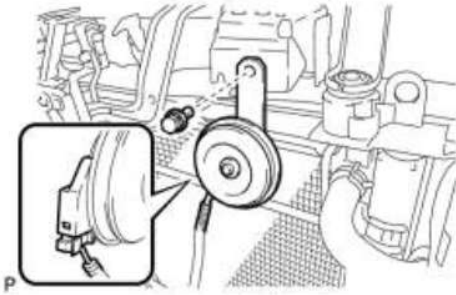

(a) Disconnect the connector.


(b) Remove the bolt and low pitched horn assembly.

INSPECTION

1. INSPECT LOW PITCHED HORN ASSEMBLY

(a) Apply battery voltage and check the operation of the horn according to the table below.

OK:

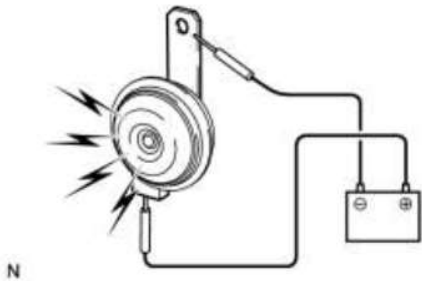


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1	Horn sounds
Battery negative (-) → Body ground	

If the result is not as specified, replace the low pitched horn assembly.

INSTALLATION

1. INSTALL LOW PITCHED HORN ASSEMBLY

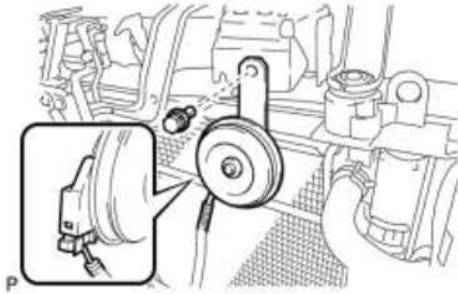

(a) Install the low pitched horn assembly with the bolt.

Torque: **20 N·m (204 kgf·cm, 15ft·lbf)**

(b) Connect the connector.

2. INSTALL FRONT BUMPER ASSEMBLY_ [INFO](#)

3. INSTALL RADIATOR SUPPORT OPENING COVER_ [INFO](#)

4. ADD WASHER FLUID (w/ Headlight Cleaner System)_ [INFO](#)

5. ADJUST FOG LIGHT AIMING (w/ Fog Light)

[INFO](#)