


Audio System

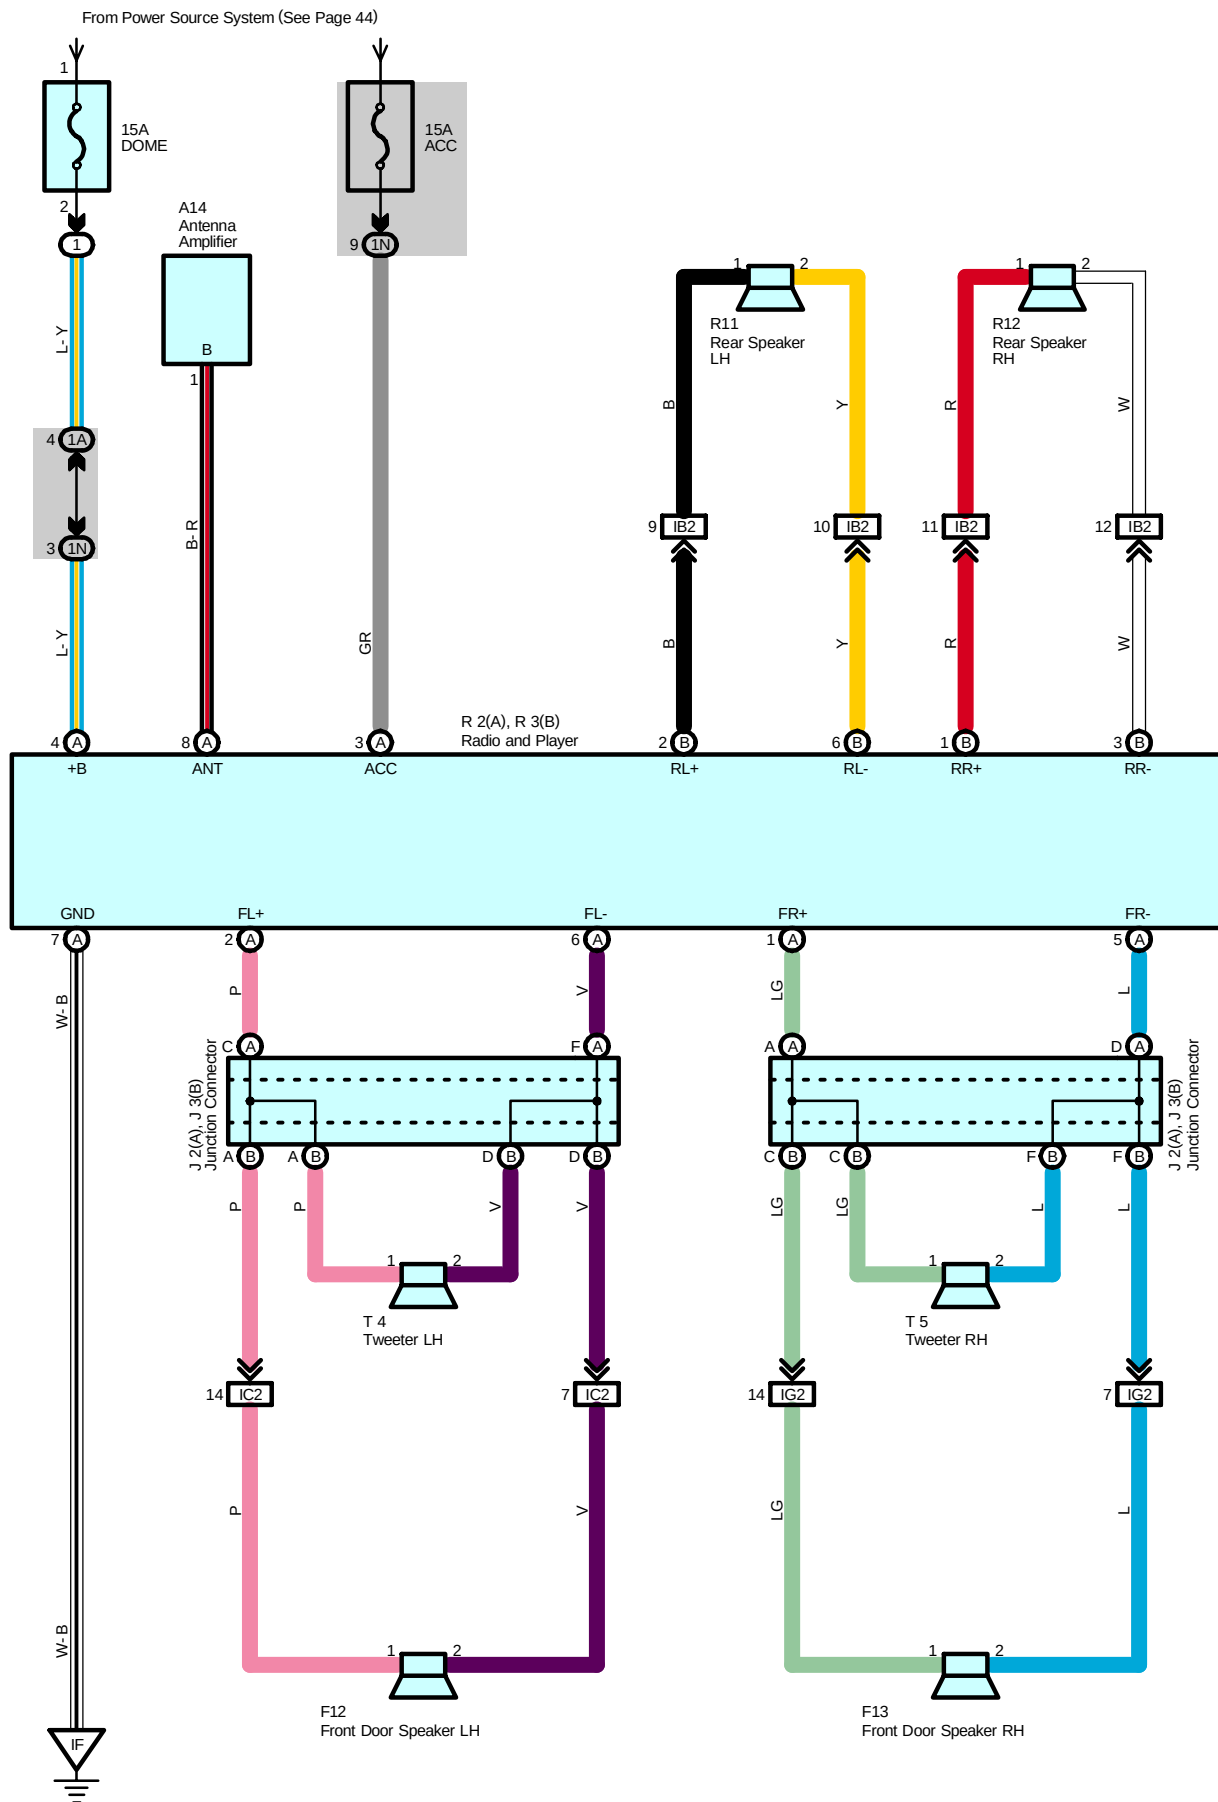

Service Hints

R2 (A) Radio and Player

- (A) 4-Ground : Always approx. 12 volts
- (A) 3-Ground : Approx. 12 volts with the ignition SW at ACC or ON position
- (A) 7-Ground : Always continuity

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A14		30		J3	B	31		R12		33	
F12		32		R2	A	31		T4		31	
F13		32		R3	B	31		T5		31	
J2	A	31		R11		33					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1N	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	36	Floor Wire and Instrument Panel Wire (Behind the Reinforcement LH)
IC2	36	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IG2	38	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	36	Instrument Panel Brace LH