


Lexus GS 300 S140 1991 – 1997 fuse box diagram

Year of production: 1991, 1992, 1993, 1994, 1995, 1996, 1997

Passenger Compartment

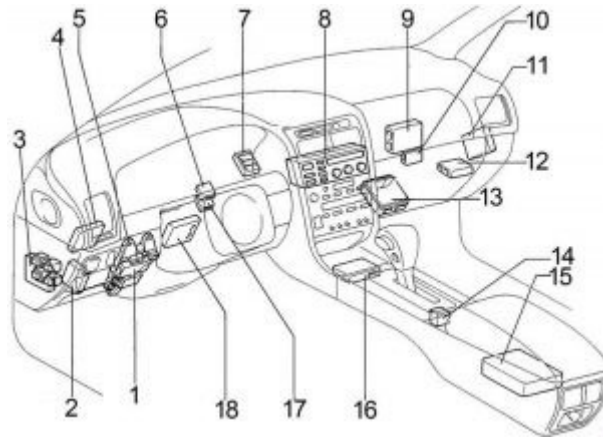


Lexus GS300 – fuse box diagram – passenger

compartment

Number	Description
1	Integration Relay
2	Daytime Running Light Relay
3	Relay Box
4	Theft Deterrent ECU
5	Fuse Box
6	Wiper Relay
7	J/B No. 3
8	A/C Control Assembly
9	Traction ECU (with Traction Control)
10	A/C Lock Amplifier
11	ABS and Traction ECU (with Traction Control) ABS ECU (without Traction Control)
12	Blower Motor Control Relay
13	Engine Control Module (Engine and Electronically Controlled Transmission ECU)
14	Shift Lock ECU
15	Center Airbag Sensor Assembly
16	Cruise Control ECU
17	PPS ECU
18	Tilt and Power Telescopic ECU


Passenger Compartment Fuse Box

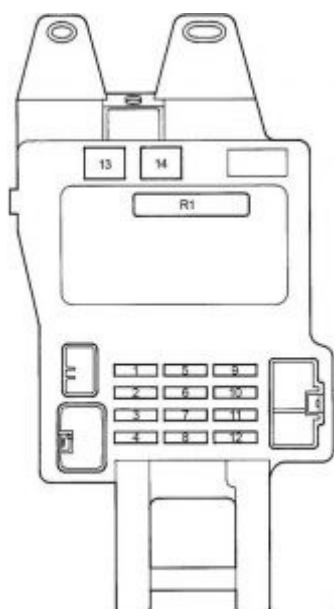

Lexus GS300 – fuse box diagram – passenger compartment fuse box

Description		Ampere rating [A]	Description
1	SEAT HTR	15	Seat heater
2	STOP	20	Shift lock system, high mounted stoplight, cruise control system, anti-lock brake system, traction control system, multiport fuel injection system / sequential multiport fuel injection system, stop lights
3	GAUGE	15	Rear window and outside rear view mirror defogger, heater control system, air conditioning system, gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), charging system, automatic transmission indicator, back-up lights, daytime running light system
4	ECU-IG	10	Shift lock system, telephone, power door lock system for passenger seat, seat belt system, anti-lock brake system, power steering control system, traction control system, cruise control system, driving pattern selector switch, tilt and telescopic control system, power antenna, electronic cooling fan system, instrument panel lights, automatic light control system, power door lock control system
5	CIG	15	Clock, air conditioning system, radio, cassette tape player, compact disc player, shift lock system, SRS, front and rear cigarette lighters , power door lock control system, power rear view mirror control system, power antenna, theft deterrent
6	—	—	—
7	TURN	10	Turn signal lights and indicator
8	WIPER	15	1991-1993: Windshield wipers and washer, headlight cleaner
		20	1994-1997: Windshield wipers and washer, headlight cleaner


9	PANEL	7,5	Automatic transmission indicator, heater control system, emergency flasher switch, glovebox light, rear ashtrays, clock, front cigarette lighter light, radio, cassette tape player, compact disc player, driving pattern selector switch light, instrument panel lights, daytime running lights system
10	SRS	7,5	SRS airbag
11	TAIL	10	License plate lights, parking lights, tail lights
12	MIR HTR	10	Outside rear view mirror defogger
13	POWER	30	Moon roof, power window, power seat, theft deterrent, tilt and power telescopic, power main relay
14	DEFOG	40	Rear window defogger, "MIR HTR" fuse
Relay			
R1	Integration relay		

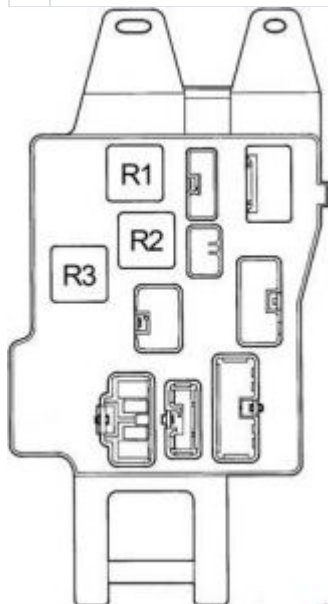

Lexus GS300 – fuse box diagram – passenger compartment fuse box

Number	Relay
R1	Short pin
R2	Taillight
R3	Defogger


Passenger Compartment Relay Box

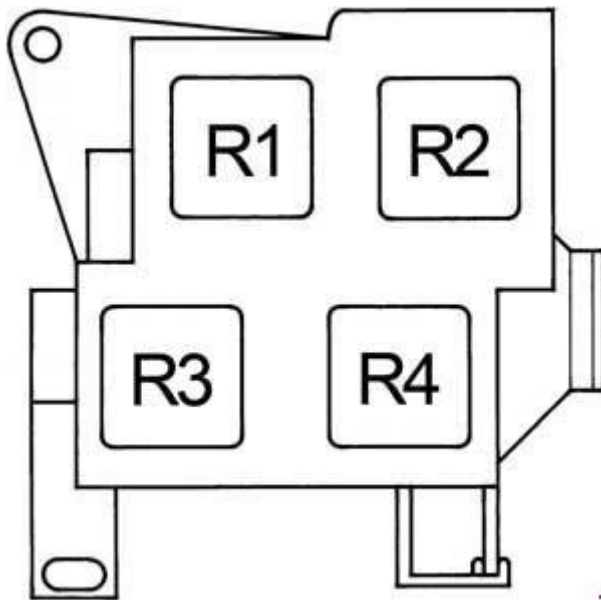

.Lexus GS300 – fuse box diagram – passenger

compartment relay box


Number	Relay
R1	Turn signal flasher
R2	Daytime running light system No.4
R3	Fog light
R4	Power main

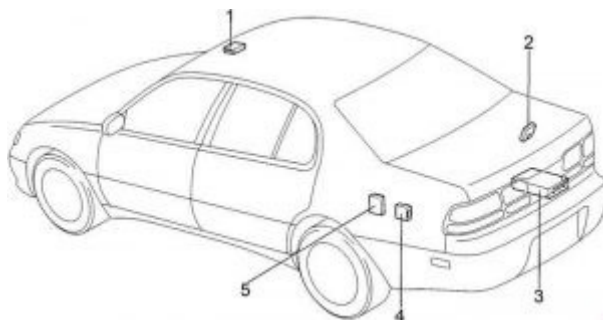

Lexus GS300 – fuse box diagram

Number	Description
1	Moon Roof Control Relay
2	Wireless Door Lock ECU
3	Stereo Component Amplifier
4	Auto Antenna Motor and Relay
5	Fuel Pump ECU

Engine Compartment

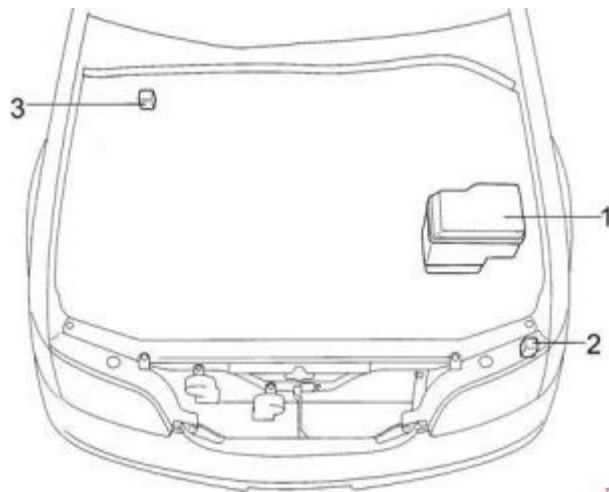


Lexus GS300 – fuse box diagram – engine

compartment

Number	Description
1	Fuse Box
2	Headlight Cleaner Relay
3	Traction Solenoid Relay

Engine Compartment Fuse Box

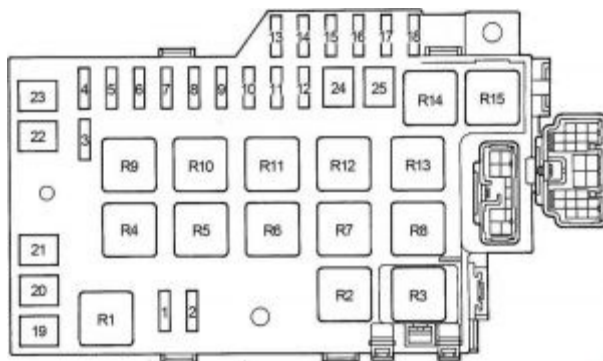

Lexus GS300 – fuse box diagram – engine

compartment fuse box

Number	Fuse	Ampere rating [A]	Description
1	FOG	15	Fog lights
2	DRL	7,5	Daytime running light system
3	TRAC	10	Traction control system
4	DOME	10	Interior light, vanity lights, electric moon roof system, cruise control system, open door warning light, personal lights, trunk room light, door courtesy lights, footlights, ignition switch light, clock, anti-lock brake system, power antenna, radio, locking with wireless remote control system, theft deterrent system
5	ECU-B	7,5	Locking with wireless remote control system, anti-lock brake system, traction control system, cruise control

			system, daytime running light system, air conditioning system
6	ALT SENSING	7,5	Charging system
7	AM2	15	Multiport fuel injection system / sequential multiport fuel injection system, SRS airbag, charging lamp, starting system, electronic ignition system/ distributor ignition system, gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights)
8	TEL	15	Telephone
9	HAZ. HORN	20	Emergency flashers, horns
10	EFI	20	Electronically controlled automatic transmission system, multiport fuel injection system / sequential multiport fuel injection system
11	RADIO NO. 1	25	Radio, cassette tape player, compact disc player, power antenna
12	IG2	30	Electronic ignition system / distributor ignition system
13	OBD II	7,5	1996-1997: On-board diagnosis system
14	HEAD RH	15	Right hand headlight
	HEAD RH-UPR	10	Right-hand headlight (high beam)
15	HEAD LH	15	Left-hand headlight
	HEAD LH-UPR	10	Left-hand headlight (high beam)
16	HEAD RH-LWR	10	Right-hand headlight (low beam)
17	HEAD LH-LWR	10	Left-hand headlight (low beam)
18	RDI FAN	30	Electronic cooling fan system
19	—	—	—
20	AM1	40	Ignition switch, "ECU-IG", "WIPER", "GAUGE", "TURN", "SEAT-HTR", "CIG" fuses
21	HEATER	50	Heater relay
22	ABS	60	Radiator fan main relay (point side), traction solenoid relay (point side), ABS solenoid relay (point side), "TRAC" fuse
23	ALT	100	Taillight relay, generator (alternator), "FOG", "AM1", "HEATER", "DEFOG", "ABS", "STOP", "SRS", "POWER" fuses
24	MAIN	50	Headlight relay, daytime running light relay no.2, starter relay (point side)

25	ABS No.2	40	ABS motor relay (point side), traction motor relay (point side)
Relay			
R1	Daytime running light system No.3		
R2	Radiator fan		
R3	Daytime running light system No.2		
R4	Heater		
R5	Short pin		
R6	Air conditioner compressor clutch		
R7	Starter		
R8	ABS motor		
R9	ABS solenoid		
R10	Radiator fan main		
R11	Ignition (IG2)		
R12	Headlight		
R13	Traction motor		
R14	Horn		
R15	EFI		