



F RELAY LOCATIONS


[Engine Compartment]

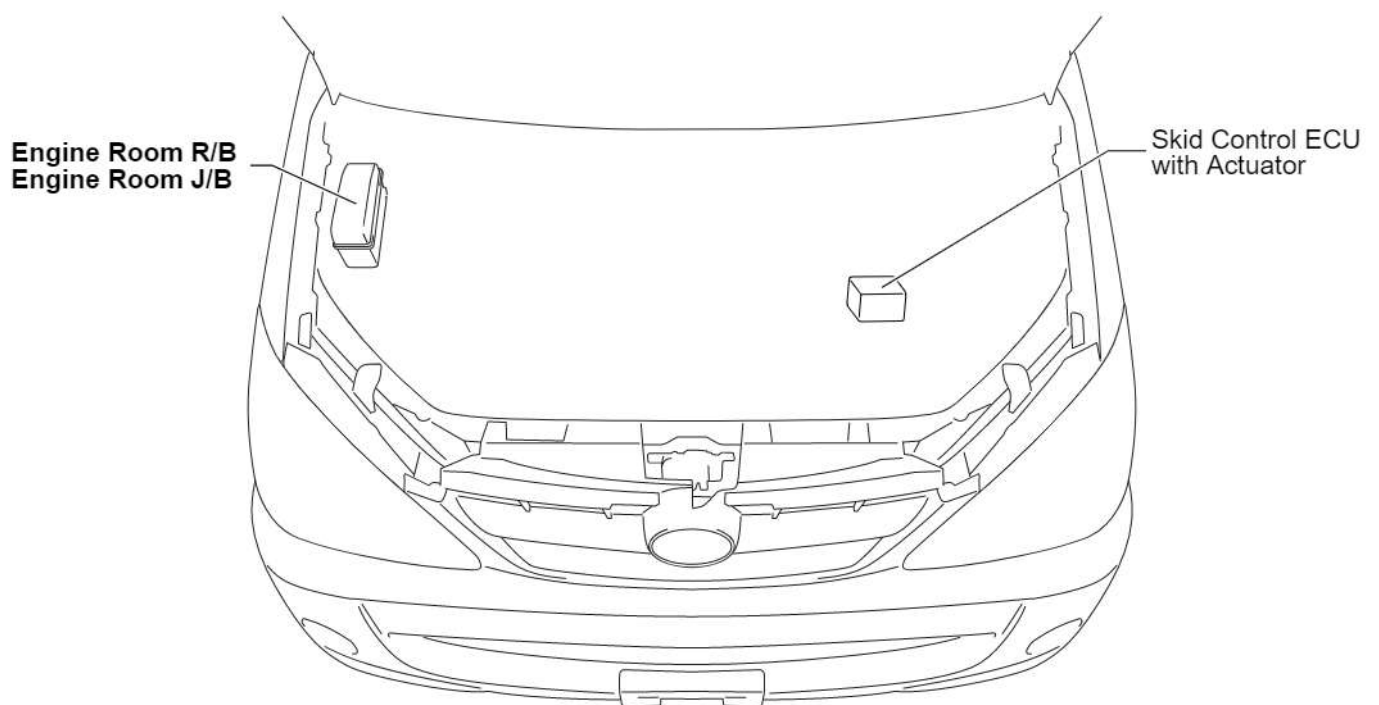

[Instrument Panel] (LHD)

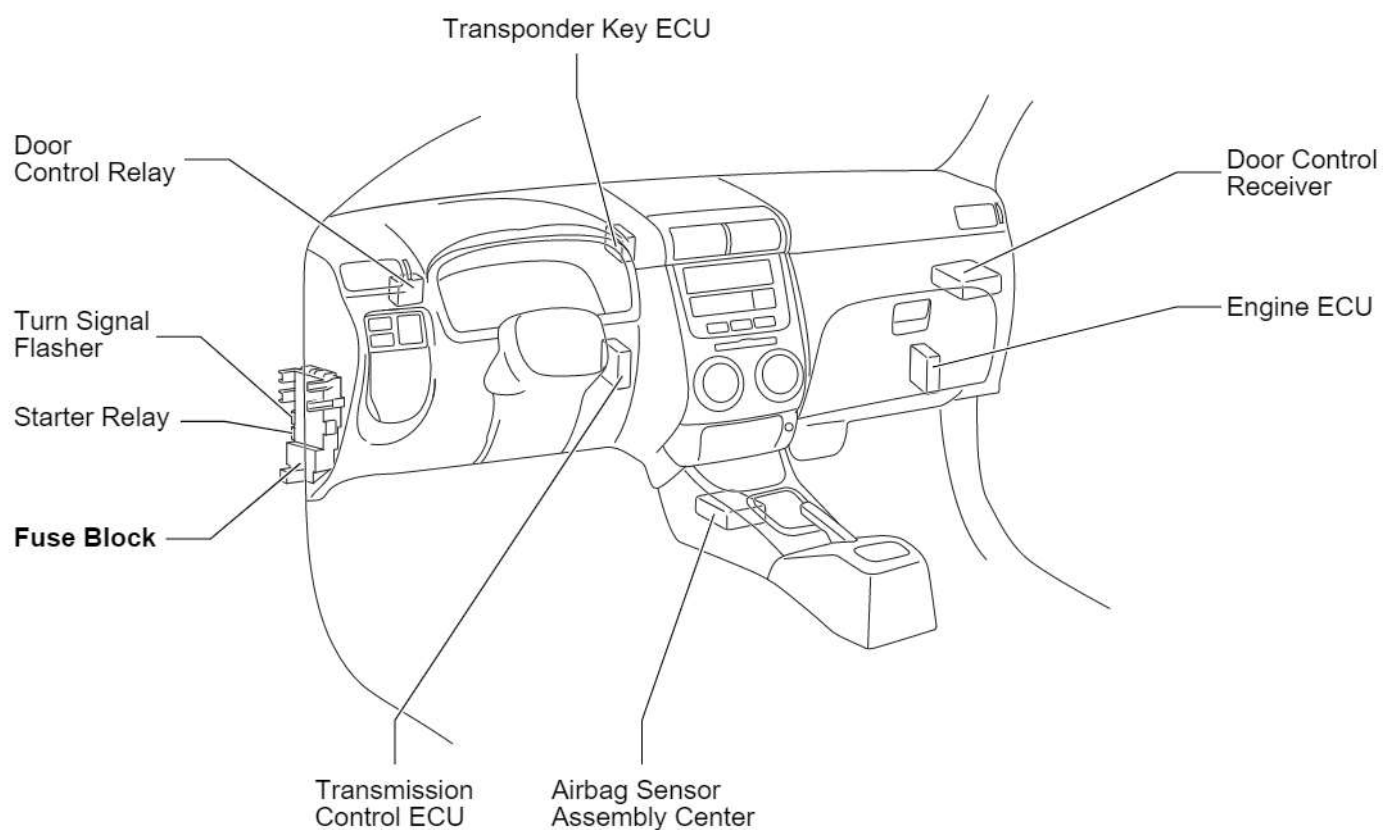


(RHD)

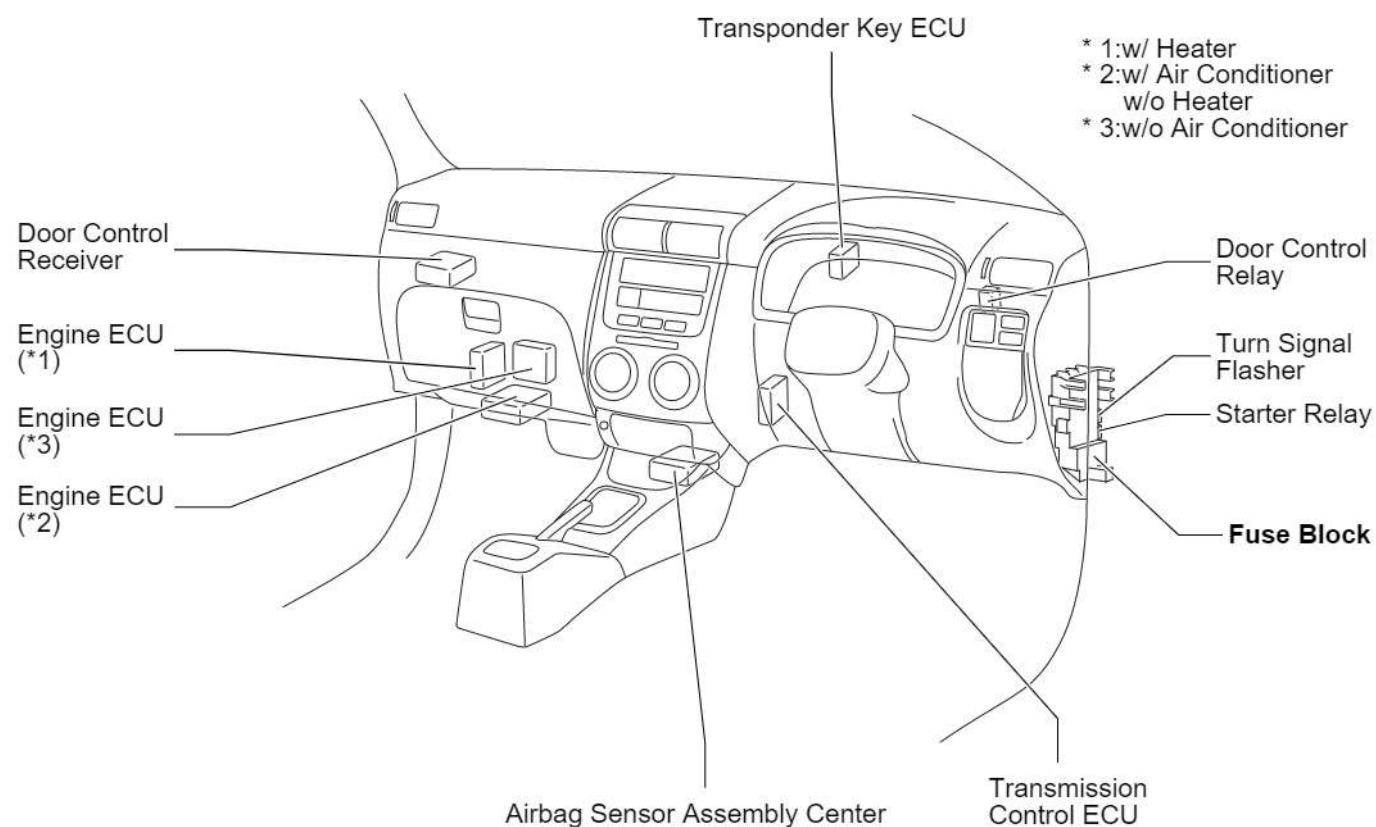

F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Right (See Page 20)
○ : Engine Room J/B	

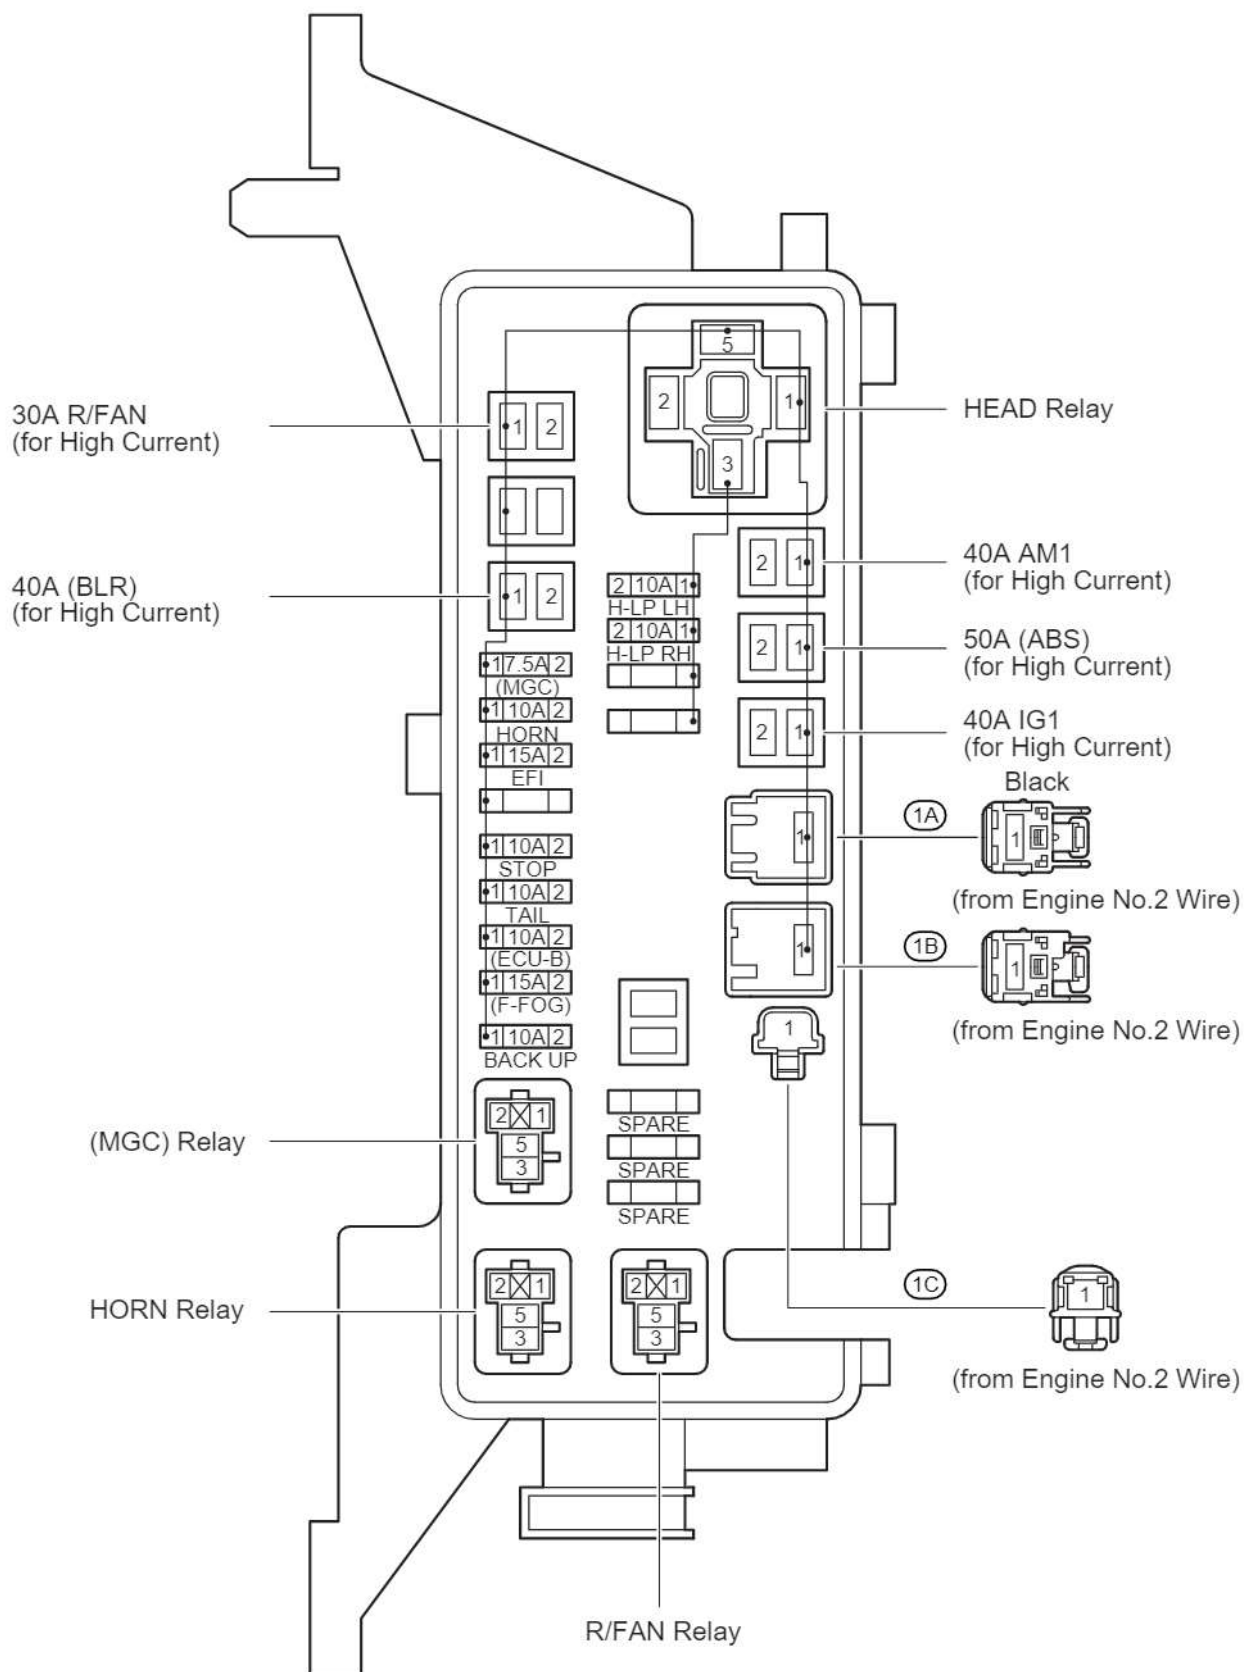

② : Fuse Block

LHD : Left Kick Panel (See Page 21)

RHD : Right Kick Panel (See Page 21)

