



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

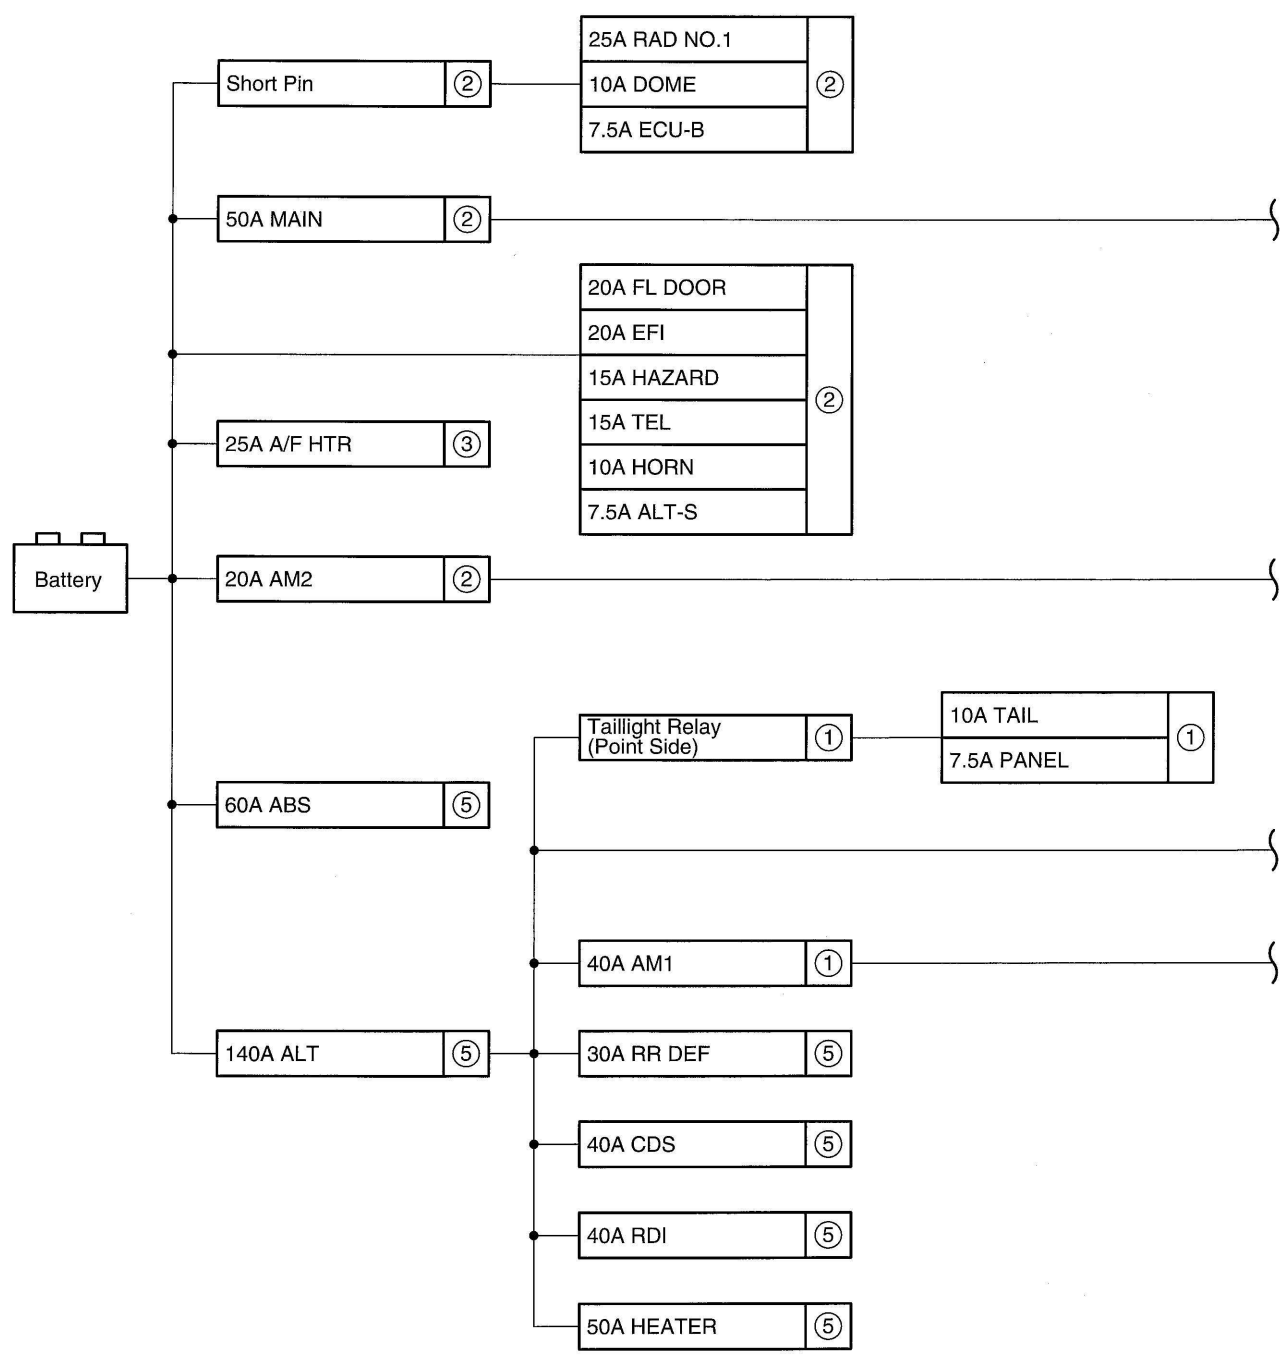

[LOCATION] ① : Instrument Panel J/B (See Page 78 (LHD) or 80 (RHD)) ② : Engine Room J/B (See Page 82)
⑤ : Fusible Link Block (F11 on See Page 90 (LHD) or 98 (RHD))

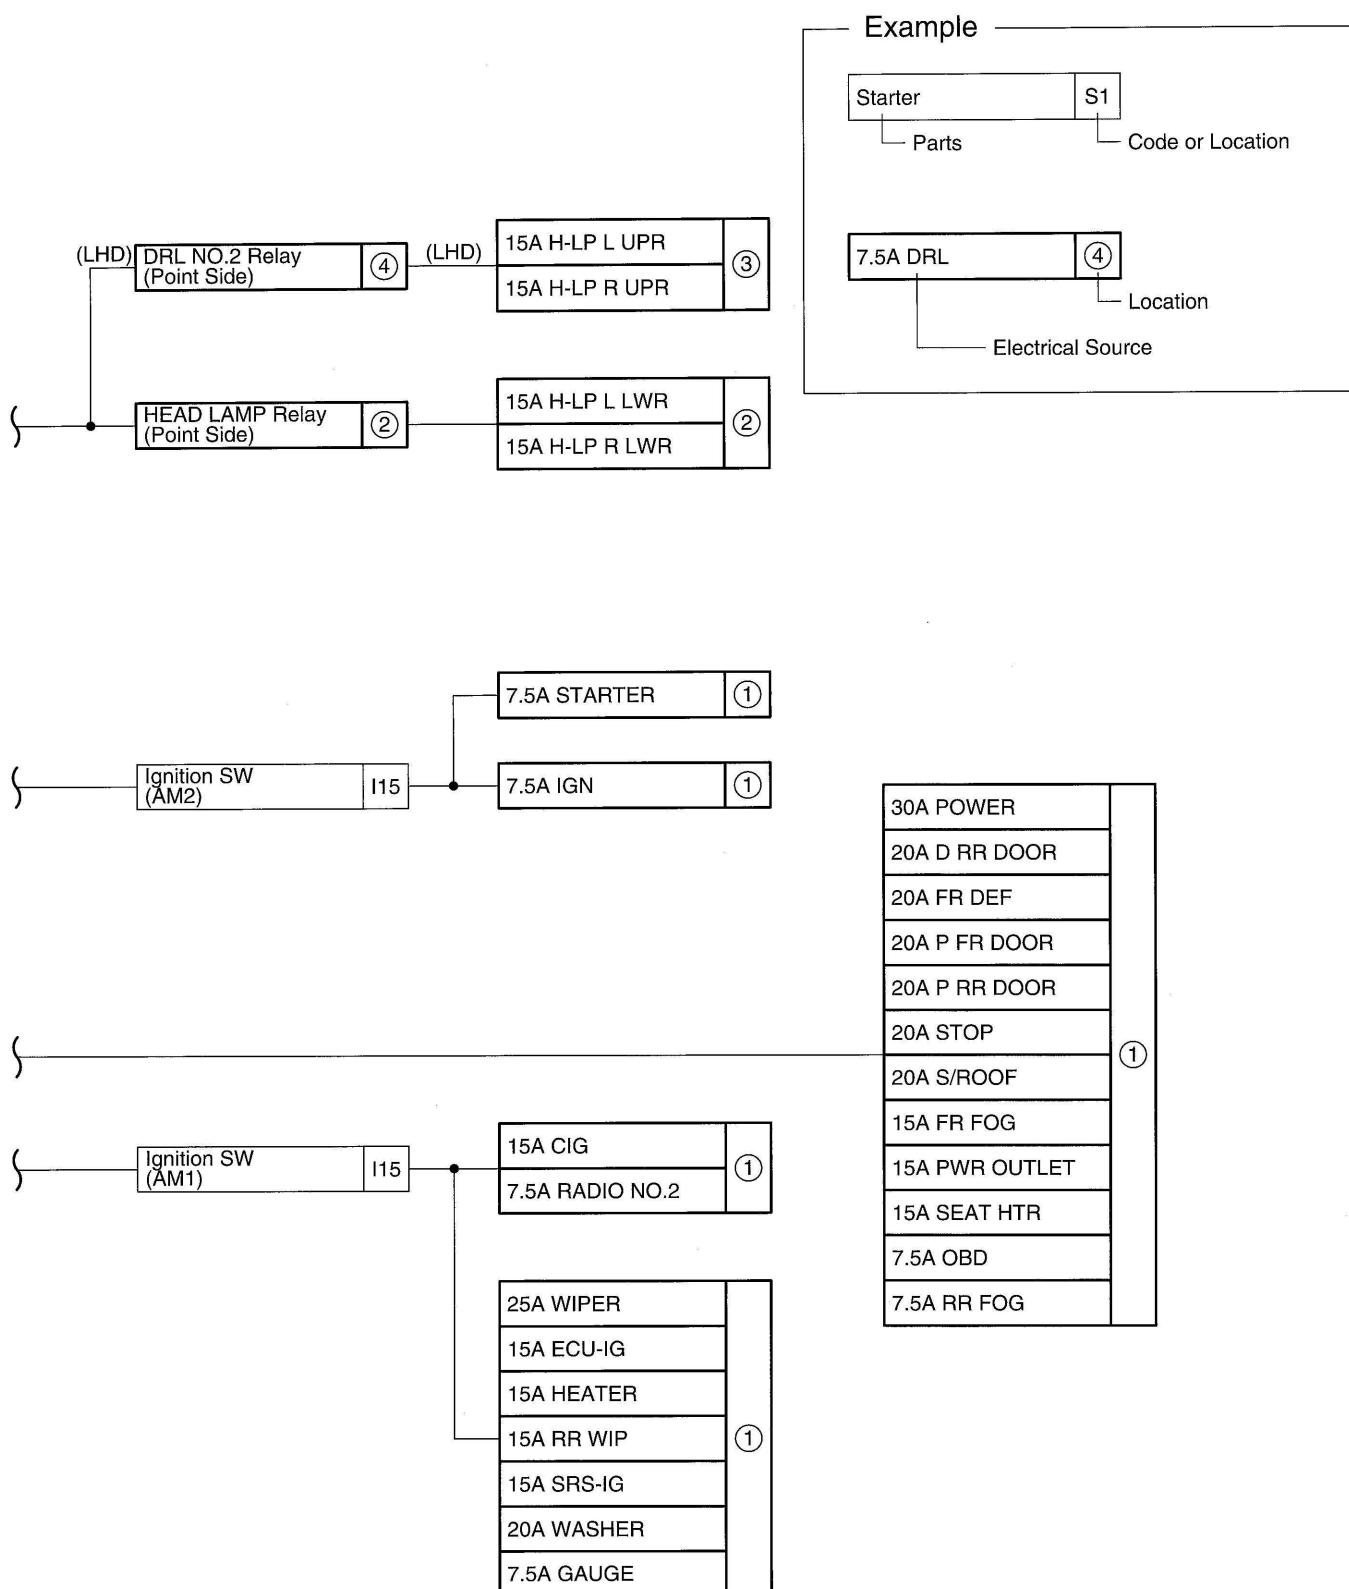

③ : R/B No.2 (See Page 88)

④ : R/B No.3 (See Page 88)

J POWER SOURCE (Current Flow Chart)

Instrument Panel J/B (See Page 78 (LHD) or 80 (RHD))

Fuse		System	Page
7.5A	GAUGE	Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434
		Automatic Glare-Resistant EC Mirror	410
		Automatic Light Control (LHD)	244
		Automatic Light Control (RHD)	248
		Back-Up Light	198
		Double Locking (LHD)	328
		Double Locking (RHD)	336
		ECT and A/T Indicator	352
		Headlight (LHD)	158
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		LEXUS Navigation System	380
		Light Auto Turn Off (LHD)	252
		Light Auto Turn Off (RHD)	256
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Seat Heater (LHD)	406
		Seat Heater (RHD)	408
		Stop Light	194
		Taillight	182
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Turn Signal and Hazard Warning Light	178
		VSC	360
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
7.5A	IGN	ECT and A/T Indicator	352
		Engine Control and Engine Immobiliser System	144
		SRS	373
7.5A	PANEL	Automatic Light Control (LHD)	426
		Headlight (LHD)	158
		Illumination (LHD)	186
		Illumination (RHD)	190
		LEXUS Navigation System	380
		Light Auto Turn Off (LHD)	252
		Light Reminder and Seat Belt Warning (LHD)	264
		Multiplex Communication System (LHD)	260

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	RADIO NO.2	Auto Antenna	392
		Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434
		Cellular Mobile Telephone	394
		LEXUS Navigation System	380
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Radio and Player (LHD)	384
		Radio and Player (RHD)	388
7.5A	RR FOG	Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Rear Fog Light	168
7.5A	STARTER	Engine Control and Engine Immobiliser System	144
		Starting and Ignition	140
7.5A	OBD	Engine Control and Engine Immobiliser System	144
10A	TAIL	Front Fog Light	166
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Rear Fog Light	168
		Taillight	182
15A	CIG	Cigarette Lighter	200
		Remote Control Mirror (LHD)	348
		Remote Control Mirror (RHD)	350
		Shift Lock	378
15A	ECU-IG	Auto Antenna	392
		Automatic Glare-Resistant EC Mirror	410
		Cellular Mobile Telephone	394
		Charging	138
		Cruise Control	368
		Moon Roof	344
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Shift Lock	378
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
15A	FR FOG	VSC	360
		Front Fog Light	166
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
15A	FR FOG	Rear Fog Light	168

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	HEATER	Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434
		Automatic Glare-Resistant EC Mirror	410
		Combination Meter	416
		Cruise Control	368
		ECT and A/T Indicator	352
		Engine Control and Engine Immobiliser System	144
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Radiator Fan and Condenser Fan	422
		SRS	373
		Stop Light	194
		Taillight	182
		VSC	360
15A	POWER OUTLET	Power Outlet	202
15A	RR WIP	Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Rear Wiper and Washer	174
15A	SEAT HTR	Seat Heater (LHD)	406
		Seat Heater (RHD)	408
15A	SRS-IG	SRS	373
20A	D RR DOOR	Double Locking (LHD)	328
		Double Locking (RHD)	336
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
20A	FR DEF	Automatic Glare-Resistant EC Mirror	410
20A	P FR DOOR	Automatic Light Control (RHD)	244
		Double Locking (LHD)	328
		Double Locking (RHD)	336
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		Light Auto Turn Off (RHD)	256
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
20A	P FR DOOR	Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
20A	P RR DOOR	Double Locking (LHD)	328
		Double Locking (RHD)	336
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
20A	S/ROOF	Moon Roof	344
20A	STOP	Cruise Control	368
		ECT and A/T Indicator	352
		Engine Control and Engine Immobiliser System	144
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Shift Lock	378
		Stop Light	194
		VSC	360
20A	WASHER	Front Wiper and Washer (LHD)	170
		Front Wiper and Washer (RHD)	172
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Rear Wiper and Washer	174
25A	WIPER	Front Wiper and Washer (LHD)	170
		Front Wiper and Washer (RHD)	172
30A	POWER	Power Seat (LHD)	398
		Power Seat (RHD)	402
40A	AM1	Power Outlet	202

Engine Room J/B (See Page 82)

Fuse		System	Page
7.5A	ALT-S	Charging	138
7.5A	ECU-B	Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	ECU-B	Automatic Light Control (LHD)	244
		Automatic Light Control (RHD)	248
		Combination Meter	416
		Double Locking (LHD)	328
		Double Locking (RHD)	336
		Headlight (LHD)	158
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		Light Auto Turn Off (LHD)	252
		Light Auto Turn Off (RHD)	256
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
10A	DOME	Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434
		Combination Meter	416
		Double Locking (LHD)	328
		Double Locking (RHD)	336
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		LEXUS Navigation System	380
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Moon Roof	344
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Radio and Player (LHD)	384
		Radio and Player (RHD)	388
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
10A	HORN	Horn	204
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
15A	H-LP L LWR	Headlight (LHD)	158
		Multiplex Communication System (LHD)	208

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	H-LP LH	Headlight (RHD)	162
15A	H-LP R LWR	Headlight (LHD)	158
		Headlight Beam Level Control	164
		Multiplex Communication System (LHD)	208
15A	H-LP RH	Combination Meter	416
		Headlight (RHD)	162
		Headlight Beam Level Control	164
15A	HEATER	Turn Signal and Hazard Warning Light	178
15A	TEL	Cellular Mobile Telephone	394
20A	AM2	Engine Control and Engine Immobiliser System	144
		Starting and Ignition	140
20A	EFI	ECT and A/T Indicator	352
		Engine Control and Engine Immobiliser System	144
20A	FL DOOR	Automatic Light Control (LHD)	244
		Double Locking (LHD)	328
		Double Locking (RHD)	336
		Interior Light (LHD)	268
		Interior Light (RHD)	274
		Light Auto Turn Off (LHD)	252
		Light Reminder and Seat Belt Warning (LHD)	260
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Window (LHD)	280
		Power Window (RHD)	288
		Theft Deterrent and Door Lock Control (LHD)	296
		Theft Deterrent and Door Lock Control (RHD)	304
		Wireless Door Lock Control (LHD)	312
		Wireless Door Lock Control (RHD)	320
25A	RAD NO.1	Auto Antenna	392
		Radio and Player (LHD)	384
		Radio and Player (RHD)	388
50A	MAIN	Automatic Light Control (LHD)	244
		Automatic Light Control (RHD)	248
		Headlight (LHD)	158
		Headlight (RHD)	162
		Light Auto Turn Off (LHD)	252
		Light Auto Turn Off (RHD)	256
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (RHD)	228
		Rear Fog Light	168
		Starting and Ignition	140

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

R/B No.2 (See Page 88)

Fuse		System	Page
15A	H-LP L UPR	Headlight (LHD)	158
		Multiplex Communication System (LHD)	208
15A	H-LP R UPR	Combination Meter	416
		Headlight (LHD)	158
		Multiplex Communication System (LHD)	208
25A	A/F HTR	Engine Control and Engine Immobiliser System	144

Fusible Link Block (See Page 87)

Fuse		System	Page
30A	RR DEF	Automatic Glare-Resistant EC Mirror	410
40A	CDS	Radiator Fan and Condenser Fan	422
40A	RDI	Radiator Fan and Condenser Fan	422
50A	HEATER	Automatic Air Conditioner (LHD)	426
		Automatic Air Conditioner (RHD)	434
60A	ABS	VSC	360
140A	ALT	Automatic Light Control (LHD)	426
		Automatic Light Control (RHD)	434
		Charging	138
		Illumination (LHD)	186
		Illumination (RHD)	190
		Light Auto Turn Off (LHD)	252
		Light Auto Turn Off (RHD)	256
		Light Reminder and Seat Belt Warning (LHD)	260
		Light Reminder and Seat Belt Warning (RHD)	264
		Multiplex Communication System (LHD)	208
		Multiplex Communication System (RHD)	228
		Power Outlet	202
		Radiator Fan and Condenser Fan	422
		Rear Fog Light	168
		Taillight	182

* These are the page numbers of the first page on which the related system is shown.

