


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[1MZ-FE]

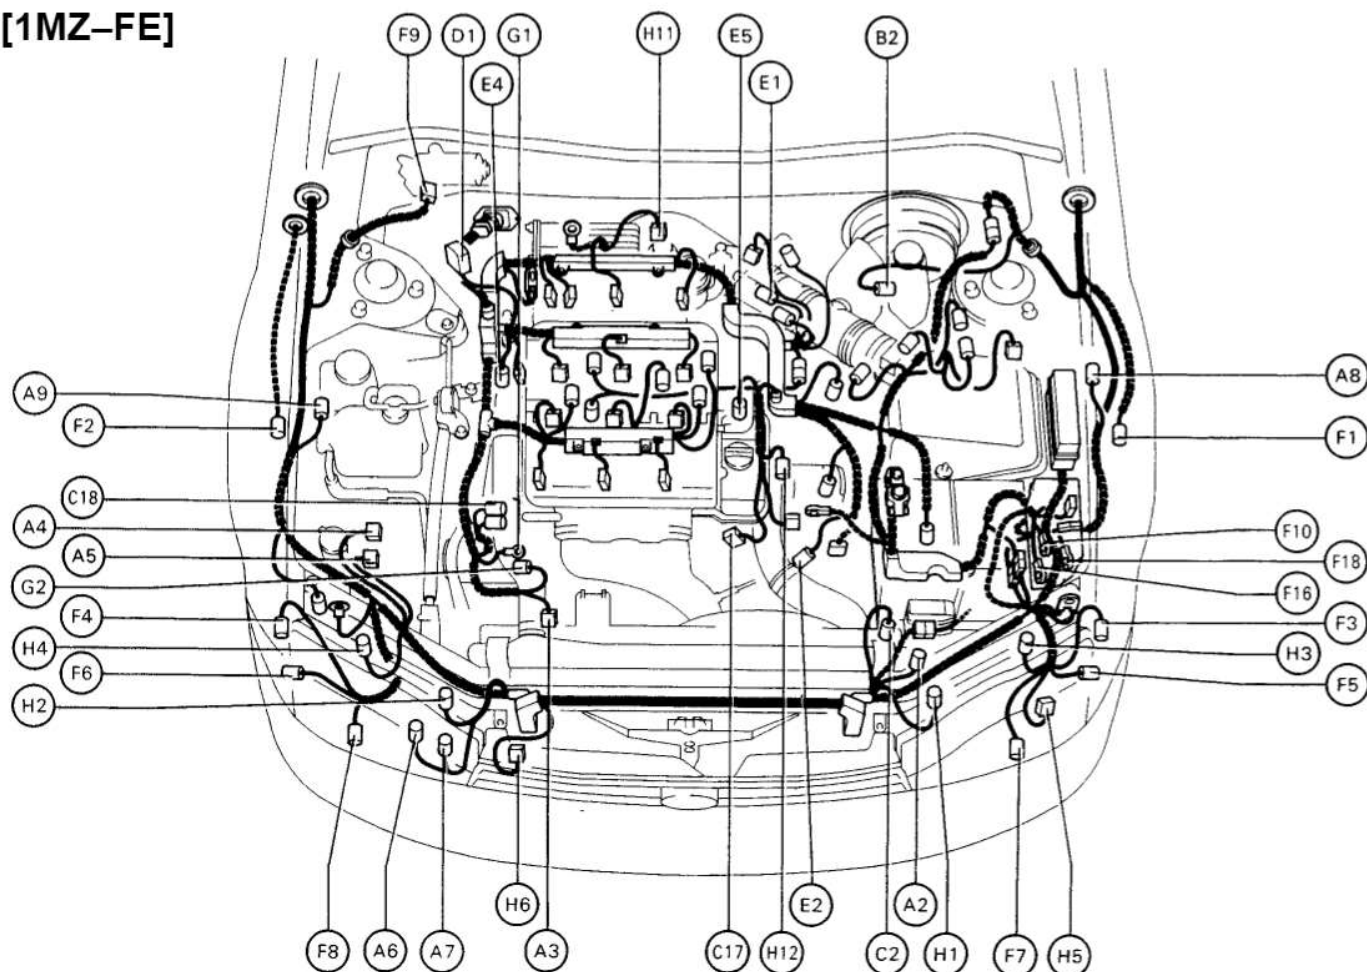

- A 2 A/C Triple Pressure SW (A/C Dual and Single Pressure SW)
- A 3 A/C Magnetic Clutch and Lock Sensor
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Relay
- A 7 ABS Relay
- A 8 ABS Speed Sensor Front LH
- A 9 ABS Speed Sensor Front RH

- B 2 Brake Fluid Level SW

- C 2 Cruise Control Actuator
- C 17 Camshaft Position Sensor
- C 18 Crankshaft Position Sensor

- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor

- E 1 EGR Gas Temp. Sensor
- E 2 Electronic Controlled Transmission Solenoid
- E 4 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)
- E 5 Engine Coolant Temp. Sensor (Water Temp. Sensor) (for Cooling Fan)


- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Side Marker LH
- F 6 Front Side Marker RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Wiper Motor
- F 10 Fuse Box
- F 16 Fuse Box
- F 18 Fuse Box

- G 1 Generator (Alternator)
- G 2 Generator (Alternator)

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Horn LH
- H 6 Horn RH
- H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 12 Heated Oxygen Sensor (Bank 2 Sensor 1)

Position of Parts in Engine Compartment

[1MZ-FE]

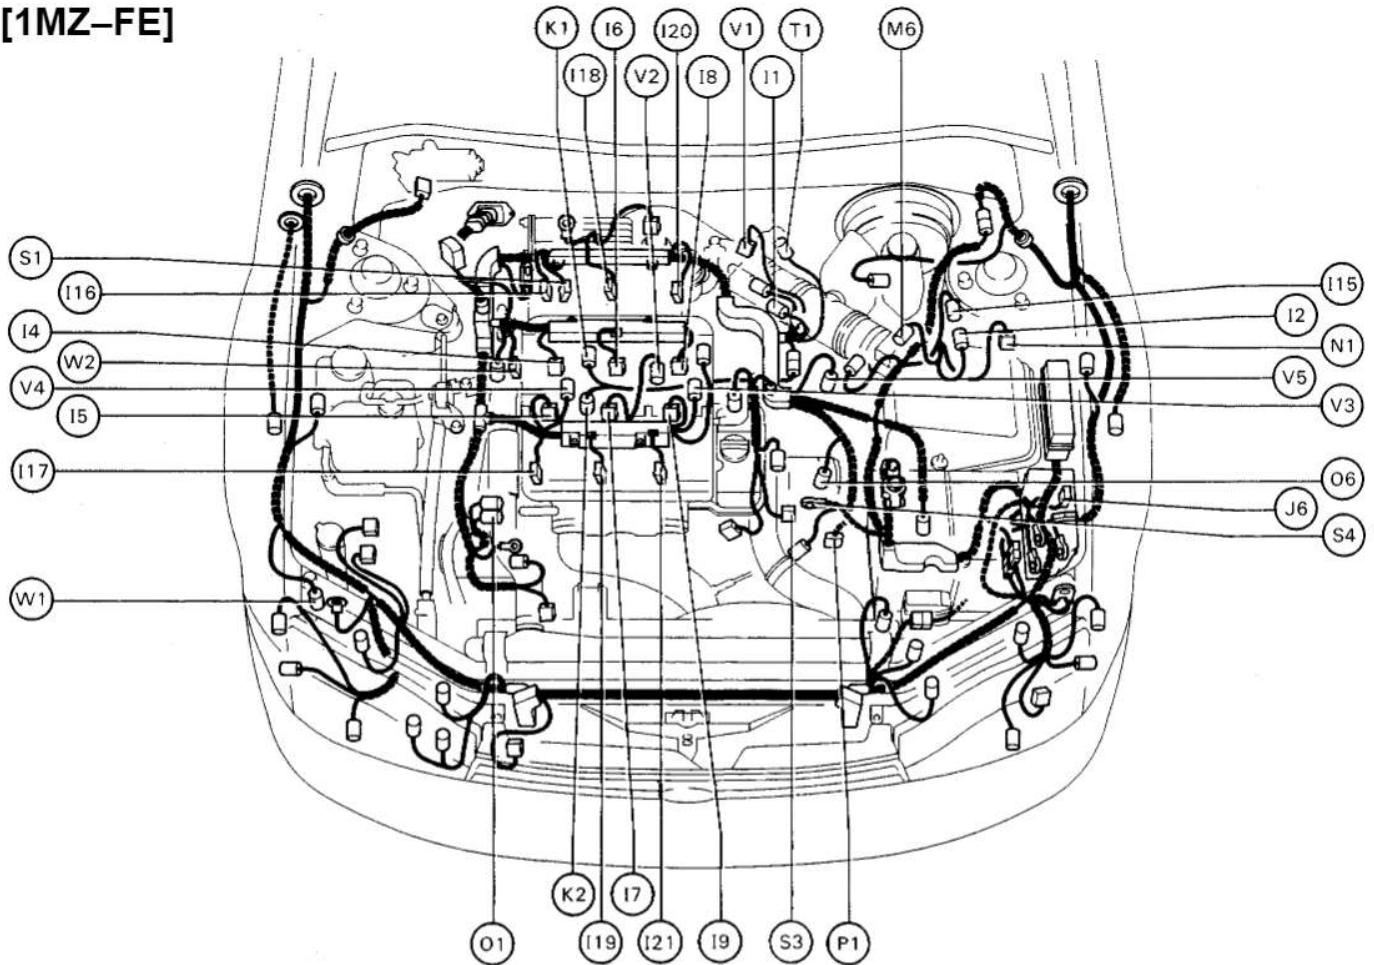

- I 1 Idle Air Control Valve (ISC Valve)
- I 2 Igniter
- I 4 Injector No. 1
- I 5 Injector No. 2
- I 6 Injector No. 3
- I 7 Injector No. 4
- I 8 Injector No. 5
- I 9 Injector No. 6
- I 15 Igniter
- I 16 Ignition Coil No. 1
- I 17 Ignition Coil No. 2
- I 18 Ignition Coil No. 3
- I 19 Ignition Coil No. 4
- I 20 Ignition Coil No. 5
- I 21 Ignition Coil No. 6

- J 6 Junction Connector

- K 1 Knock Sensor 1
- K 2 Knock Sensor 2

- M 6 Mass Air Flow (Air Flow Meter)

- N 1 Noise Filter (for Ignition System)

- O 1 Oil Pressure SW
- O 6 O/D Direct Clutch Speed Sensor

- P 1 Park/Neutral Position SW (Neutral Start SW) (A/T)

- S 1 Solenoid Valve (for Hydraulic Motor)
- S 3 Starter
- S 4 Starter

- T 1 Throttle Position Sensor


- V 1 VSV (for A/C Idle-Up)
- V 2 VSV (for EGR System)
- V 3 VSV (for Fuel Pressure Up)
- V 4 VSV (for Intake Air Control)
- V 5 Vehicle Speed Sensor (Speed Sensor)

- W 1 Washer Motor
- W 2 Water Temp. Sender

ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[5S-FE]

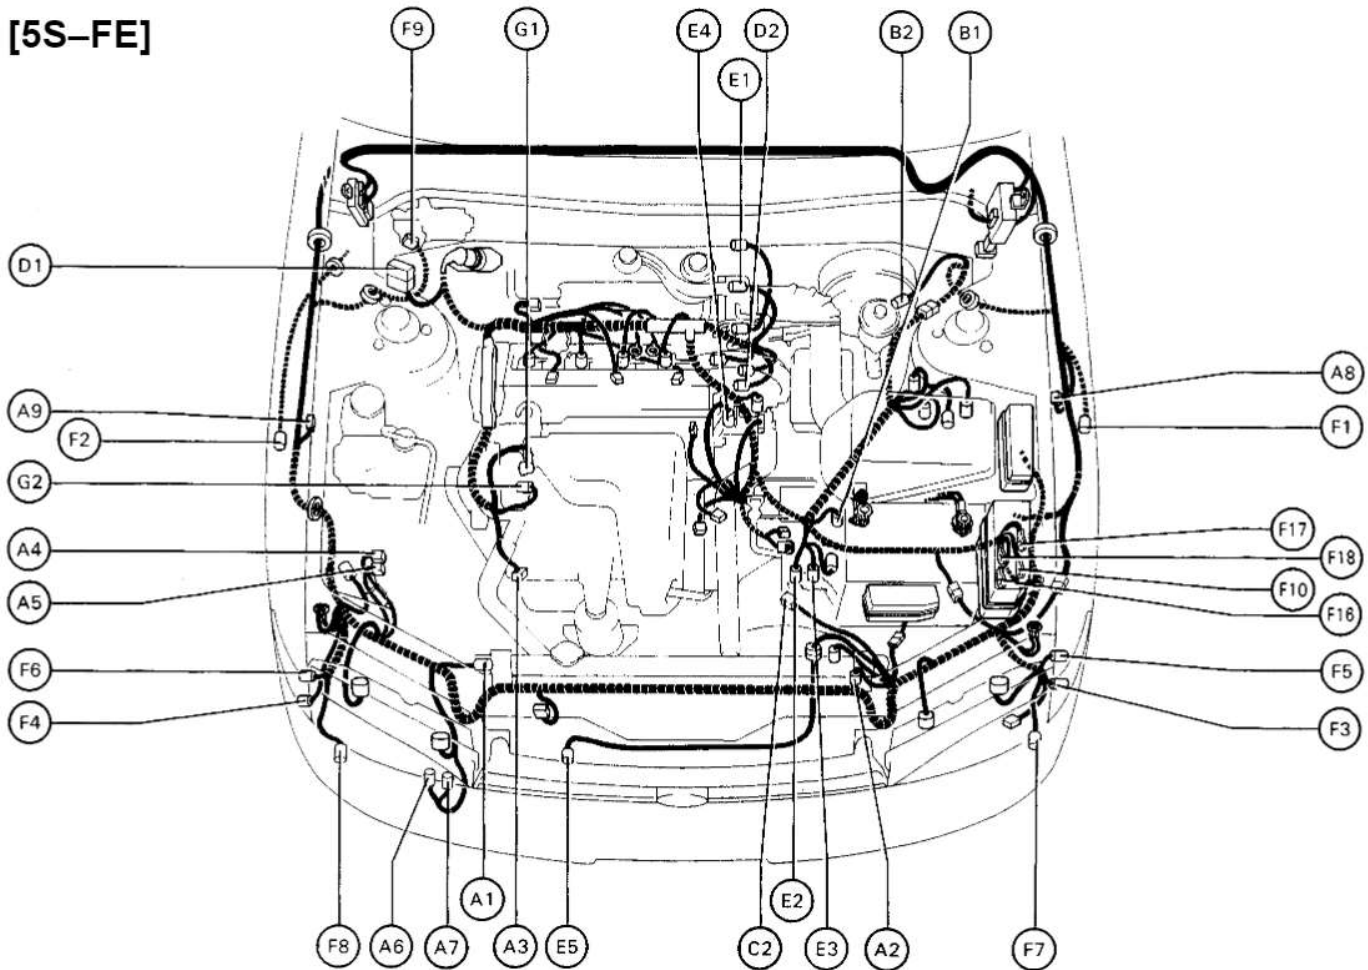

- A 1 A/C Condenser Fan Motor
- A 2 A/C Triple Pressure SW (A/C Dual and Single Pressure SW)
- A 3 A/C Magnetic Clutch and Lock Sensor
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Relay
- A 7 ABS Relay
- A 8 ABS Speed Sensor Front LH
- A 9 ABS Speed Sensor Front RH

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level SW

- C 2 Cruise Control Actuator

- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor

- E 1 EGR Gas Temp. Sensor
- E 2 Electronic Controlled Transmission Solenoid
- E 3 Electronic Controlled Transmission Solenoid
- E 4 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)
- E 5 Water Temp. SW (for Cooling Fan)


- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Side Marker LH
- F 6 Front Side Marker RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Wiper Motor
- F 10 Fuse Box
- F 16 Fuse Box
- F 17 Fuse Box
- F 18 Fuse Box

- G 1 Generator (Alternator)
- G 2 Generator (Alternator)

Position of Parts in Engine Compartment

[5S-FE]

*1: California
*2: Ex. California

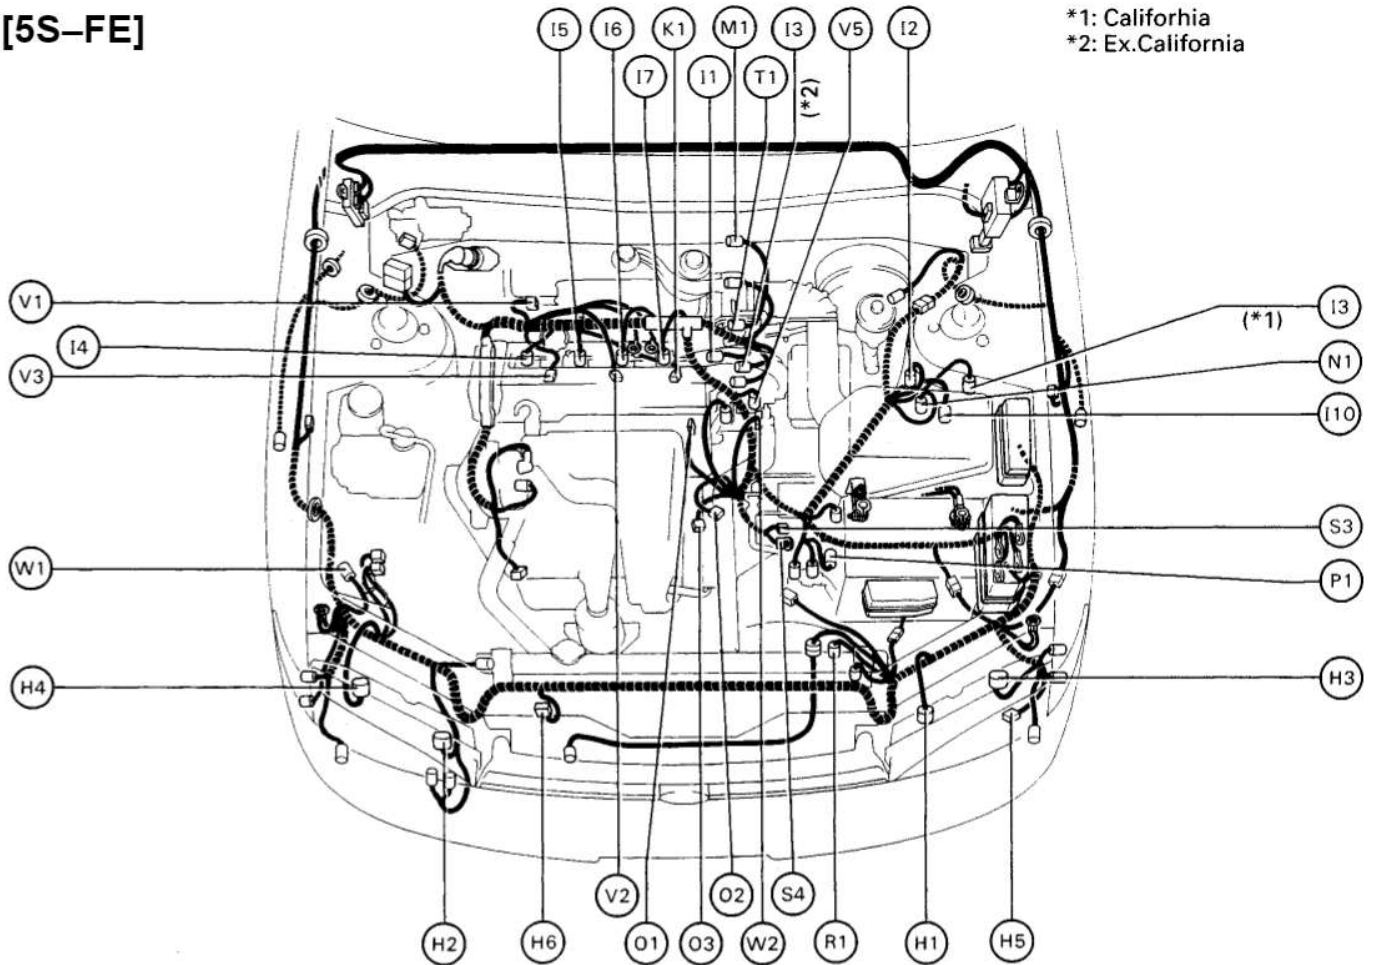

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Horn LH
- H 6 Horn RH

- I 1 Idle Air Control Valve (ISC Valve)
- I 2 Igniter
- I 3 Ignition Coil
- I 4 Injector No. 1
- I 5 Injector No. 2
- I 6 Injector No. 3
- I 7 Injector No. 4
- I 10 Intake Air Temp. Sensor (In-Air Temp. Sensor)

- K 1 Knock Sensor

- M 1 Manifold Absolute Pressure Sensor (Vacuum Sensor)

- N 1 Noise Filter (for Ignition System)

- O 1 Oil Pressure SW
- O 2 Oxygen Sensor (Sub)
- O 3 Oxygen Sensor (Main)

- P 1 Park/Neutral Position SW (Neutral Start SW) (A/T)

- R 1 Radiator Fan Motor

- S 3 Starter

- S 4 Starter

- T 1 Throttle Position Sensor

- V 1 VSV (for A/C Idle-Up)

- V 2 VSV (for EGR System)

- V 3 VSV (for Fuel Pressure Up)

- V 5 Vehicle Speed Sensor (Speed Sensor)


- W 1 Washer Motor

- W 2 Water Temp. Sender

cardiagn.com

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

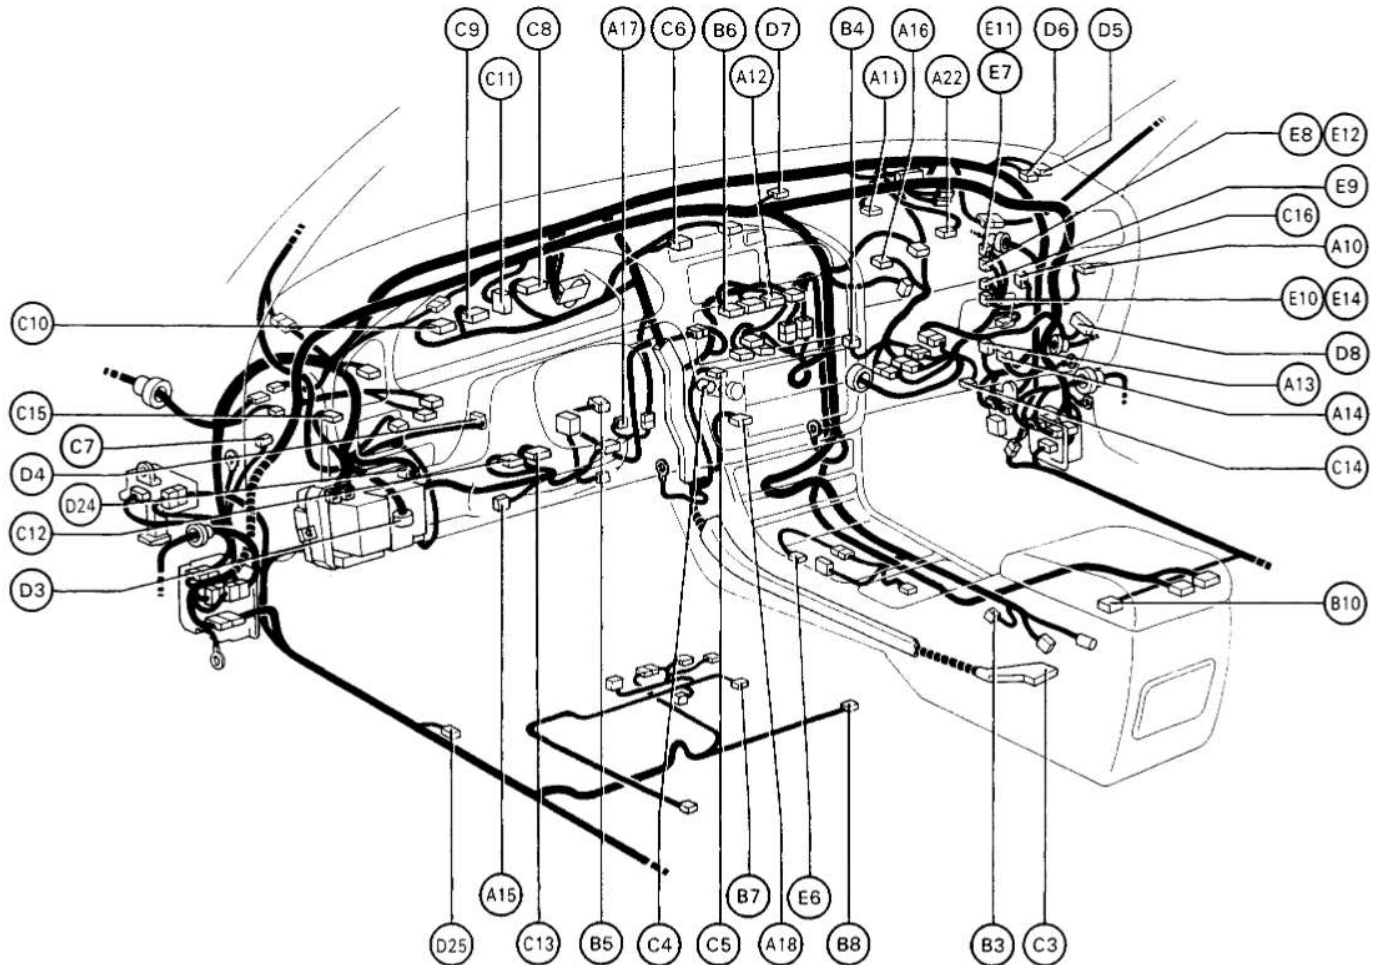

- A 10 A/C Amplifier
- A 11 A/C Evaporator Temp. Sensor
- A 12 A/C SW
- A 13 ABS ECU
- A 14 ABS ECU
- A 15 Airbag Squib (Steering Wheel Pad)
- A 16 Air Inlet Control Servo Motor
- A 17 Air Vent Mode Control Servo Motor
- A 18 Ashtray Illumination
- A 22 Airbag Squib (Front Passenger Airbag Assembly)

- B 3 Back Door Lock Control SW
- B 4 Blower Motor
- B 5 Blower Resistor
- B 6 Blower SW
- B 7 Buckle SW LH (w/ Power Seat)
- B 8 Buckle SW LH (w/o Power Seat)
- B 10 Buckle SW RH


- C 3 Center Airbag Sensor Assembly
- C 4 Cigarette Lighter
- C 5 Cigarette Lighter Illumination
- C 6 Clock
- C 7 Clutch Start SW (M/T)
- C 8 Combination Meter
- C 9 Combination Meter
- C 10 Combination Meter
- C 11 Combination Meter

- C 12 Combination SW
- C 13 Combination SW
- C 14 Cooling Fan ECU
- C 15 Cruise Control Clutch SW (M/T)
- C 16 Cruise Control ECU

- D 3 Data Link Connector 2 (TDCL (Toyota Diagnostic Communication Link))
- D 4 Daytime Running Light Relay (Main)
- D 5 Diode (for Cruise Control)
- D 6 Diode (for Idle-Up)
- D 7 Diode (for Courtesy)
- D 8 Door Lock Control Relay
- D 24 Data Link Connector 3
- D 25 Diode (for Tension Reducer)

- E 6 Electronic Controlled Transmission Pattern Select SW
- E 7 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (A/T)
- E 8 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (A/T)
- E 9 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (A/T)
- E 10 Engine Control Module (Engine and Electronic Controlled Transmission ECU) (A/T)
- E 11 Engine Control Module (Engine ECU) (M/T)
- E 12 Engine Control Module (Engine ECU) (M/T)
- E 14 Engine Control Module (Engine ECU) (M/T)

Position of Parts in Instrument Panel

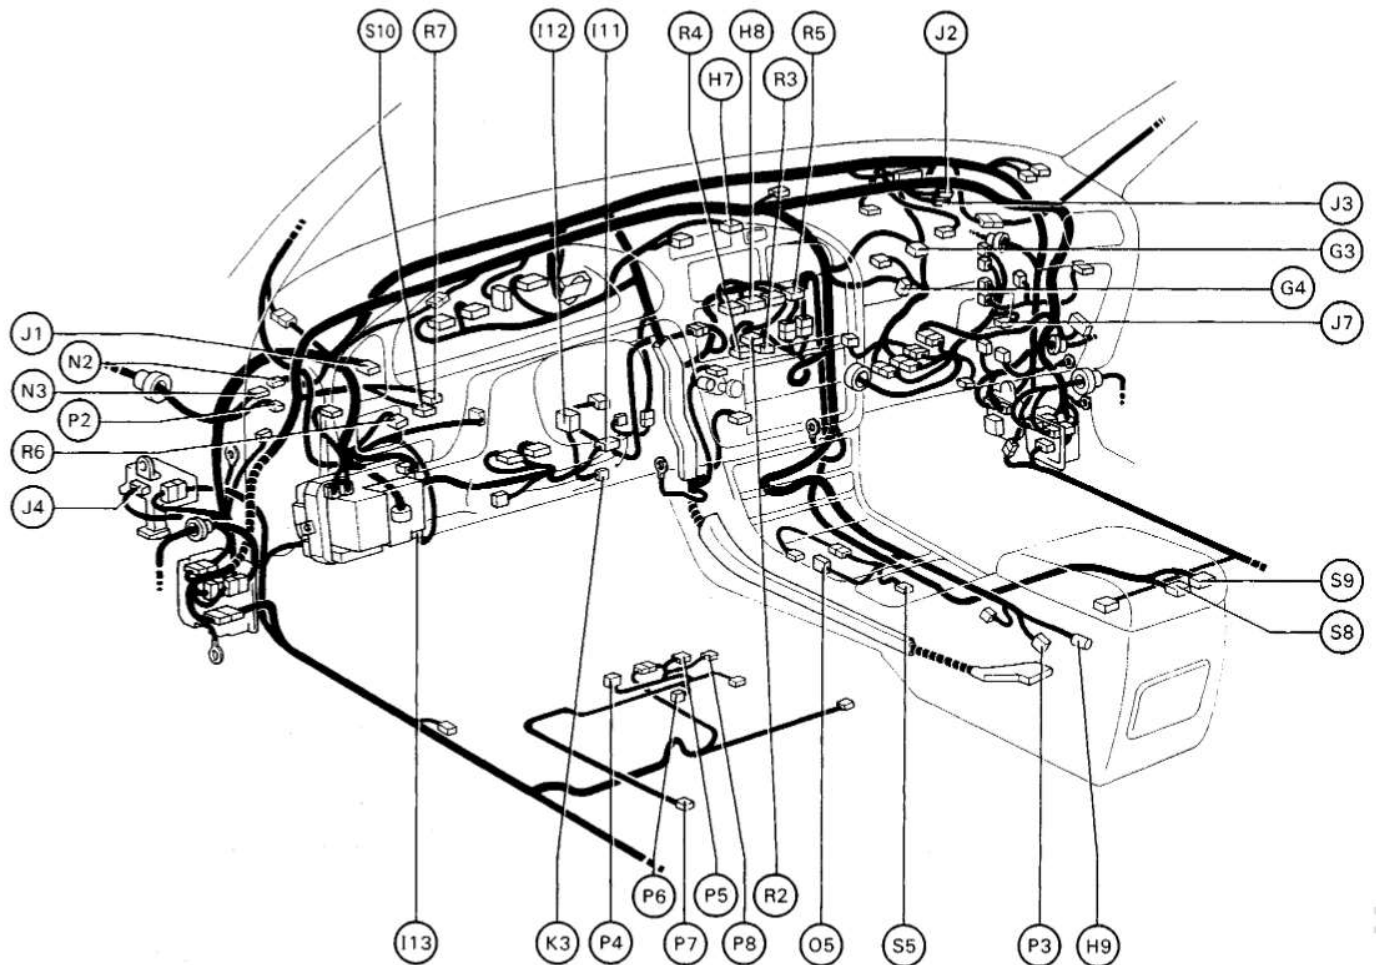


- | | | | |
|------|--|------|---|
| G 3 | Glove Box Light | O 5 | O/D Main SW and A/T Indicator Light (Shift Lever) |
| G 4 | Glove Box Light SW | P 2 | Parking Brake SW (for 1MZ-FE) |
| H 7 | Hazard SW | P 3 | Parking Brake SW (for 5S-FE) |
| H 8 | Heater Control SW (for Push Control SW Type) or Air Vent Mode Control SW (for Lever Control SW Type) | P 4 | Power Seat Control SW |
| H 9 | Heated Oxygen Sensor (Bank 1 Sensor 2) | P 5 | Power Seat Motor (for Front Vertical Control) |
| I 11 | Ignition Key Cylinder Light | P 6 | Power Seat Motor (for Rear Vertical Control) |
| I 12 | Ignition SW and Unlock Warning SW | P 7 | Power Seat Motor (for Reclining Control) |
| I 13 | Integration Relay | P 8 | Power Seat Motor (for Slide Control) |
| J 1 | Junction Connector | R 2 | Radio and Player (w/ CD Player) |
| J 2 | Junction Connector | R 3 | Radio and Player (w/o CD Player) |
| J 3 | Junction Connector | R 4 | Radio and Player (w/o CD Player) |
| J 4 | Junction Connector (for SRS System) | R 5 | Rear Window Defogger SW |
| J 7 | Junction Connector | R 6 | Remote Control Mirror SW |
| K 3 | Key Interlock Solenoid | R 7 | Rheostat |
| N 2 | Noise Filter (for Stop Light) | S 5 | Shift Lock ECU |
| N 3 | Noise Filter (for Stop Light) | S 8 | Stereo Component Amplifier |
| | | S 9 | Stereo Component Amplifier |
| | | S 10 | Stop Light SW |

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[Sedan]

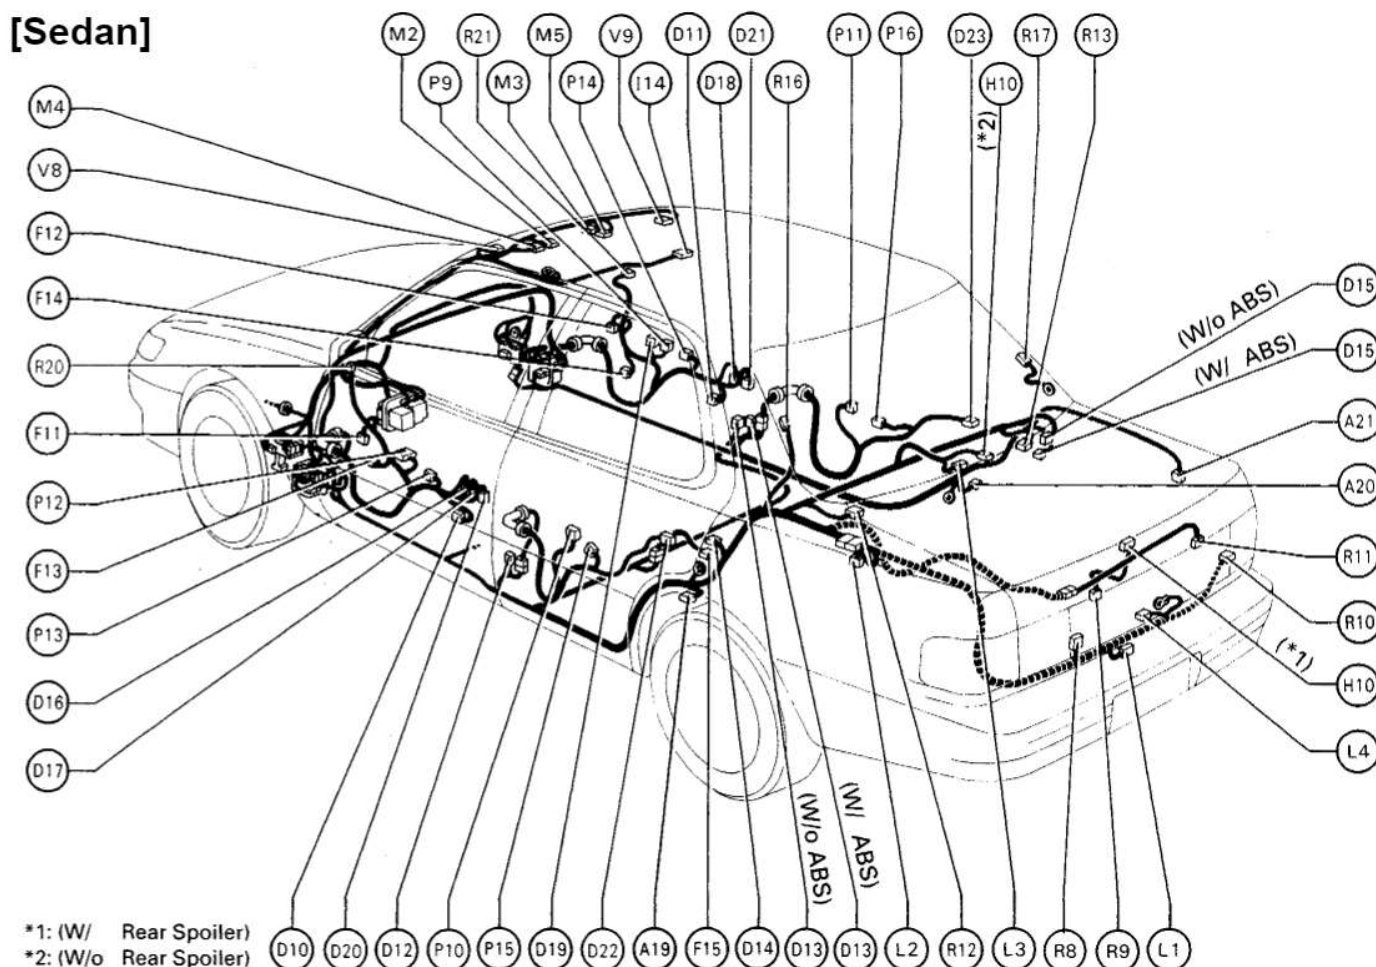

A 19 ABS Speed Sensor Rear LH
A 20 ABS Speed Sensor Rear RH
A 21 Auto Antenna Motor and Relay

D 10 Door Courtesy Light Front LH
D 11 Door Courtesy Light Front RH
D 12 Door Courtesy SW Front LH
D 13 Door Courtesy SW Front RH
D 14 Door Courtesy SW Rear LH
D 15 Door Courtesy SW Rear RH
D 16 Door Key Cylinder Light and SW
D 17 Door Key Lock and Unlock SW LH
D 18 Door Key Lock and Unlock SW RH
D 19 Door Lock Control SW RH
D 20 Door Lock Motor and Door Unlock Detection SW Front LH
D 21 Door Lock Motor and Door Unlock Detection SW Front RH
D 22 Door Lock Motor Rear LH
D 23 Door Lock Motor Rear RH

F 11 Front Door Speaker LH
F 12 Front Door Speaker RH
F 13 Front Tweeter (Speaker) LH
F 14 Front Tweeter (Speaker) RH
F 15 Fuel Pump and Sender

H 10 High Mount Stop Light

I 14 Interior Light

L 1 License Plate Light
L 2 Light Failure Sensor

L 3 Luggage Compartment Light
L 4 Luggage Compartment Light SW

M 2 Moon Roof Control Relay
M 3 Moon Roof Control SW and Personal Light (w/ Moon Roof)
M 4 Moon Roof Limit SW
M 5 Moon Roof Motor


P 9 Power Window Control SW Front RH
P 10 Power Window Control SW Rear LH
P 11 Power Window Control SW Rear RH
P 12 Power Window Master SW and Door Lock Control SW LH
P 13 Power Window Motor Front LH
P 14 Power Window Motor Front RH
P 15 Power Window Motor Rear LH
P 16 Power Window Motor Rear RH

R 8 Rear Combination Light LH
R 9 Rear Combination Light LH
R 10 Rear Combination Light RH
R 11 Rear Combination Light RH
R 12 Rear Speaker LH
R 13 Rear Speaker RH
R 16 Rear Window Defogger (+)
R 17 Rear Window Defogger (-)
R 20 Remote Control Mirror LH
R 21 Remote Control Mirror RH

V 8 Vanity Light LH
V 9 Vanity Light RH

Position of Parts in Body

[Coupe]

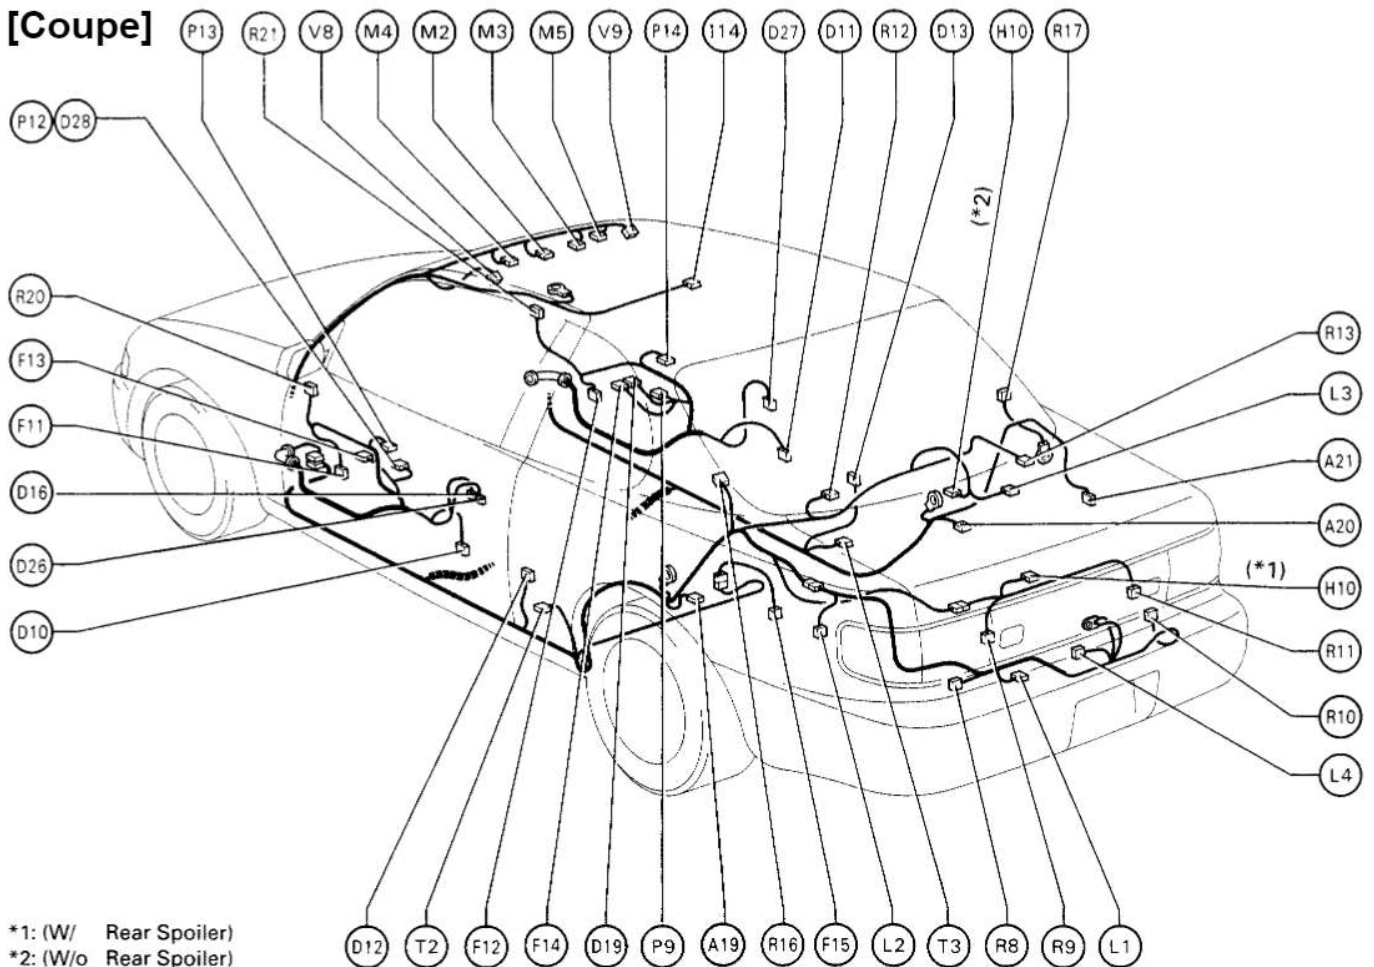

*1: (W/ Rear Spoiler)

*2: (W/o Rear Spoiler)

A 19 ABS Speed Sensor Rear LH
A 20 ABS Speed Sensor Rear RH
A 21 Auto Antenna Motor and Relay

D 10 Door Courtesy Light Front LH
D 11 Door Courtesy Light Front RH
D 12 Door Courtesy SW Front LH
D 13 Door Courtesy SW Front RH
D 16 Door Key Cylinder Light and SW
D 19 Door Lock Control SW RH
D 26 Door Lock Motor, Door Unlock Detection SW
Door Key Lock and Unlock SW LH
D 27 Door Lock Motor, Door Unlock Detection SW
Door Key Lock and Unlock SW RH
D 28 Door Lock Control SW LH (w/o Power Window)

F 11 Front Door Speaker LH
F 12 Front Door Speaker RH
F 13 Front Tweeter (Speaker) LH
F 14 Front Tweeter (Speaker) RH
F 15 Fuel Pump and Sender

H 10 High Mount Stop Light

I 14 Interior Light

L 1 License Plate Light
L 2 Light Failure Sensor
L 3 Luggage Compartment Light
L 4 Luggage Compartment Light SW

M 2 Moon Roof Control Relay
M 3 Moon Roof Control SW and Personal Light
(w/ Moon Roof)
M 4 Moon Roof Limit SW
M 5 Moon Roof Motor
P 9 Power Window Control SW Front RH
P 12 Power Window Master SW and Door Lock Control
SW LH
P 13 Power Window Motor Front LH
P 14 Power Window Motor Front RH

R 8 Rear Combination Light LH
R 9 Rear Combination Light LH
R 10 Rear Combination Light RH
R 11 Rear Combination Light RH
R 12 Rear Speaker LH
R 13 Rear Speaker RH
R 16 Rear Window Defogger (+)
R 17 Rear Window Defogger (-)
R 20 Remote Control Mirror LH
R 21 Remote Control Mirror RH

T 2 Tension Reducer Solenoid LH
T 3 Tension Reducer Solenoid RH


V 8 Vanity Light LH
V 9 Vanity Light RH

cardiagn.com

ELECTRICAL WIRING DIAGRAM

Position of Parts in Body

[Wagon]

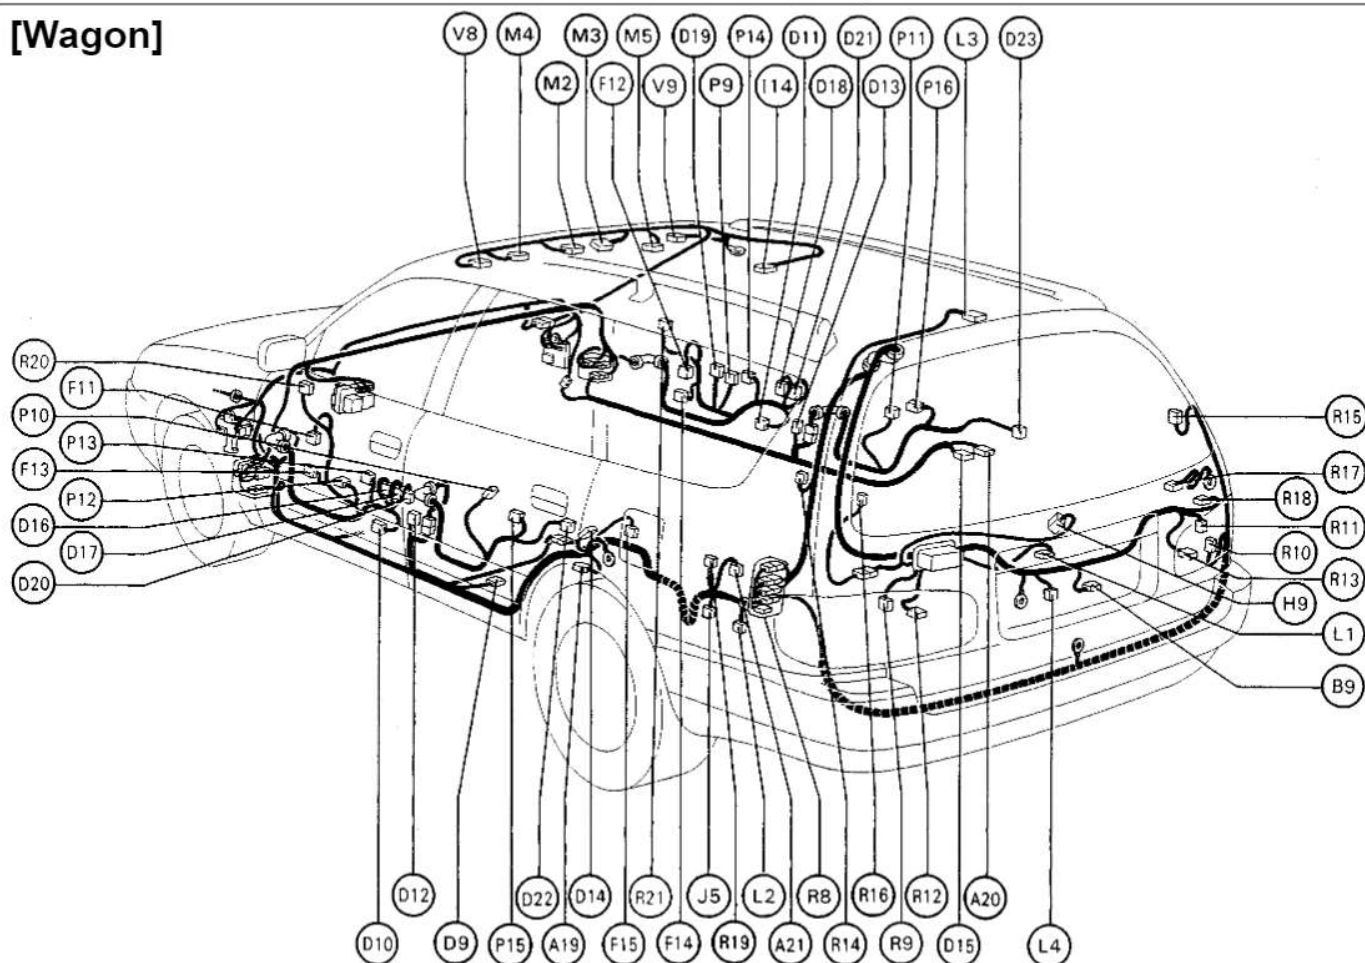

A 19	ABS Speed Sensor Rear LH	F 13	Front Tweeter (Speaker) LH	P 11	Power Window Control SW Rear RH
A 20	ABS Speed Sensor Rear RH	F 14	Front Tweeter (Speaker) RH	P 12	Power Window Master SW and Door Lock Control SW LH
A 21	Auto Antenna Motor and Relay	F 15	Fuel Pump and Sender	P 13	Power Window Motor Front LH
D 10	Door Courtesy Light Front LH	H 10	High Mount Stop Light	P 14	Power Window Motor Front RH
D 11	Door Courtesy Light Front RH	I 14	Interior Light	P 15	Power Window Motor Rear LH
D 12	Door Courtesy SW Front LH	L 1	License Plate Light	P 16	Power Window Motor Rear RH
D 13	Door Courtesy SW Front RH	L 2	Light Failure Sensor	R 8	Rear Combination Light LH
D 14	Door Courtesy SW Rear LH	L 3	Luggage Compartment Light	R 9	Rear Combination Light LH
D 15	Door Courtesy SW Rear RH	L 4	Luggage Compartment Light SW	R 10	Rear Combination Light RH
D 16	Door Key Cylinder Light and SW	M 2	Moon Roof Control Relay	R 11	Rear Combination Light RH
D 17	Door Key Lock and Unlock SW LH	M 3	Moon Roof Control SW and Personal Light (w/ Moon Roof)	R 12	Rear Speaker LH
D 18	Door Key Lock and Unlock SW RH	M 4	Moon Roof Limit SW	R 13	Rear Speaker RH
D 19	Door Lock Control SW RH	M 5	Moon Roof Motor	R 16	Rear Window Defogger (+)
D 20	Door Lock Motor and Door Unlock Detection SW Front LH	P 9	Power Window Control SW Front RH	R 17	Rear Window Defogger (-)
D 21	Door Lock Motor and Door Unlock Detection SW Front RH	P 10	Power Window Control SW Rear LH	R 20	Remote Control Mirror LH
D 22	Door Lock Motor Rear LH	V 8	Vanity Light LH	R 21	Remote Control Mirror RH
D 23	Door Lock Motor Rear RH	V 9	Vanity Light RH		
F 11	Front Door Speaker LH				
F 12	Front Door Speaker RH				

ELECTRICAL WIRING DIAGRAM


-Memo

ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽


 : Location of Ground Points

[1MZ-FE]

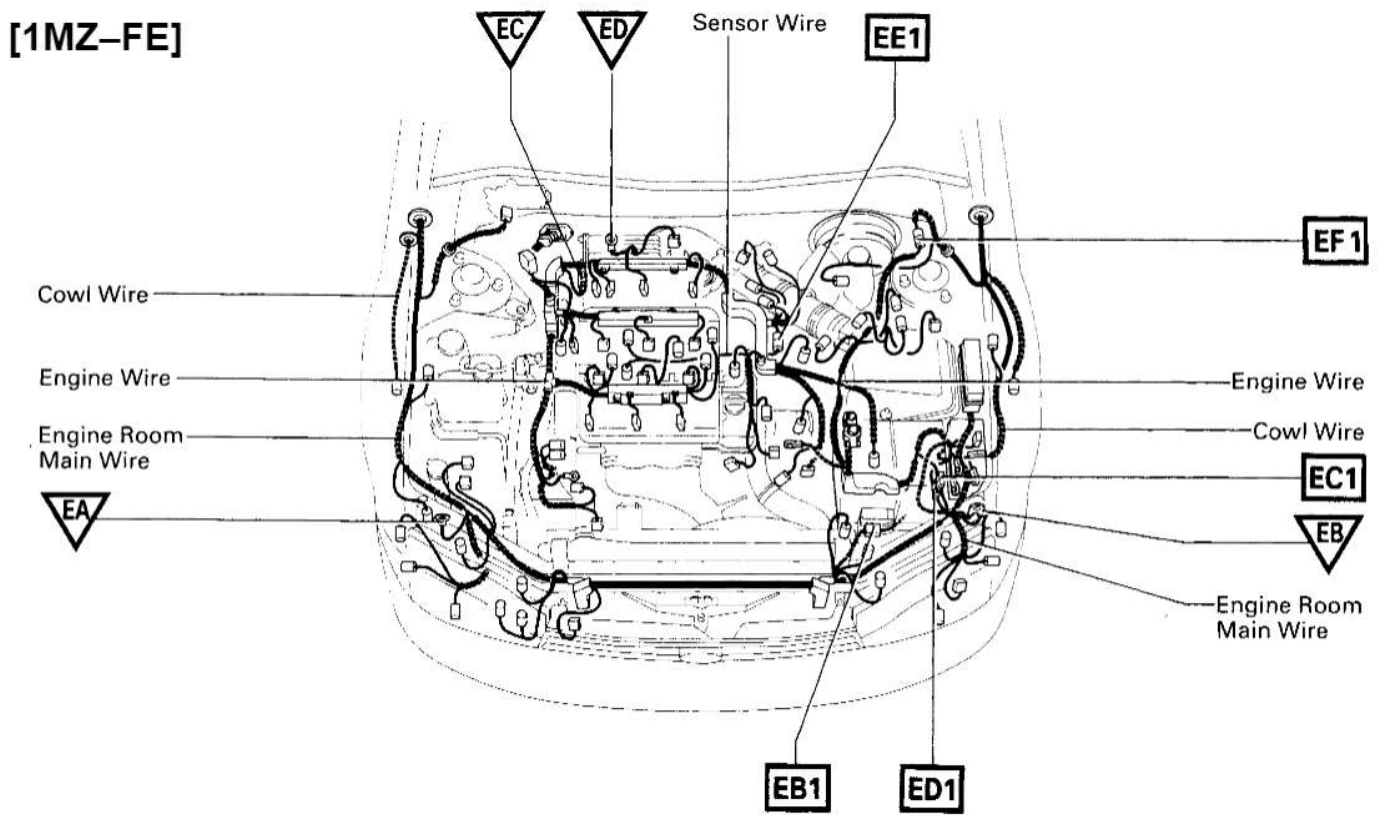


- : Location of Splice Points

[1MZ-FE]

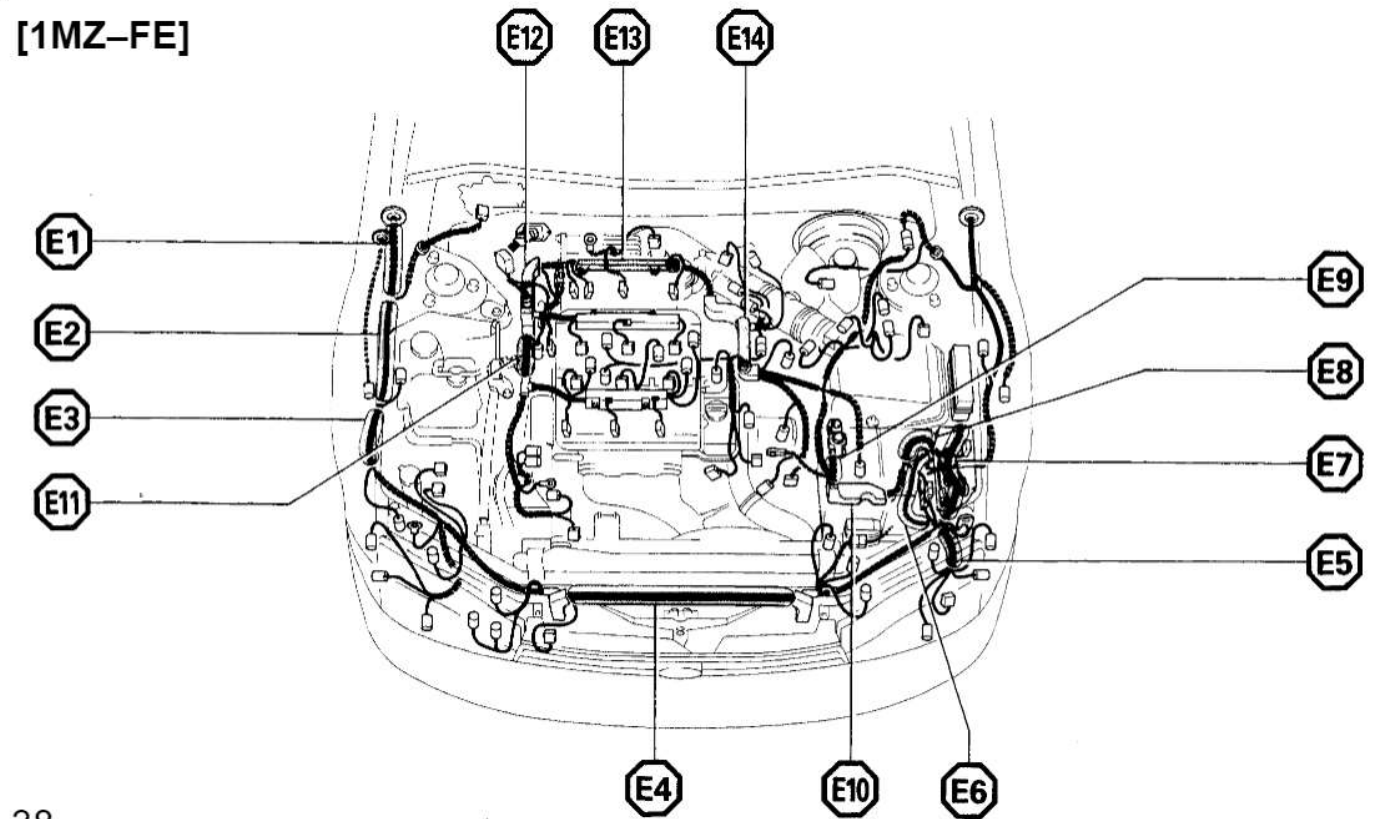

Connector Joining Wire Harness and Wire Harness

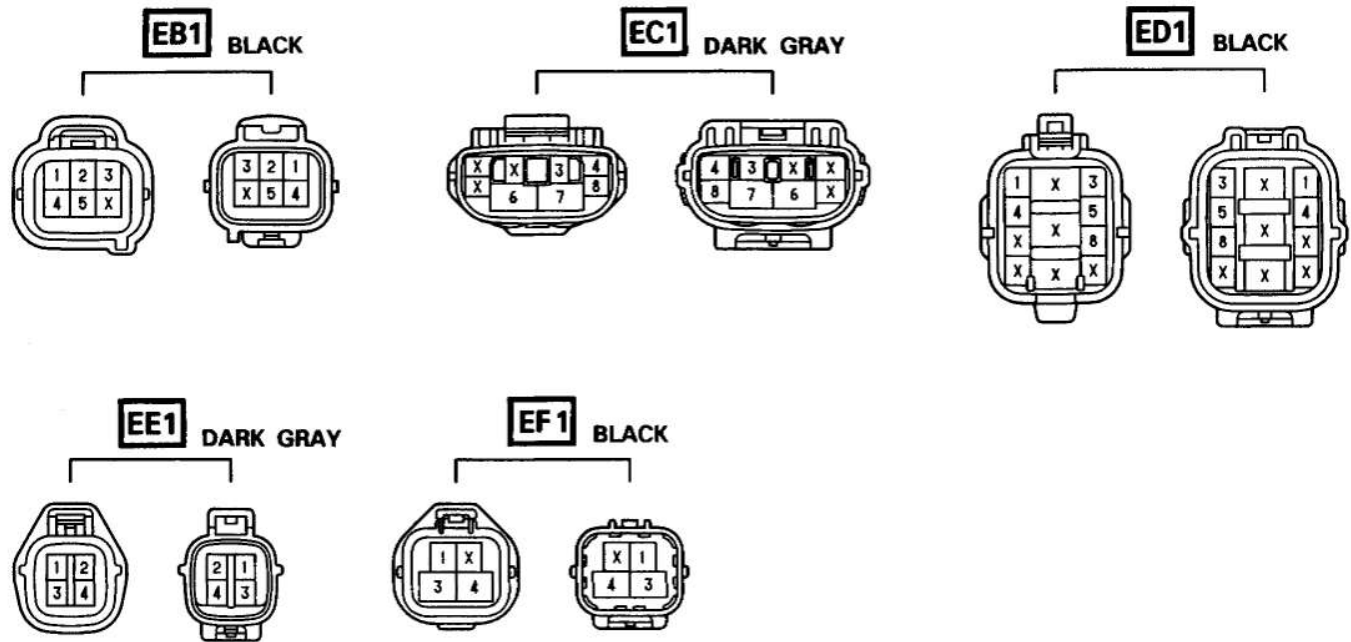


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	ENGINE ROOM MAIN WIRE AND RELAY WIRE (UNDER THE R/B NO. 5)
EC1	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE J/B NO. 1)
ED1	COWL WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE J/B NO. 1)
EE1	SENSOR WIRE AND ENGINE WIRE (SIDE OF FRONT CYLINDER HEAD)
EF1	ENGINE WIRE AND COWL WIRE (NEAR THE BRAKE MASTER CYLINDER)


ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽


 : Location of Ground Points

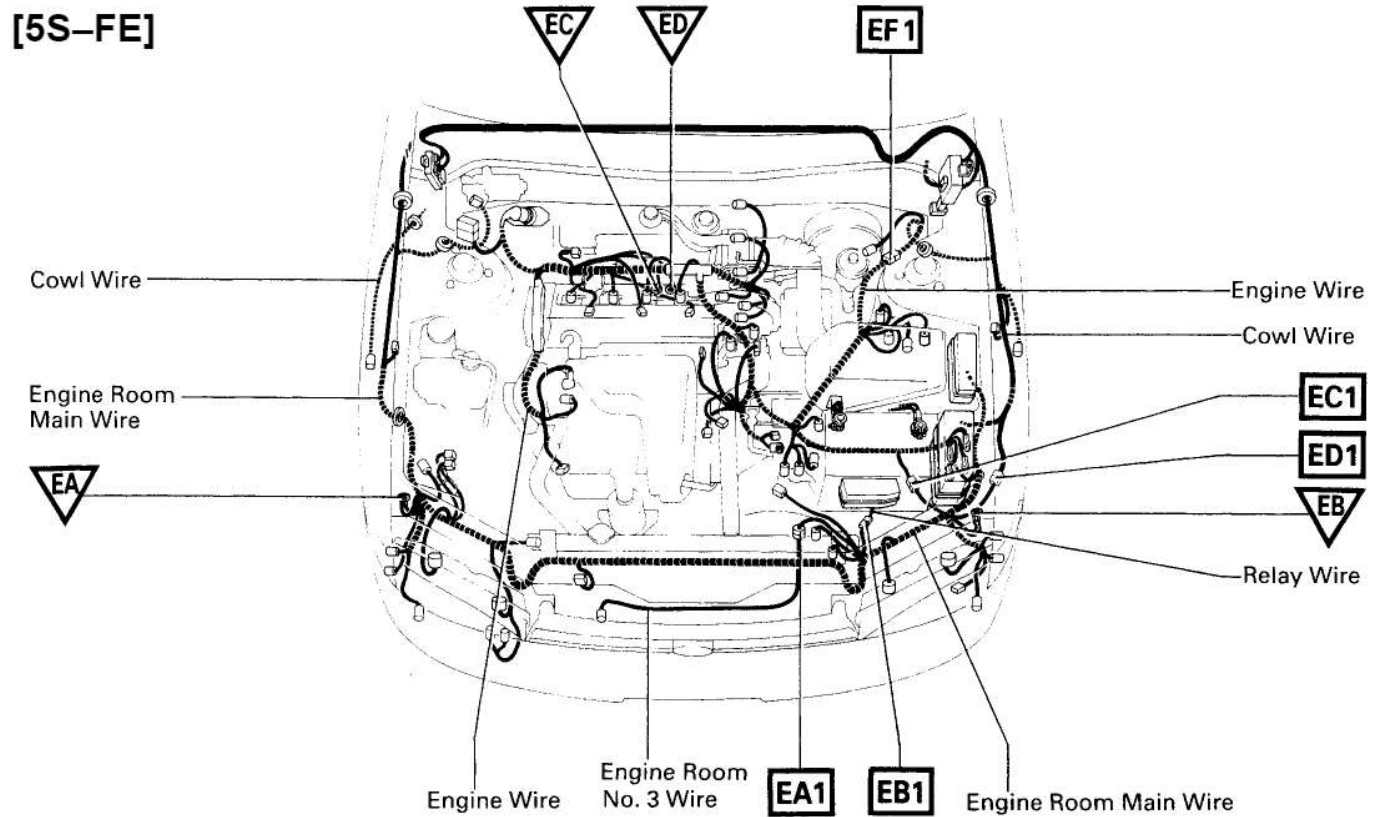

- : Location of Splice Points

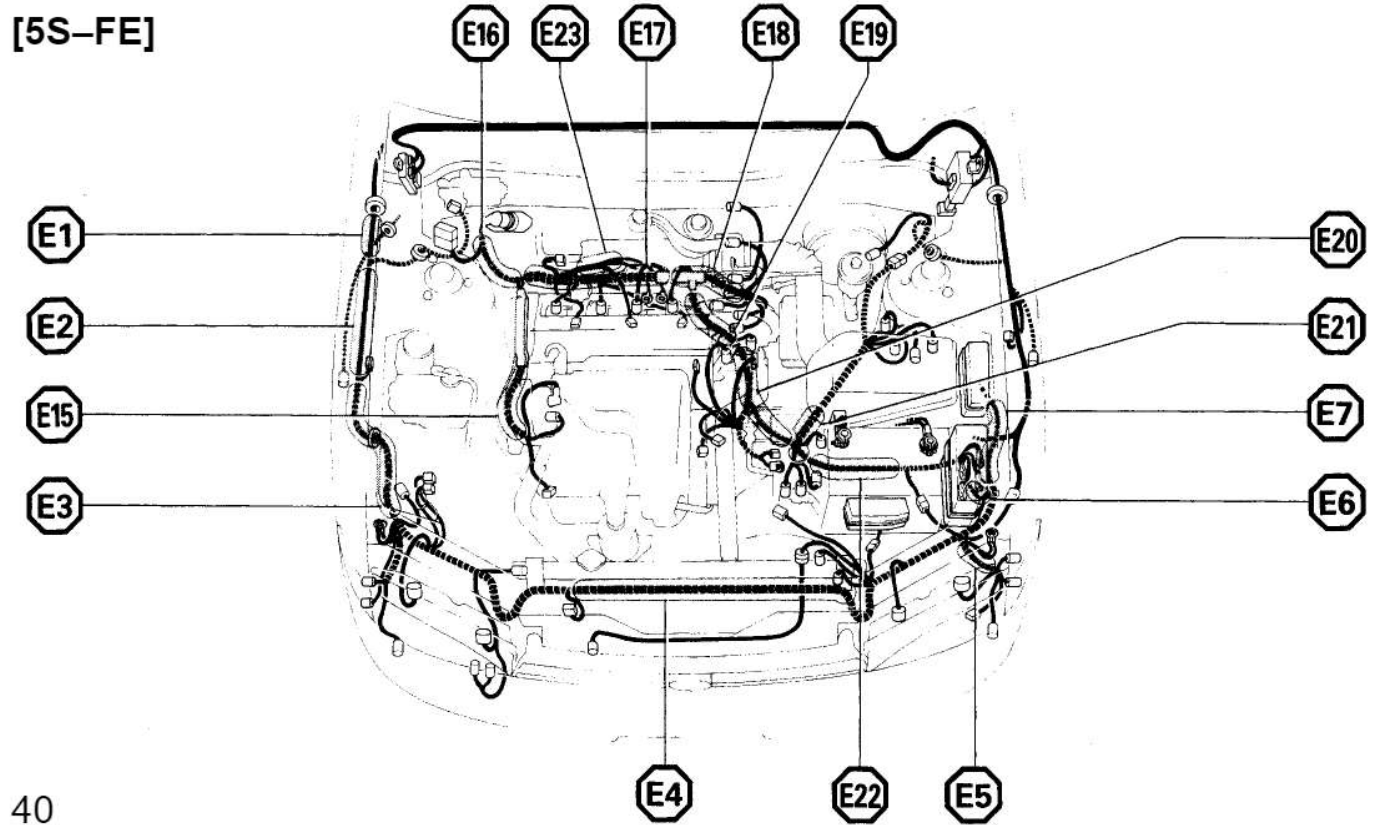


Connector Joining Wire Harness and Wire Harness

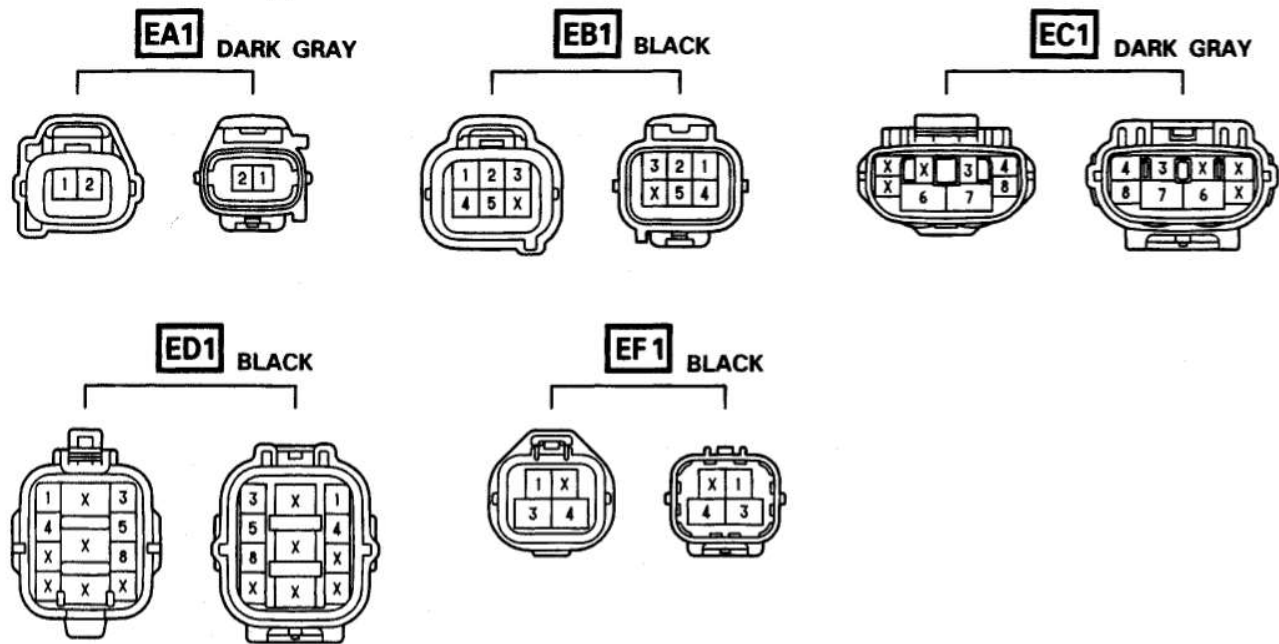


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM MAIN WIRE AND ENGINE ROOM NO. 3 WIRE (RADIATOR FAN SHROUD)
EB1	ENGINE ROOM MAIN WIRE AND RELAY WIRE (UNDER THE R/B NO. 5)
EC1	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE J/B NO. 1)
ED1	COWL WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE J/B NO. 1)
EF1	ENGINE WIRE AND COWL WIRE (NEAR THE BRAKE MASTER CYLINDER)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

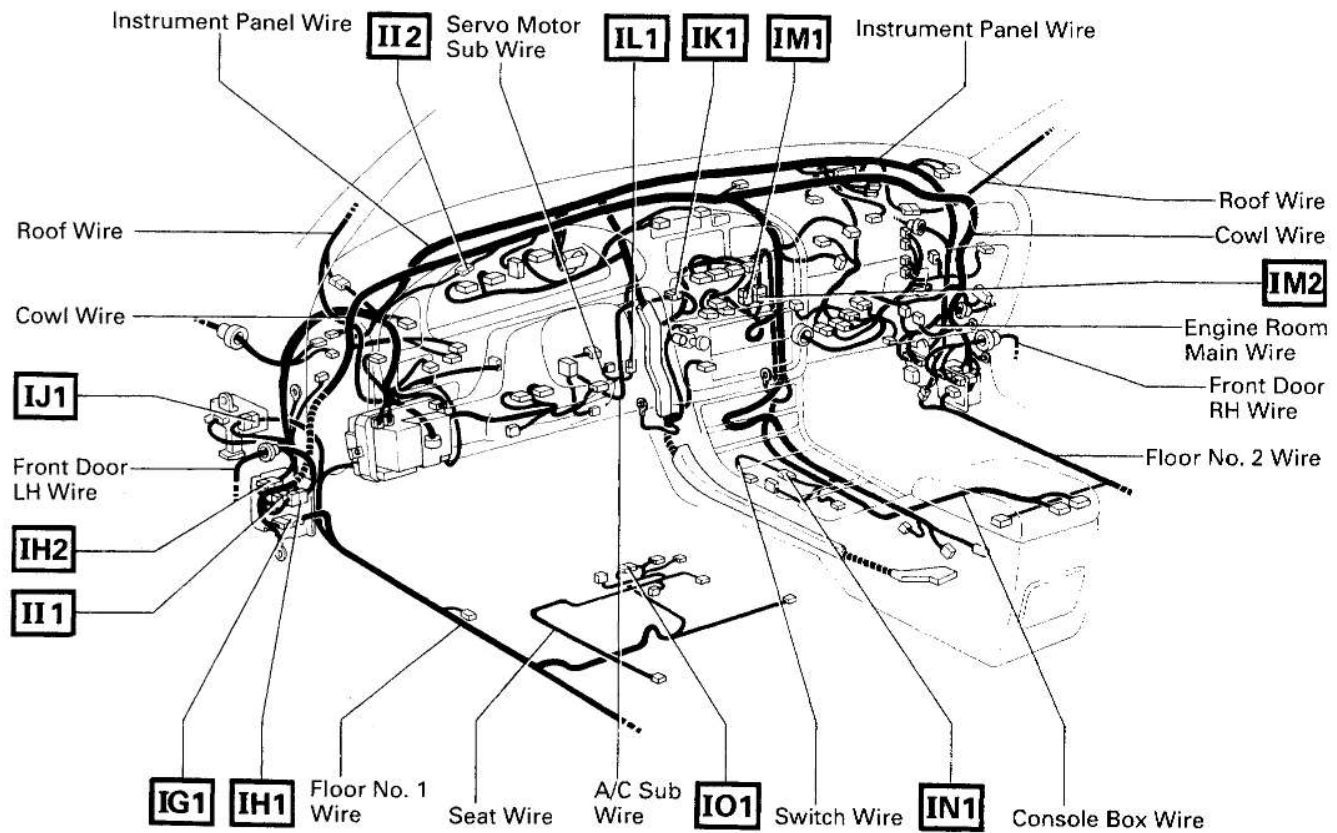

▽ : Location of Ground Points

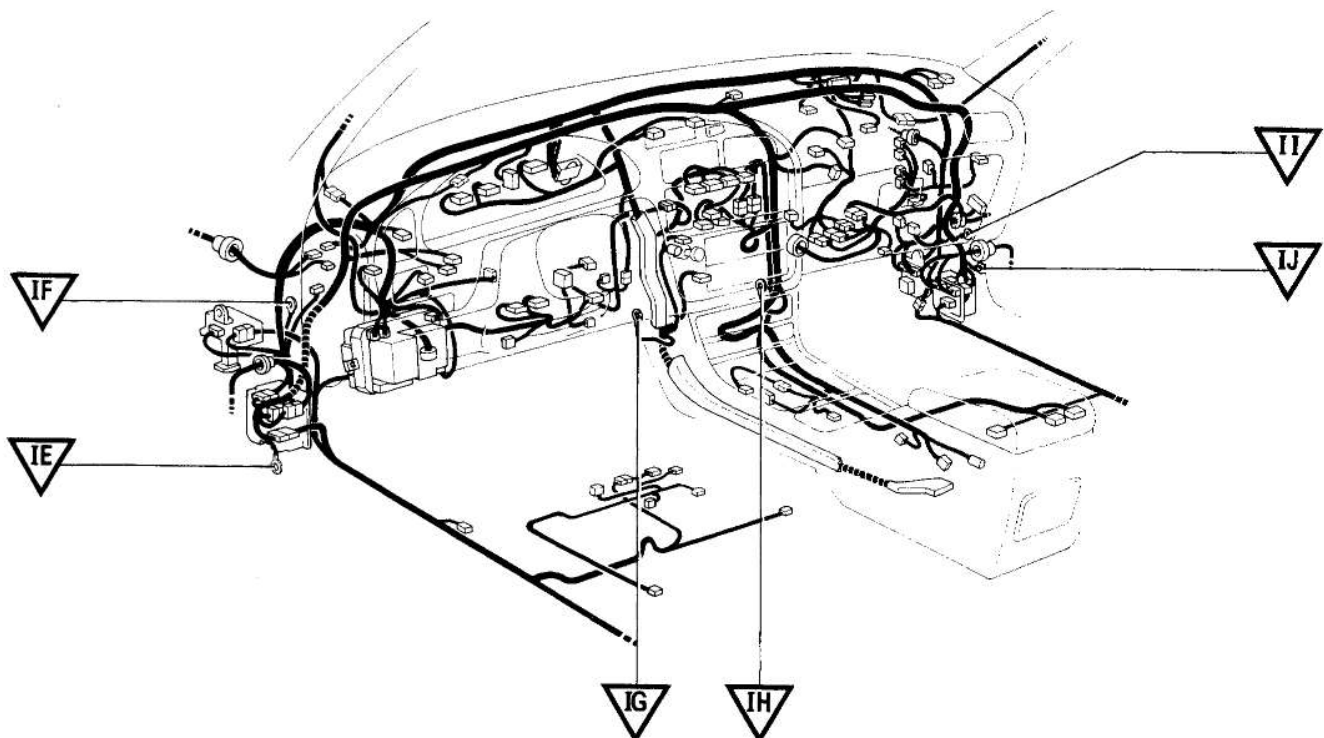

Connector Joining Wire Harness and Wire Harness

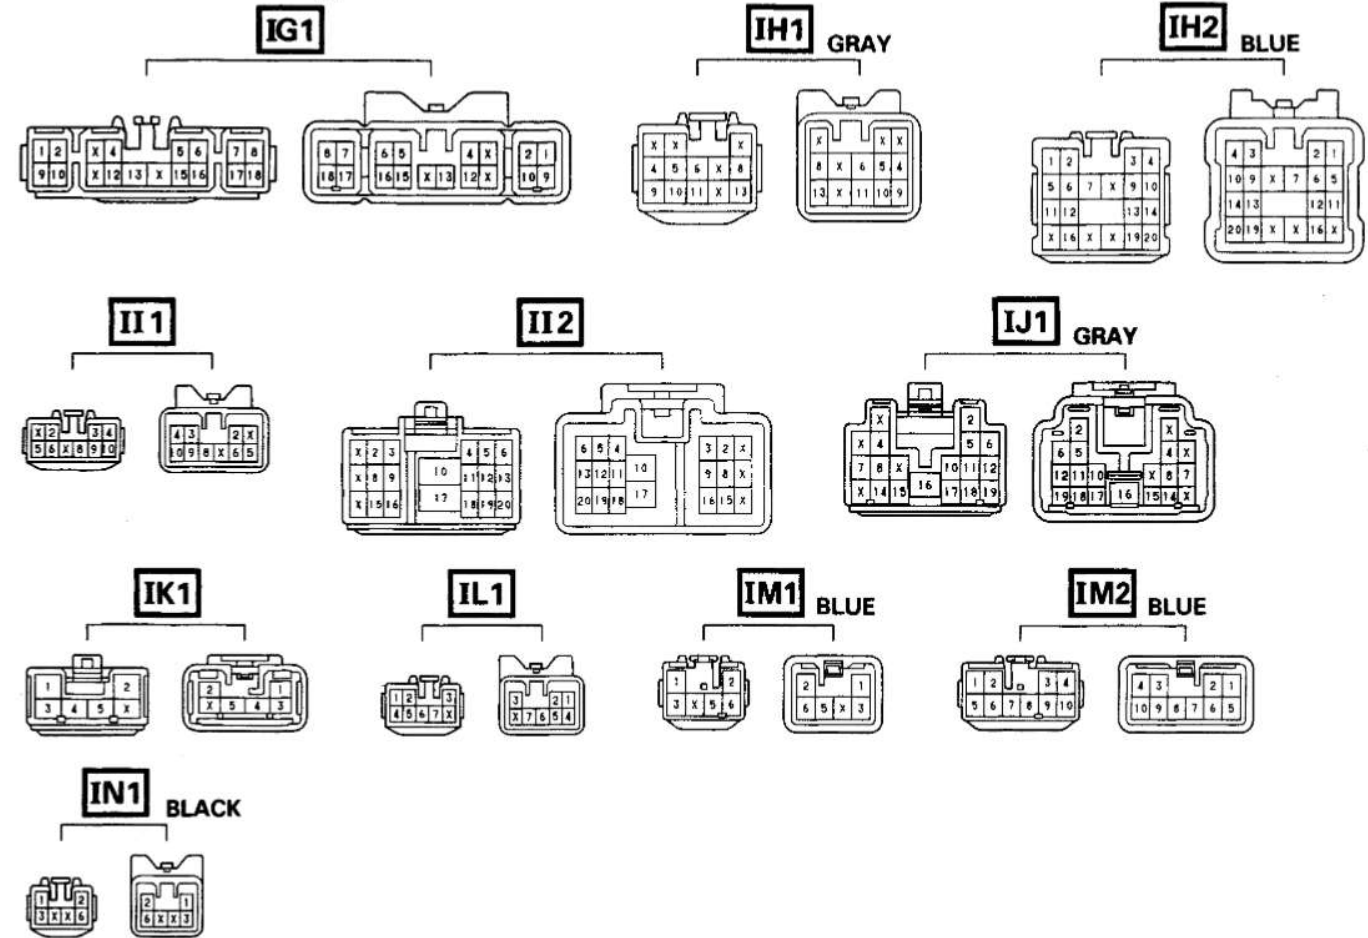


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	FLOOR NO. 1 WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IH1	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IH2	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
II1	COWL WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
II2	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND COMBINATION METER)
IJ1	FLOOR NO. 1 WIRE AND COWL WIRE (LEFT KICK PANEL)
IK1	COWL WIRE AND A/C SUB WIRE (NEAR THE RADIO AND PLAYER)
IL1	COWL WIRE AND SERVO MOTOR SUB WIRE (BEHIND RADIO AND PLAYER)
IM1	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (NEAR THE RADIO AND PLAYER)
IM2	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (NEAR THE RADIO AND PLAYER)
IN1	INSTRUMENT PANEL WIRE AND SWITCH WIRE (UNDER THE INSTRUMENT PANEL CENTER)


cardiagn.com

ELECTRICAL WIRING ROUTING


 : Location of Connector Joining Wire Harness and Wire Harness

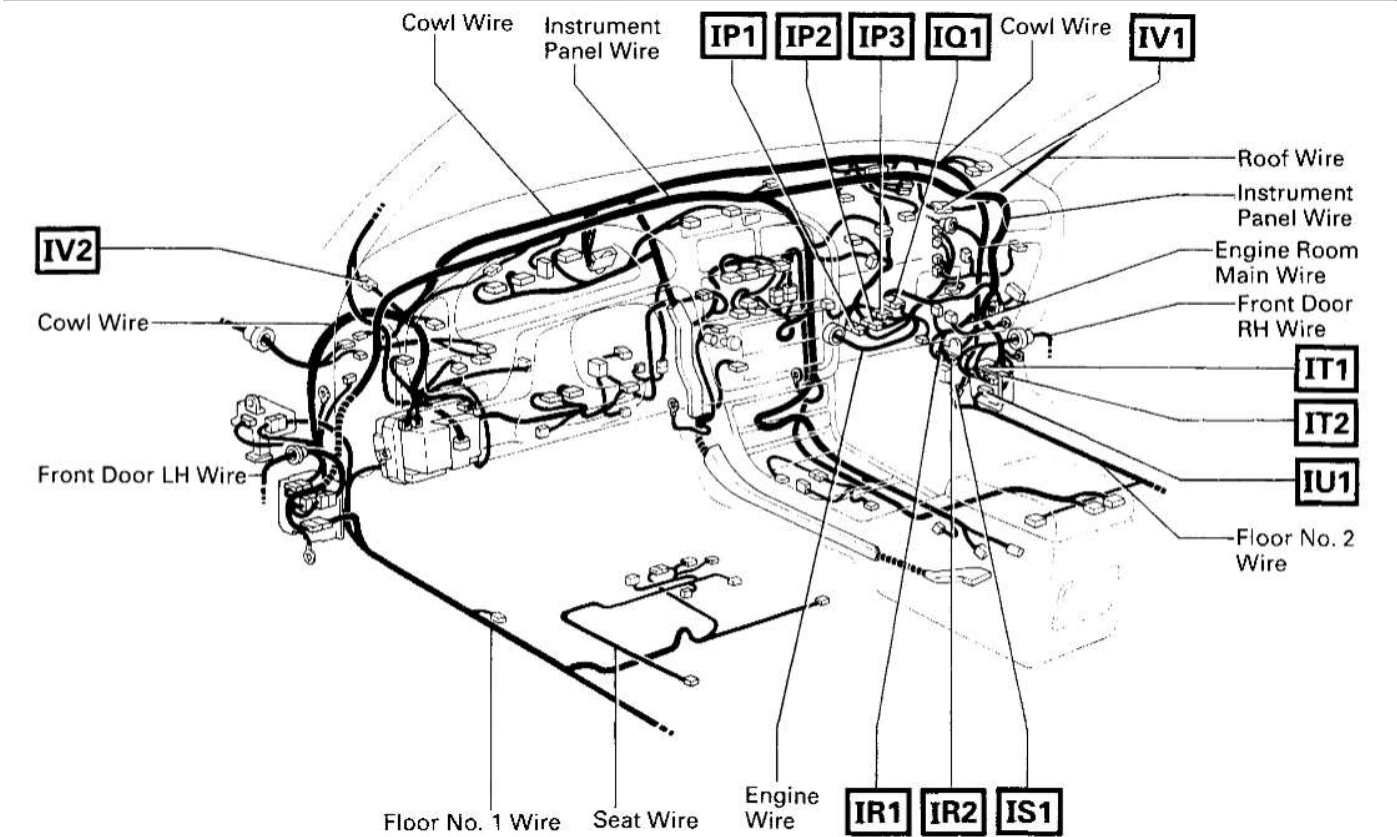

 : Location of Splice Points

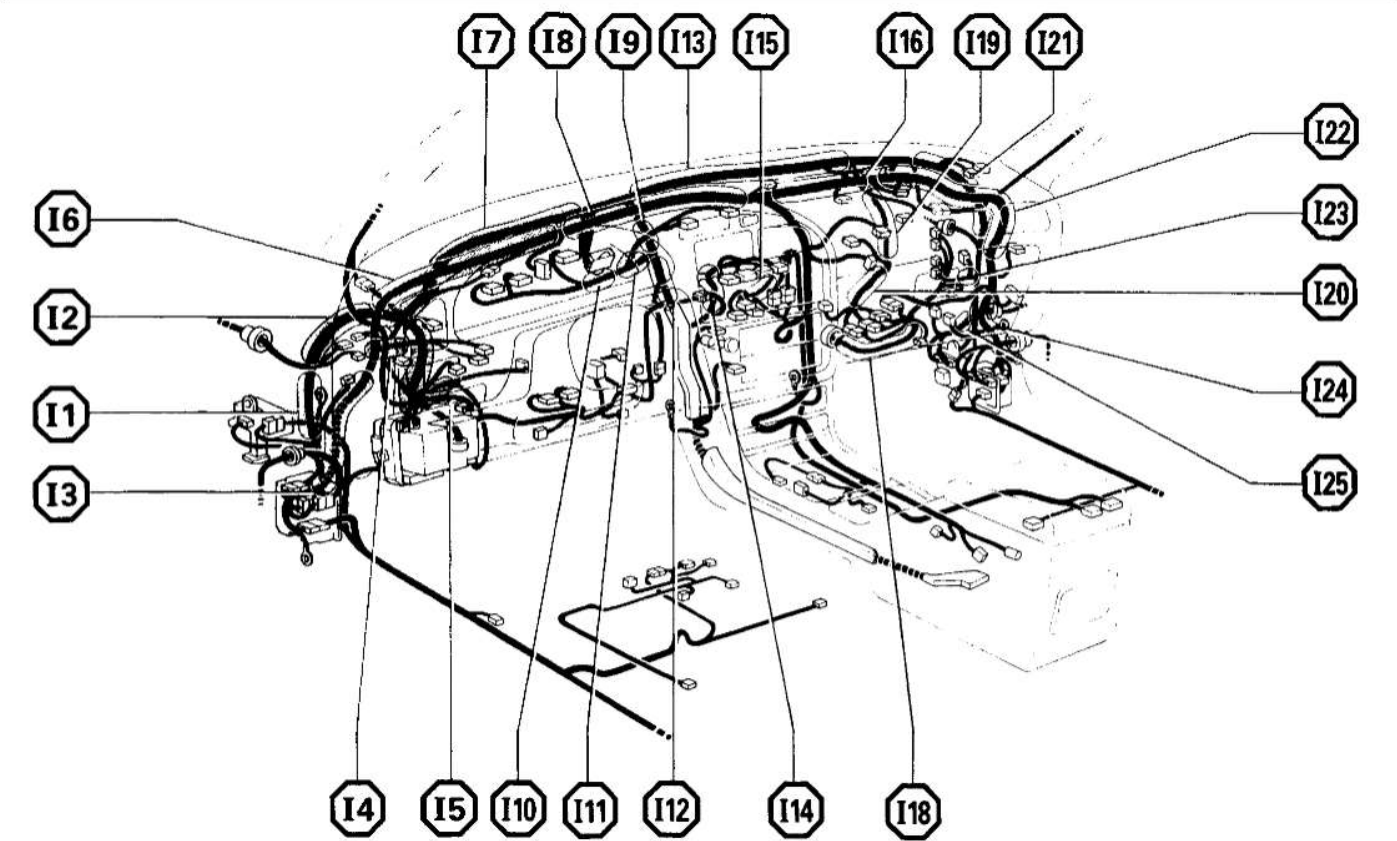

Connector Joining Wire Harness and Wire Harness

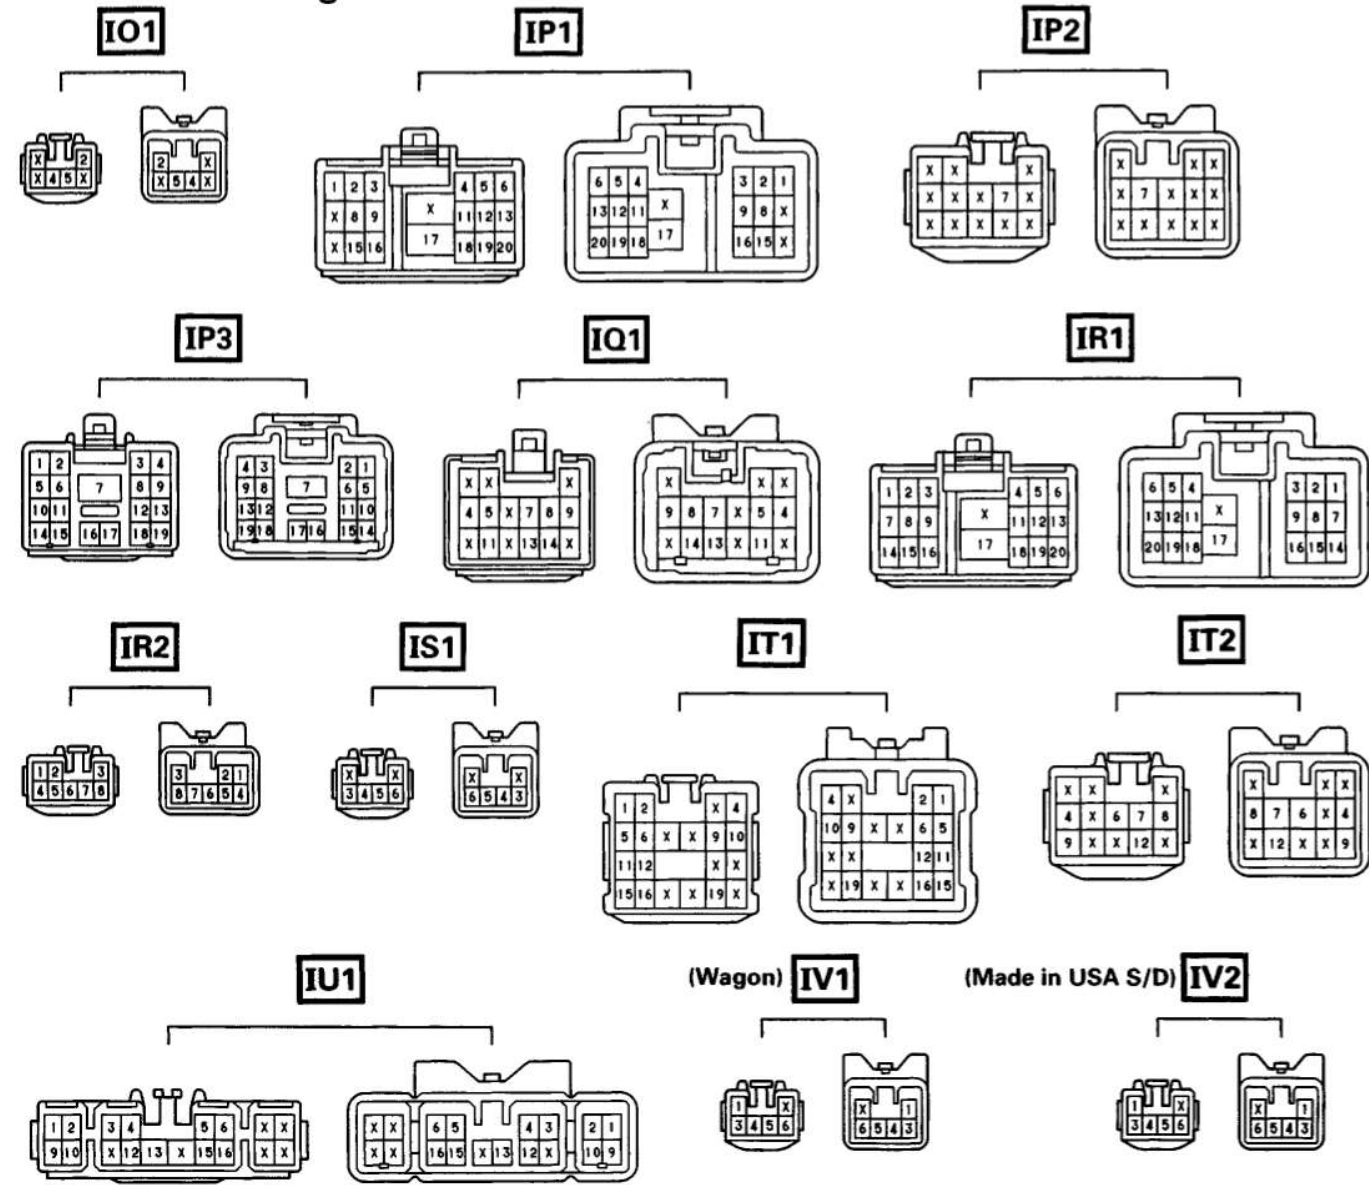


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IO1	FLOOR NO. 1 WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
IP1	
IP2	ENGINE WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
IP3	
IQ1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (UNDER THE GLOVE BOX)
IR1	
IR2	ENGINE ROOM MAIN WIRE AND COWL WIRE (RIGHT KICK PANEL)
IS1	FLOOR NO. 2 WIRE AND COWL WIRE (RIGHT KICK PANEL)
IT1	
IT2	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IU1	FLOOR NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IV1	
IV2	ROOF WIRE AND COWL WIRE (INSTRUMENT PANEL RIGHT)

ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽


 : Location of Ground Points

[Sedan]

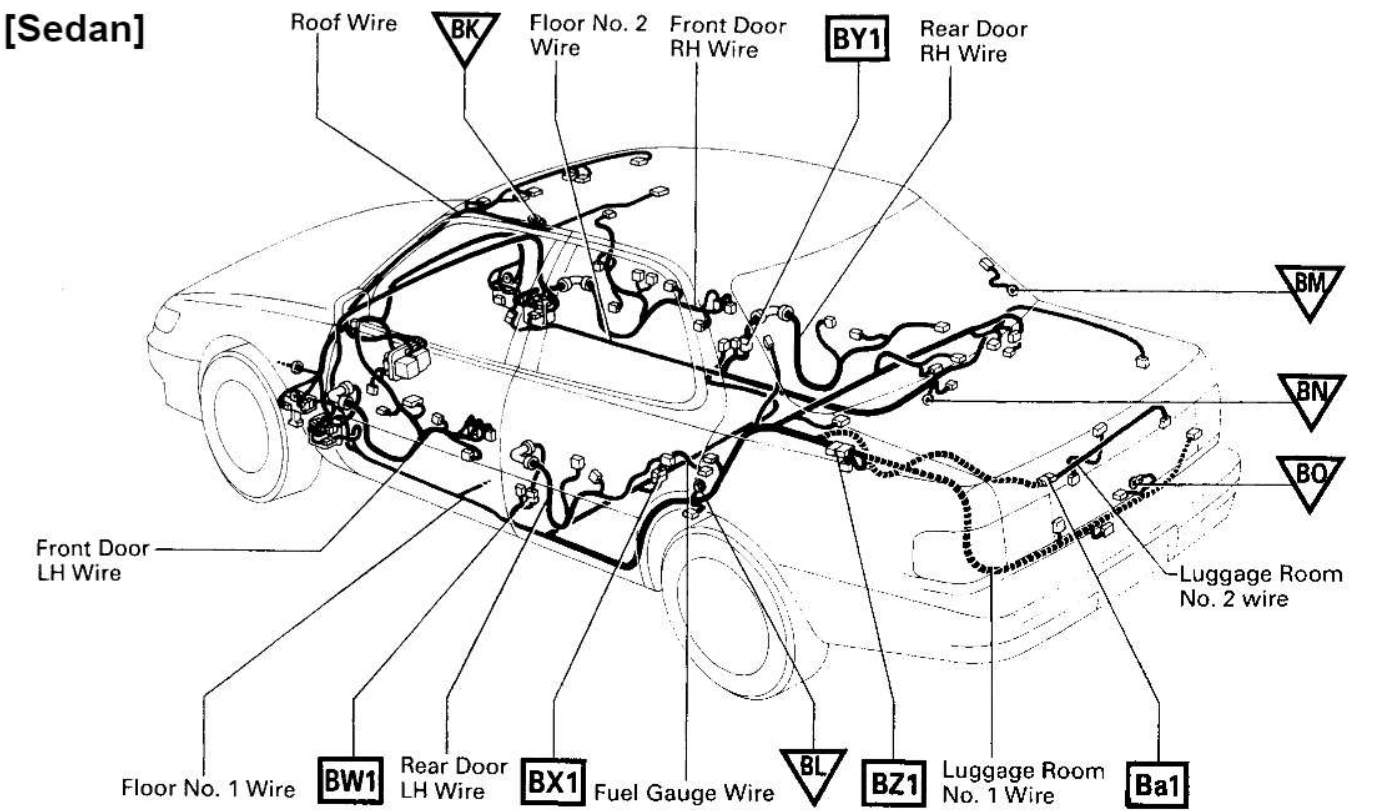


- : Location of Splice Points

[Sedan]

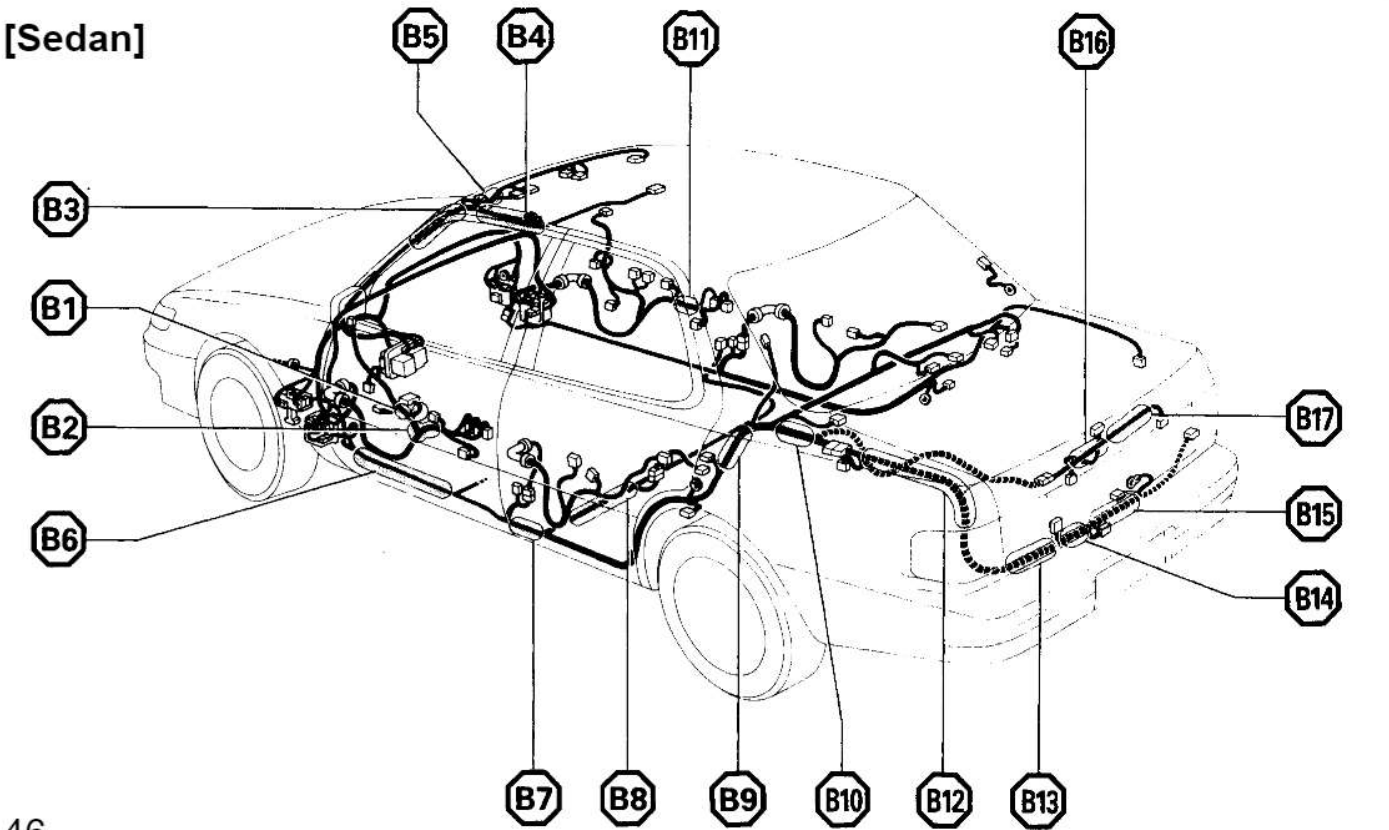

Connector Joining Wire Harness and Wire Harness

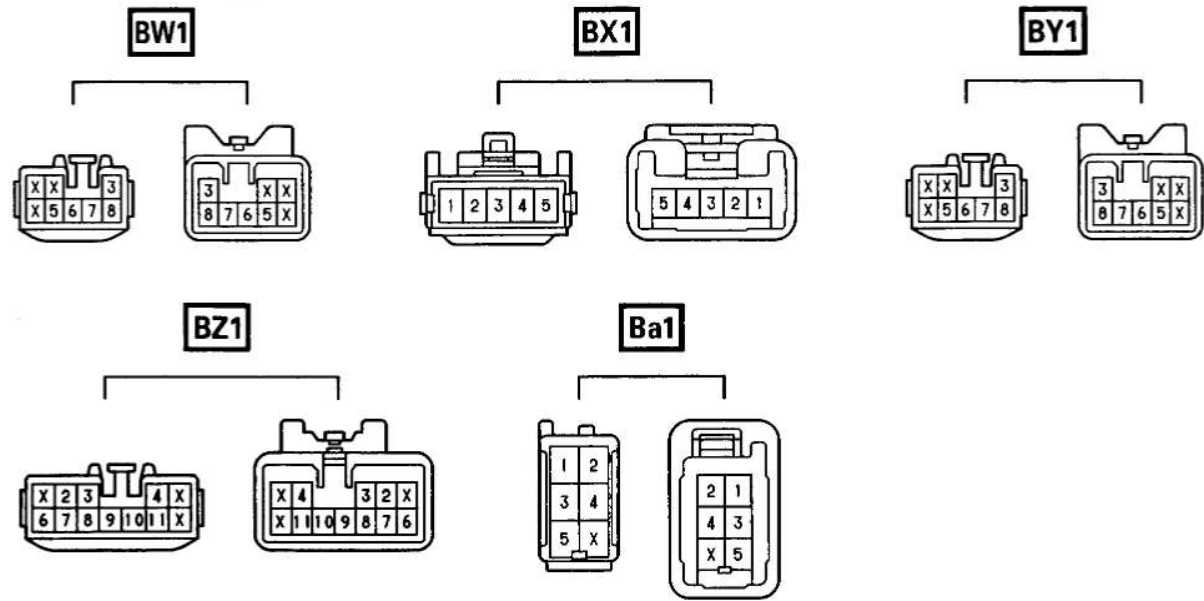


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BW1	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BX1	FUEL GAUGE WIRE AND FLOOR NO. 1 WIRE (UNDER THE REAR SEAT CUSHION)
BY1	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BZ1	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LUGGAGE COMPARTMENT LEFT)
Ba1	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (LUGGAGE COMPARTMENT DOOR)

ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽


 : Location of Ground Points

[Coupe]

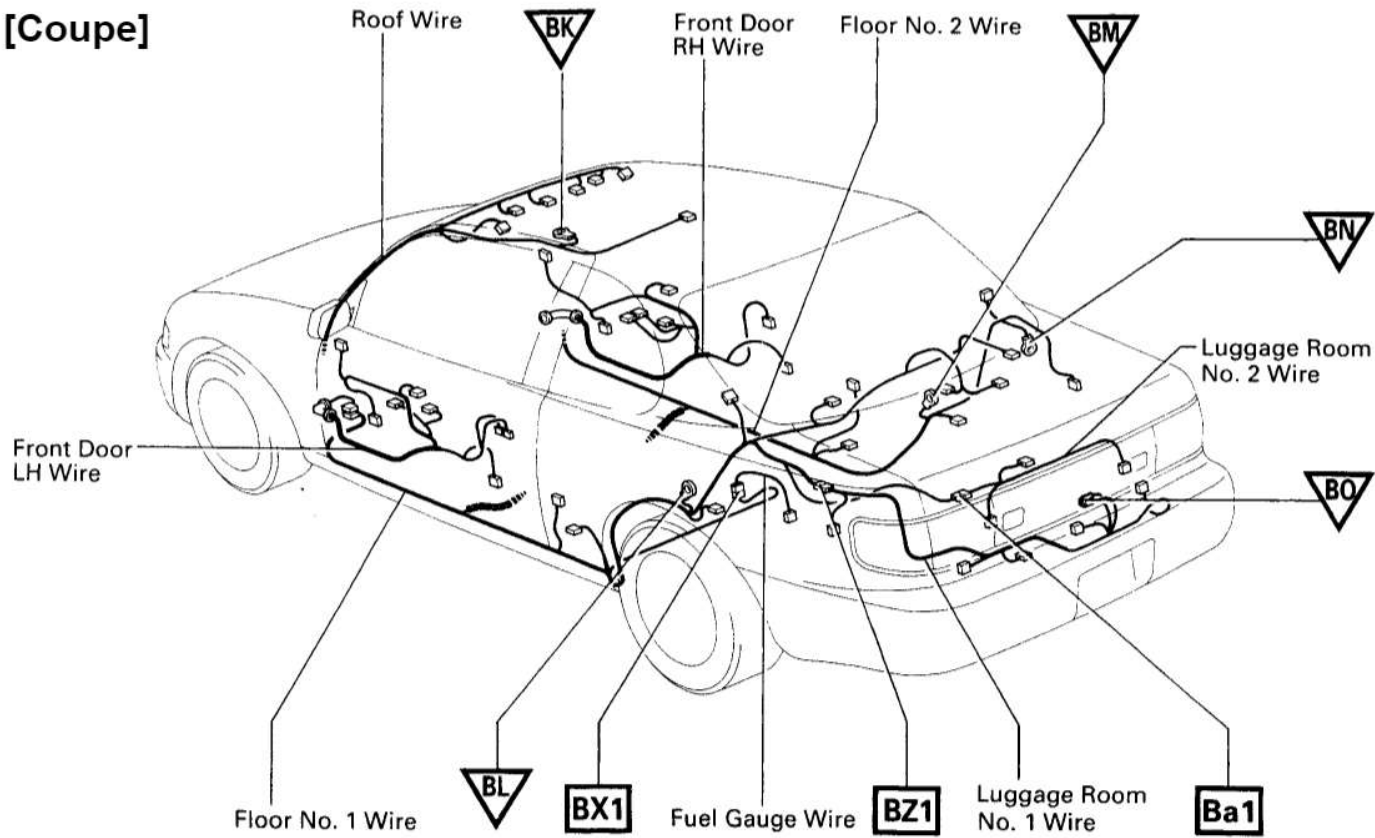


- : Location of Splice Points

[Coupe]

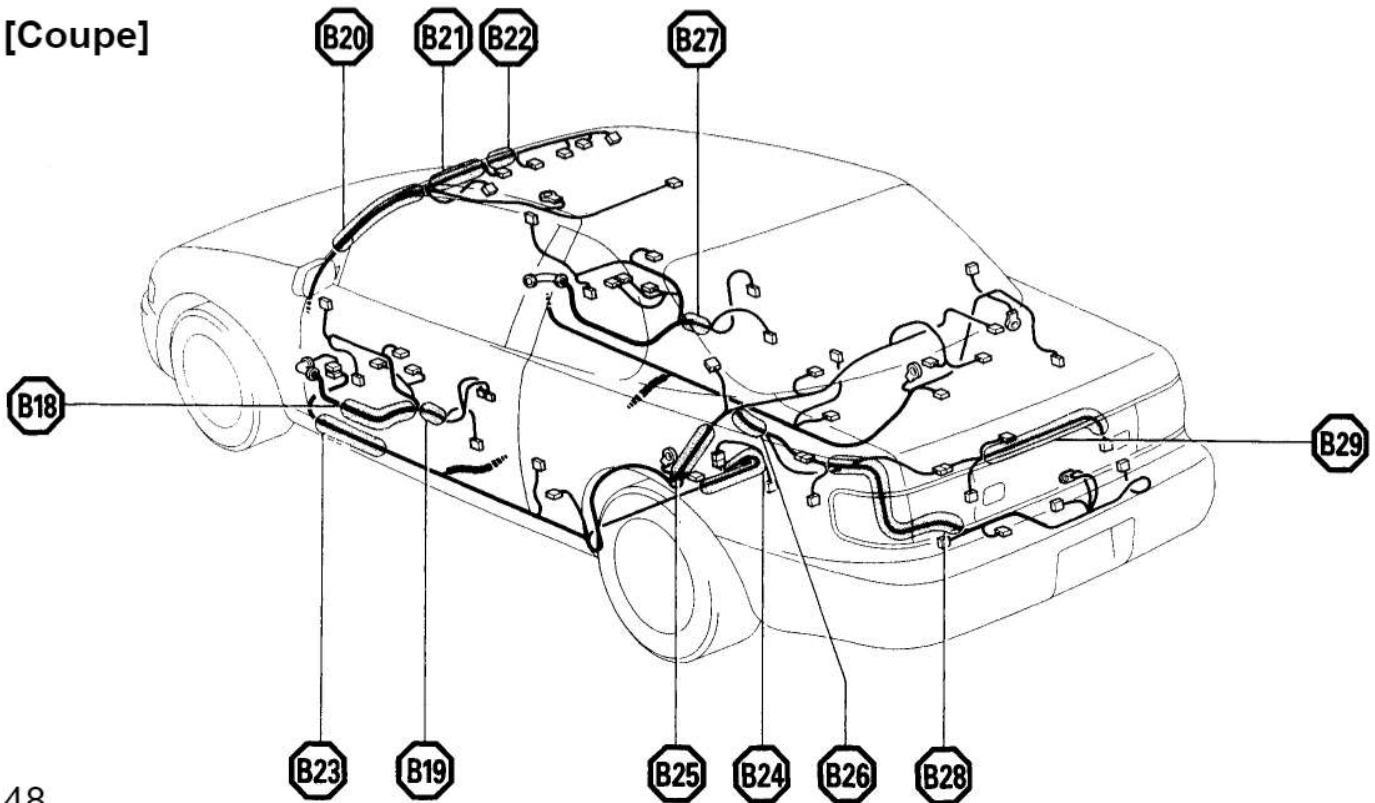

Connector Joining Wire Harness and Wire Harness

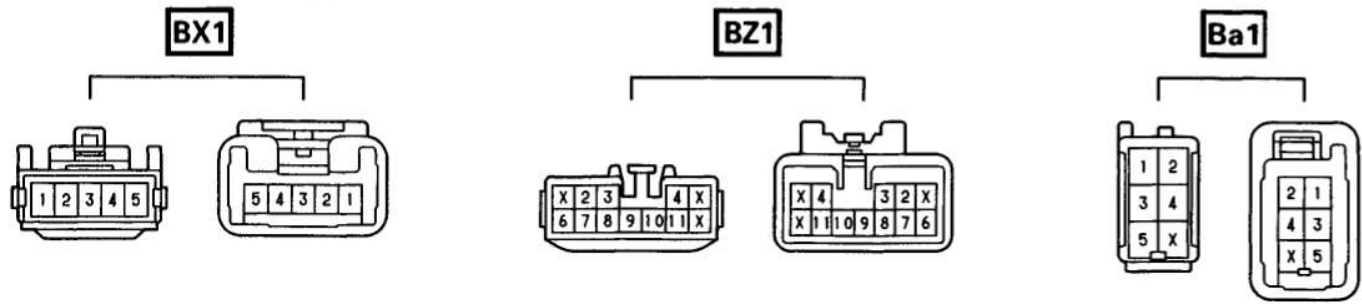


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BX1	FUEL GAUGE WIRE AND FLOOR NO. 1 WIRE (UNDER THE REAR SEAT CUSHION)
BZ1	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LUGGAGE COMPARTMENT LEFT)
Ba1	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (LUGGAGE COMPARTMENT DOOR)


ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽


 : Location of Ground Points

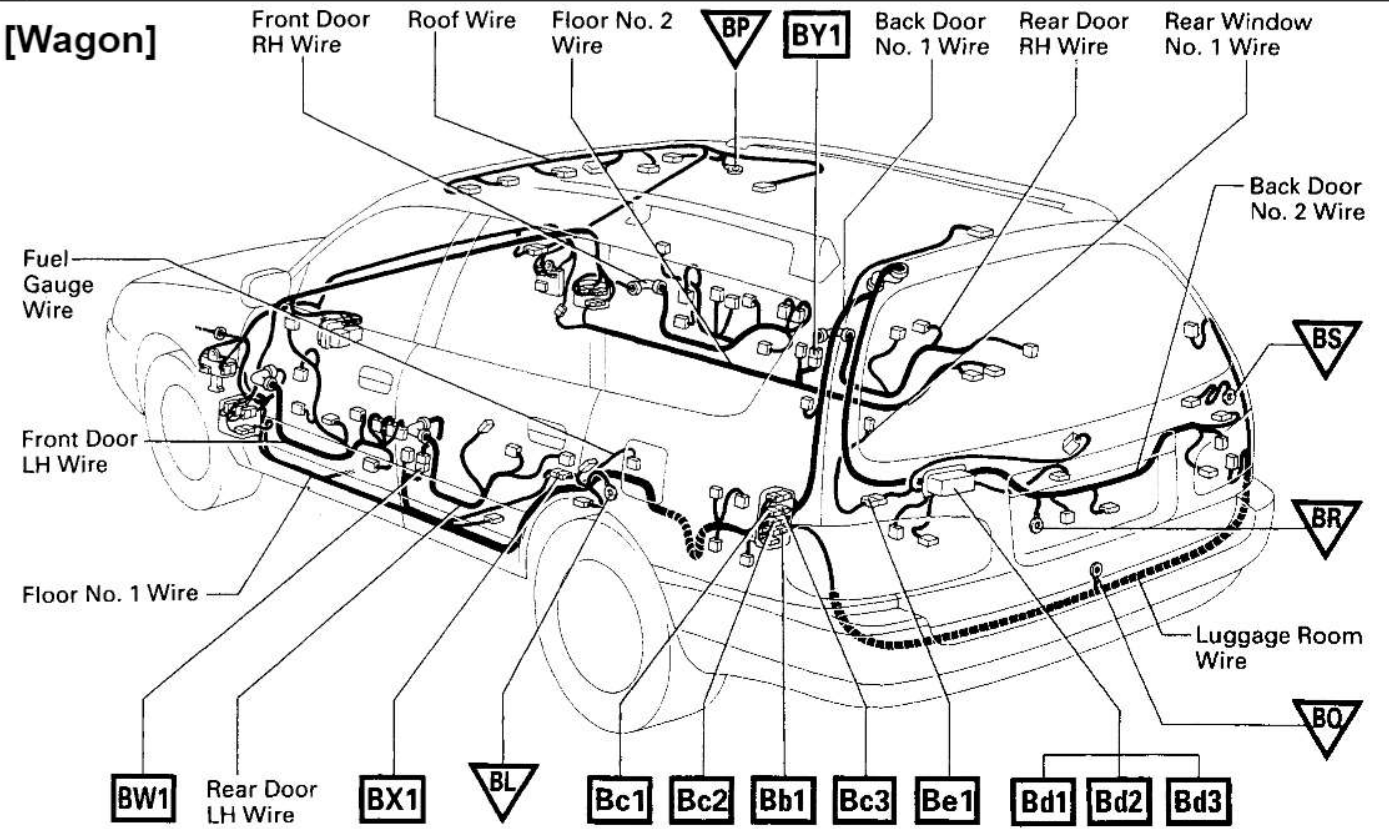

- : Location of Splice Points

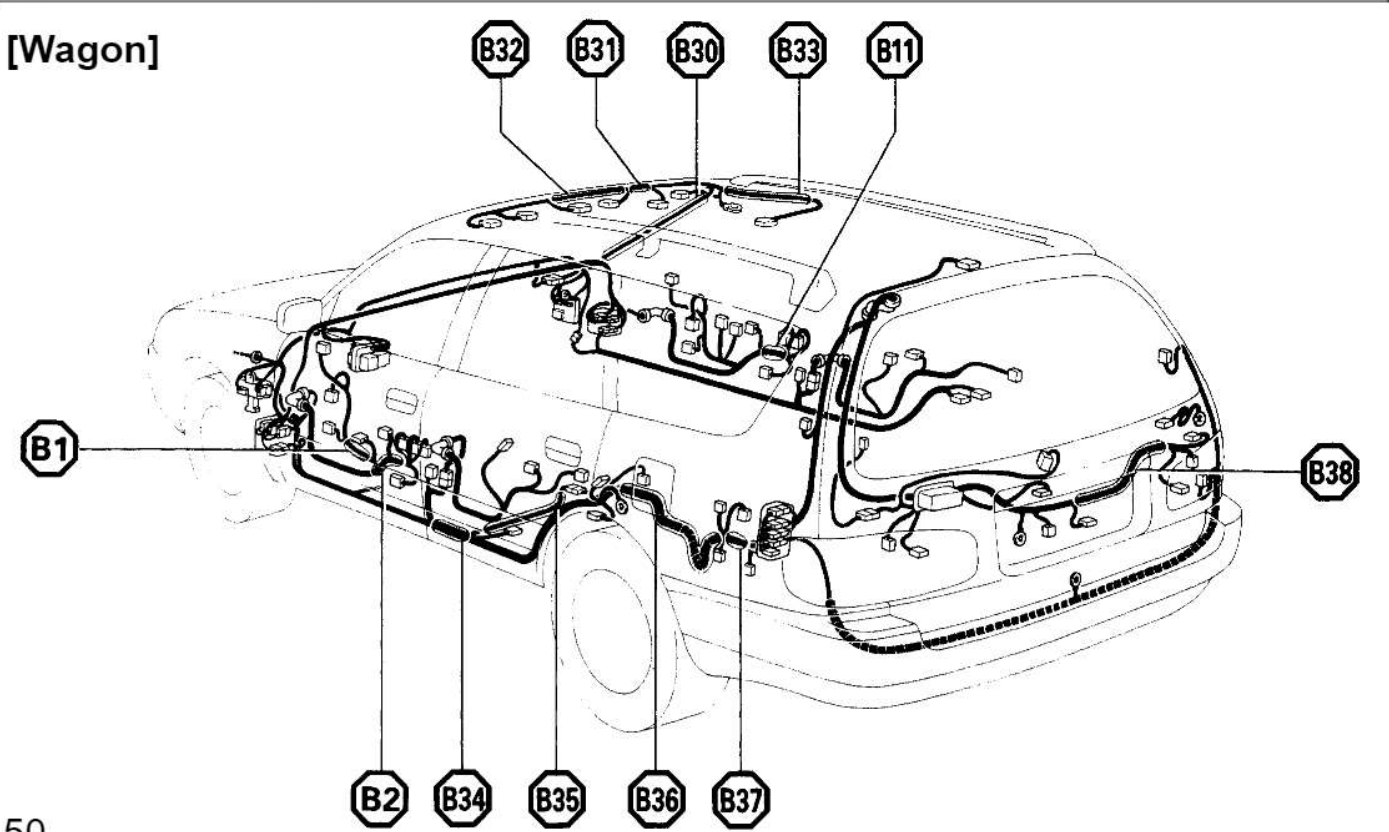

Connector Joining Wire Harness and Wire Harness

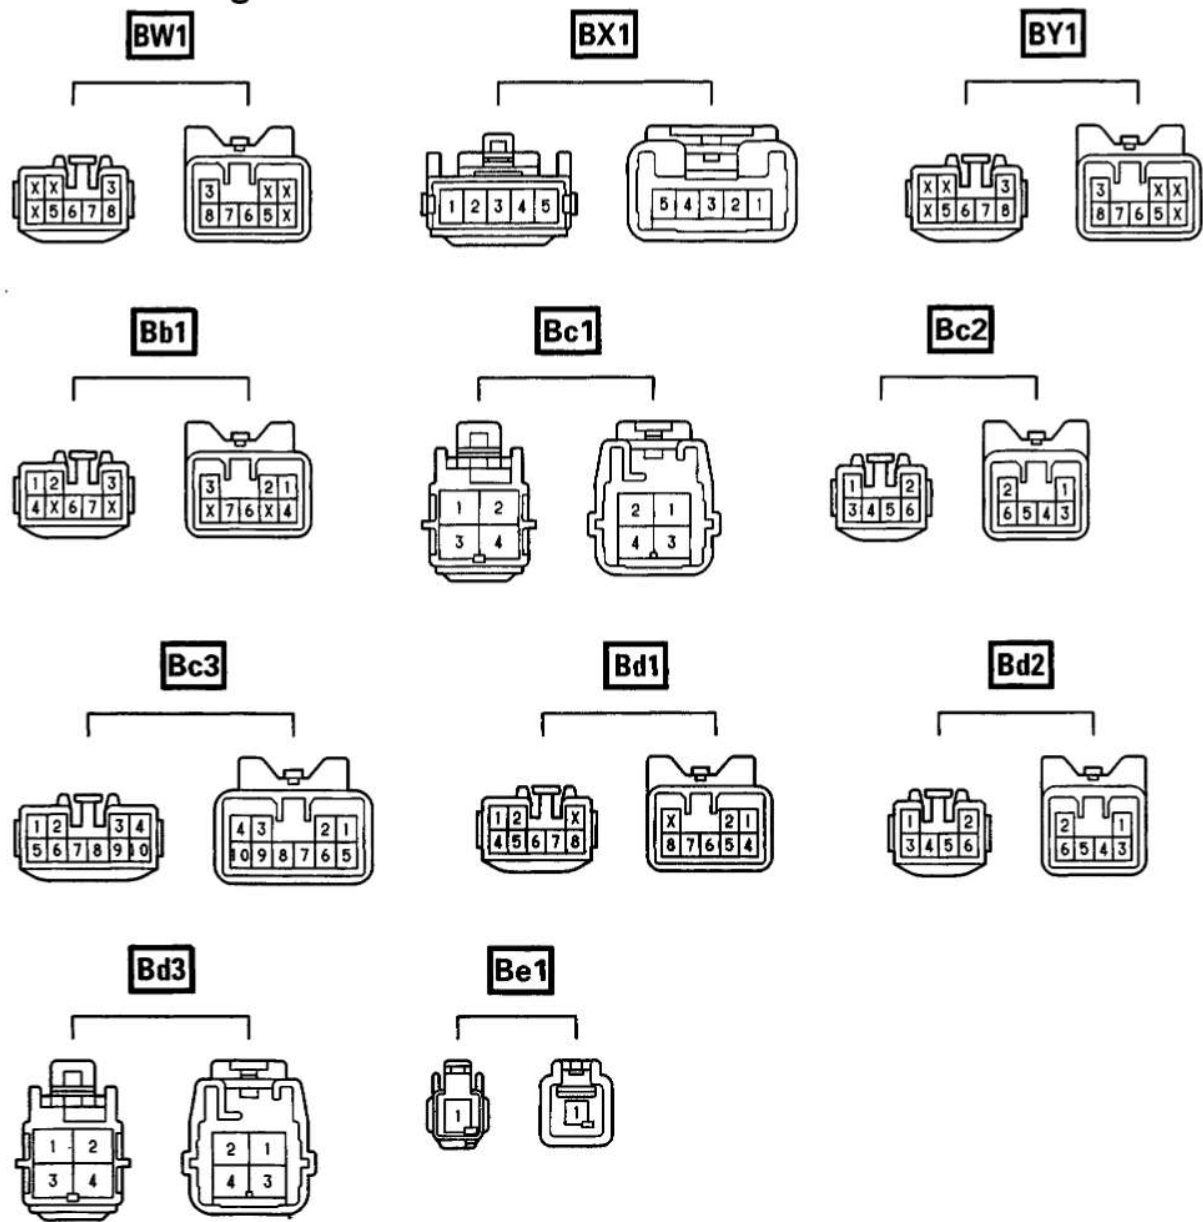

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BW1	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BX1	FUEL GAUGE WIRE AND FLOOR NO. 1 WIRE (UNDER THE REAR SEAT CUSHION)
BY1	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
Bb1	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LUGGAGE COMPARTMENT LEFT)
Bc1	BACK DOOR NO. 1 (WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER TRIM INNER)
Bc2	
Bc3	
Bd1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
Bd2	
Bd3	
Be1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)