


Chrysler PT Cruiser 2001 – 2005 fuse box diagram

Underhood fuses (Power Distribution Center)

Power Distribution Center is located in the engine compartment (next to the air cleaner filter). A label identifying the components and circuits is located on the underside of the cover.

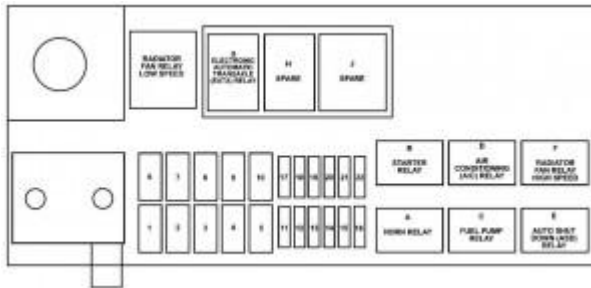

Chrysler PT Cruiser – fuse box – power

distribution center

Fuse	Ampere/Color	Description
1	30 Amp/Pink	Ignition Start
2	40 Amp/Green	Anti-Lock Brake (ABS) Pump
3	40 Amp/Green	Ignition Run
4	30 Amp/Blue	Heated Seats
5	40 Amp/Green	Radiator Fan
6	20 Amp/Blue	Power Height Adjuster
7	30 Amp/Blue	Anti-Lock Brake (ABS) Solenoid
8	40 Amp/Green	Electric Back Light (EBL)

9	—	Spare
10	40 Amp/Green	Exterior Lighting, Remote Keyless Entry, Alarm and Door Locks
11	10 Amp/Red	Air Conditioning (A/C)
12	15 Amp/Lt. Blue	Stop Lights
13	20 Amp/Blue	Fuel Pump/Auto Shut Down (ASD)
14	15 Amp/Lt. Blue	Horn
15	20 Amp/Blue	Electronic Automatic Transaxle (ETAX)
16	15 Amp/Lt. Blue	Hi Beam
17	20 Amp/ Yellow	Ignition Off Draw (IOD)
18	15 Amp/Lt. Blue	Hazard
19	20 Amp/ Yellow	Power Outlets
20	—	Spare
21	20 Amp/ Yellow	Fog Lights (Build-Up Export Only)
22	—	Spare

Interior Fuses

The fuse access panel is on the left side of the instrument panel next to the steering column. A label identifying the components and circuits is located on the inside of the cover.