




J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

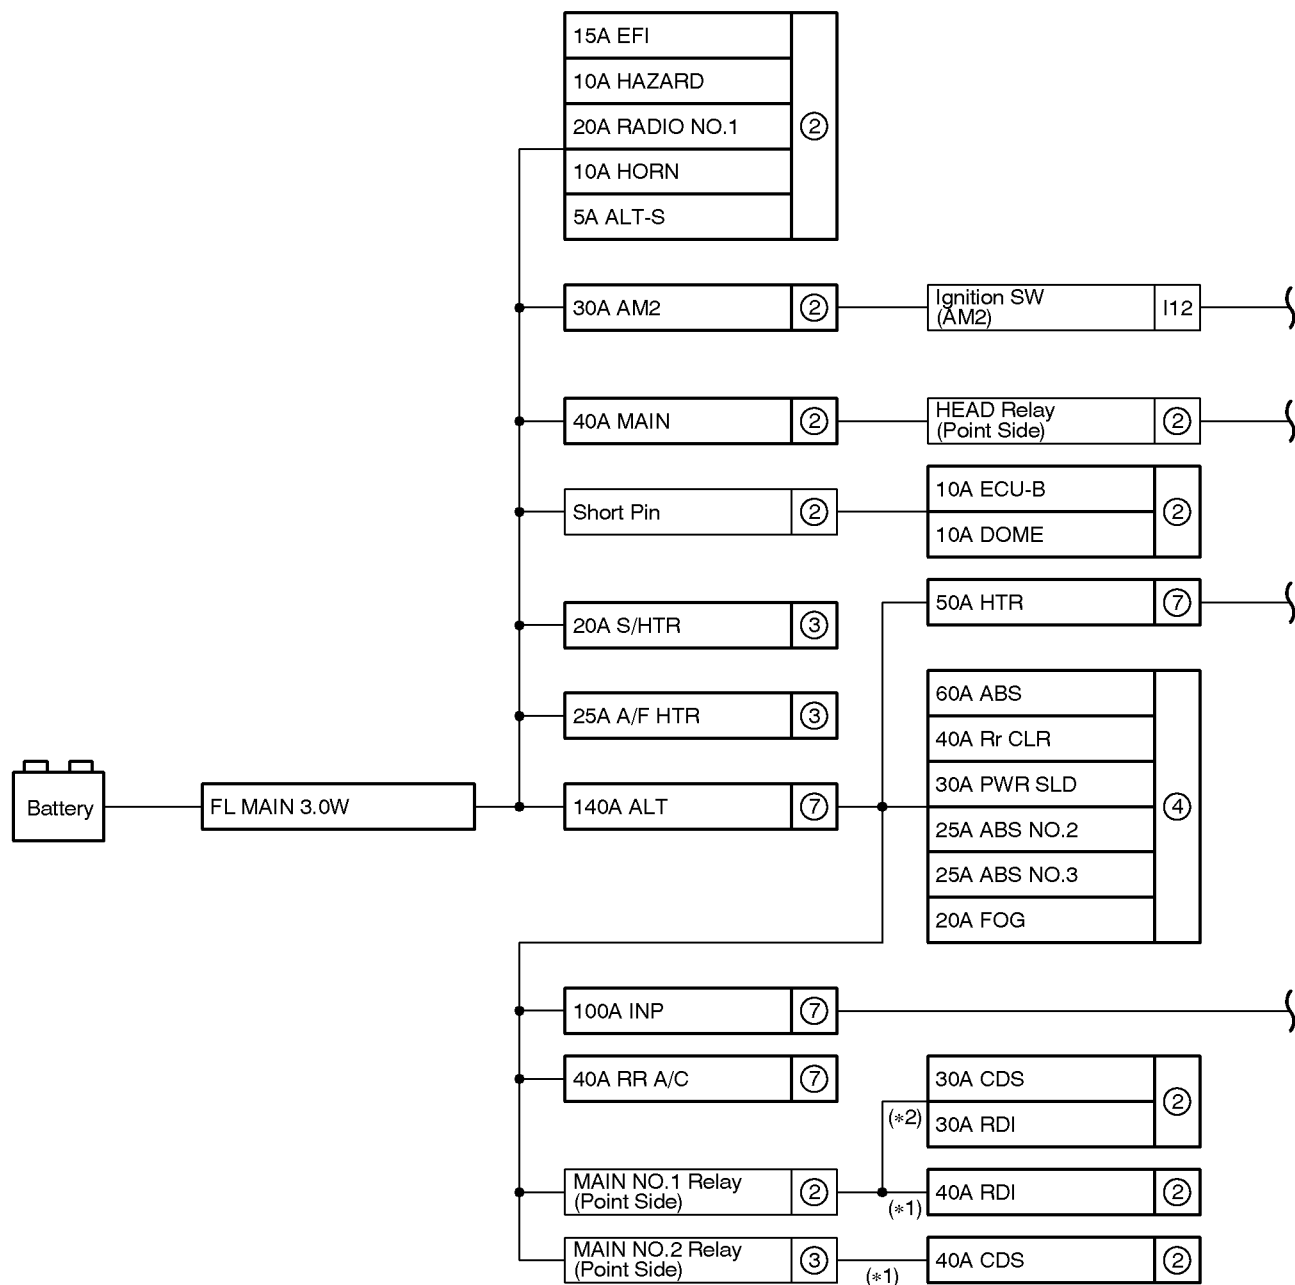

[LOCATION] ① : Driver Side J/B No.1 (See page 22) ② : Engine Room J/B No.2 (See page 24)
 ⑤ : Passenger Side R/B No.4 (See page 29) ⑥ : Driver Side R/B No.5 (See page 29)

*1 : Towing Package
*2 : Except Towing Package

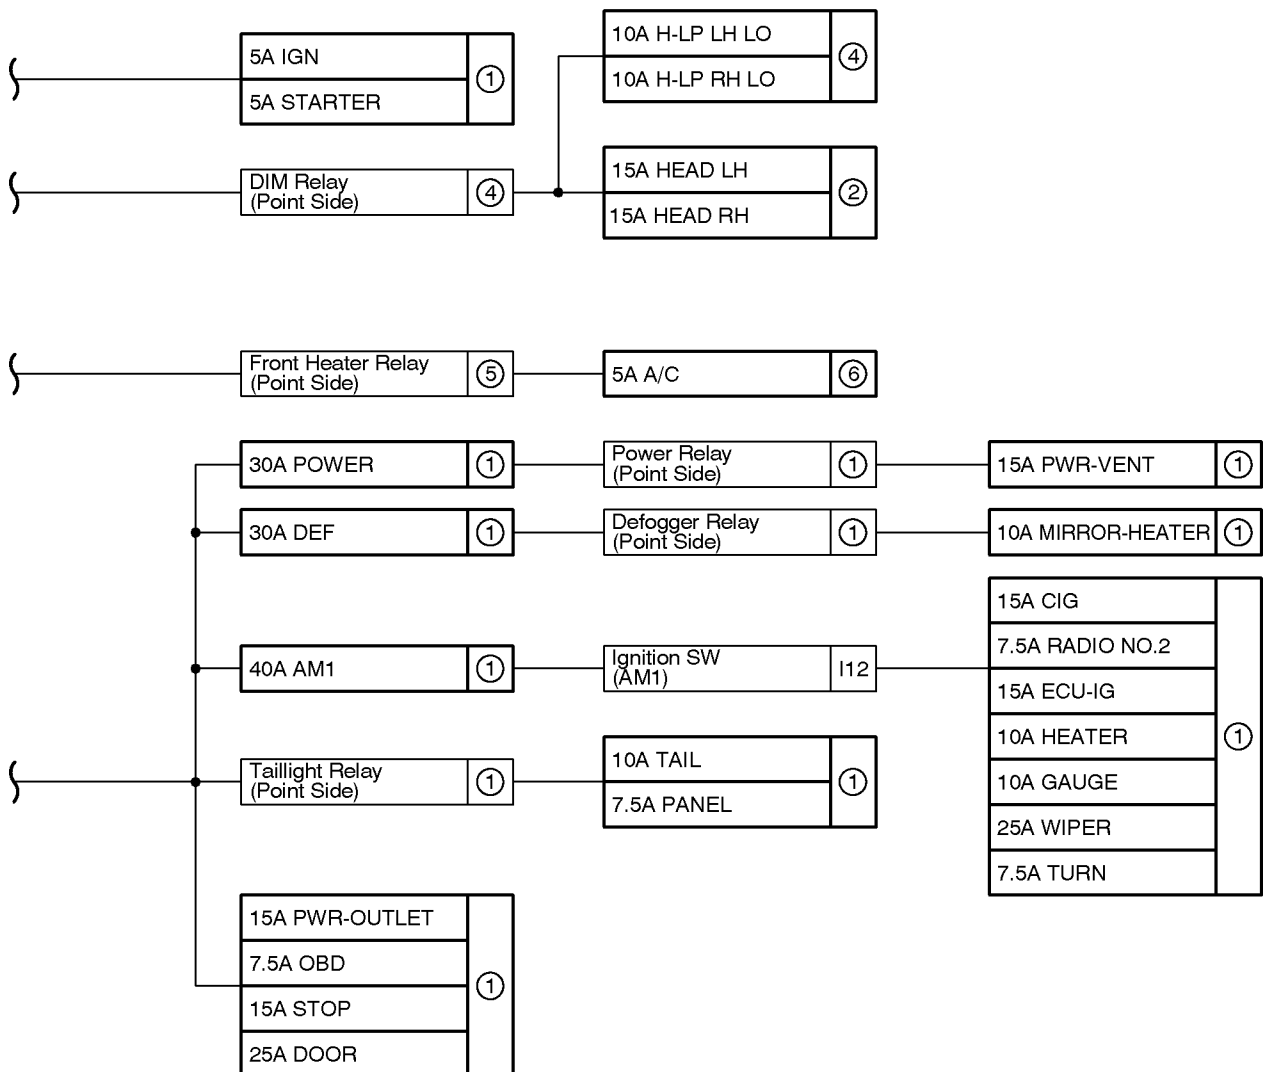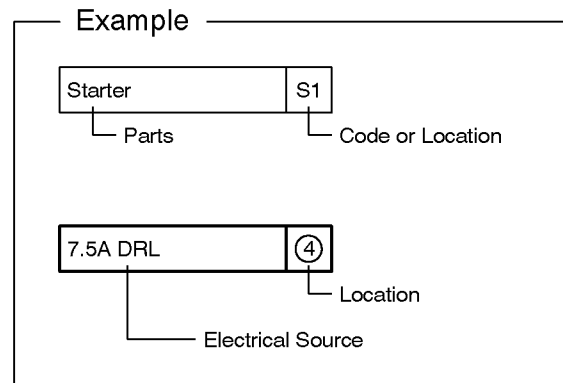

③ : Engine Room R/B No.1 (See page 28)

④ : R/B No.7 (See page 29)

⑦ : Fusible Link Block (See page 30)

J POWER SOURCE (Current Flow Chart)

Driver Side J/B No.1 (See Page 22)

Fuse		System	Page
5A	IGN	Charging	60
		Combination Meter	208
		Engine Control and Engine Immobiliser System	62
		SRS	191
5A	STARTER	Combination Meter	208
		Electronically Controlled Transmission and A/T Indicator	168
		Engine Control and Engine Immobiliser System	62
		Starting and Ignition	56
7.5A	OBD	Engine Control and Engine Immobiliser System	62
7.5A	PANEL	Cigarette Lighter and Clock	118
		Combination Meter	208
		Illumination	100
7.5A	RADIO-NO.2	Power Outlet	120
		Radio and Player (4 speaker)	206
		Radio and Player (8 speaker)	202
7.5A	TURN	Turn Signal and Hazard Warning Light	88
10A	GAUGE	ABS	182
		Automatic Glare-Resistant EC Mirror	124
		Automatic Light Control	80
		Back-Up Light	106
		Charging	60
		Combination Meter	208
		Cruise Control	186
		Door Lock Control	132
		Electronically Controlled Transmission and A/T Indicator	168
		Engine Control and Engine Immobiliser System	62
		Headlight	76
		Interior Light	90
		Key Reminder and Seat Belt Warning	196
		Light Auto Turn Off	84
		Moon Roof	158
		Power Rear Quarter Window	162
		Power Slide Door	152
		Power Window	128
		Seat Heater	166
		VSC	174
		Wireless Door Lock Control	138
10A	HEATER	Automatic Air Conditioning (Front)	222
		Automatic Air Conditioning (Rear)	226
		Manual Air Conditioning (Front)	230
		Manual Air Conditioning (Rear)	234
		Radiator Fan and Condenser Fan (Except Towing Package)	218

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	HEATER	Radiator Fan and Condenser Fan (Towing Package)	214
		Rear Window Defogger and Mirror Heater	200
10A	MIRROR-HEATER	Engine Control and Engine Immobiliser System	62
		Rear Window Defogger and Mirror Heater	200
10A	TAIL	Engine Control and Engine Immobiliser System	62
		Illumination	100
		Taillight	96
15A	CIG	ABS	182
		Back-Up Light	106
		Cigarette Lighter and Clock	118
		Cruise Control	186
		Electronically Controlled Transmission and A/T Indicator	168
		Power Slide Door	152
		Remote Control Mirror	122
		SRS	191
15A	ECU-IG	VSC	174
		ABS	182
		Cruise Control	186
		Theft Deterrent	146
15A	PWR-OUTLET	VSC	174
		Power Outlet	120
15A	PWR-VENT	Power Rear Quarter Window	162
15A	STOP	ABS	182
		Cruise Control	186
		Electronically Controlled Transmission and A/T Indicator	168
		Engine Control and Engine Immobiliser System	62
		Stop Light	104
		VSC	174
25A	DOOR	Door Lock Control	132
		Interior Light	90
		Moon Roof	158
		Power Rear Quarter Window	162
		Power Window	128
		Theft Deterrent	146
		Wireless Door Lock Control	138
25A	WIPER	Front Wiper and Washer	110
		Rear Wiper and Washer	114
30A	DEF	Rear Window Defogger and Mirror Heater	200
30A	POWER	Door Lock Control	132
		Moon Roof	158
		Power Rear Quarter Window	162
		Power Seat	164
		Power Slide Door	152

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
30A	POWER	Power Window	128
		Wireless Door Lock Control	138
40A	AM1	Charging	60

Engine Room J/B No.2 (See Page 24)

Fuse		System	Page
5A	ALT-S	Charging	60
10A	DOME	Automatic Air Conditioning (Front)	222
		Automatic Air Conditioning (Rear)	226
		Automatic Light Control	80
		Cigarette Lighter and Clock	118
		Combination Meter	208
		Garage Door Opener	126
		Headlight	76
		Interior Light	90
		Key Reminder and Seat Belt Warning	196
		Light Auto Turn Off	84
		Theft Deterrent	146
		Wireless Door Lock Control	138
10A	ECU-B	Combination Meter	208
		Power Slide Door	152
		SRS	191
10A	HAZARD	Turn Signal and Hazard Warning Light	88
10A	HORN	Horn	116
		Theft Deterrent	146
15A	EFI	Electronically Controlled Transmission and A/T Indicator	168
		Engine Control and Engine Immobiliser System	62
15A	HEAD LH	Headlight	76
15A	HEAD RH	Headlight	76
20A	RADIO NO.1	Radio and Player (4 speaker)	206
		Radio and Player (8 speaker)	202
30A	AM2	Charging	60
		Engine Control and Engine Immobiliser System	62
		Starting and Ignition	56
30A	CDS	Radiator Fan and Condenser Fan (Except Towing Package)	218
30A	RDI	Radiator Fan and Condenser Fan (Except Towing Package)	218
40A	CDS	Radiator Fan and Condenser Fan (Towing Package)	214
40A	MAIN	Automatic Light Control	80
		Headlight	76
		Light Auto Turn Off	84
		Starting and Ignition	56
		Theft Deterrent	146
40A	RDI	Radiator Fan and Condenser Fan (Towing Package)	214

* These are the page numbers of the first page on which the related system is shown.

Engine Room R/B No.1 (See Page 28)

Fuse		System	Page
20A	S/HTR	Seat Heater	166
25A	A/F HTR	Engine Control and Engine Immobiliser System	62

R/B No.7 (See Page 29)

Fuse		System	Page
10A	H-LP LH LO	Fog Light	108
		Headlight	76
10A	H-LP RH LO	Headlight	76
20A	FOG	Fog Light	108
25A	ABS NO.2	VSC	174
25A	ABS NO.3	VSC	174
30A	PWR SLD	Power Slide Door	152
40A	Rr CLR	Automatic Air Conditioning (Rear)	226
60A	ABS	ABS	182
		VSC	174

Driver Side R/B No.5 (See Page 29)

Fuse		System	Page
5A	A/C	Manual Air Conditioning (Front)	230
		Manual Air Conditioning (Rear)	234

Fusible Link Block (See Page 30)

Fuse		System	Page
40A	RR A/C	Automatic Air Conditioning (Rear)	226
		Manual Air Conditioning (Rear)	234
50A	HTR	Automatic Air Conditioning (Front)	222
		Manual Air Conditioning (Front)	230
		Manual Air Conditioning (Rear)	234
100A	INP	Automatic Light Control	80
		Charging	60
		Engine Control and Engine Immobiliser System	62
		Illumination	100
		Light Auto Turn Off	84
		Taillight	96
		Theft Deterrent	146
140A	ALT	Automatic Light Control	80
		Charging	60
		Illumination	100
		Light Auto Turn Off	84
		Radiator Fan and Condenser Fan (Except Towing Package)	218
		Radiator Fan and Condenser Fan (Towing Package)	214
		Taillight	96
		Theft Deterrent	146

* These are the page numbers of the first page on which the related system is shown.