


Oldsmobile Silhouette 2000 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located to the right of the glove box.

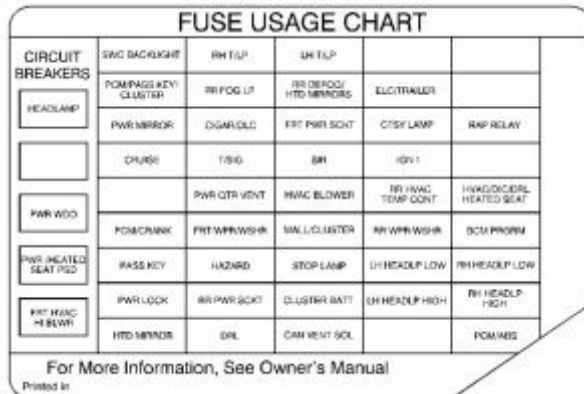

Oldsmobile Silhouette –


fuse box – instrument panel

Circuit breakers	Circuitry
HEADLAMP	DRL Control Module, Headlamp and Instrument Panel Dimmer Switch
PWR WDO	Front Power Windows
PWR SEATED PSD	6-Way Power Seat(s) and Rear Side Door Actuator Motor
FRT HVAC/HI BLWR	Blower Motor Hi Speed Relay in Module
Fuses	Circuitry
SWC BACKLIGHT	Steering Wheel Radio Control Switches (Illumination)
ELEC PRNDL	Instrument Cluster to PRNDL Indicators
PWR MIRROR	Power Remote Control Mirror Switch
CRUISE	Cruise Control Module, Switch and Release Switch
PCM/CRANK	Powertrain Control Module (PCM), Ignition Crank
PASS KEY	PASS-Key III System
PWR LOCK	Body Control Module (BCM)
HTD MIRROR	Heated Mirrors
RH TLP	Not Used
RR FOG LP	Not Used
CIGAR/DLC	Cigarette Lighter and Data Link Connector (DLC)
TISIG	Turn Signal Switch
PWR QTR VENT	Indicator Lamp and Multifunction Switch (Power Vent Switch)
FRT WPR/WSHR	Windshield Wiper/Washer Motor and Switch
HAZARD	Turn Signal Switch
RR PWR SCKT	Rear Electric Accessory Plug Housing
DRL	Daytime Running Lamp (DRL) Control Module

LH T/LP	Not Used
RR DEFOG/HTD MIRRORS	Rear Window Defogger Relay, Heated Mirrors
FRT PWR SCKT	Front Electric Accessory Plug Housing
SIR	Inflatable Restraint Control Module
HVAC BLOWER	Heater-A/C Control
MALL/CLUSTER	Instrument Cluster, BCM, Electronic Level Control (ELC) Sensor and Relay
STOP LAMP	Stoplamp Switch
CLUSTER BATT	Module/Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)
CAN VENT SOL	Evaporative Emissions (EVAP) Canister Vent Solenoid Valve
ELC/TRAILER	Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness
CTSY LAMP	BCM
IGN 1	BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Control Module, Rear Windows
RR HVAC TEMP CONT	Rear HVAC-A/C Control
RR WPR/WSHR	Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Window Wiper/Washer Switch)
LH HEADLP LOW	Not Used
LH HEADLP HIGH	Not Used
RAP RELAY	Retained Accessory Power (RAP) Relay
HVAC/DIC/DRL HEATED SEAT	Air Inlet Actuator, Driver Information Display, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay
BCM PRGRM	Body Control Module (BCM)
RH HEADLP LOW	Not Used
RH HEADLP HIGH	Not Used
PCM	IGN MAIN Relay and PCM, Electronic Break Control Module

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

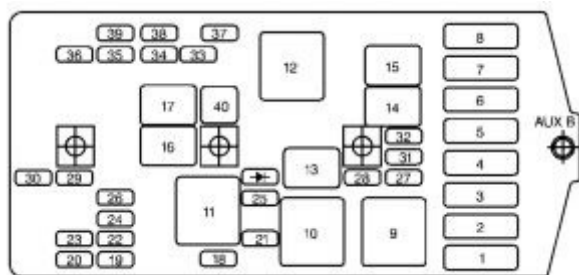

Oldsmobile Silhouette –

fuse box – underhood

fuse and relay center

Maxi Fuse	Circuitry
1 COOL FAN 2	Coolant Fans
2 —	Not Used
3 HEADLAMP	Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (Instrument Panel): HAZARD and STOPLAMP
4 BATT MAIN 2	Circuit Breaker: PWR SEAT/PSD. Fuses (UP): ELC and RR DEFOG
5 IGN MAIN 1	Ignition Switch to Fuses (Instrument Panel): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN 1-U/H, INJ, TCC)]
6 COOL FAN I	Coolant Fans
7 BATT MAIN 1	Fuses (Instrument Panel): ABS MOD BATT, CIGAR/DLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT
8 IGN MAIN 2	Ignition Switch to Fuses (I/P): Ignition Switch to Fuses (I/P): BCM PRGRM, FRT HVACLOW/MED BLWR, FRTWPR/WSHR, HVAC/DRL, MALL/RADIO/DIC, PWRQRT VENT, RR HVAC, RRWPR/WSHR, SWC ACCY and PWR WDO Circuit Breaker

Mini Relays	Circuitry
9 COOL FAN	RH FAN 1, LH FAN 2
10 COOL FAN 2	LH FAN 2
11 IGN MAIN	FUSES: A/C CLU, IGN I-U/H, INS, ELEK IGN, TCC
12 COOL FAN 1	RH FAN 1, LH FAN 2

Micro Relays	Circuitry
13 A/C CLU	A/C Clutch
14 FUEL PUMP	Fuel Pump
15 F/PMP SPD CONT	Not Used
16 HORN	Horn
17 FOG LAMP	LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator

Mini Fuse	Circuitry
18 INJ	Fuel Injectors 1-6
19 SPARE	Not Used
20 SPARE	Not Used
21 IGNI- UH	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor
22 SPARE	Not Used
23 SPARE	Not Used
24 SPARE	Not Used
25 ELEK IGN	Ignition Control Module (ICM)
26 SPARE	Not Used
27 B/U LAMP	Transaxle Range Switch to Back-up Lamps
28 A/C CLU	A/C CLU to A/C Compressor Clutch Oil
29 RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft-Deterrent Shock Sensor
30 ALT SENSE	Generator
31 TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32 FUEL PUMP	Fuel Pump Relay
33 ECM SENSE	Powertrain Control Module (PCM)
34 —	Not Used
35 FOG LP	Fog Lamp Relay
36 HORN	Horn Relay
37 PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps Switch Theft Deterrent Relay to Headlamps
38 —	Not Used
39 SPARE	Not Used
40	Mini Fuse Puller