


Suzuki Alto 800, K10 2012 fuse box diagram

Fuses

Vehicle has three type of fuse:

- Main fuse – takes current directly from the battery
- Primary fuses – are between the main fuse and individual fuses, and are for electrical load groups
- Individual fuses are individual electrical circuits. To remove a fuse, use the fuse puller provide in the fuse box

Fuses in the engine compartment

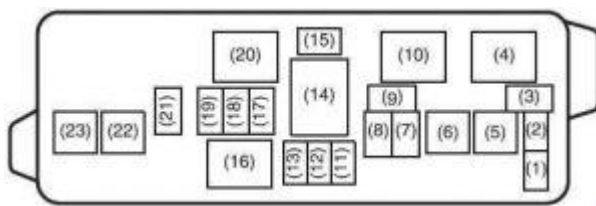

Suzuki Alto – fuse box diagram – engine


compartment

No.	A	Function/component
1	–	Not used
2	–	Not used
3	10	Font fog light
5	50	Ignition switch
6	50	Battery 1
7	15	Headlight (left)
8	15	Headlight (right)

9	7.5	CNG (if equipped)
11	–	Not used
12	–	Not used
13	–	Not used
14	80	All electric load
15	–	Not used
17	30	Radiator fan
18	15	Fuel injection
19	10	A/c compressor
21	7.5	Automated Manual Transaxle (if equipped) CNG Valve (if equipped)
22	40	Automated Manual Transaxle pump (if equipped)
23	30	Battery 2
Relay		
4	A/c compressor relay	
10	Radiator fan relay	

16	Main relay
20	Fuel pump relay

Fuses under the dashboard

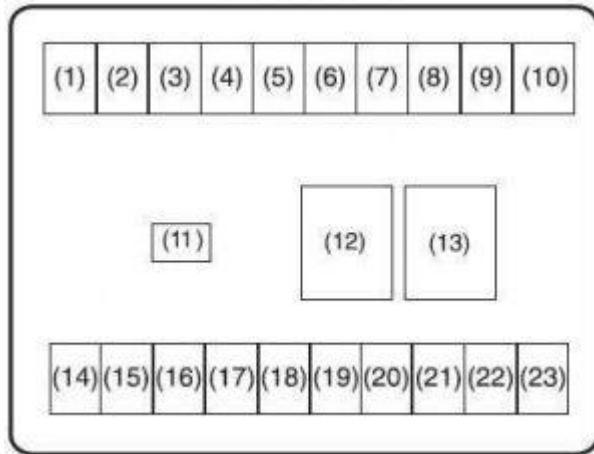

Suzuki Alto – fuse box diagram –

dashboard

No.	A	Function/component
1	10	IG2 SIG
2	15	Wiper
3	–	Not used
4	7.5	Automated Manual Transaxle 2 (if equipped)
5	30	Blower motor
6	10	Stop light
7	10	Tail light

8	15	Audio
9	20	Door lock
10	–	Not used
11	15	Accessory
12	–	Not used
13	30	Power window
14	15	Ignition switch
15	10	Turn signal light
16	10	Meter
17	7.5	Air bag
18	7.5	IG1 SIG
19	–	Not used
20	–	Not used
21	30	Power steering
22	30	ST SIG

23	15	Horn/Hazard
----	----	-------------