


Vauxhall Astra (Astra J) 6th Generation 2013 fuse box diagram

Engine compartment fuse box

The fuse box is in the front left of the engine compartment. Disengage the cover and fold it upwards until it stops. Remove the cover vertically upwards.

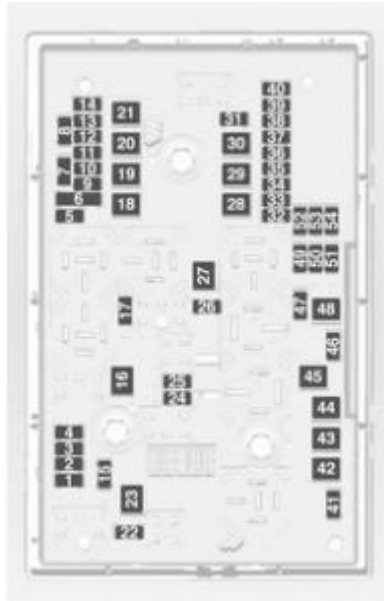

Vauxhall Astra (Astra J) – fuse box – engine

compartment

Number	Circuit
1	Engine control module
2	Lambda probe
3	Fuel injection, ignition system
4	Fuel injection, ignition system
5	—

6	Mirror heating
7	Fan control
8	Lambda probe, engine
9	Rear window sensor
10	Battery sensor
11	Trunk release
12	Adaptive forward lighting module
13	—
14	Rear window wiper
15	Engine control module
16	Starter
17	Transmission control module
18	Heated rear window
19	Front power windows
20	Rear power windows

21	ABS
22	Left high beam (Halogen)
23	Headlamp washer system
24	Right low beam (Xenon)
25	Left low beam (Xenon)
26	Fog lights
27	Diesel fuel heating
28	—
29	Electrical parking brake
30	ABS
31	—
32	Airbag
33	Adaptive forward lighting
34	—
35	Power windows


36	—
37	Canister vent solenoid
38	Vacuum pump
39	Fuel system control module
40	Windscreen washer, Rear window washer system
41	Right high beam (Halogen)
42	Radiator fan
43	Windscreen wiper
44	—
45	Radiator fan
46	—
47	Horn
48	Radiator fan
49	Fuel pump
50	Headlamp levelling

51	Air shutter
52	Auxiliary heater, diesel engine
53	Transmission control module, Engine control module
54	Wiring monitoring

Instrument panel fuse box

In left-hand drive vehicles, the fuse box is behind the storage compartment in the instrument panel. Open the compartment and push it to the left to unlock. Fold the compartment down and remove it.

In right-hand drive vehicles, the fuse box is located behind a cover in the glovebox. Open the glovebox, then open the cover and fold it down.

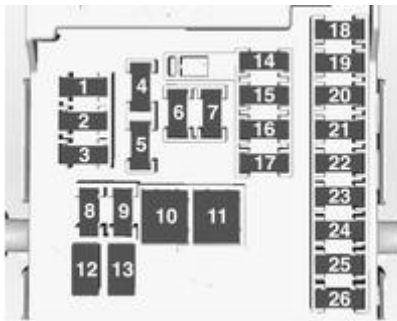

Vauxhall Astra (Astra J) – fuse box – instrument panel

Number	Circuit
1	Displays
2	Exterior lights
3	Exterior lights
4	Radio

5	Infotainment system, instrument
6	Power outlet front
7	Power outlet rear seat
8	Left low beam
9	Right low beam
10	Door locks
11	Interior fan
12	—
13	—
14	Diagnostic connector
15	Airbag
16	—
17	Air conditioning system
18	Prefuse: radio, Infotainment, displays
19	Brake lights, tail lights, interior lights

20	—
21	—
22	Ignition switch
23	Body control unit
24	Body control unit
25	—
26	Power outlet load compartment (if no load compartment fuse box) (Sports tourer only)


Load compartment fuse box

3-door hatchback, 5-door hatchback

The fuse box is on the left side of the load compartment behind a cover.

Sports tourer

The fuse box is on the left side of the load compartment behind a cover.

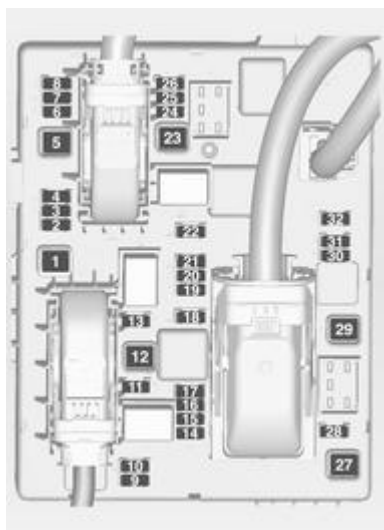

Vauxhall Astra (Astra J) – fuse box – load compartment

Number	Circuit

1	Trailer module
2	Trailer outlet
3	Parking assist
4	—
5	—
6	—
7	—
8	Anti-theft alarm system
9	—
10	—
11	Trailer module, Trailer socket
12	—
13	Trailer outlet
14	—
15	—

16	—
17	—
18	—
19	Steering wheel heating
20	Sunroof
21	Seat heating
22	—
23	—
24	—
25	—
26	—
27	—
28	—
29	—
30	—

31	Amplifier, Subwoofer
32	Active damping system, Lane departure warning