

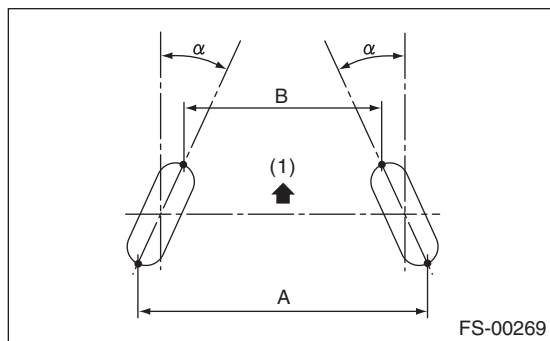
1. General Description

A: SPECIFICATION

Refer to “FS” section for rear suspension specifications. <Ref. to FS-2, SPECIFICATION, General Description.>

NOTE:

- Front and rear toe-in and front camber can be adjusted. Adjust if the toe-in or camber tolerance exceeds specifications.
- Other items indicated in the specifications table cannot be adjusted. If other items exceed specifications, check the suspension parts and connections for deformation. If defective, replace with new parts.




(1) Front

$A - B = \text{Positive: Toe-in, Negative: Toe-out}$

$\alpha = \text{Individual toe angles}$

B: COMPONENT

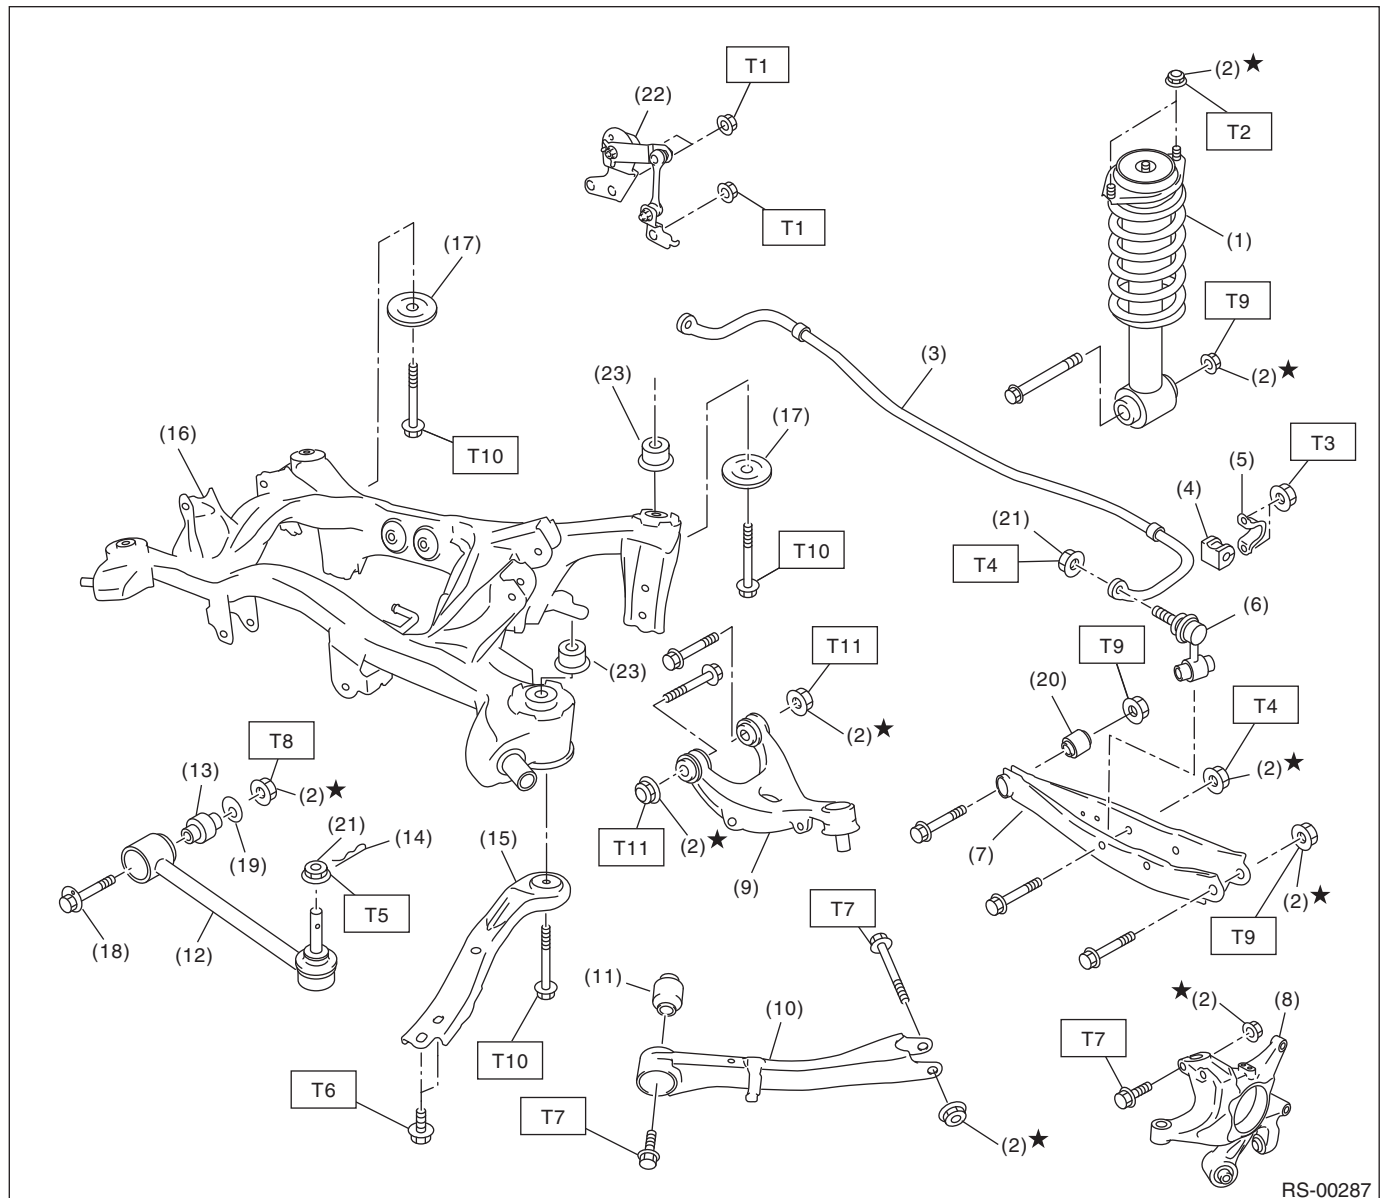1. REAR SUSPENSION



- | | |
|---------------------------------|--|
| (1) Shock absorber | (15) Front sub frame support plate |
| (2) Self-locking nut | (16) Rear sub frame |
| (3) Rear stabilizer | (17) Rear sub frame stopper plate (lower) |
| (4) Stabilizer bushing | (18) Adjusting bolt |
| (5) Stabilizer clamp | (19) Adjusting washer |
| (6) Stabilizer link | (20) Rear lateral link bushing |
| (7) Rear lateral link | (21) Flange nut |
| (8) Rear housing | (22) Rear vehicle height sensor (models with auto headlight beam leveler only) |
| (9) Upper arm | (23) Rear sub frame stopper plate (upper) |
| (10) Trailing link | |
| (11) Trailing link bushing | |
| (12) Front lateral link | |
| (13) Front lateral link bushing | |
| (14) Snap pin | |


Tightening torque: N·m (kgf·m, ft·lb)

- | | |
|-------------|-------------------------|
| T1: | 7.5 (0.76, 5.5) |
| T2: | 30 (3.1, 22.4) |
| T3: | 40 (4.1, 29.5) |
| T4: | 45 (4.6, 33.2) |
| T5: | 60 (6.1, 44) |
| T6: | 70 (7.1, 51.6) |
| T7: | 90 (9.2, 66.4) |
| T8: | 100 (10.2, 73.8) |
| T9: | 120 (12.2, 89) |
| T10: | 145 (14.8, 107) |
| T11: | 150 (15.3, 111) |

General Description

REAR SUSPENSION

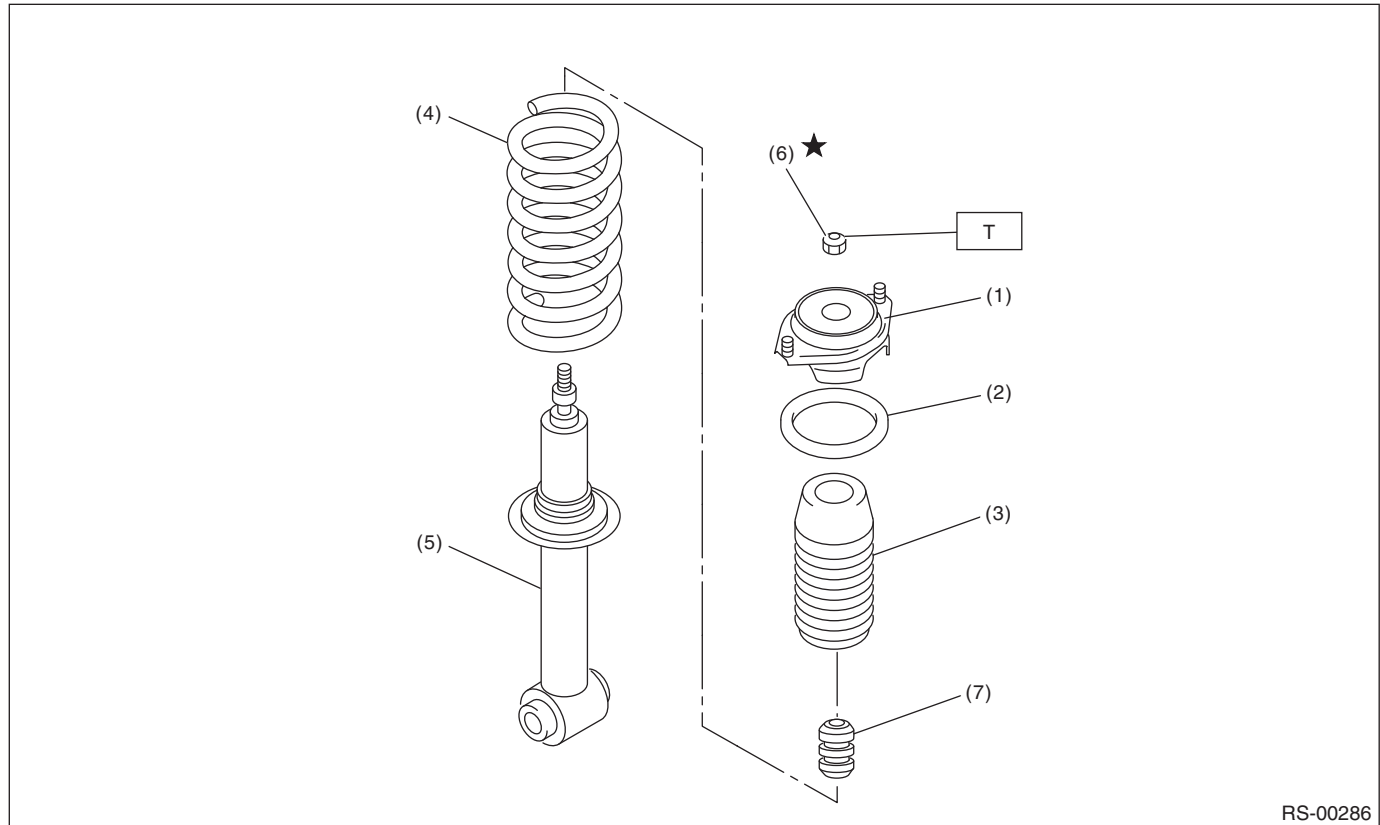2. SHOCK ABSORBER



RS-00286

- | | |
|------------------------|----------------------|
| (1) Mount | (5) Shock absorber |
| (2) Upper rubber sheet | (6) Self-locking nut |
| (3) Dust cover | (7) Helper |
| (4) Coil spring | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 25 (2.5, 18.4)

C: CAUTION

Please clearly understand and adhere to the following general precautions. They must be strictly followed to avoid minor or serious injury to the person doing the work or people in the area.

1. CAUTIONS

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before disposing of shock absorbers, be sure to bleed the gas out completely. Also, do not expose to flames or fire.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or cloth between the part and the vise.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.





2. OIL

When handling oil, carefully observe the following to prevent unexpected accidents.

- Prepare container and waste cloths when performing work which oil could possibly spill. If oil spills, wipe it off immediately to prevent from penetrating into floor or flowing outside, for environmental protection.
- Follow all government regulations concerning disposal of refuse when disposing.




D: PREPARATION TOOL

1. SPECIAL TOOL

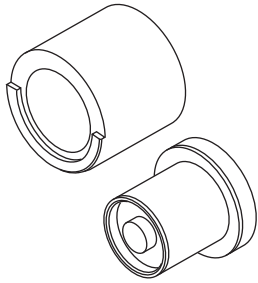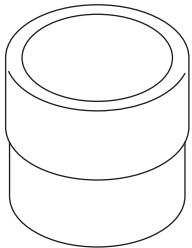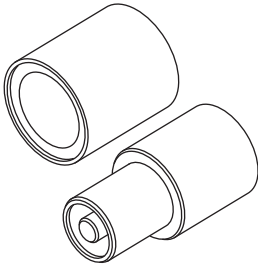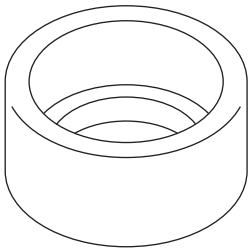ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST20099AE000	20099AE000	INSTALLER & REMOVER	Used for replacing the front lateral link bushing.
 ST-499755602	499755602	PRESS	Used for replacing the rear trailing link bushing.
 ST20099AE010	20099AE010	INSTALLER & REMOVER	Used for replacing the rear lateral link bushing.
 ST20299AG010	20299AG010	BASE	Used for replacing the rear trailing link bushing.

General Description

REAR SUSPENSION

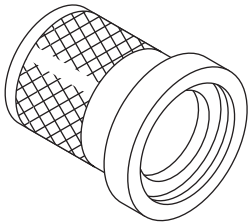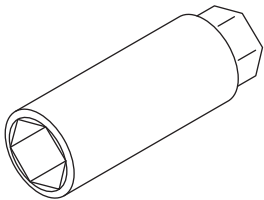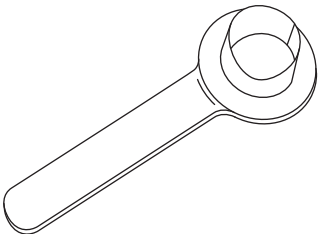ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-899874100	899874100	INSTALLER	Used for replacing the rear trailing link bushing.
 ST20399FG000	20399FG000	STRUT MOUNT SOCKET	• Used for removing and installing shock mount. • Used for checking torque of shock mount center nut.
 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	• Used for installing the rear drive shaft to the rear differential. • For oil seal protection

2. GENERAL TOOL

TOOL NAME	REMARKS
Alignment tester	Used for measuring wheel alignment.
Toe-in gauge	Used for toe-in measurement.
Jack	Used for removing and installing suspension.
Bearing puller	Used for removing bushings.
Coil spring compressor	Used for disassembling and assembling shock absorber.