

Toyota Corolla (E110; 1998-2002) fuses

*In this article, we consider the eighth-generation Toyota Corolla (E110), produced from 1997 to 2002. Here you will find fuse box diagrams of **Toyota Corolla 1998, 1999, 2000, 2001 and 2002**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Corolla:

Fuse Layout Toyota Corolla 1998-2002



Cigar lighter (power outlet) fuse in the Toyota Corolla is the fuse #31 "CIG" in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

The fuse box is located behind the storage compartment on the driver's side of the dashboard.



Fuse Box Diagram

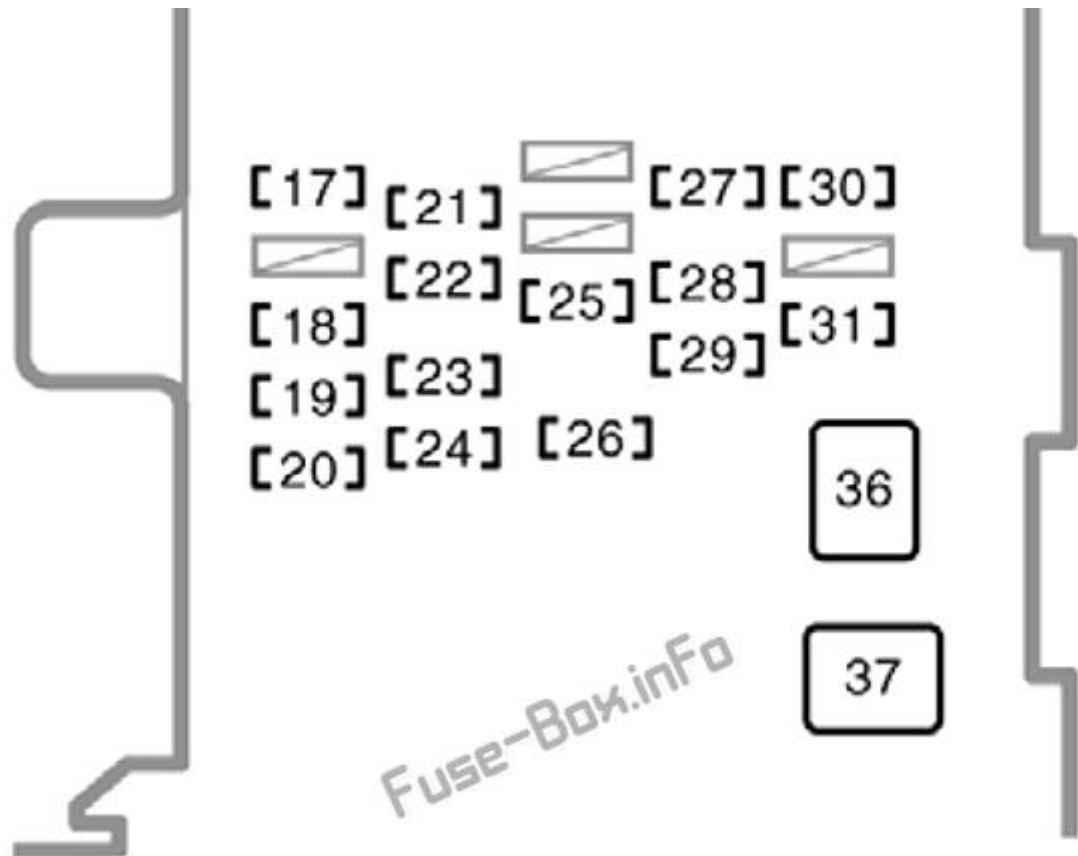


Assignment of the fuses in the instrument panel

№	Name	Amp	Description
17	TURN	7.5A	Turn signal lights, emergency flashers
18	GAUGE	10A	Gauge and meters, buck-up lights, air conditioning system, power windows, rear window defogger, power door lock system
19	WIP	20A	Windshield wipers and washer
20	DEF I-UP/M-HTR	10A	Rear window defogger, multiport fuel injection system/sequential multiport fuel injection system
21	ECU-IG	10A	Starting system, electric cooling fan, automatic transmission shift lock system, anti-lock brake system, cruise control system, theft deterrent system (2000)
22	IGN	7.5A	Multiport fuel injection system/sequential multiport fuel injection system, charging system, SRS airbag system, seat belt pretensioners
23	STOP	15A	1998-1999: Stop lights, high mounted stoplight, anti-lock brake system, automatic transmission shift lock system; 2000-2002: Stop lights, high mounted stoplight, anti-lock brake system, automatic transmission shift lock system, cruise control system, multiport fuel injection system/sequential multiport fuel injection system
24	TAIL	15A	Tail lights, gauges and meters, instrument panel light control, cigarette lighter, clock, car audio system, rear window defogger, license plate lights, electronically controlled automatic transmission system, multiport fuel injection system/sequential multiport fuel injection system, air conditioning system, emergency flashers
25	OBD	7.5A	On-board diagnosis system
26	ECU-B	7.5A	SRS airbag system, seat belt pretensioners

No	Name	Amp	Description
27	ST	5A	Starter system, multiport fuel injection system/sequential multiport fuel injection system
28	D/L	30A	Power door lock system
29	FOG	15A	1998-2000: Not Used; 2001-2002: Front fog lights
30	S-HTR	15A	No circuit
31	CIG	15A	Car audio system, clock, cigarette lighter, power rear view mirrors, SRS airbag system, seat belt pretensioners, automatic transmission shift lock system, theft deterrent system (1998-2000)
36	DEF	40A	Rear window defogger, "DEF I-UP/M-HTR" fuse
37	POWER	30A	Power windows, electric moon roof

Engine Compartment Fuse Boxes


Fuse Box Location

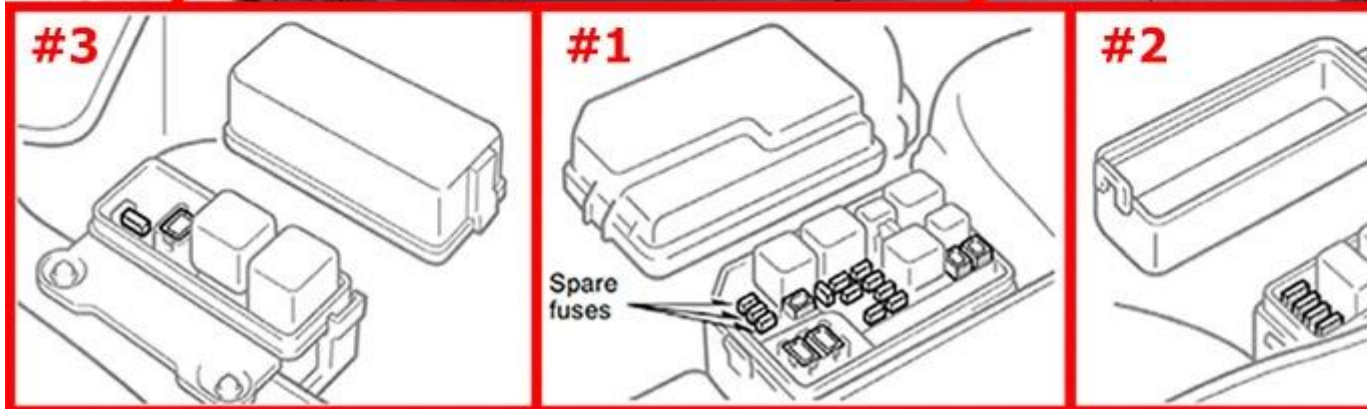

Advertisements

Fuse Box Diagram


#1

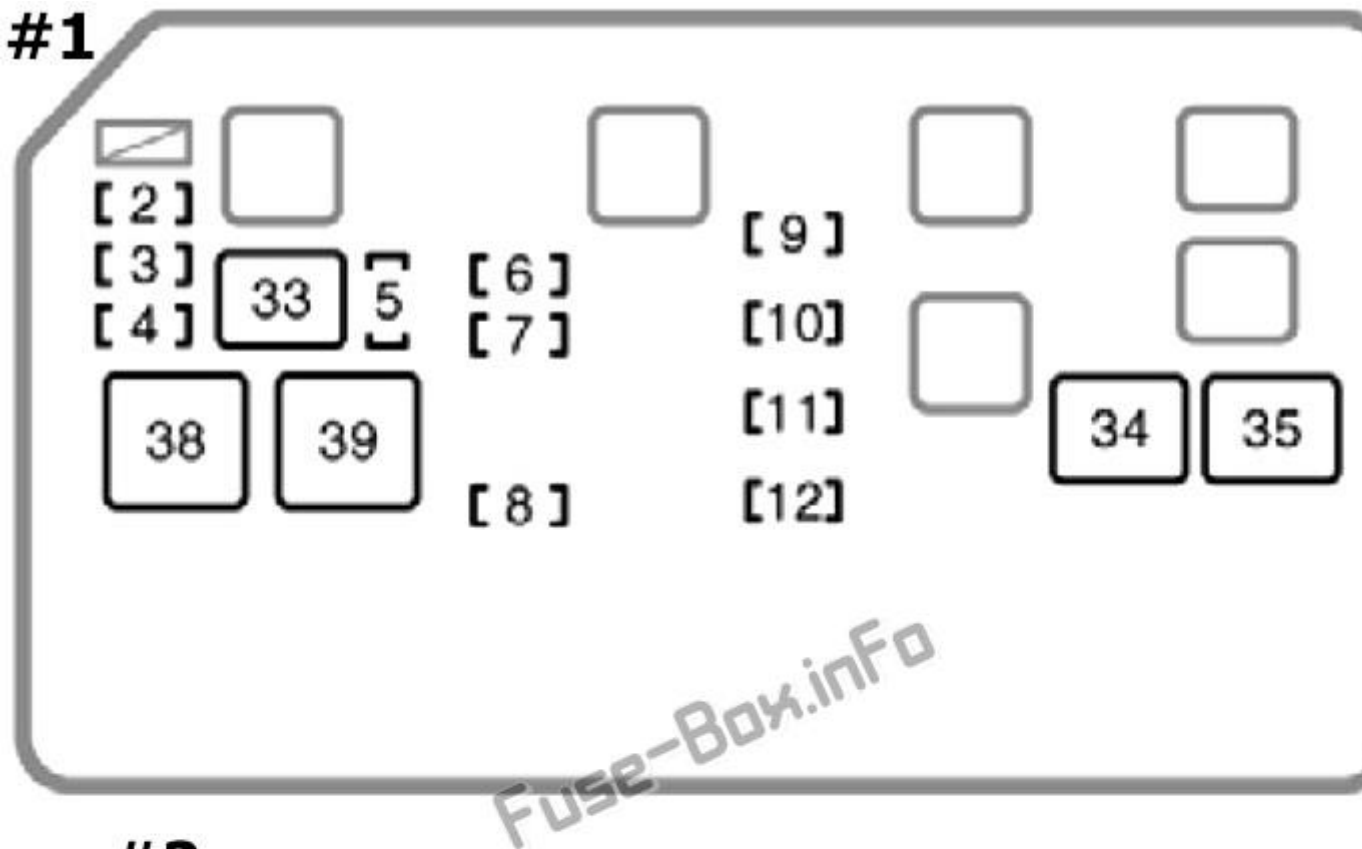

#2



#3

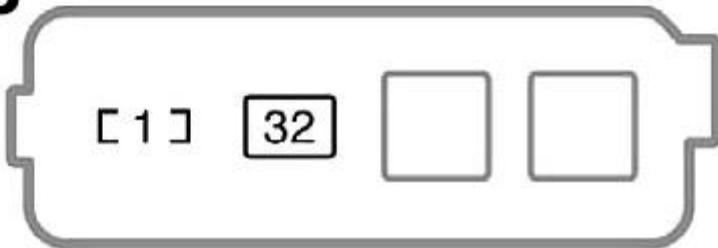

Assignment of the fuses in the engine compartment

No	Name	Amp	Description
1	A/C	7.5A	Air conditioning system, electric cooling fans
2	SPARE	5A	Spare fuse
3	SPARE	10A	Spare fuse

№	Name	Amp	Description
4	SPARE	15A	Spare fuse
5	DOME	15A	Car audio system, interior light, personal light, trunk light, clock, daytime running light system, theft deterrent system (1998-2000)
6	HAZARD	10A	Turn signal lights, emergency flashers
7	AM2	15A	Starter system, "ST" and "IGN" fuses
8	HEAD (LH) or HEAD (LH-UPR)	10A or 15A	Left-hand headlight (high beam) (1998-2000: 10A; 2001-2002: 15A)
9	ALT-S	5A	Charging system
10	HEAD (RH) or HEAD (RH-UPR)	10A or 15A	Right-hand headlight (high beam) (1998-2000: 10A; 2001-2002: 15A)
11	EFI or F-HTR	15A	Multiport fuel injection system/sequential multiport fuel injection system
12	HORN	10A	1998-2000: Horn, theft deterrent system; 2001-2002: Horn
13	DRL	7.5A	Daytime running light system
14	HEAD RH-Lo or HEAD RH-LWR	10A	Right-hand headlight (low beam)
15	HEAD LH-Lo or HEAD LH-LWR	10A	Left-hand headlight (low beam)
16	CDS	30A	Electric cooling fans
32	HTR	50A	Air conditioning system, "A/C" fuse

No	Name	Amp	Description
33	MAIN	40A	Starter system, "HEAD (LH) or HEAD (LH-UPR)", "HEAD (RH)" or "HEAD (RH-UPR)", "HEAD LH-LWR" or "HEAD LH-Lo", "HEAD RH-LWR" or "HEAD RH-Lo" and "DRL" (2000-2002) fuses
34	RDI	30A	Electric cooling fans
35	AM1	50A	"CIG", "TURN", "GAUGE", "ECU-IG" and "WIP" fuses
38	FL ABS	50A	Anti-lock brake system
39	FL ALT	100A	"RDI", "CDS", "AM1", "POWER", "D/L", "TAIL", "OBD", "FOG", "ECU-B", "STOP", "DEF" and "HTR" fuses