


Citroen Relay II – Citroen Jumper II (2006 – 2010) – fuse box diagram

Year of production: 2006,2007, 2008, 2009, 2010

Fuse box in instrument panel (driver side)

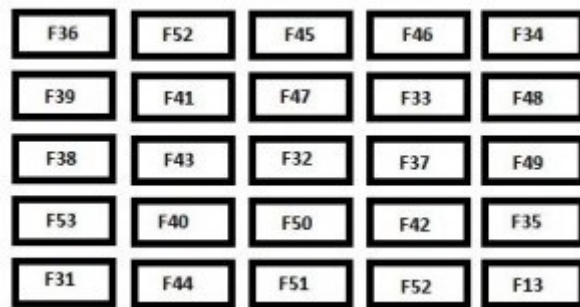


Citroen Jumper – fuse box – instrument panel

Remove the bolts and tilt the box to access the fuses.

Fuses	Ampere rating [A]	Allocation
12	7,5	Right-hand dipped headlamp
13	7,5	Left-hand dipped headlamp – Headlamp height adjuster
31	7,5	Relay supply
32	10	Minibus interior lighting – Hazard warning lights
33	15	Rear 12 V socket
34	—	Not used
35	7,5	Reversing lights – Water in diesel sensor
36	20	Door locking/unlocking unit
37	10	Brake lights switch – Third brake light – Instrument panel
38	10	Interior relays
39	10	Audio equipment – Diagnostics socket – Alarm siren – Programmable additional heating controls
40	15	De-icing: rear screen (left-hand side), mirror (passenger side)
41	15	De-icing: rear screen (right-hand side), mirror (driver's side)
42	7,5	ABS control unit and sensor – ESP sensor – Brake lights switch

43	30	Windscreen wiper motor
44	20	Lighter – Front 12 V socket
45	7,5	Electric window and mirror switches (driver's side) – Passenger electric window
46	—	Not used
47	20	Driver's electric window motor
48	20	Passenger electric window motor
49	7,5	Rain/brightness sensor – Audio equipment – Driver's electric window motor – Alarm – Instrument panel controls
50	7,5	Air bags and pre-tensioners unit
51	7,5	Chronotachograph – Cruise control – Air conditioning controls
52	7,5	Passenger compartment relays
53	7,5	Instrument panel – Rear fog lamps

Driver's pillar fuses

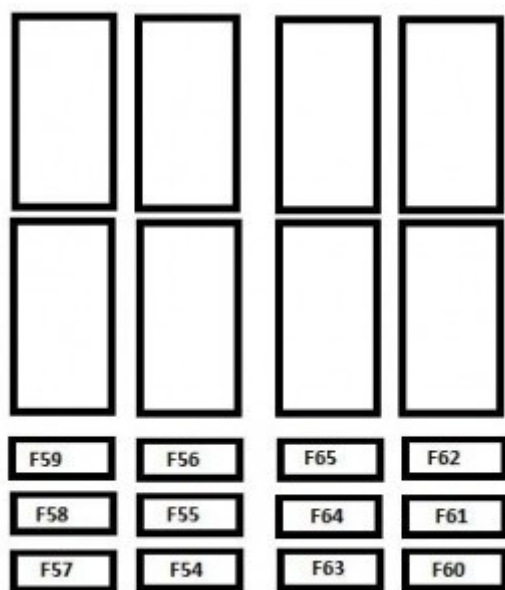

Citroen Jumper – fuse box – driver's pillar

Fuses	Ampere rating [A]	Allocation
54	—	Not used
55	15	Heated seats
56	15	Rear 12 V socket – Lighter
57	10	Ventilation/heating motor under the driver's seat

58	10	Direction indicators
59	—	Not used
60	—	Not used
61	—	Not used
62	—	Not used
63	10	Programmable additional heating switch
64	—	Not used
65	30	Rear blower

Fuse box in engine compartment

Fuse	Ampere rating [A]	Allocation
1	10	ABS/ESP pump supply
2	50	Diesel pre-heat unit
3	30	Ignition switch
4	20	Programmable additional heating burner
5	20	Programmable additional heating controls relay
6	40	Fan assembly (high speed)
	60	
7	40	Fan assembly (low speed)
	50	
8	40	Air conditioning
9	20	Windscreen wash pump
10	15	Horn
11	15	Diesel pre-heat unit and relay
14	7,5	Right-hand main beam headlamp
15	7,5	Left-hand main beam headlamp
16	7,5	Engine control unit
17	10	Engine control unit

18	7,5	Engine control unit
19	7,5	Air conditioning compressor
20	30	Headlamp wash pump
21	15	Fuel pump supply
22	20	Engine control unit
23	10	ABS/ESP solenoid valves supply
24	—	Not used
30	15	Front fog lamps

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.