


8. Clock

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the audio. <Ref. to ET-6, REMOVAL, Audio.>
- 3) Insert your hands from the audio space, disengage the tabs of the bracket on the back side of the instrument panel, and push the clock

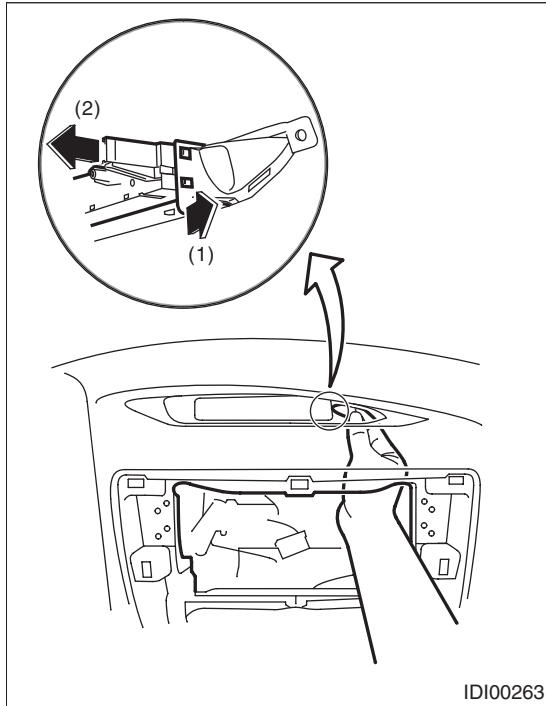

- 4) Disconnect the harness connector and remove the clock.

B: INSTALLATION

Install in the reverse order of removal.

	Page
1. General Description	2
2. Front Seat	8
3. Rear Seat	15
4. Power Seat System	19
5. Seat Heater System	24
6. Rear Seat Reclining System	26

