


Citroen C3 mk3 (from 2009) – fuse box diagram

Year of production: 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016

Fuse box under dashboard

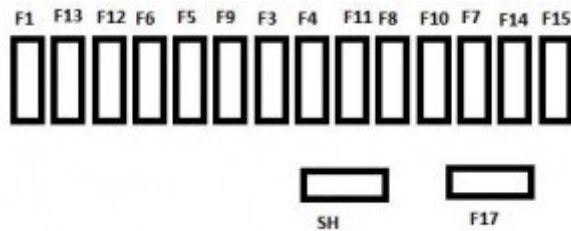


Citroen C3 mk2 – fuse box – under dashboard

Fuse	Ampere rating [A]	Function
FH36	5	Trailer relay unit
F37	—	Not used
F38	20	HiFi amplifier
FH39	—	Not used
F40	30	Trailer relay unit

Fuse	Ampere rating [A]	Functions
F1	15	Rear wiper
F2	—	Not used
F3	5	Airbags and pretensioners control unit
F4	10	Air conditioning, clutch switch, electrochromatic mirror, particle filter pump (Diesel), diagnostic socket, airflow sensor (Diesel).
F5	30	Electric windows panel, passenger's electric window control, front electric window motor.
F6	30	Rear electric windows motors and driver's electric window motor
F7	5	Courtesy lamp, side reading lamps.
F8	20	Multifunction screen, audio system, navigation radio, instrument panel with clock, alarm control unit, alarm siren.
F9	30	Audio system (after-market), 12 V socket, portable navigation support supply.
F10	15	Steering wheel controls.
F11	15	Ignition, diagnostic socket, automatic gearbox control unit.
F12	15	Rain/brightness sensor, trailer relay unit, driving school module
F13	5	Main stop switch, engine relay unit.
F14	15	Parking assistance control unit, airbag control unit, instrument panel, automatic air conditioning, USB Box, HiFi amplifier.
F15	30	Locking.

F16	—	Not used
F17	40	Rear screen and exterior mirrors demisting/ defrosting.
SH	—	PARC shunt.

Fuse box in engine compartment

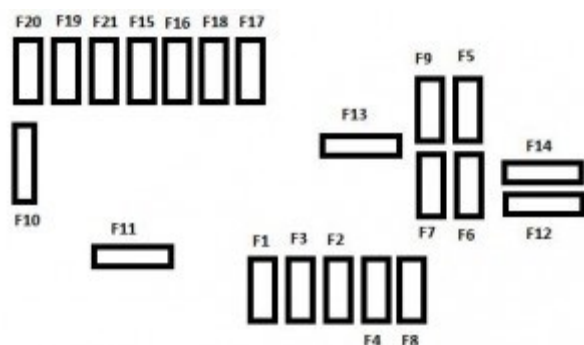

Citroen C3 mk2 – fuse box – engine compartment

Fuse	Ampere rating [A]	Functions
F1	20	Engine control unit supply, cooling fan unit control relay, multifunction engine control main relay, injection pump (Diesel)
F2	15	Horn
F3	10	Front/rear wash-wipe
F4	20	Daytime running lamps
F5	15	Diesel heater (Diesel), particle filter additive pump (Diesel), air flow sensor (Diesel), EGR electrovalve (Diesel), fuel pump (1.1i and 1.4i), blow-by heater and electrovalves (VTi)
F6	10	ABS/ESP control unit, secondary stop switch
F7	10	Electric power steering, automatic gearbox.
F8	25	Starter control.
F9	10	Switching and protection unit (Diesel)
F10	30	Fuel heater (Diesel), blow-by heater (1.1i, 1.4i and Diesel), fuel pump (VTi), injectors and ignition coils (petrol), electronic thermostat and canister purge electrovalve (1.1i and 1.4i)
F11	40	Heater blower
F12	30	Windscreen wipers slow/fast speed
F13	40	Built-in systems interface supply (ignition positive)
F14	30	Valvetronic supply (VTi)
F15	10	Right-hand main beam headlamps
F16	10	Left-hand main beam headlamps
F17	15	Left-hand dipped beam headlamps
F18	15	Right-hand dipped beam headlamps
F19	15	Oxygen sensors and electrovalves (VTi), electrovalves (Diesel), EGR electrovalve (Diesel)

F20	10	Pumps, electronic thermostat (VTi) water in fuel sensor (Diesel)
F21	5	Fan assembly control supply, ABS/ESP
MF1	60	Fan assembly
MF2	30	ABS/ESP pump
MF3	30	ABS/ESP electrovalves
MF4	60	Built-in Systems Interface (BSI) supply
MF5	60	Built-in Systems Interface (BSI) supply
MF6	—	Not used
Mf7	—	Passenger compartment fusebox
MF8	—	Not used

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market