


Fiat Bravo 2008 – 2014 – fuse box diagrams

Fuse box in dashboard

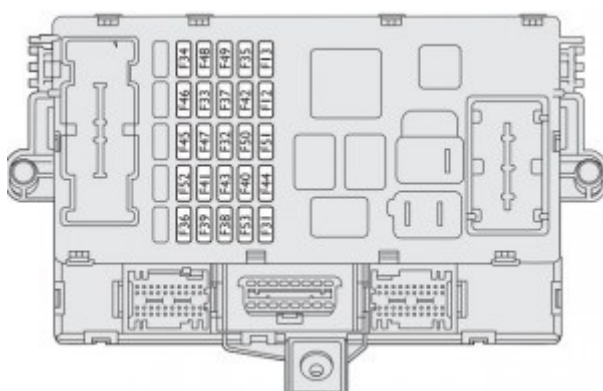


Fiat Bravo – fuse box – dashboard

Components	Fuse	Ampere rating [A]
Headlamp alignment correction system (versions with gas discharge headlights)	F13	15
Headlight alignment correction system (versions with halogen headlights)	F13	7,5
Remote switch coils on fuse box in engine compartment (CVM)/ Body Computer control unit (NBC)	F31	5
Hi-Fi system subwoofer	F32	15
Rear left power window	F33	20
Rear right power window	F34	20
Brake pedal control (normally closed contact NC)/ water in diesel fuel sensor/flow meter	F35	5
Door opening system control unit (CGP) (door opening/closing, safe lock, tailgate release)	F36	20
Brake pedal control (normally closed contact NA)/ Instrument panel (NQS)/gas-discharge lamp control units on front headlights	F37	7,5
Sound system/Sound system presetting/Connect Nav +/Blu&Me System/ Alarm siren (CSA)/Alarm system on ceiling light/Internal cooling unit system/Tyre pressure monitoring control unit (CPP)/Diagnostic socket connector/Rear ceiling lights	F39	10
Heated rear window	F40	30
Electric door mirror defrosters/Defrosters on front nozzles	F41	7,5
Braking system control unit (NFR)/Yaw sensor (YRS)	F42	5
Windscreen wiper/Windscreen/rear window washer bidirectional motor pump system on steering column stalk	F43	30
Current outlet/Cigar lighter	F44	15
Power sunroof motor	F46	20
Front power window (left side)	F47	20

Front power window (right side)	F48	20
Emergency control panel (illumination)/Central right and left branch control panel (illumination, ASR switch)/ Controls on steering wheel (illumination)/Control panel on front ceiling light (illumination)/Volumetric protection alarm system control unit (deactivation)/Power sunroof (control unit, control illumination)/rain sensor/daylight sensor on driving mirror/Front seat warming activation controls	F49	5
Air bag control unit (NAB)	F50	7,5
Internal cooling unit system/Sound system presetting/ Connect Nav +/Blu&Me system control unit/Parking sensor control unit (NSP)/Air quality sensor (AQS)/Automatic air-conditioner/Electric door mirrors (moving, folding)/ Tyre pressure monitoring control unit (CPP)	F51	5
Rear window wiper	F52	15
Instrument panel (NQS)	F53	7,5
Free	F38	—
Free	F45	—

Fuse box in engine compartment (next to the battery)

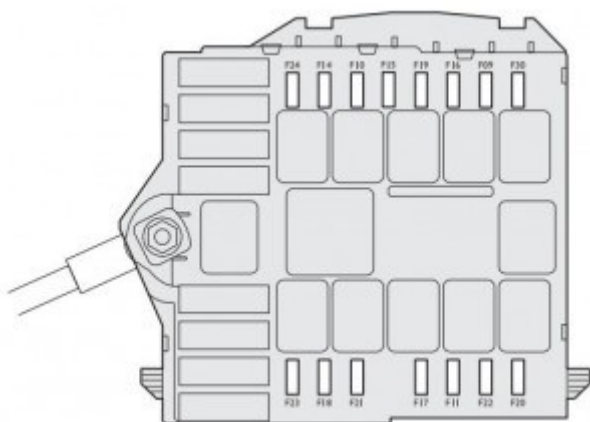


Fiat Bravo – fuse box- engine compartment

silnika

Component	Fuse	Ampere rating [A]
Front fog light/Cornering light, RH	F09	7,5
Right main beam headlight	F14	7,5
Left main beam headlight	F15	7,5
Front fog light/Cornering light, LH	F30	7,5
Single-tone horn	F10	10
Engine diagnosis system secondary loads (lambda sensor, canister solenoid valve, PDA system solenoid valve, EGR solenoid valve, throttle solenoid valve, VGT solenoid valve, glow plug warming control unit)	F11	15

Engine control unit (NCM)	F16	7,5
Engine control unit (NCM)	F17	10
Engine control unit (NCM)	F18	10
Conditioner compressor	F19	7,5
Headlight washer motor pump	F20	20
Fuel motor pump on tank	F21	15
Engine diagnosis system primary loads (injectors, ignition coils)	F22	15
Engine diagnosis system primary loads (injectors, ignition coils, engine control unit for diesel versions)	F22	20
Braking system control unit (NFR) (electronic control unit, solenoid valves)	F23	30
Electric steering control unit (NGE)	F24	7,5

Fuse box in boot compartment (optional)

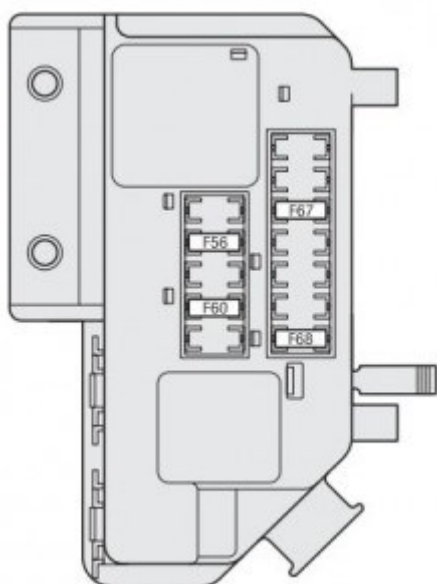

Fiat Bravo – fuse box – boot

Compartment	Fuse	Ampere rating [A]
Left front seat heating/movement	F56	30
Right front seat heating/movement	F60	30
Left front seat heating/movement	F67	10
Right front seat heating/movement	F68	10

Lights	Fuse	Ampere rating [A]	Fuse box
Right dipped beam (quartz-iodine headlights)	F12	7,5	Dashboard
Right dipped beam (Bi-Xenon headlights)	F12	15	Dashboard

Left dipped beam (quartz-iodine headlights)	F13	7,5	Dashboard
Left dipped beam (Bi-Xenon headlights)	F13	15	Dashboard
Reversing light	F35	5	Dashboard
Third stop light	F37	7,5	Dashboard
Rear fog light (driver's side)	F53	7,5	Dashboard
Front fog light/Cornering light, RH	F09	7,5	Engine compartment
Right main beam headlight	F14	7,5	Engine compartment
Left main beam headlight	F15	7,5	Engine compartment
Front fog light/Cornering light, LH	F30	7,5	Engine compartment

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market